2044训狗器中性中英文说明书折页

远程训狗器



请在使用前仔细阅读本说明书

狗的得力助手。

本宠物训练器经过长期的市场验证和用户反馈,证明是安全的,有效的,舒适的,它 可以帮助您在有效的范围内控制并训练您的狗狗,通过振动提醒、声音警告、电击 惩罚等功能,来实现遥控止吠、纠正狗狗乱跑、轻松唤回,及阻止狗狗吵架扑人、在 户外乱捡乱吃等不良的习惯。还可以进行其它复杂的训练。本训练器将是您管理狗

★检查项圈的松紧度,佩戴过紧会导致宠物颈部的损伤。佩戴过松会导致电极接 点(橡胶帽)接触不到狗狗的皮肤,造成静电无效。

★请不要使用接收器项圈系狗绳,这可能会导致接收器拉得太紧,橡胶帽顶着狗狗 的脖子造成压力过大,您可以使用一个单独的项圈系狗绳。

★请经常检查狗狗脖颈的皮肤,如果观察到皮肤有任何不良反应,请停止几天使用

★如因佩戴时间过长或项圈勒的太紧引起了红斑,建议恢复后再使用 ★训练器的目的是帮助您训练,我们建议每天不超过18小时,每天取下数小时让狗 狗感受轻松和白由。

★如果是专业训练,尽可能的每1-2小时检查项圈的佩戴位置。

★绝大多数狗狗在首次佩戴时不会出现烦躁反应,只有少数会表现得非常敏感,但 是一段时间后就会有良好的适应性,此时建议不使用任何功能,请先让狗狗习惯带

间的训练,狗狗会发现振动或警示音后会有静电麻麻的,这样,振动功能或警示音 功能就可以有效地遏制宠物的不当行为,电击功能作为一个惩罚措施,不必经常使 ★非常感谢您选择本宠物训练器,我们的目的是确保狗狗在安全的前提下,为您提

★我们建议您给狗狗使用电击功能前,先使用振动功能或警示音功能,经过一段时

1.遥控发射器灵活小巧,使用简便。 2.接收器在狗狗喝水时或雨天,游泳潜水都可以正常使用。

3.振动和电击的档位可以调节,初次使用时请选择合适的档位,试用时0-99档逐级

43种功能模式:电击/声音/振动。

5.本宠物训练器的遥控距离在800米范围内。(海平面测试距离) 5.有3个信号通道,一个遥控发射器可以控制三个同型号的接收器。

.低电提示功能。

9.本款训练器适合绝大多数中、小型犬。

.节能设计,有自动待机和记忆功能。

s训狗器出厂时已对好码,不需重新连接信号,可直接使用。如果发射器和接收器 没法连接信号,请按照说明书中的说明方法给发射器和接收器重新对码连接信号

 追控器发射器具有自动休眠省电功能,约30秒无 燥作会自动休眠关机,按任何键都可开机。 2.接收器具有自动休眠省电功能,静止5分钟没有接

收到信号时会进入休眠省电状态。短按一下接收器

电源开关,接收器发出"嘟嘟"二声响,即进入关机 态,短按一下"嘟"一声响即开机。

遥控发射器和接收器连接信号

1.按下遥控发射器上的任何按钮,打开遥控发射器,调整振动、静电档位不为0。 2 按"CH"信号诵道按钮选择一个信号诵道。

3.长按接收器电源开关按钮3秒左右,接收器会发出"嘀"的1次响声,指示灯长闪动

5.如果没在10秒内按电击/声音/振动模式其中的任一个按钮,请重复上述步骤。 6.如果拥有2只以上接收器,再次按遥控"CH"按钮选择另一个信号通道连接信号





 
如果训练器不敏感,请检查下面的问题。 1)遥控器和接收器是否相距太远?

— 请记好您使用的信号通道,不要随意更换,否则遥控会失效!

)遥控器和接收机之间有什么障碍/干扰吗 3)遥控器和接收器都充满电了吗?

5)两种模式切换频繁吗?

::IPX7防水功能保护接收器和遥控器不受潮湿的。但是,它们不能在水中浸泡很



④ 电击模式按钮:如果上一次刚使用过振动或声音模式轻按这个按钮会自动转

换为电击模式,显示屏上会显示电击符号,按一/十按钮可以调整电击的强弱,

① 天线:传输信号到接收器 ② CH1/2/3:3个信号通道显示

4.此时须在10秒内按遥控发射器的电击/声音/振动模式其中的任一个按钮,即会连 接好信号:同时,接收器会发出"嘀"的1次响声,灯也会停止闪动,表示配对成功。

 
> ⑤ 振动模式按钮:如果上一次刚使用过电击或声音模式轻按这个按钮会自动 换为振动模式,显示屏上会显示振动符号,按一/十按钮可以调整振动的强弱, 档位分为0-99,再次按下此键时振动的符号开始闪动,接收器上可产生当前强度

3 0-99档位显示。

⑥减少按钮:按这个按钮,可以调整由击和振动的强弱。 ⑦ 手电筒: 当按图15按钮时发光。

⑧ 电池容量显示。 ⑨ 电击模式显示。 10 声音模式显示。 ⑪ 振动模式显示。

> ⑫ 声音模式按钮:按这个按钮,接收器将发出嘀 嘀声及灯闪亮,档位不可调。 ③ 信号通道按钮:本产品共有3个信号通道可选,



档位分为0-99,再次按下此键时电击的符号开始闪动,接收器上可产生当前强度 ⑰ USB接口:用于发射器充电。

★在第一次使用之前,请给遥控器和接收器充电 遥控发射器充电: 1. 连接好充电器,将充电器插入标准的插座。

增加按钮:按这个按钮,可以调整电击和振动的强弱

灯。如果没有手动操作谣控器关闭约5分钟接收器也会自动关闭照明灯。

2.充电时遥控发射器显示屏上面电池符号会不停闪动。 3.遥控发射器充满电后,显示屏上面电池符号停止闪动。

接收器充电:

1.打开橡胶盖,连接好充电器,将充电器插入标准的插座

ELED手电筒按钮:按此按钮,发射器LED手电简灯光亮起,再按一下,就会关闭手 2 充电时接收器指示灯会显示器绿色,会不停闪动。 电简功能。点按此键可点亮接收器上的照明白灯。再点按可关闭接收器上的照明 3.接收器充满电后, 翠绿色指示灯长期亮不闪动。

4.充完电后要把充电口的橡胶盖塞紧,避免进水。

产品充电一次。

(18) 电源开关:打开/关闭接收器,与遥控发射器连接信号,或信号重置。 1.请在首次充电时,给遥控发射器和接收器充电2小时以上, ⑨ 静电柱子(电极):安装一对适合不同厚度狗毛的橡胶导电柱子(电极接触点) 2. 当给接收器充电时, 它处于睡眠模式, 无法接收来自遥控发射器的信号 有效地传导静电便干训练。

⑩ 充电孔:用于接收器充电。 3.如果电量不足,遥控发射器屏幕上会显示电量为空的图标电池。 ② 电源指示灯:显示接收器开机、关机,及充电状态。 4.如果接收器电量不足,则指示灯提示。



2.机站、磁场、障碍物、自身电池的强弱、其他无线设备、地形、植被及其它因素都可 能会影响遥控发射器的信号传输,会影响遥控发射器的实际遥控距离。

碍物, 但会影响谣控发射器的有效距离。

3.本产品为宠物训练器,只有通过培训,狗狗才能理解您的意图,良好的效果需要经

..遥控发射器采用高端传输技术,无须直接对准接收器,遥控信息可穿透墙体等障

4.应保持积极的培训,每次的时间不宜过长,约10-15分钟。

5.目前,该产品是最有效和最安全的宠物训练工具。按照正确的使用方法,可以有效 地训练狗狗而又不会使其受到伤害。

2.每周用酒精清洁电极橡胶柱子一次。

1. 电击功能测试

2. 振动功能测试

3.声音功能测试

器会发出滴滴声及闪灯。

电击功能用肉眼是看不到的,请使用我们的测试灯。

为0。按遥控器®按钮,接收器会振动及闪灯

3.检查狗狗的脖子,每周清洁清洗。

底部,放电柱子与狗狗的皮肤直接接触。

这个档位不需要调节,液晶显示档位与这个功能没有关系,按遥控器@按钮,接

4.发射遥控器手电筒及接收器照明灯功能测试

测试本训练器

测试前,请设置电击模式档位不为0,您可以按一/十按钮调整,确定液晶屏显示。

为0。按遥控器①按钮,接收器发出静电及闪灯。用测试灯测试,测试灯将发光。

测试前,请设置振动模式档位不为0,您可以按一/十按钮调整,确定液晶屏显示不

这个档位不需要调节,液晶显示屏没有这个功能显示。按一下遥控器命按钮,发射 器LED手电简灯光亮起,再按一下会按钮,就会关闭遥控器手电筒功能。长按会按钮 2秒可点亮接收器上的照明白灯。再长按金按钮2秒可关闭接收器上的照明白灯。如 果没有手动操作遥控器约10分钟接收器也会自动关闭照明白灯

1.请定期检查接收器的密封性,检查外部是否有破损。



.项圈松紧以能伸进一个手指为宜,不 能很松,否则会严重影响电击效果。

1.正确的接收器配戴位置有助干健康有

效的训练。接收器必须放在狗狗的脖子

.如果项圈过松或过紧,请调整扣长度, ·您的狗狗感到舒适,调整适中再佩带。







该 请停止使用训狗器观察几天,如果症状持续超

恢复正常了,使用训狗器时也应该经常的检查

过48小时,可以咨询一下兽医。如果狗狗皮肤

出厂日期: 频率:433.92兆赫 检验员:_____ 发射机:3.7V 300ma LIP 执行标准: _____ 接收器:3.7 V 300ma LIP

-11-

USER MANUAL



Please read this manual carefully before using it

供工具和技术支持,帮助您轻松,成功的训练狗狗。

is trainer will be your right-hand man in managing your dog.

★Check for tightness in the collar, which can lead to neck damage. Wearing oose will cause the electrode contact point (rubber cap) to miss the dog's ski esulting in ineffective static

ou can use a separate collar to tie your dog. ★Check your dog's neck frequently and stop using the trainer for a few da

If trained professionally, check the collar position every 1-2 hours if no ★Most dogs will not show fidgety reaction when first worn, only a few will

vibration or warning sound functions can effectively curb the pet's misconduct. electric shock function as a punishment, not frequently used. ♣ Thank you very much for choosing this pet trainer. Our goal is to provide tools

our dog easily and successfully.

s net trainer authentication and user feedback, after a long period of r roved to be safe, effective, comfortable, it can help you in the range of effect ntrol and train your dog, by vibration to remind, voice warning, sho n free and easy call, and stop a dog fight the flapping, random

★Do not use a receiver collar to tie your dog. This may cause the receiver to b

f you notice any adverse reactions. ★If because wear time is too long or the collar is too tight caused by red spots. ★The trainer is designed to help you train, we recommend no more than 18 nours a day, take off a few hours a day to let the dog feel relaxed and free.

how very sensitive, but after a period of time will have a good adaptability, it is recommended not to use any function at this time, please let the dog get ★We recommend that you give dogs using electric shock function, use vibrati function or warning sound function first, after a period of training, the dog will ind vibration or there will be a static hemp after warning sound, in this way,

and technical support for your dog under the premise of safety to help you train

functional modes: shock/sound/vibration

est Distance) There are three signal channels and a remote transmitter can contr.

his trainer is suitable for most medium and small dogs.

connect the signal to the transmitter and receive

no operation for about 30 seconds.

he receiver has the function of au ernation to save power. It will enter the minutes of static. Short click on the receive ound, that is to enter the shutdown state, shor press "Beep" a sound is started.

. Remote control transmitter is flexible and compact, easy to use.

he remote control range of this pet trainer is within 800 meters.(Sea leve

Energy-saving design, with automatic standby and memory functions.

he dog trainer has been coded before leaving the factory. It can be use rectly without reconnecting the signal. If the transmitter and receiver cannot onnect the signal, please follow the instructions in the instructions to

ower switch, the receiver sends out "beep" two

appropriate gear for the first use and increase step by step from 0 to 99 for trial

. The transmitter of the remote control has the t will automatically sleep and shut down if there

The receiver can be used normally when the dog is drinking or on rainy days 3. The gear of vibration and electric shock can be adjusted. Please select the

ceivers of the same type.



Press the "CH" signal channel button to select a signal channel.

Long press the power switch button of the receiver for about 3 seconds, the receiver will emit a "di" sound, and the indicator light will flash. 4.At this point, you must press any of the buttons in the remote cont insmitter's shock/sound/vibration mode within 10 seconds, which will onnect the signal: at the same time, the receiver will emit a "di" sound, and

e lamp will stop flashing, indicating that the match is successful. If you do not press any of the shock/sound/vibration modes withi econds, repeat the above steps.



the trainer is not sensitive, check the following questions Is the remote control too far away from the receiver?

ne remote control or receiver in standby mode? o the two modes switch frequently?

Press any button on the remote control transmitter to open the ren ntrol transmitter and adjust the vibration and static gear not to 0.



ease remember the signal channel you use, do not change at will, or the

s there any barrier/interference between the remote control

Is the button pressed too light, or is the center of the button pressed?

6.If you have more than 2 receivers, press the remote "CH" button again



ote:IPX7 waterproof features protect the receiver and remote from moistu However, they cannot be soaked in water for a long time.

again, the shock symbol starts to flash, and the current intensity of the shock an be generated on the receiver.



re the remote control and receiver fully charged?

D Antenna: Transmits a signal to a receive 2 CH1/2 3/3 signal channel display

3 0-99 gear display. 4 Shock mode button: If you have used vibration or sound mode last time gently pressing this button will automatically switch to shock mode and the shock symbol will be displayed on the screen, Press —/+button to adjust he intensity of the shock. The tap position is 0-99. When this button is pressed

Si Vibration mode button: If you have just used electric shock or sound mo gently pressing this button will automatically switch to vibration mode, and the vibration symbol will be displayed on the screen. Press -/+ button to adjust the intensity of vibration. The gear is divided into 0-99. When this key

is pressed again, the vibration symbol starts to flash, and the vibration o current intensity can be generated on the receiver. © Reduce button: Press this button to adjust the intensity of shock and vibration. T Flashlight: Shines when the button shown n Figure 15 is pressed. ® Battery capacity display.

signal channels to choose. Press this button

you can choose different receivers and

transmitters to match.

 Shock mode display. 10 Sound mode display. ① Vibration mode display. ② Sound mode button: Press this button, the receiver will beep and the light will twinkle. The gear is not adjustable. 3 Signal channel button: This product has 3

Add button: Press this button to adjust the intensity of shock and vibrat ELED flashlight button: Press this button, the LED flashlight lamp light of the nitter will light up, press it again, and the flashlight function will be turn ff Click this button to light up the illumination lamp on the receiver Click again turn off the light on the receiver. The receiver will also automatically turn ff the lights if the remote control is not manually switched off for about 5

17) USB interface: Used for charging transmitter. Power switch: Turn receiver on/off, connect signal to remote transmitte

 


screen stops flashing.

★Charge the remote control and receiver before you use it for the first til

emote transmitter charging Connect the charger and plug it into a standard socket. he battery symbol on the display of the remote control transmitter w

Electrostatic column (electrode) : A pair of rubber conductive colum trode contact point) suitable for different thickness of dog hair talled to conduct static electricity effectively for easy training. Ocharging hole: Used for charging the receiver.



stantly flash when charging. 3. When the remote transmitter is fully charged, the battery symbol on the

ash for a long time. 4. After charging to plug the rubber cover of the charging port tightly to avoid

 Please charge the remote control transmitter and receiver for more than 2 nours during the first charge.

If the battery is low, the remote transmitter screen will display the icon battery. empty battery. the receiver is low in power, the indicator indicates.

his product is a rechargeable device. In order to ensure the normal f f the product, if it is not used for a long time, please charge this product once

emote control distance of the remote control transmitter.

which does not need to directly aim at the receiver. The remote contro nformation can penetrate obstacles such as walls, but it will affect the effective Station, magnetic field, obstacles, the strength of its own battery, other eless equipment, terrain, vegetation and other factors may affect the signal smission of the remote control transmitter, which will affect the actual

5.At present, this product is the most effective and safest pet training tool. When used correctly, dogs can be trained effectively without being harmed.

is product is a pet trainer, only through training, the dog can underst

our intention, good results need to go through a period of training.

Training should be kept active and should not last too long, about 10-15 m.

pen the rubber cover, connect the charger and plug it into a standard

2. When charging, the receiver indicator light will show bright green, will keep The electric shock function is invisible to the naked eye, please use our tes lamp.Before the test, please set the shock mode to 0, and you can press—/+ nen the receiver is fully charged, the bright green indicator light will not

> Test with a test lamp and the test lamp will glow. 2. Vibration function test

> > press —/+ button to make sure that the LCD display is not 0.Press the button of the remote control and the receiver will vibrate and flash. 3. Sound function test

with this function. Press the 🕲 button of the remote control, the receiver emit beep and flash lights. 4.Launch remote control flashlight and receiver lamp function test his position does not need to be adjusted, LCD does not display this function Press the button of the remote control, the LED flashlight lamp lights up. Press the button again, and the flashlight function of the remote control will be turned off.Long press@button for 2 seconds to light up the light on

1.Check the receiver regularly for leakproofness and external damage. 2.Clean the electrode rubber column with alcohol once a week.

is not manually operated for about 10 minutes.

button to make sure that the LCD display is not 0. Press the ② button of the remote control and the receiver emits static electricity and flashing light.

the receiver. Press@button for another 2 seconds to turn off the light on the receiver.The receiver will automatically turn off the light if the remote contro

n direct contact with the dog's skin. Before the test, please set the vibration mode position not to 0, and you ca

There is no need to adjust this position. The LCD position has nothing to d

each into a finger, not too loose, therwise it will seriously affect the hock effect

 
our dog comfortable, adjust the collar properly and then wear it.

2. If the dog has a long or thi

neck, use a long rubber cap.

o healthy and effective training The receiver must be placed at the base of the dog's neck and the discharge pole

The collar should be tight enough to



Q:When can a dog use this trainer?

O:My dog has complied with my orders. Does he need to be trained continuously

我可以把狗绳系在接收器项圈这可能会导致橡胶帽顶着狗狗的脖子。建议位

用一个单独的项圈系狗绳。

A:You may also need to strengthen your dog's memory. Yes, the remote control transmitter has three signal channels, you can control thr

The trainer can reach 800 meters without any interference and without a wever, in our use, terrain, climate, vegetation, airport station, magnetic fiel): I want to test the static function of the receiver by hand, but it doesn't respond.

2:How far can dog trainers be remotely controlled?

not induce static electricity. Q:How long can the vibration or shock be held down? ter this, the receiver will stop working and you will have to release the button a

Q:What should I do if my dog has red spots on his neck? A:Please stop using the dog trainer for a few days and consult your veterinarian symptoms persist for more than 48 hours. If your dog's skin returns to normal, yo

): Is the receiver of this trainer waterproof?

ress it again to work.

Q:Can a dog often carry a receiver? A:It is recommended that your dog wear the trainer for no more than 18 hours a da

A:This can lead to rubber hats resting on the dog's neck.A separate collar and lea

ecommended that you start from the lowest gear. It is not necessary to use a lar

A:You can prepare some dog snacks as training rewards, so that the training will b

Please check whether the vibration or electric shock function has adjusted t

4. Please check whether you accidentally pressed the CH button of the remo

7. Please ensure that the receiver is properly positioned and that the collar is no

-10-

Take off the receiver and test whether the three functions are normal

You can try to reconnect the remote transmitter and receiver.

8. Trim the dog's hair too long or use a longer contact point.

O:How much vibration and shock gear does my dog need to use?

):Are there any other better training methods?

Please check whether the receiver is on.

ransmitter and changed the signal channel.

-10-

Q:Can I tie the leash to the receiver collar

is recommended.

O: How long is the collar

常见问题汇总

可以调整带扣。

如果长时间的带着,建议您经常检查。

项圈的总长度是60CM。如果太紧或者松的记

档位,建议您从最低档试起,不必使用很大的

92 您可以准备—些狗零食作为训练奖励品, 这样

训练时会更有效果。每次有效制止不良习惯后

您可以告诉狗狗该做什么或不该做什么,多次

训练后狗狗会明白您喜欢它做什么和不喜欢?

4.请检查是否无意中按到了遥控发射器的CH

5.您可以试着将遥控发射器和接收器重新连接

7.请确保接收器位置佩戴正确,项圈不能佩戴

8.请修剪过长的狗毛,或使用较长的接触点

6.取下接收器,测试3种功能是否正常。

3.请检查是否开启了接收器。

按钮,更换了信号通道。

termined by turning the equipment off and on, the user is encouraged to try to correct the A:The total length of the collar is 60CM. Adjust the buckle if it's too tight or loose.

Please find the most suitable vibration gear and shock gear for your dog. It is Connect the product into an outlet on a circuit different from that to which the receiver

bad habit. After many times of training, your dog will understand what you like and conditions: (1)This device may not cause harmful interference.(2)this device must acc erference received, including interference that may cause Undesired operation. commands after being put on the dog's neck, how should the dog troubleshoot? C Radiation Exposure Statement This equipment complies with FCC radiation exposur

> Manufacture date: Frequency: 433.93MHZ Inspector: Transmitter: 3.7V 300ma LIP

sonable protection against harmful interference in a residential installation. This produ enerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication However, there is no guarantee that interference will not occur in a particular installation.

erference by one or more of the following measures: - Reorient or relocate the receiving antenna.

 
Consult the dealer or an experienced radio/TV technician for help nanges or modifications not expressly approved by the party responsible for compliance uld void the user's authority to operate the equipment. his device complies with Part 15 of the FCC Rules. Operation is subject to the following

Execution standard: Receiver: 3.7 V 300ma LIP Made in china

 












CC Instructions: roduct has been tested and found to comply with the limits for a Class B digital levice, pursuant to Part 15 of the FCC Rules. These limits are designed to provide he product does cause harmful interference to radio or television reception, which can be

- Increase the separation between the product and receiver.

s set forth for an uncontrolled environment. This equipment should be installed and d with minimum distance 5mm between the radiator & your body.

Certification