



INSTRUCTION MANUAL

CLOCK RADIO WITH WIRELESS CHARGING

Model: QUDOC200BK



 
Product Specifications

- Bluetooth Standard: 4.2
- Output Power: 5W*2
- S/N Ratio: $\geq 70\text{dB}$
- FM Range: 87.5-108.0MHz
- Power Supply: DC 14V/1.0A
- Wireless Charging Power: 5W (Output Voltage: 5V
Output Current: 1A)
- Functions: Bluetooth playing, Aux-in Playing, FM, Wireless charging, USB charging, Clock and Alarm


Packing Contents

1. Clock Radio
2. Instruction Manual
3. 3.5mm Auxiliary Audio Cable
4. AC adaptor 14V/1.0A


Functions

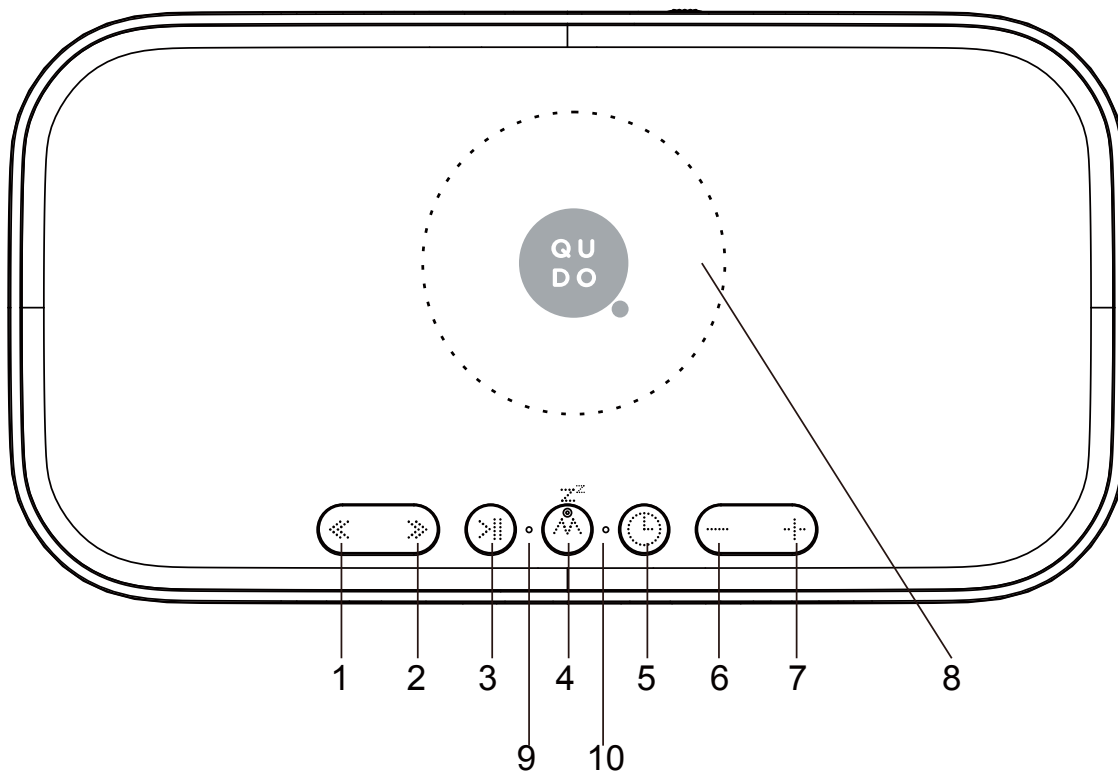

(top panel)

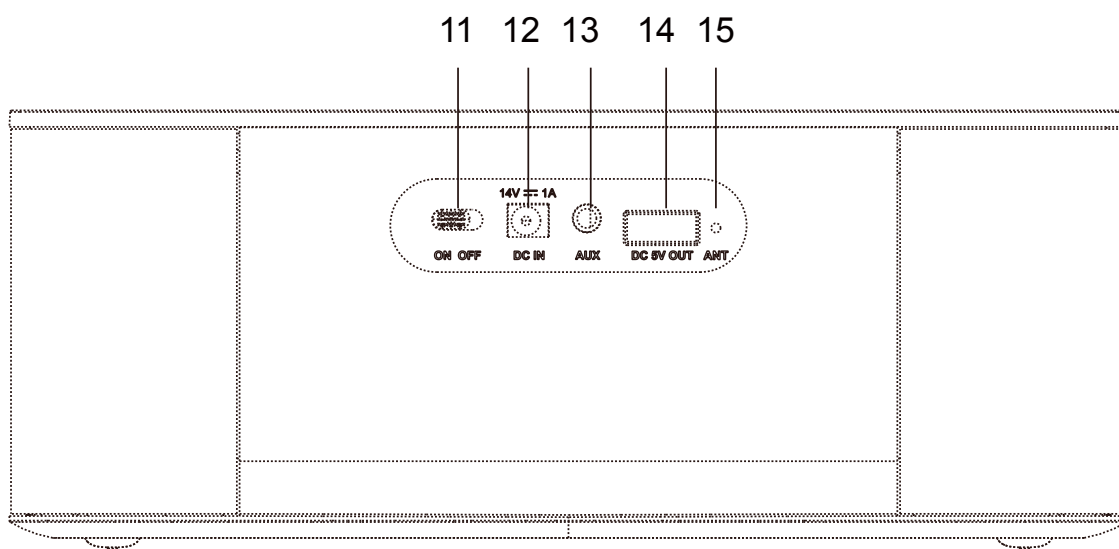 

(back panel)

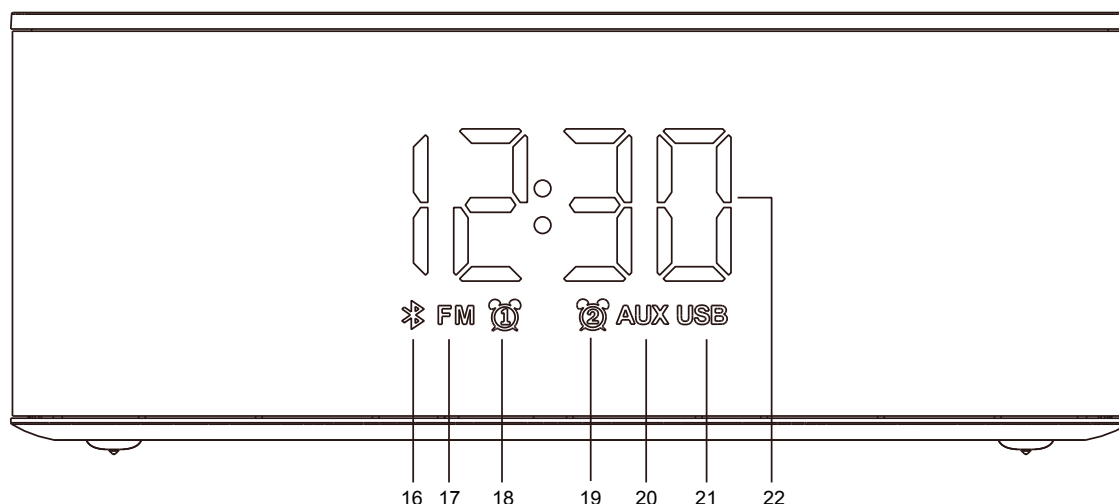 

(front panel)

1. Previous Track in Bluetooth Mode(Short Press)/Previous Memorised Channel in FM Mode (Short Press)
2. Next Track in Bluetooth Mode (Short Press)/Next Memorized Channel in FM Mode (Short Press)
 - Remarks for button 1 and 2: if at the mode of Aux-in, the track could only be changed through your device.
3. Play/Pause, Phone Answer/Reject/Dial, Auto Searching of FM Channel
 - When playing music, press the button to pause or play.
 - When you receive a call, short press the button to answer or long press to reject the call. When you are on the phone through Bluetooth mode, press the button shortly to end. When the call ends, music will resume playing. At the status of Bluetooth connection, short press twice to dial number of last call.
 - When at the status of FM mode, long press the button, it will search for channels automatically and memorizes the channels as P01, P02, P03, P04...
4. 4. Mode Switch Button/Snooze Button (Short Press)
5. Clock Setting (Short Press)
 - Short press to switch setting of Bluetooth, clock, alarm 1 and alarm 2
6. Volume – (Short Press)
 - Reduce volume.
 - The number reduces when setting clock or alarm.

7. Volume + (Short Press)

- Increase volume.
- The number adds when setting clock or alarm.

8. Location of wireless charging area.

9. Wireless charging indicator green indicator

- The green indicator is on when the speaker is wireless charging to your device.

10. Wireless charging indicator red indicator

- The red indicator is off when speaker at the status at wireless charging to other devices, otherwise it will be on once the speaker is turned on.

11. Power on/off (Slide the Switch)

12. Power input DC 14V 1A

13. Auxiliary Line-in Port

14. USB Charging Output 5V 1A

- Connect device to this socket with a charging cable, the speaker would charge the device if the speaker turns on.

15. Mouth for FM Signal Collection Cable

16. Bluetooth Icon

17. FM Icon

18. Icon of Alarm 1

19. Icon of Alarm 2

20. Aux-in Icon

21. USB Icon

22. Clock/Alarm Display

Power Supply

Insert the DC power jack of AC adaptor (included) to the DC 14V input port located at the rear of the unit and the other end into a suitably rated wall outlet.

Power ON & OFF Functions

1. Push the power switch to the ON position to turn on. The contents of the clock will be displayed.
2. Push the power switch to OFF position to turn off the screen.

Wireless charging

1. Place the equipment to be charged on the top circle of the stereo.
 2. Device will now start charging.
- Remarks: Check with your device manufacturer for Qi wireless compatibility.

USB Charging

Connect your device to USB output socket through a charging cable

Pairing the Device

1. Place your device near the clock radio.
2. Search for Bluetooth according to your devices instructions.
3. The Speaker is named "QUDOC200BK", enter the PIN "0000" if needed.
4. The Speaker will beep at the completion of pairing.

AUX

1. Plug the 3.5mm audio cable into the audio input connector and automatically switch from Bluetooth mode to AUX mode.
2. Unplug the 3.5MM audio cable from AUX and automatically return to Bluetooth status.

Setting the Clock

1. The **CLOCK** button cycles through clock, alarm 1, alarm 2 with each short press.
2. To set the time press and hold the **CLOCK** button when time is showing.
3. The hour digits will now flash. Press **VOLUME +** or **VOLUME -** to set the required hour and press **CLOCK** to confirm.
4. The minutes will now flash. Press **VOLUME +** or **VOLUME -** to set the required minutes and press **CLOCK** to confirm.
The clock setting is completed.

Setting the Alarm

1. Press the **CLOCK** button until **AL1** icon is lit, Alarm time preview will show.
2. Press once again **AL2** icon is lit, Alarm time preview will show.
3. Press and hold the **CLOCK** button when on **AL1** or **AL2** for 3 seconds to start alarm setting.
4. The hour digits will now flash. Press **VOLUME +** or **VOLUME -** to set the required hour and press **CLOCK** to confirm.
5. The minutes will now flash. Press **VOLUME +** or **VOLUME -** to set the required minutes and press **CLOCK** to confirm.
6. The clock setting is completed.
7. OFF will now flash. Press **VOLUME +** or **VOLUME -** to select ON /OFF and press **CLOCK** to confirm. Alarm is now set.
8. Select the rings of the alarm. After finishing the adjustment of the minutes, short press the clock key, marks of 'OFF', 'ON' or ' ' and Alarm 1 would flash on LED screen, you are entering the mode of alarm ring setting. Sort press the button of previous track or next track, to select the ring of alarm. Short press the clock key when the mark of 'OFF', 'ON' or ' 'is flashing, then the alarm ring is selected.

There are 3 options:

‘OFF’ indicates to turn off of the alarm ring

‘ON’ indicates the default alarm ring of system

‘ ’ indicates to set the first FM channel P01 as the alarm ring

9. When alarm is triggered, press the MODE button to enter snooze mode(the snooze time is 5 minutes); press the other any button to turn off the alarm. There is 3 chances of snooze mode for each alarm.

FM

1. To set the FM press the **MODE** button when FM icon is showing.
2. Frist time to select FM please Press and hold  to search the FM, Please wait a few minutes for automatic searching, when the local radio stations have found will be save automatically. Default FM range is 87.5-108MHz.
3. Press  for FM mute.
4. Press  /  for FM select.

Safety and General Information

Carefully read this manual before using this appliance and keep for future reference.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

Intended Use

- Indoor domestic use only: this appliance is intended for indoor domestic use only. Do not use it outdoors. Do not use in moving vehicles or boats.
- Intended Purpose: Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual
- Accessories: Do not use any accessories with the appliance that are not supplied or specifically recommended.
- Ensure that you know how the appliance functions and how to operate it.

- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

1. Always unplug the adapter from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Ensure that the socket is located near the appliance and easily accessible in order to quickly unplug the appliance from the mains in the event of an operating problem. Always pull out the plug from the socket (pull on the plug, not the cable)
2. Please do not expose this appliance to water, corrosive liquid or gas. Store the appliance in a dry and clean place.
3. Do not install the appliance near windows, or any heat sources such as radiators, heaters, gas stoves or other apparatus that produces heat.
4. Do not place any naked flame sources, such as lit candles, on or near the apparatus.
5. Clean only with dry cloth.
6. Do not place objects filled with any kind of liquid on the speakers, such as vases. Do not expose to dripping or splashing.
7. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquids can cause a failure and/or fire hazard. Do not handle the plug with wet hands.
8. Do not insert metal bars/wires or any other objects in the speaker hole.
9. Protect the power cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.

10. Before moving the appliance, please pull out the power adapter and disconnect from any other equipment.
11. Please do not block any ventilation openings of the device, otherwise it will cause a rise in internal temperature of the apparatus and thus cause damage to the circuit.
12. Please do not press the switches or other keys with force.
13. Unplug the power cable immediately if your device emits smoke or acts abnormally. Seek professional help from your nearest service centre.
14. When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Troubleshooting

Trouble 1: Radio signal would be interfered when using wireless charging.

Solution : Don't use wireless charging when listening to radio. Then the radio function would be back to normal.

Trouble 2: The speaker enters standby mode 10 minutes later if without any connection by Bluetooth or Aux-in or FM playing. At the status of standby, only CLOCK button is functional.

Solution: Slide the ON/OFF button to awaken the speaker and all buttons are back to normal functions.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Officeworks Ltd. is under license.