

Quick Start Guide

300ml mini Essential Oil Diffuser



Maintenance & Notice

Clean & Maintenance

Please clean the diffuser per week as follows:

- Unplug the usb cable of the diffuser and pour out the remaining water from "DRAIN SIDE" (As shown in Figure 1).
- Add 2-3 drops of vinegar to 100ML warm water(up to 70°C).
- Leave diffuser for 5 minutes and gently shake and pour out water.
- Wipe the diffuser and Ultrasonic Nebuliser with a dry soft cloth (As shown in Figure 2).
- If the diffuser will not be used for a long time, please keep it clean and dry.



Notice

- Pour out the water inside the tank from the drainage outlet.
- When filling water, do not exceed the max line marked on water tank (As Figure 3).
- Please power off diffuser first before adding water.
- Diffuser will beep two times and turn off automatically when water is used up.
- Please use pure natural essential oils.
- If the diffuser is leaking for any reason, please unplug the USB Cable of the unit and pour out remaining water. Shake diffuser gently to drain water inside, then dry for more than 24 hours.

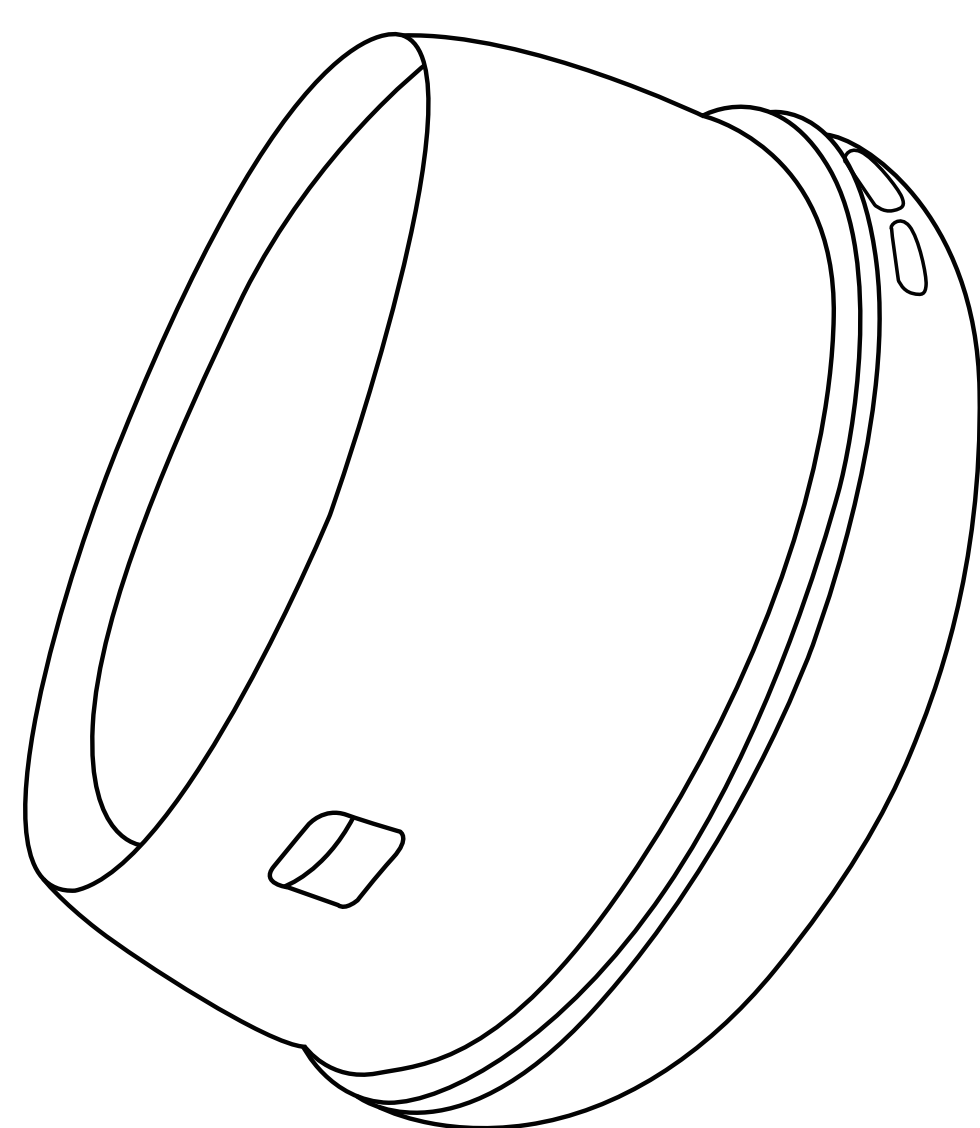 


Figure 1

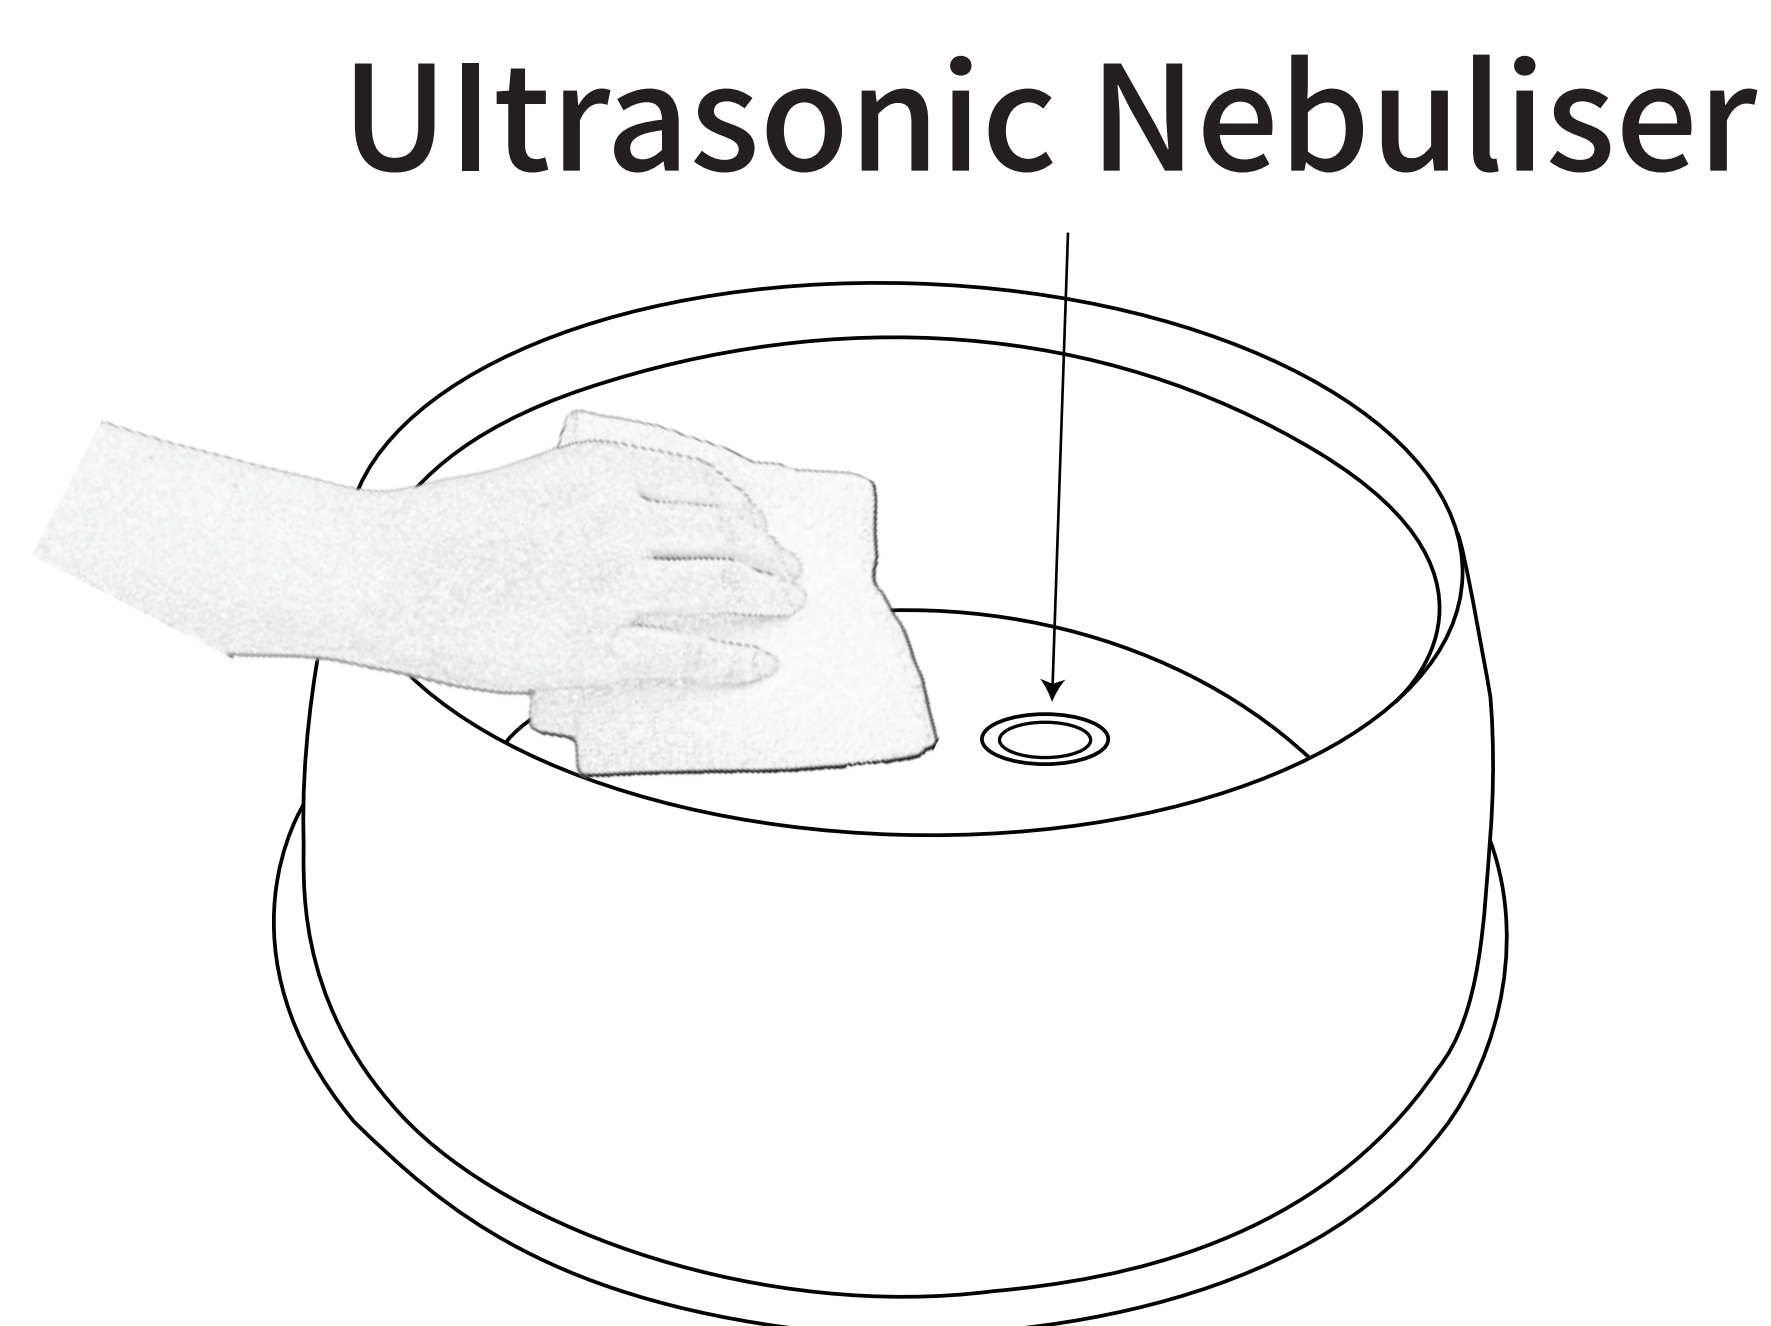 


Figure 2



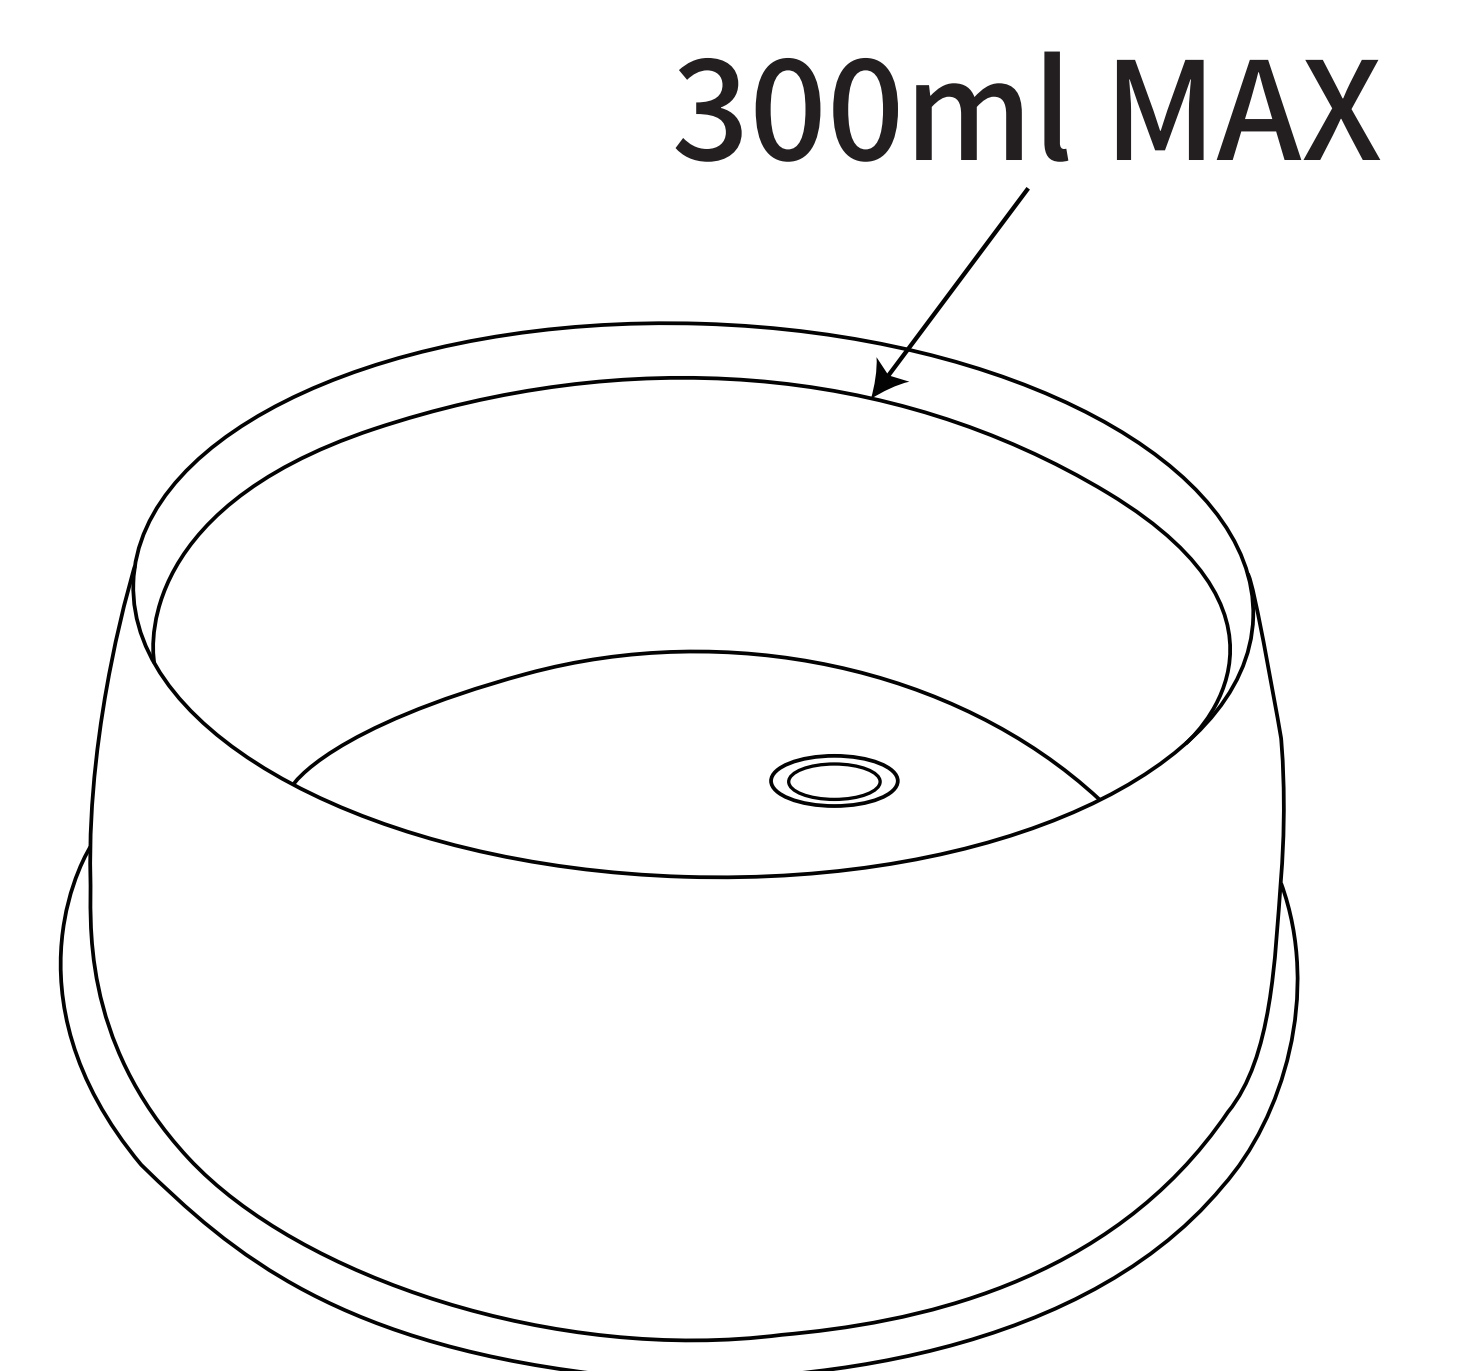 


Figure 3

 
Using Steps

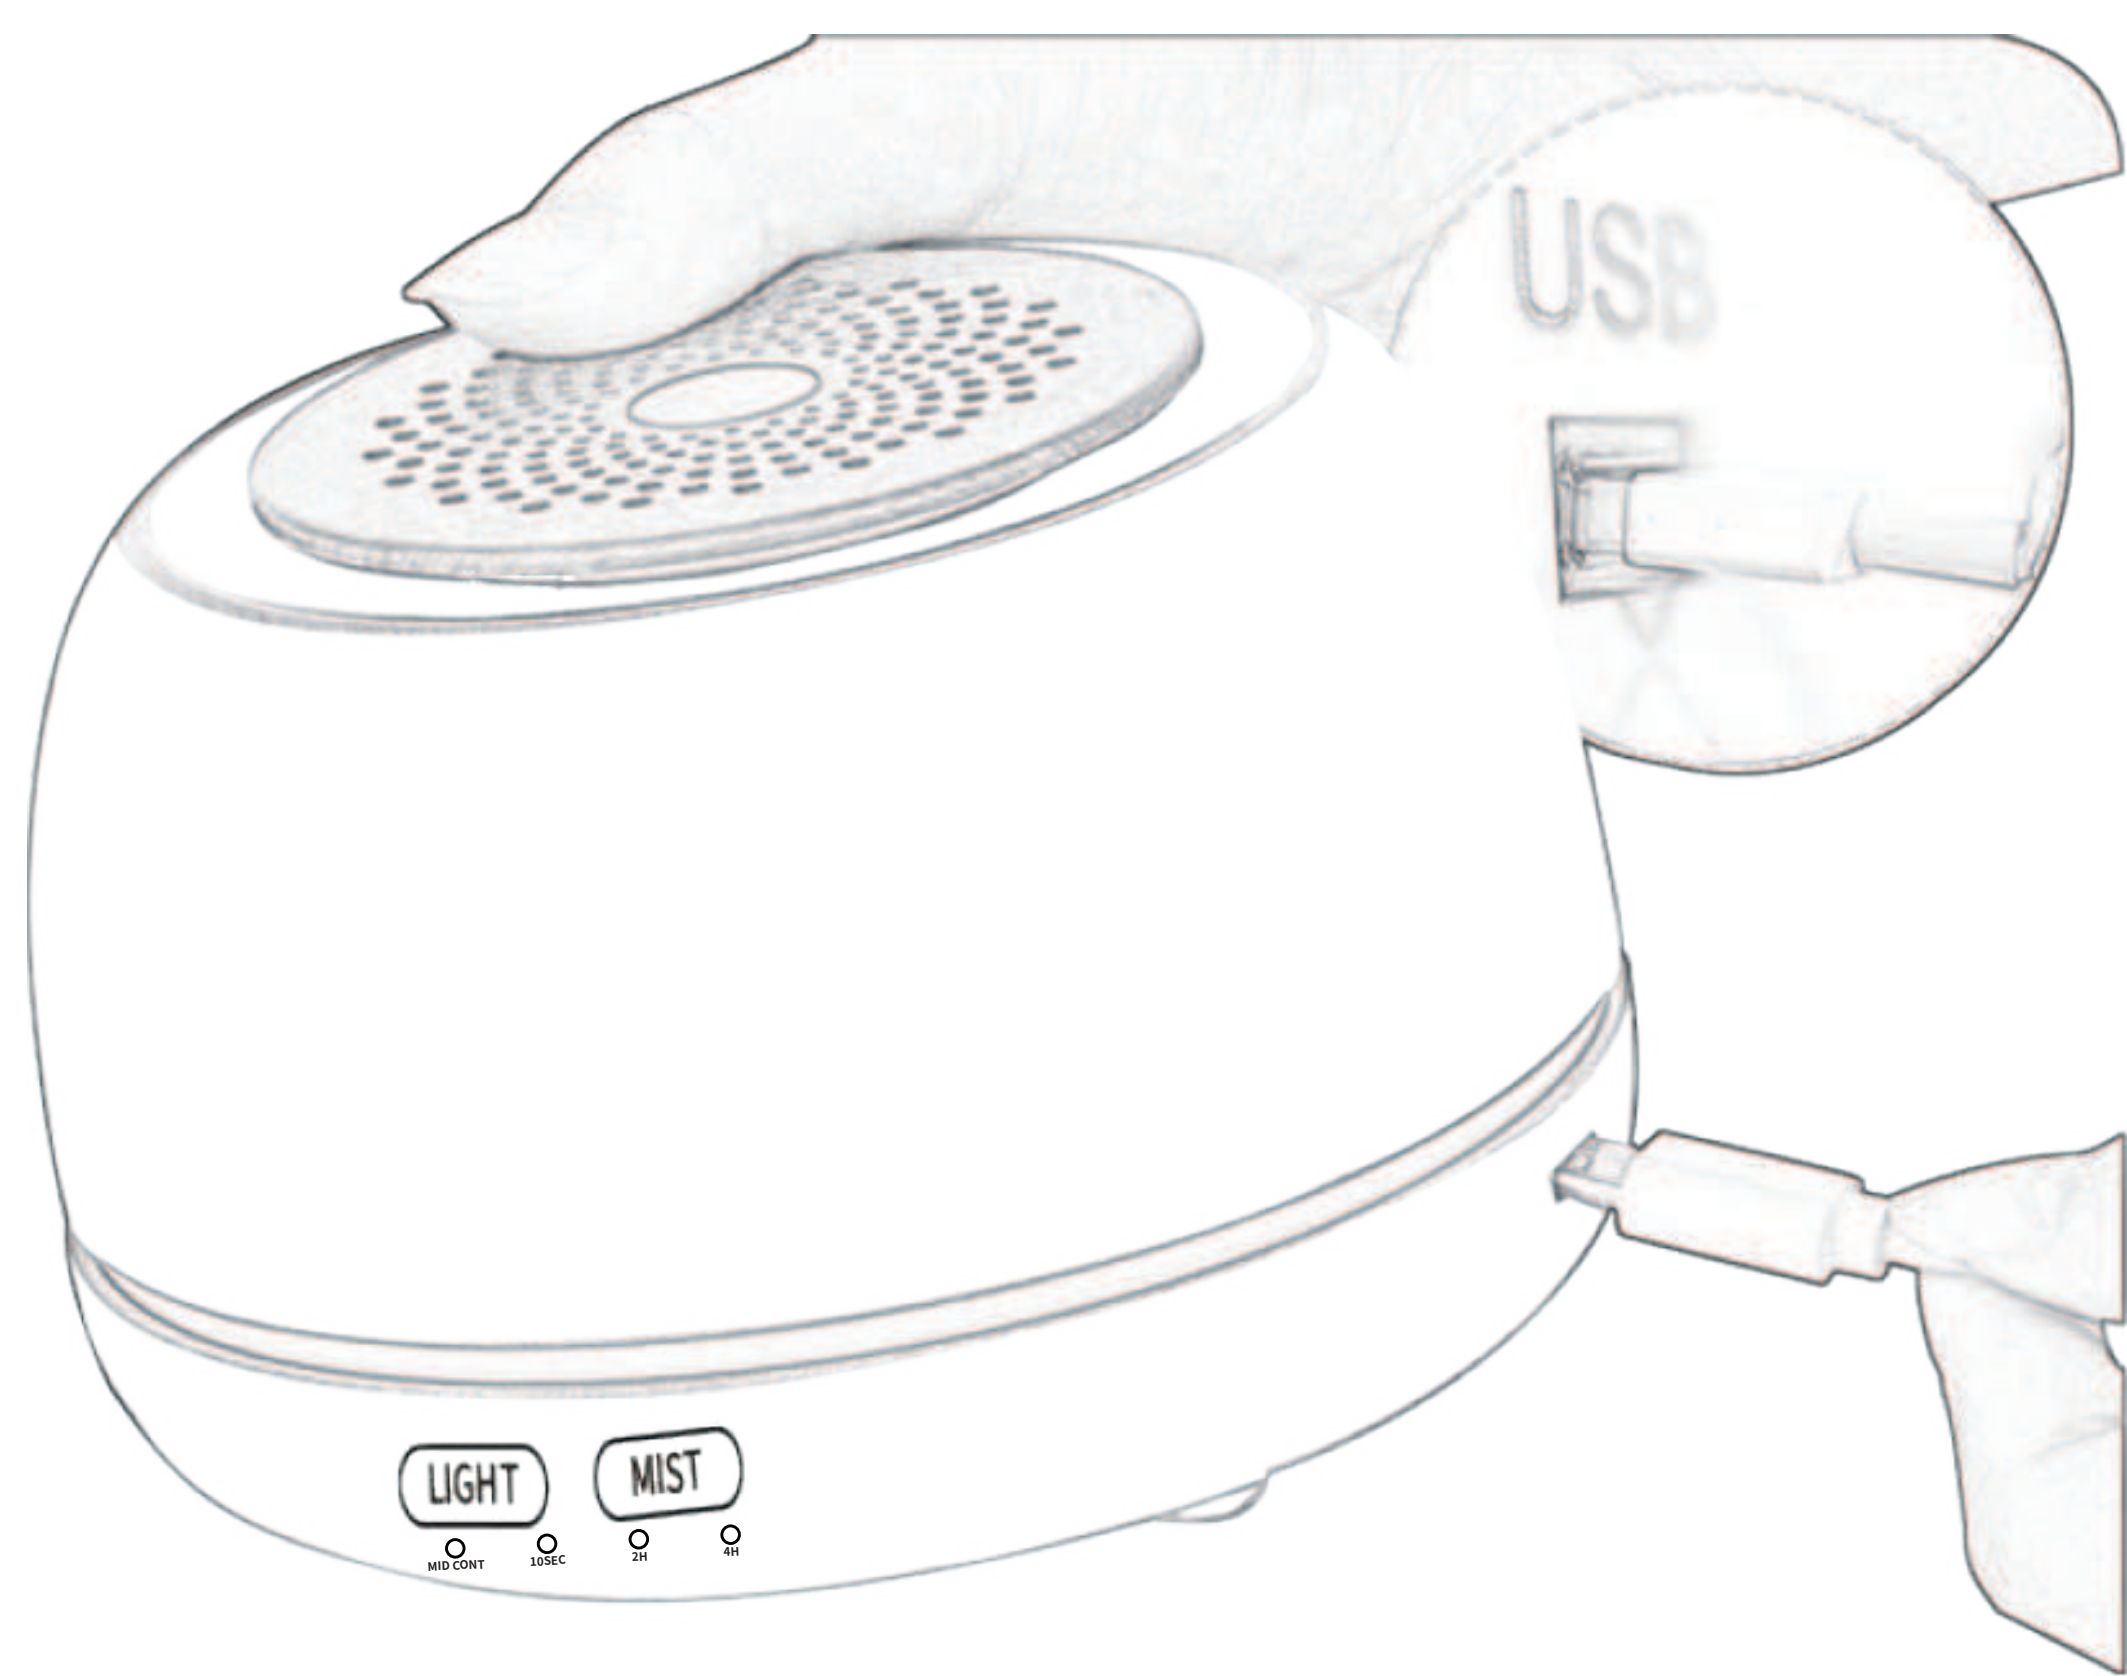

Connect the USB port

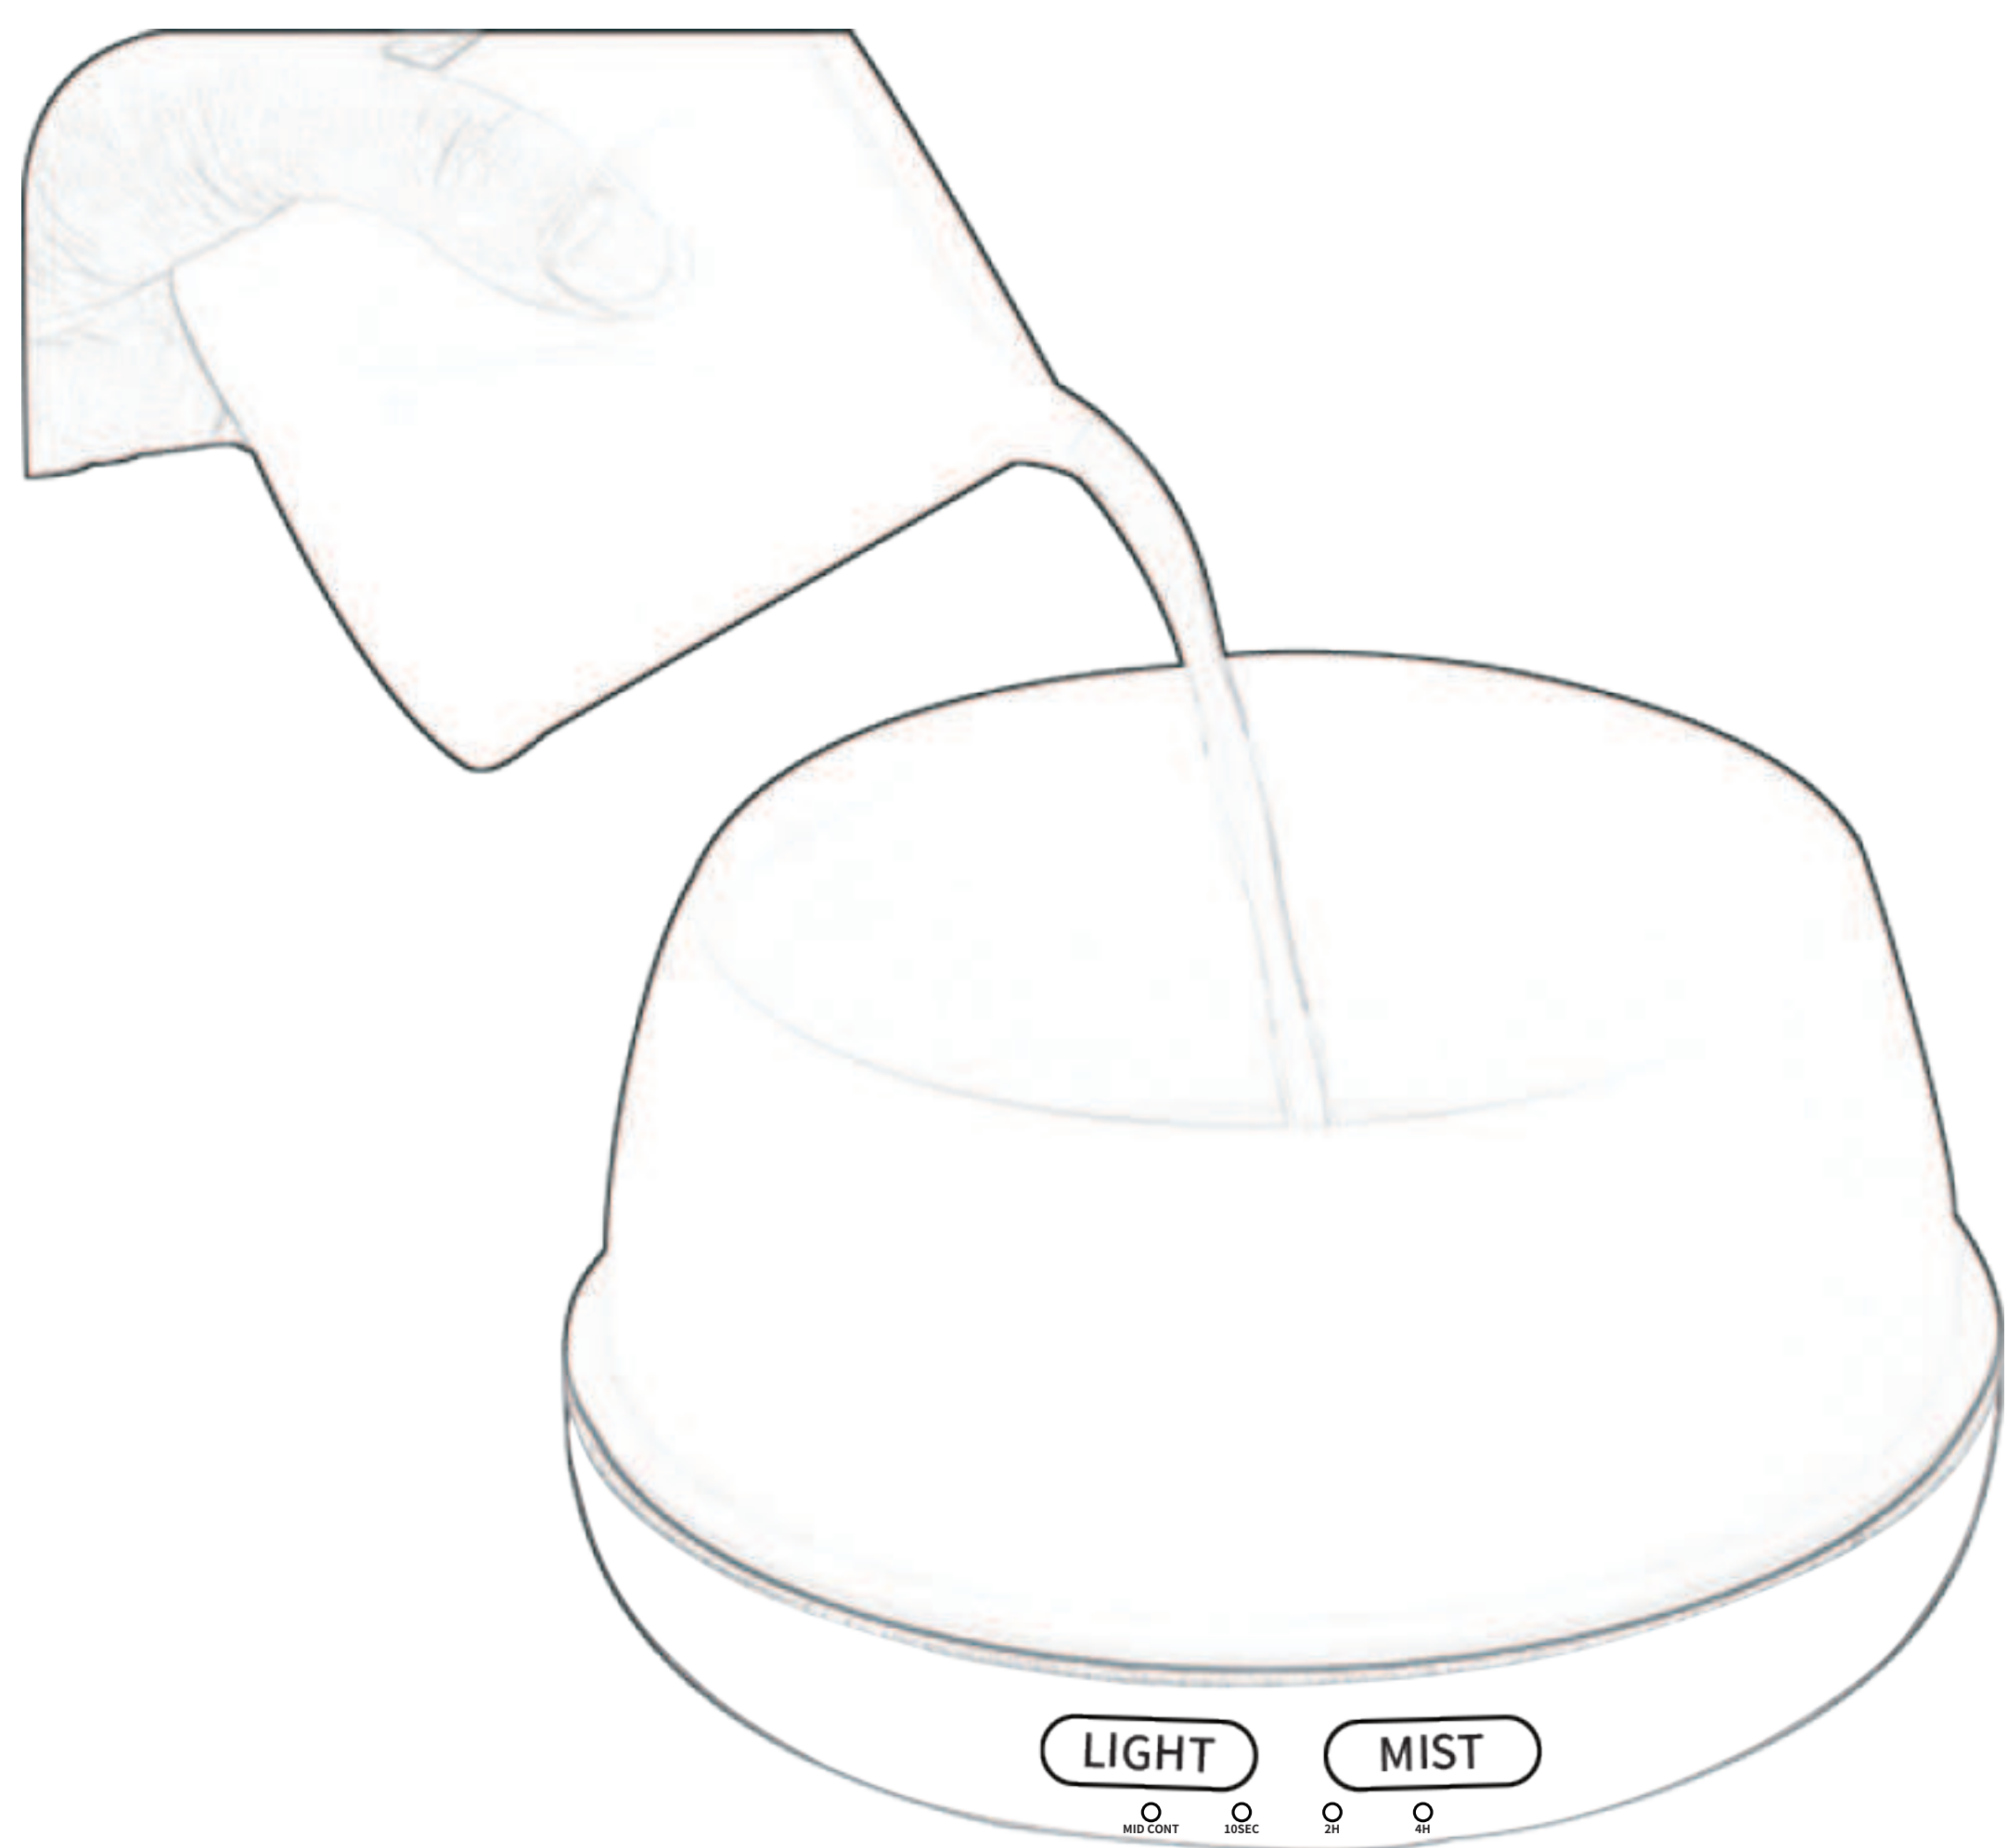 

Add Water to the tank

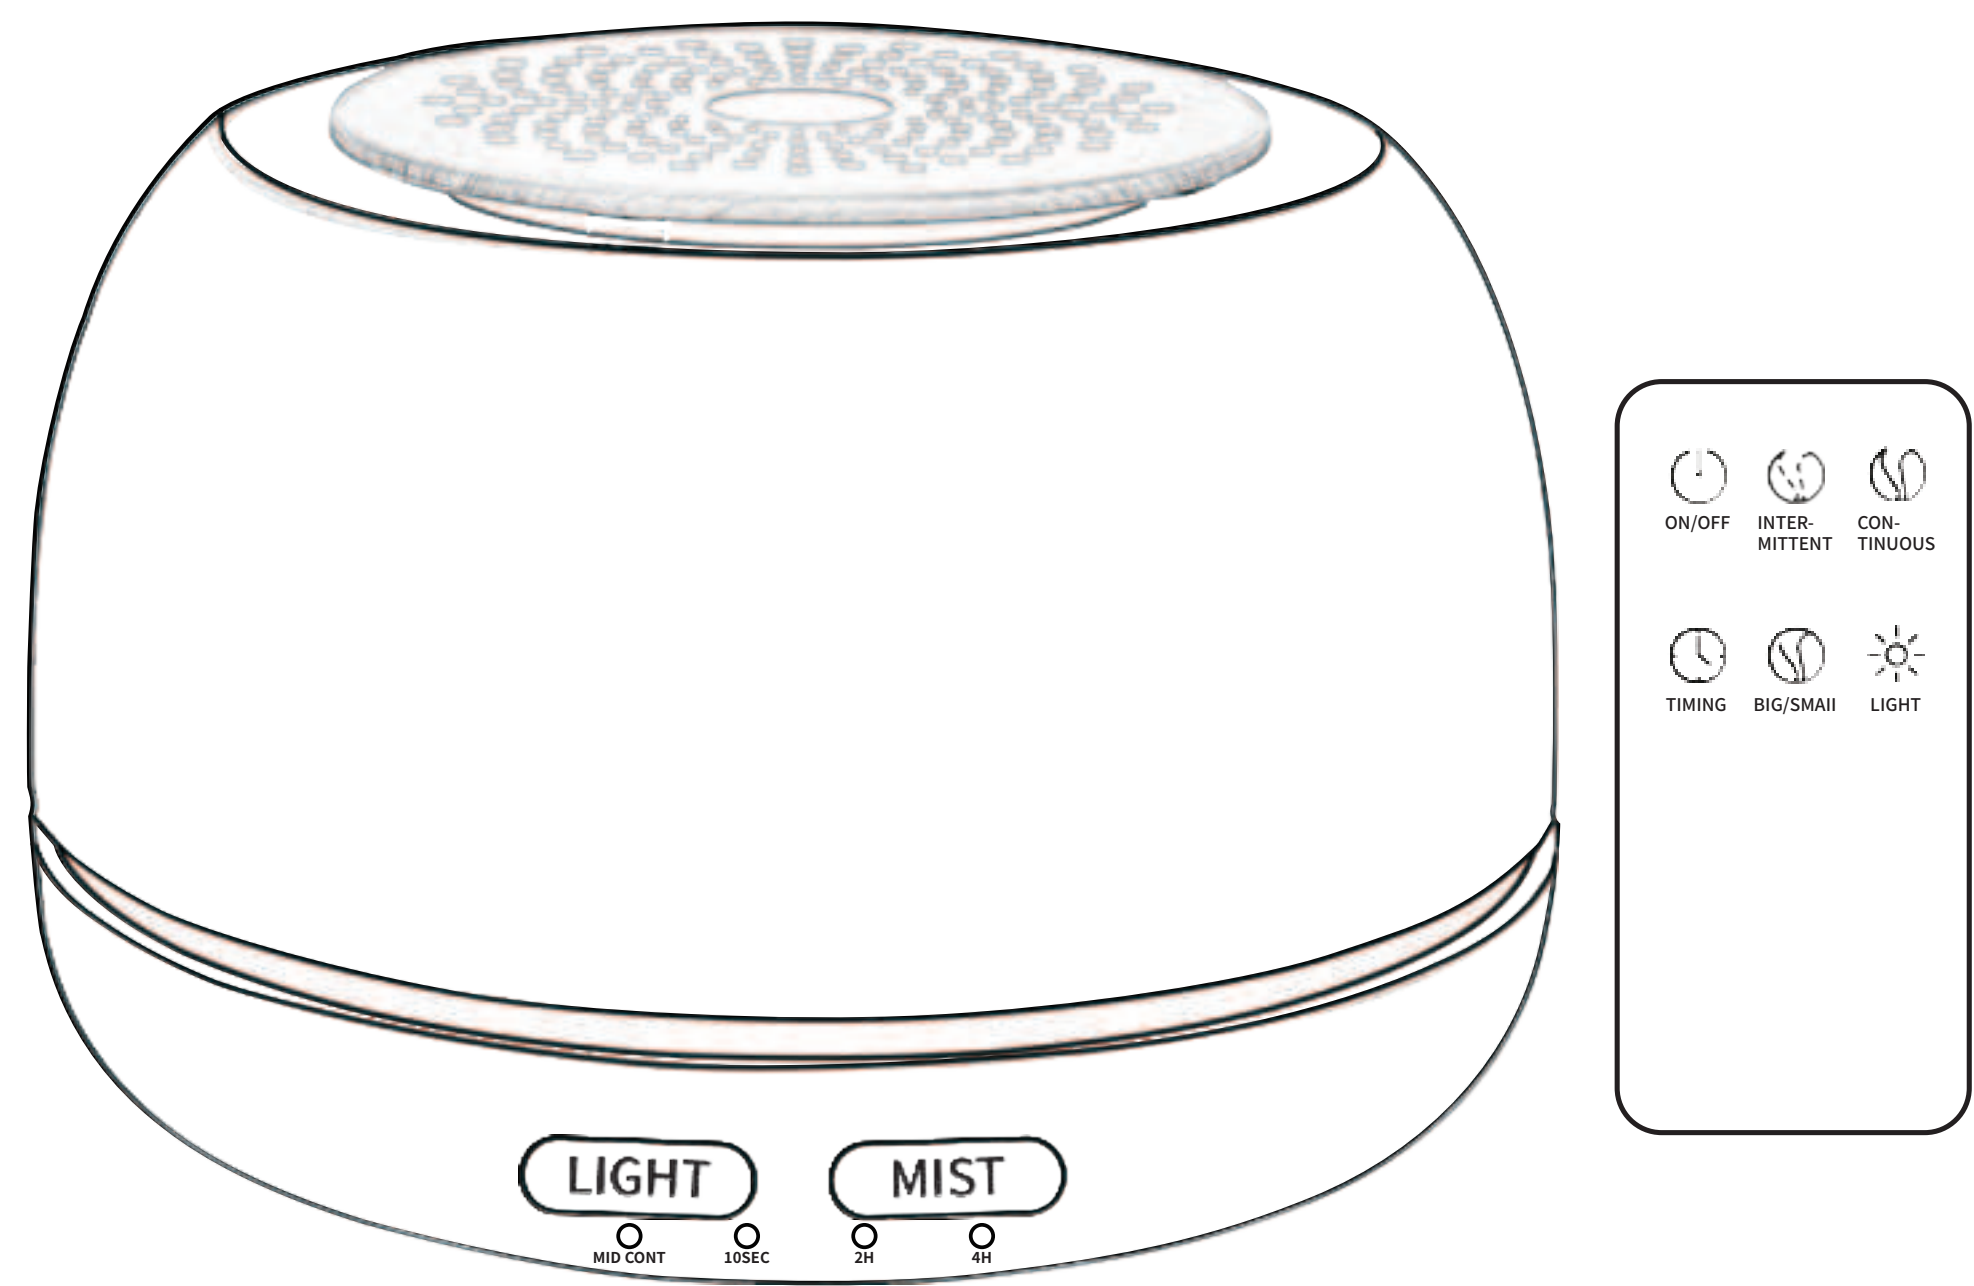 


Short press the LIGHT key to adjust the LED lamp

Short press the MIST key to adjust the time

Use the remote to control it

 Remote Control Guide

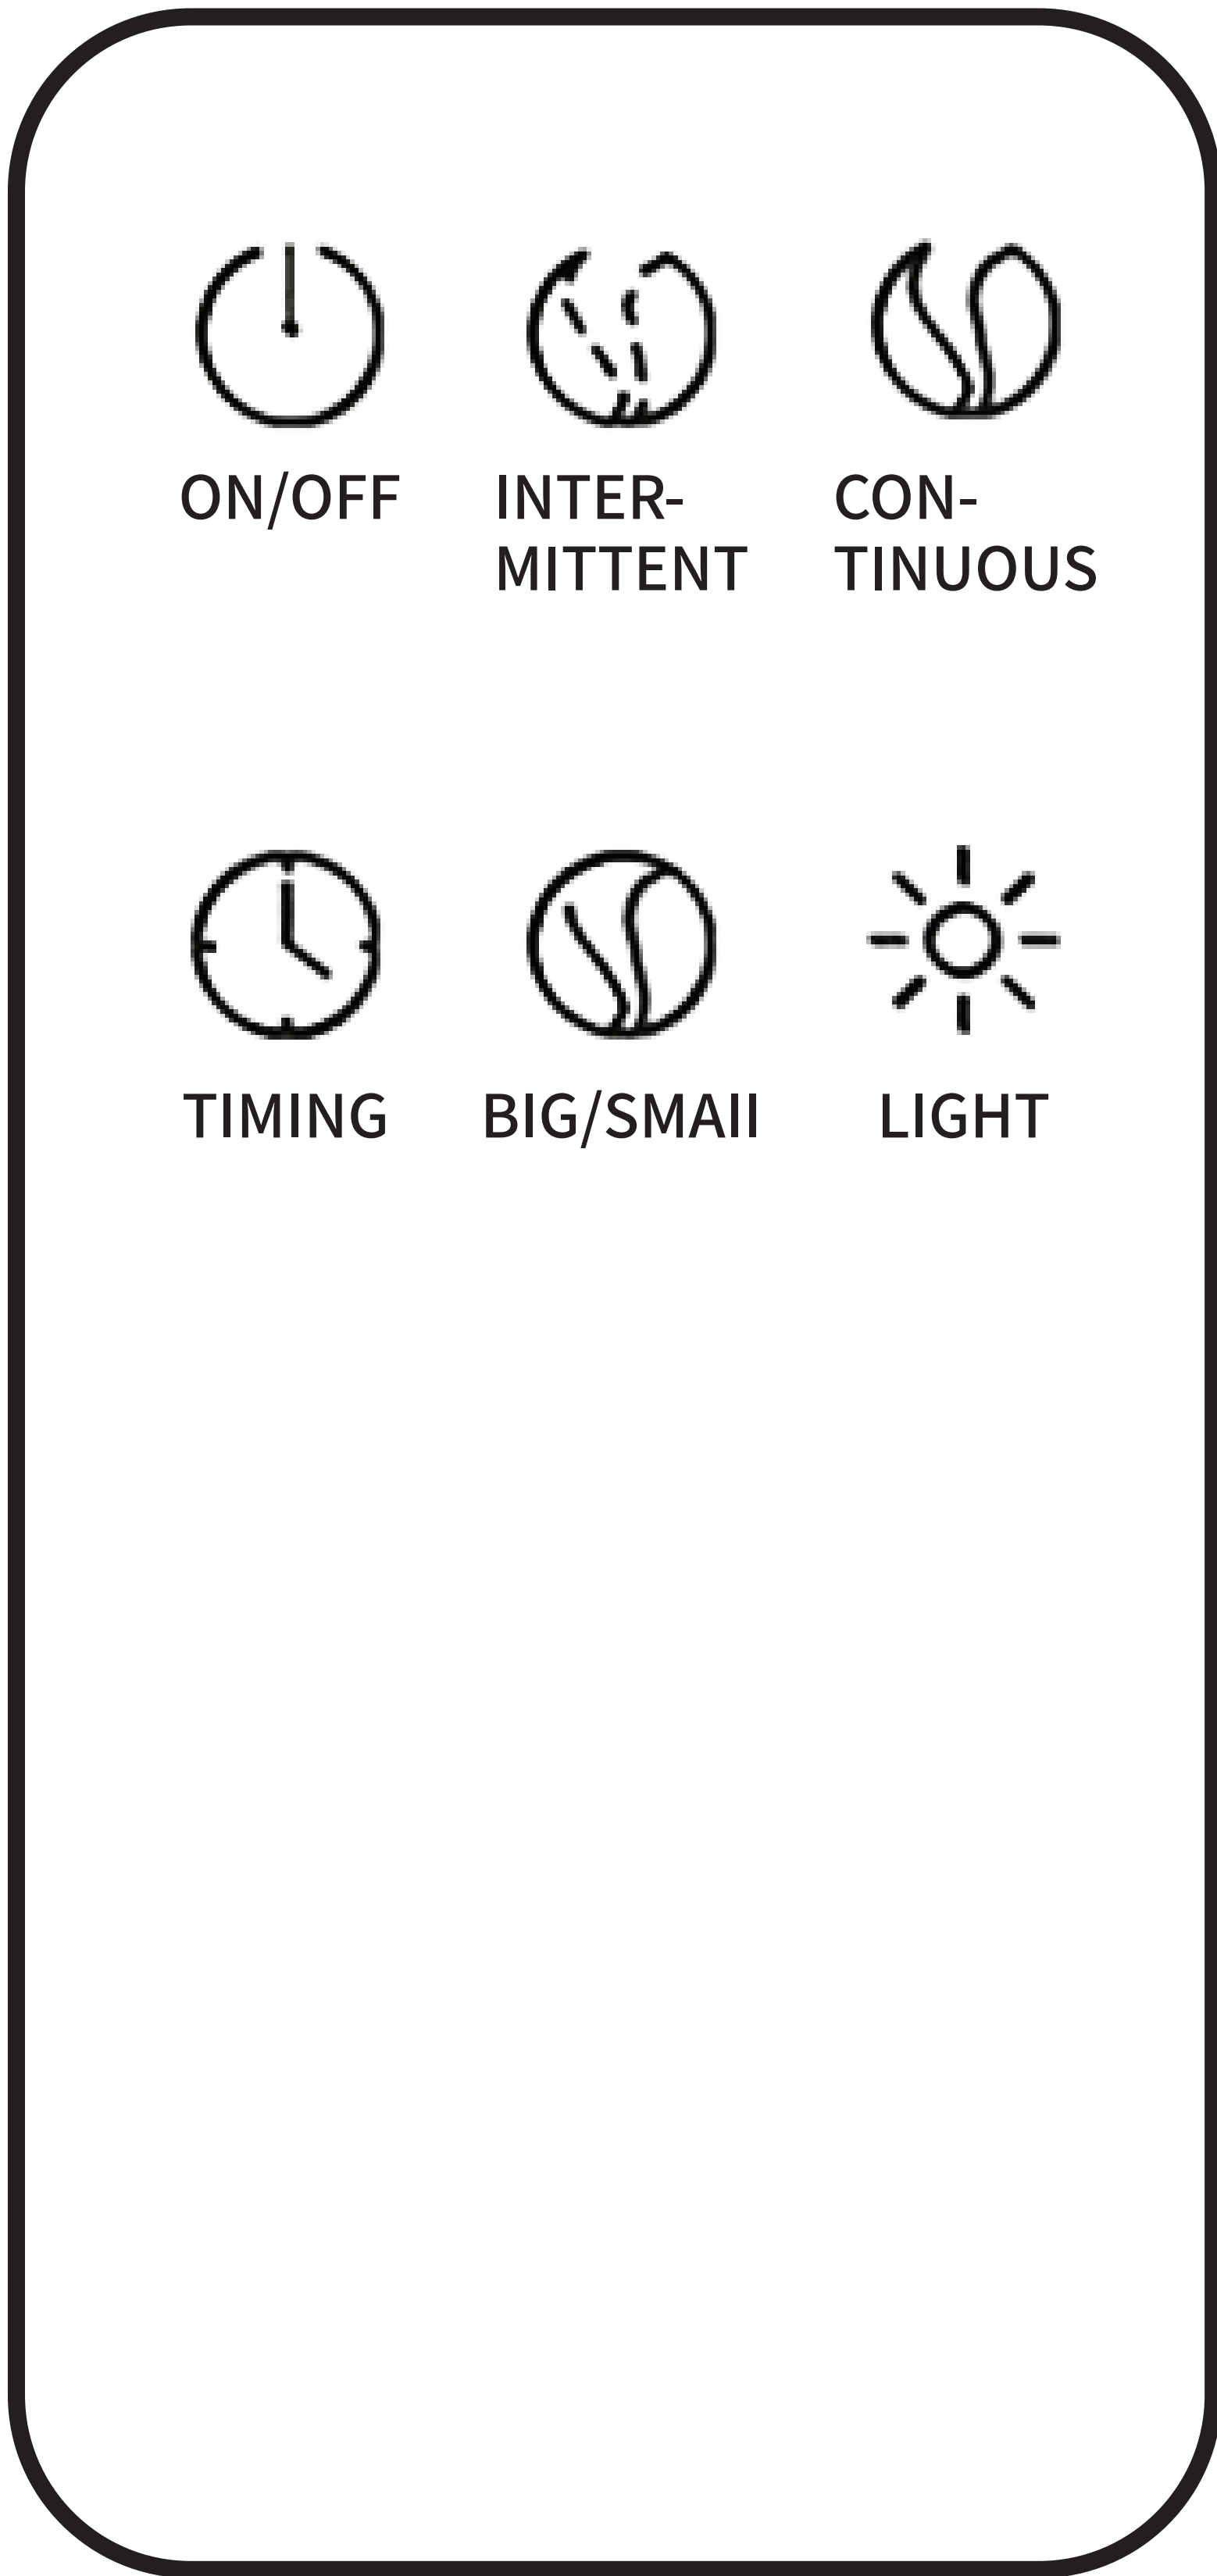

ON/OFF

One press: turn on the spray and set the continuous misting mode
two presses: turn off the spray

INTERMITTENT

Press to set to intermittent mist mode. It will mist for 10 seconds and stop 10 seconds then start to mist 10 seconds again.

CONTINUOUS

Press to set at continuous misting mode

TIMING

Press once: set the spray time to 2 hours
press twice: set the spray time to 4 hours
press three times: set continuous working.

BIG/SMALL

Press the button,one beep for small mist and two beeps for big mist

LIGHT(no beep when pressed)

Press once: turn on the light, the colors will cycle
the next press will fix each color in dark or light mode L
ong press about 3 seconds: turn off the light

Button Control Guide



LIGHT Button

- After the USB cable is connected , press the ' LIGHT' button once to turn on the light. the LED lightcolor will cycle from dim to bright gradually.
- Continue pressing will fix the color at a bright or dim status.
- Long press about 3 seconds to turn off the light.


MIST Button

- Short press the "MIST" button once to turn on the spray, and the spray time will be set to continuous on.
- Continue to press to set spray time to 10 sec/2 h/4 h and turn off.


Accessories



 
Diffuser*1

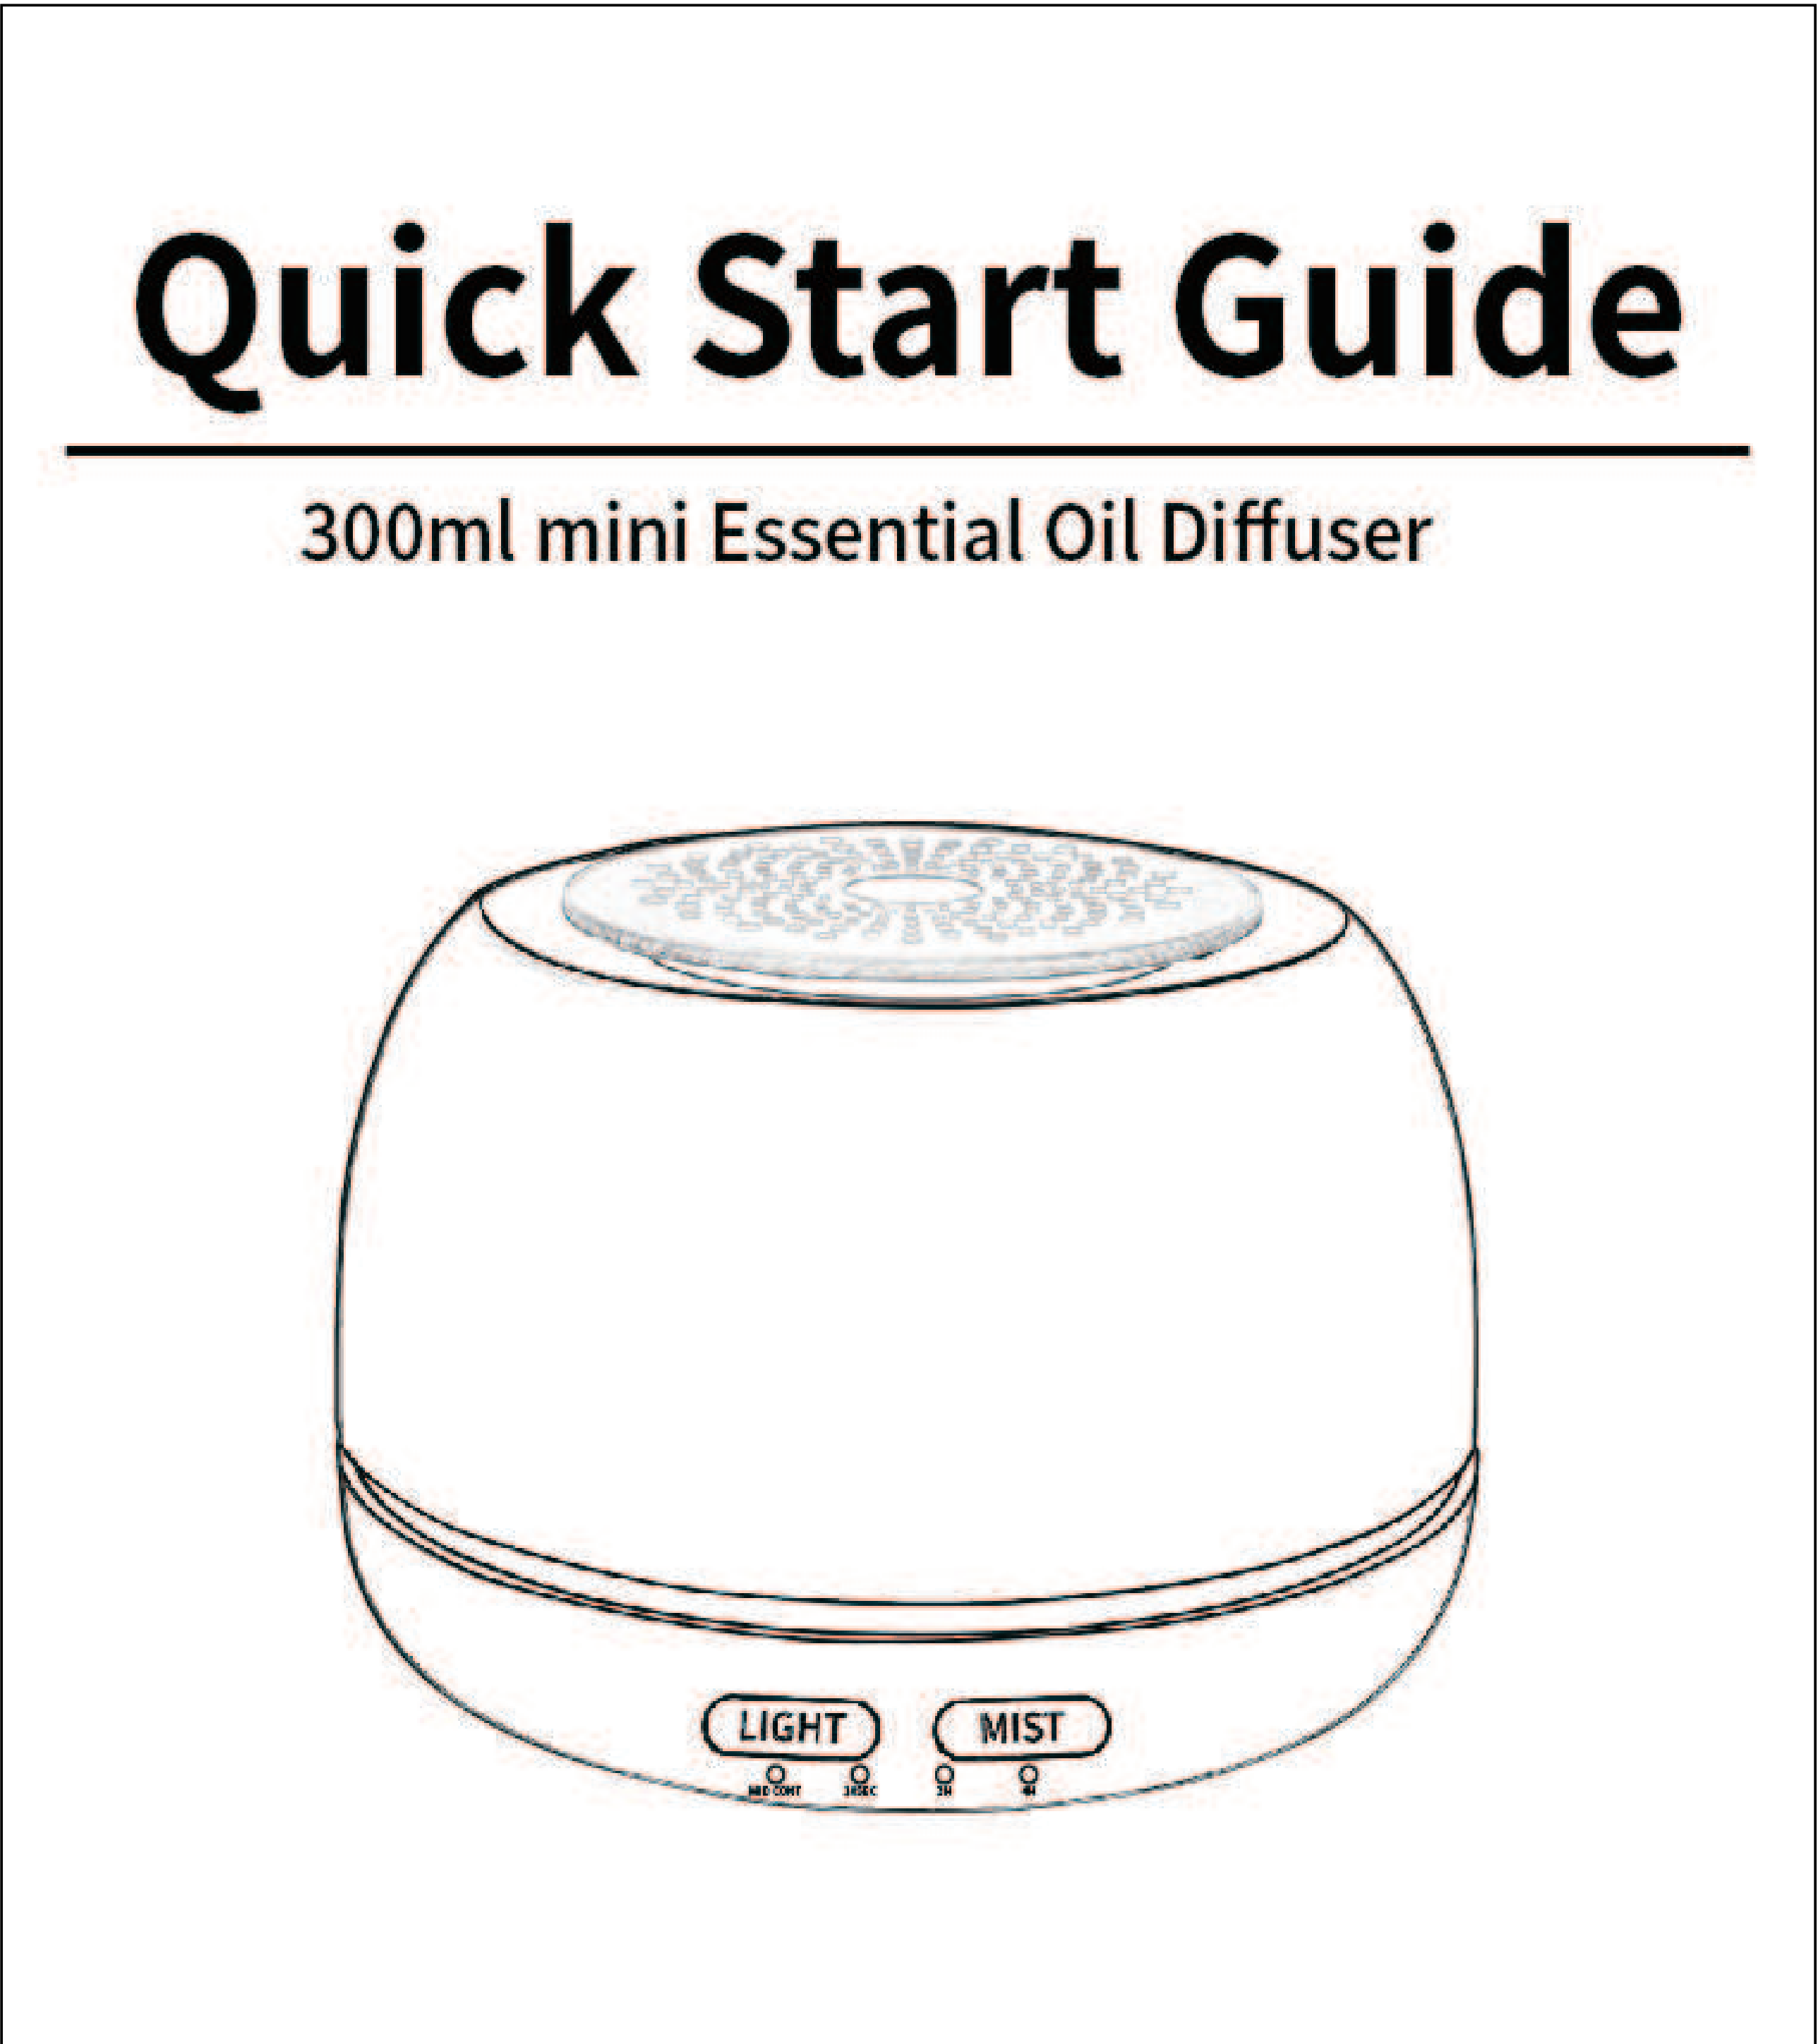

User Guide*1

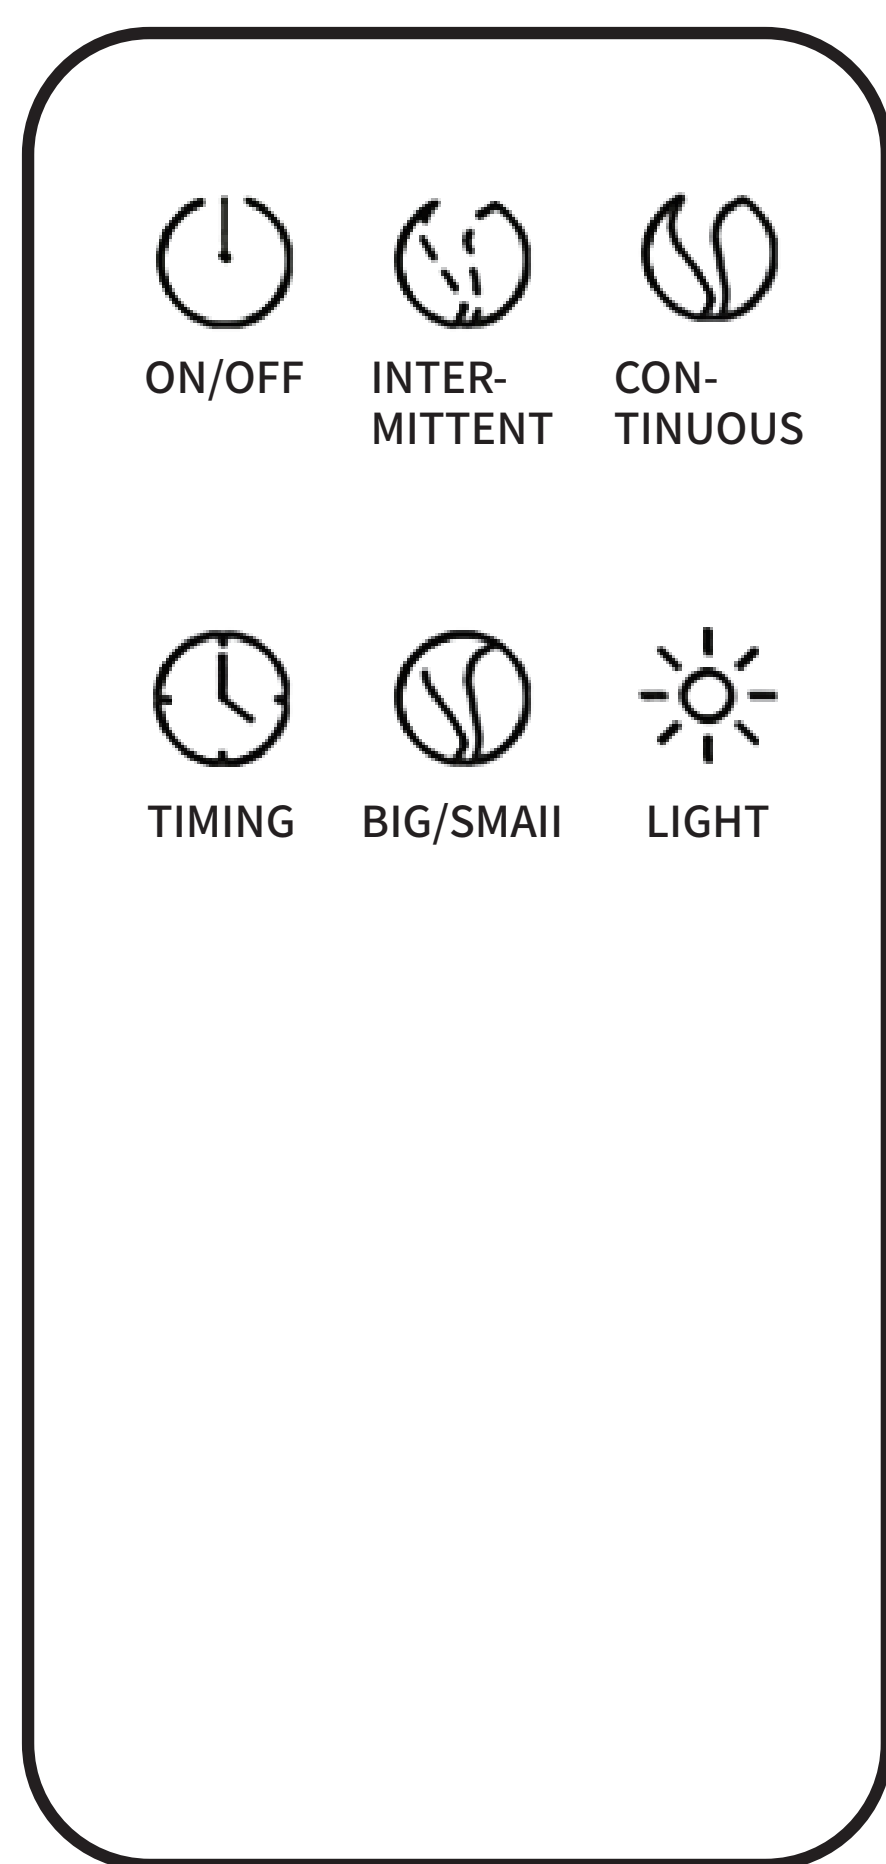 

Remote Control*1

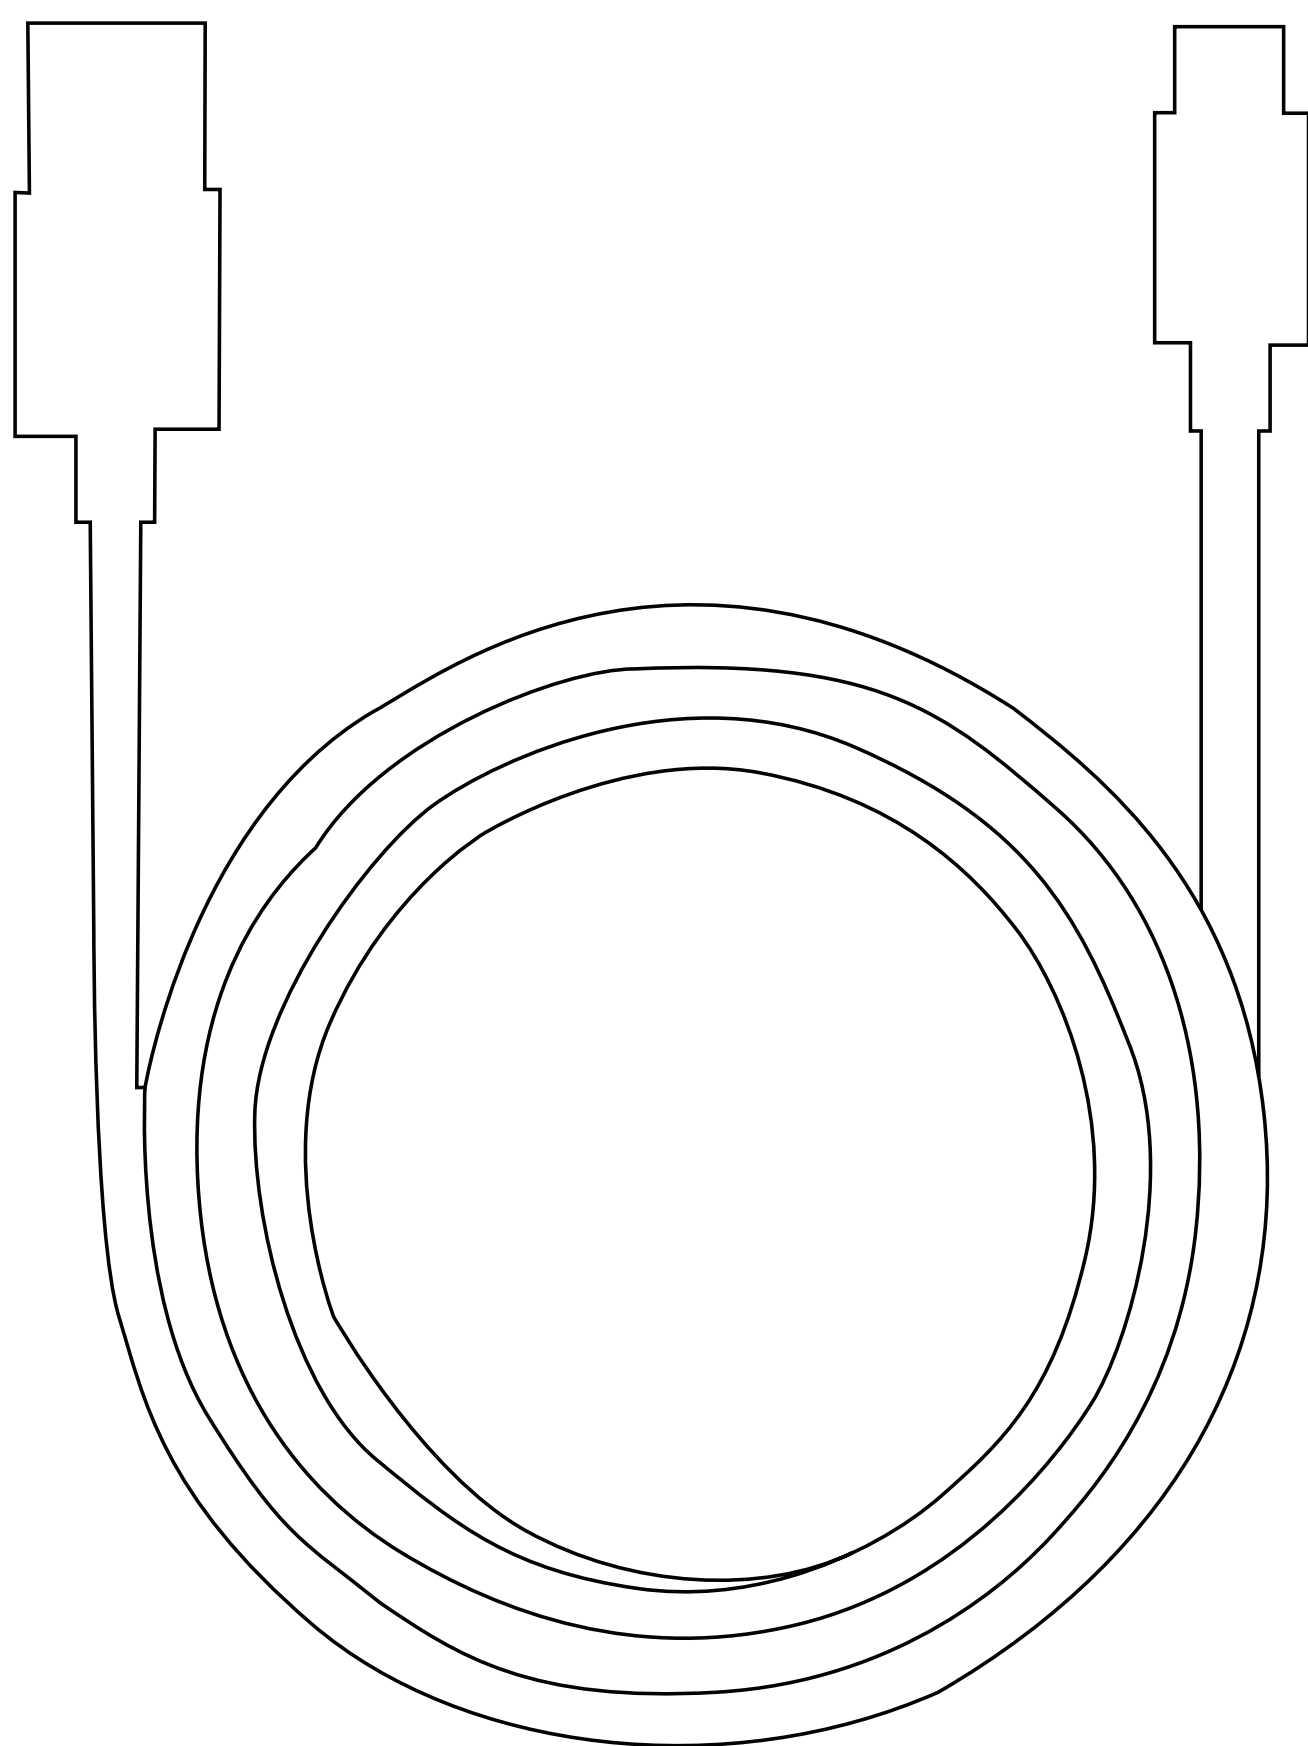 

USB cable*1

Notice:
Power adapter is not included in the accessories.

Troubleshooting

Please refer to the table below in the event of the product operating abnormally	
Will not switch on/off	<p>*Is there enough water in the tank?</p> <p>Please add water to the tank.</p> <p>*Is the USB cable connected properly?</p> <p>Please disconnect, check cables and reconnect carefully.</p> <p>Wipe the diffuser and Ultrasonic Nebuliser with a dry soft, cloth(As shown in Figure2).</p>
No mist or abnormal mist	<p>* Not enough water or too much water?</p> <p>Please add suitable amount of water in the tank, water must never be filled overmax line.</p> <p>* Dirt on the ultrasonic plate?</p> <p>Wipe the diffuser and Ultrasonic Nebuliser with a dry soft, cloth (As shown in Figure2).</p> <p>* Dirt or dust in the air intake on the underside of the base?</p> <p>There is a fan on the underside of the base that is required to blow the mist out. If it gets clogged with dust or dirt, it will prevent mist from coming out.</p>
Water leakage from product	<p>* Cover not set on the base properly?</p> <p>Remove the cover and set it back on the base right above the buttons.</p> <p>* Low temperature or high humidity?</p> <p>Under these conditions, the mist may condense quickly into water droplets.</p>

Attention: Clean the water tank every 3 days

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not let the area around the humidifier become wet. If moisture occurs, lower the output of the oil diffuser. If the output of the oil diffuser can not be reduced, use the oil diffuser intermittently. Do not let absorbent materials, such as carpets, curtains, curtains, or tablecloths, become wet.
- Unplug the USB Cable the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the oil diffuser before storage. Clean the oil diffuser before next use.



Warning: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water tank and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.

Specifications

Dimensions	Approx(W)12.4* (H) 8.6cm
Weight(Excluding Adapter)	Approx335g
Power:Input	5V1A
Length Of Cord	Approx150cm
Power	Maximum 5W
Working Mode	ON/10S/2H/4H
Tank Capacity	300ml
LED Colors	Seven colors
Materials	PP+ABS
Accessories	USB cable, Remote control
Working Frequency	2.4M Hz

