


Remote Control Selfie Stick 遥控自拍杆

Instructions for Use/使用说明

English/中文 V1.0

1 Name of Parts

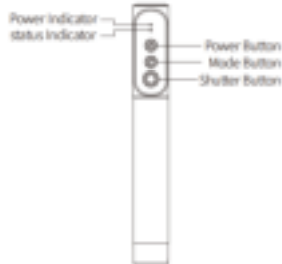

2 How to Use

2.1 Remote control on/off

1. Press the power button for 1 second while in off condition to turn on the remote control, and the power indicator light will be on to show the power status of it. Solid Green: 100% battery level > 10% Solid Red: 10% battery level < 10% Flashing Red: battery level = 0%

2. Press the power button and hold for 5 seconds to turn off the remote control. When it is on but not connected to the camera.

3. When the remote control is powered on and connected to the camera, press the power button of the remote control and hold for 5 seconds to turn off both the remote control and the camera.

2.2 Connect to the Camera

Apply for Insta360 Cameras

1. Press the power button for 1 second to power the remote control on. Then the status indicator will flash blue rapidly, indicating that the remote control has entered Bluetooth pairing mode.

2. When connecting to an Insta360 camera for the first time, press and hold the mode button on the remote control for 5 seconds to enter forced Bluetooth pairing mode. (The power indicator light and the status indicator will flash alternately.)

3. Turn on the camera.

4. Tap "Insta360 GPS Preview Remote" option in the camera's pull-down menu at the remote control settings interface. When the camera indicates that it has connected, the remote control's status indicator will change from rapidly flashing blue to solid blue, indicating that you can control the camera with the remote control.

Apply for GoPro Cameras

1. Press the power button on the remote control to turn it on, and the remote control's status indicator will flash blue rapidly.

2. Turn on the camera.

3. Tap "Pair Device" option in the camera's drop-down menu to put the camera into pairing mode. When the remote control's status indicator changes from rapidly flashing blue to solid blue, indicating that you can control the camera with the remote control.

Important Notes:

- Please make sure that the camera firmware is upgraded to the latest official version.
- The effective control distance of the remote control is 50 meters (in the case of no interference and no obstruction).
- There is no need to repeat the connection steps for the subsequent uses, and the remote control can wake up the camera directly after the first successful pairing and connection.

2.3 Wake up the Camera

Apply for Insta360 Cameras

1. The remote control has the function of waking up the camera. Once it is connected to the camera successfully, you can turn off the camera screen by just pressing the power button of the remote control briefly for 1 second, and the status indicator of the remote control turns solid blue. (Note: press and hold the power button for 5 seconds will turn off both the camera and the remote control.)

Noted:

- If you have turned off the camera via the remote control, a brief press of the remote control's power button for one second will wake up the camera provided that the Bluetooth wake-up function has been turned on in advance, and the remote control will be connected to the camera automatically in a few seconds (the camera will indicate that the remote control has been connected, and the remote control's status indicator will turn solid blue).
- If you have replaced or moved the camera batteries while the camera is off, the remote control can't wake up the camera in this case. You have to turn on the camera before it is automatically connected to the remote control.

Apply for GoPro Cameras

1. The remote control has a one-touch wake-up function. After the remote control is successfully connected to the camera for the first time, pressing and holding the power button for 5 seconds will turn off both the camera and the remote control. Pressing the remote control's power button for one second briefly will wake up the camera, and the

remote control will be connected to the camera automatically in a few seconds. (The camera will indicate that the remote control has been connected, and the remote control's status indicator will turn solid blue.)

Noted:

- If you have replaced or moved the camera batteries while the camera is off, the remote control can't wake up the camera in this case. You have to turn on the camera before it is automatically connected to the remote control.
- The GoPro camera can be waken up by the remote control within 5 hours after it has been turned off. You have to turn on the camera before it is connected to the remote control after that.

2.4 Control the camera to switch shooting modes

Apply for Insta360 Cameras

1. You can switch between photo and video modes by briefly pressing the mode button for 1 second before the shooting starts. Stop switching and stay for a mode for 5 seconds, then you can enter that mode and start shooting.
2. The X1 and X2 camera can switch between (normal single lens, super single lens, and panoramic mode) before the shooting starts by pressing and holding the shutter button of the remote control for 1 second.
3. Mark can be added by briefly pressing the mode button for 1 second in the One R and R1 cameras.
4. For X1, once the mode has been switched successfully by briefly pressing the mode button, the UI indicator will remove the same without displaying the switched mode. The UI will display the switched mode only by pressing the shutter button.

Noted:

- The mode button doesn't work when the camera is recording video.
- Pressing and holding the mode button for 5 seconds will cause the remote control to disconnect from the camera and enter Bluetooth pairing mode. Wait for a few seconds until it automatically connects to the camera to restore the connection. Light indicators: press and hold the mode button for 1 second until the power light flashes rapidly at which time the status indicator flashes blue rapidly, the remote control disconnects from the camera and enters Bluetooth pairing mode. After the status indicator flashes blue rapidly for a few seconds, the status indicator returns solid blue, and the camera and the remote control restore the connection.

Apply for GoPro Cameras

1. Switch between the sub modes menu of the camera by pressing the power button of the remote control briefly for 1 second before the camera starts shooting.
2. Switch between the main modes menu of the camera by pressing the mode button of the remote control briefly for 1 second before the camera starts shooting.
3. When starting recording, press the mode key briefly for 1 second to mark it.

Noted:

- The mode button doesn't work when the camera is recording video.
- Pressing and holding the mode button for 5 seconds will cause the remote control to disconnect from the camera and enter Bluetooth pairing mode. Wait for a few seconds until it automatically connects to the camera to restore the connection. Light indicators: press and hold the mode button for 1 second until the power light flashes rapidly at which time the status indicator flashes blue rapidly, the remote control disconnects from the camera and enters Bluetooth pairing mode. After the status indicator flashes blue rapidly for a few seconds, the status indicator returns solid blue, and the camera and the remote control restore the connection.

2.5 Control the camera for photos and videotaking

The remote control allows you to take photos or videos by pressing the shutter button after successfully connecting the camera.

- While in the preview mode, press the shutter button briefly for 1 second to take a photo or start recording.
- While recording, press the shutter button briefly for 1 second and the camera will stop recording.
- When the camera screen is off, a brief press of the shutter button for 1 second will turn on the screen and start recording.
- When the camera is off, a brief press of the shutter button for 1 second will power on the camera, turn on the screen, and start recording.

3 Specifications

Connection	Bluetooth
Dimensions	33.5 x 24 x 200 (mm)
Weight	112g
Input	5V/100mA
Battery capacity	3.7V1800mAh

4 Safety Tips

1. This product contains magnets. Please keep it away from devices such as pacemakers that are susceptible to interference.
2. Please use this product within the temperature range from -10°C to 40°C.
3. If not used for an extended period (such as 2 months), the product's battery may be depleted. Please charge the product in a timely manner and power it on.
4. Do not mechanically impact, scratch or throw the product. Do not place heavy objects on the product.
5. Do not expose the product to direct sunlight or ultraviolet rays (or distributed) or near heat sources such as stoves or heaters.
6. Do not use any liquid with cleaning functions on it. Do not wipe it with alcohol or similar substances, as the waterproof function of the remote control may become ineffective due to alcohol. Avoid using cleaning agents to wipe the charging contacts, as they may cause corrosion and rust, affecting the normal operation of the remote control. It is recommended to clean it with a soft dry cloth.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.