


Elves 2 Pro User Manual

orange, and when fully charged, it will be green.

During charging, the charging indicator light will be

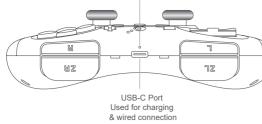

Calibration on Gyroscope In the power-on state, with the controller

placed on a flat surface, simultaneously press the "+, -, D-pad Left, and A" buttons. This will initiate an automatic calibration of the gyroscope. Once the calibration is complete, the controller will vibrate once as a notification.

*When the gyroscope is functioning normally,

there is no need for calibration.

for 6 seconds while it is in the power-on state. During calibration, fully move

Calibration on joysticks

the left and right joysticks in complete circles for 2 to 3 times. Once the calibration is complete, the controller will vibrate once as notification and will automatically exit the calibration mode.


B

Simultaneously press the "L. R. D-pad Left, and A" buttons on the controller



<u>/!\</u>

may cause suffocation if swallowed by children.

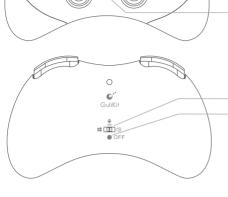

(23) (0)

(

Mode button.

Pilot Gaming)

Pairing button.

Controller status indicator light

To power on the controller, you can press any of the following buttons: A, B, X, Y, or Home button.

OFF button. The controller will automatically power off after 15 minutes of inactivity.

The controller will not power off when using the full-auto Continuous Fire or replay function (Auto

1.Switch the controller to ## mode.By long-pressing the pairing button for 2 seconds, the

Pairing Methods with PC

Rate.):

indicator light will start blinking quickly, indicating that pairing has started.

2.Add and search for devices in your computer's Bluetooth settings and add the "GuliKit Controller" device. 3. The interface displays "Connected" to the new controller, indicating that the pairing process

Bluetooth Pairing Method (requires a computer with Bluetooth capability With 170Hz Polling

 
- is complete Wired Connection Methods With 1000Hz Polling Rate:
- Set the controller to \blacksquare mode. Connect one end of the provided data cable to the controller. Insert the other end into a USB A port on your computer. If you are using a desktop computer, it is recommended to plug the cable into one of the USB ports on the back of the computer case for a more stable connection.

Wireless Pairing Methods with Android, iOS, and macOS Devices

Switch the controller to , iOS mode.
 By long-pressing the pairing button for 2 seconds, the indicator light will start blinking quickly, indicating that pairing has started.
 Add and search for devices in your cell phone's Bluetooth settings and add the "Xbox Wireless Controller" device.
 The interface displays "Connected" to the new controller, indicating that the pairing process in controller.

- **Pairing Methods with Switch**

100000



Method 2:

wirelessly.

Recording process:

while moving.

automatically stop after 10 minutes.

is complete.

1.Set the controller to node. Connect one end of the provided data cable to the controller.

Alternatively, you can leave the data cable plugged in for wired mode usage.

- Plug the other end into the USB A port on the Switch dock. 2.Place Switch console on the dock. The controller will automatically pair with the console. 3. Once the pairing is successful, you can unplug the data cable and use the controller
- Use Method of Auto Pilot Gaming Function(APG)

Hold the APG button for 3 seconds. You will feel a short vibration, indicating that the

APG function is a recording & repeat playback function for custom commands or macros

recording has started. From this point, all subsequent button presses and joystick movements will be recorded. To stop the recording, either press the APG button again or wait for the recording to

using the APG button (Double-Square icon button).

You will feel a long vibration, indicating that the recording is complete. The maximum recording time is 10 minutes. Replay the recorded actions:

Press the APG button once briefly to automatically repeat the recorded actions once. Double-click the APG button to continuously repeat the recorded actions until interrupted. During the replay, you can use the joystick for movement, allowing you to perform actions

To cancel the replay midway, press any other button except the joysticks.

(Gear icon button) while pressing the corresponding buttons for configuration. All special settings will be automatically saved. When there are special settings configured, the logo be white When the battery is low, the logo light


will flash, and the vibration function will automatically turn off. When the battery level is restored, the vibration will automatically turn back on.

All special function settings mentioned below require holding down the Setting button (\$\oldsymbol{\oldsymbol{\oldsymbol{o}}}

(B)

T)

ZR

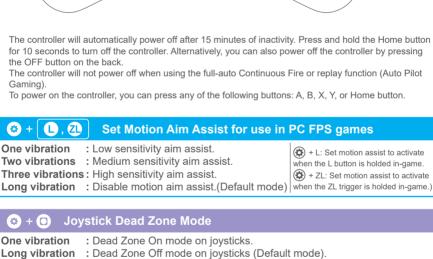

Set 4-direction on D-pad One vibration: The D-pad switches to 4-direction mode.

*R3 and L3 refer to the buttons when pressing down on the joysticks, Each joystick can be individually

Long vibration: Indicates that the reset process is complete, and the controller has been

Continuous Fire (Turbo) One Vibration: Normal Continuous Fire. It is active when the button is held down and

Two Vibrations: Auto Continuous Fire. Press the button once to initiate Continuous Fire.

: Sensitivity 50%, joystick ring in red.

Two vibrations: Sensitivity 100%, joystick ring in blue.(Default setting)

Long vibration: Restores the default 8-direction mode. (Default mode)

restored to its factory settings. **♦** + | ♠,₿,♦,♥,₨,₡₽

Clear all settings (Reset)

stops when released.

★ + R3 , L3 Adjust Joystick Sensitivity

Three vibrations: Sensitivity 150%, joystick ring in green.

One vibration

configured.

(a) + (b)

O + **O** A-B X-Y Swap

One vibration: Swaps input values of the A-B and X-Y buttons. Long vibration: Restores the default button assignments. (Default mode)

Press the button again to stop. Long vibration: Cancel Continuous Fire. (Default mode)

One vibration : Weak vibration. : Standard vibration.(Default mode) Two vibrations Three vibrations: Strong vibration. Long vibration: Turn off vibration

Adjust Vibration Intensity

APG Recording File Share

One vibration : Rotary motor mode.
Two vibrations : GuliKit Maglev haptic mode.(Default mode)

The setting lets you enter APG read/write mode first, next insert the USB data cable into your computer and you should see a USB drive named "GuliKit dat" on your computer. Open the USB drive and you will see a file named "Auto. apg" which is the APG recording file that you can freely copy for backup or share. If you want to overwrite the existing APG file, you can replace it with a new APG file by

copying the desired APG file into the USB drive.

Three vibrations: HD vibration mode.

*Once the writing process is complete, the controller will automatically power off. Alternatively, you can hold the Mode button to power off the controller.



Long vibration

*Please avoid changing the file name to ensure proper functionality. For more questions & answers, you can visit the website and navigate to the "Support" section and look for the "Frequently Asked Questions' (FAQ) related to the controller.