

LIGHT UP WAVY FULL LENGTH MIRROR

SLR-23911

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the cable or pull the cable to remove the adaptor from the socket.
3. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
4. If the appliance stops unexpectedly or appears to malfunction, unplug the adaptor from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the mains socket when not in use, before cleaning or changing accessories.
6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
7. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
8. This product has not been designed for use by children.
9. Children should be closely supervised at all times when they are near any electrical appliance.
10. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
11. Always ensure that hands are dry before operating or touching the adaptor.
12. To disconnect, first ensure that all controls are in the OFF position, then remove the adaptor from the electricity supply.
13. Do not use outdoors. This appliance has been designed for domestic indoors use only.
14. The mirror is not replaceable. If the mirror is broken, the whole luminaire shall be discarded.
15. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
16. Avoid touching the mirror with sharp objects in order to prevent scratches that might affect the mirror usage.
17. Do not position this light set where it will be exposed to wet condition or submerged in water.

Power adaptor (use provided power adaptor: KL12-2400500AU only)

Input: 100-240V~ 50/60Hz 0.4A

 
 
Output: 24V DC 500mA 12W

INSTRUCTIONS FOR USING

1. Insert the DC plug into the socket on the lamp.
2. Check to ensure that all the components have been assembled correctly.
3. Plug in the adaptor to connect to the mains supply.
4. Use remote control to turn on the light. There are multiple modes, colours and functions.

Remote control parameter

- 2 * 1.5V AAA batteries required (batteries not included)

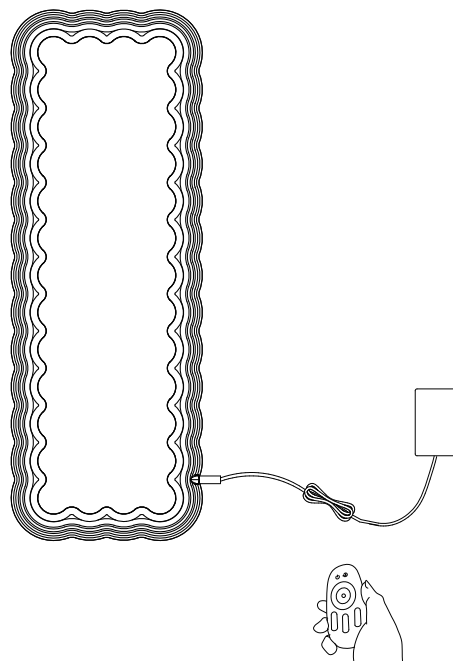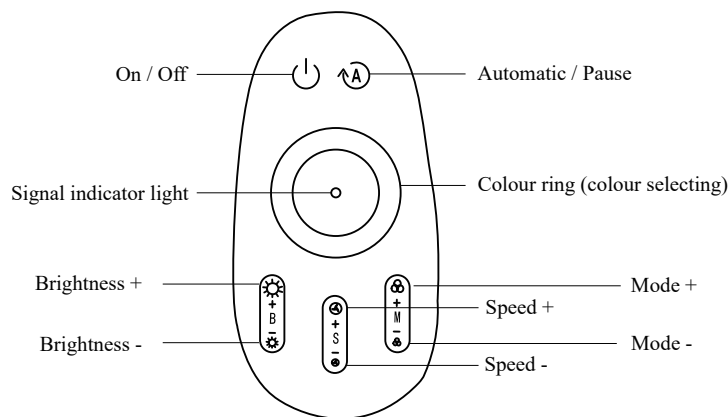


MAINTENANCE

1. Before cleaning and maintenance, make sure the power adaptor is unplugged from mains.
2. To clean the lamp, only use a soft, dry or slightly damp cloth (with the addition of some dishwashing detergent if necessary). Do not use abrasives or solvents for cleaning.




INSTALLATION INSTRUCTIONS

 
WARNING: ENSURE SECURE ATTACHMENT TO WALL. CONSULT A DIY EXPERT IF REQUIRED.

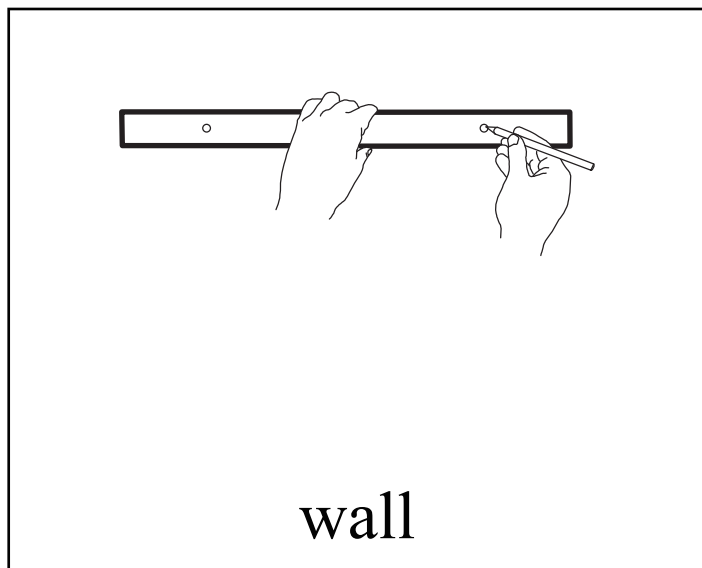

 
1. Take out the distance measuring paper from the color box, place it on the wall where you want to hang the lamp, and use a pencil or marker (not included) to locate the 2 holes. Please pay attention to maintaining a horizontal installation.

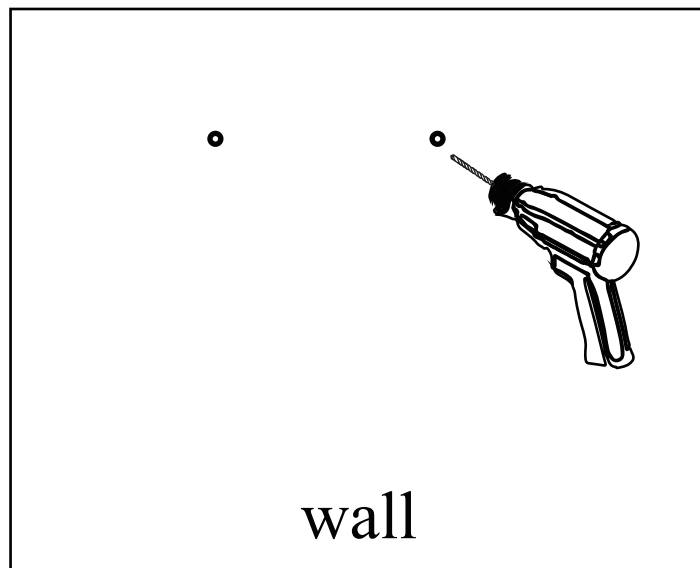

 2. Drill holes at the located position by pistol drill(not included). Make sure the drill diameter is 5-5.2mm and holes depth are deeper than 30mm.

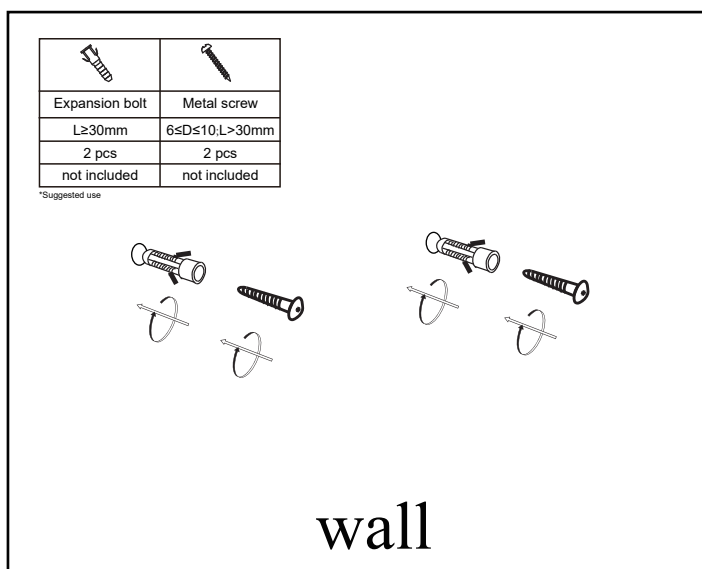

 3. Insert the expansion bolts into the holes, make it smooth on the wall. Install the metalscrews into the expansion bolts. Please make sure there is 3-5mm gap between metal screw and expansion bolt for hanging.

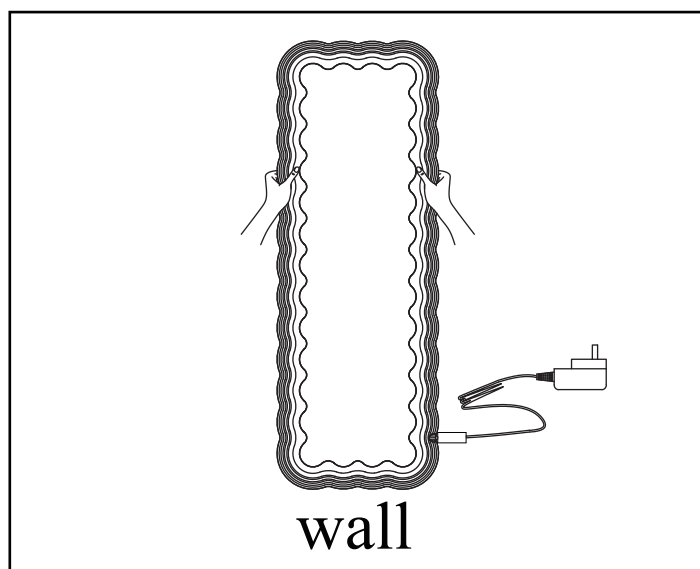

4. Align the hook on the back of the lamp with the nail and install it on the wall, then insert the DC plug into the socket on the lamp.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us