



FURY NO4

BLUETOOTH 3/4 HELMET

HD SPEAKERS

QUICK START GUIDE

■ Downloadable Software

Download the **Sena Motorcycles App** on **Google Play Store** or **App Store**.



Sena Motorcycles

- Device configuration setting

Download the following items at **www.H-D.com/infotainment-support**.



Boom Audio Bluetooth Device Manager

- Firmware upgrade
- Device configuration setting





Quick Start Guide, User's Guide



Customer Support:
www.H-D.com/infotainment-support


■ Product Details

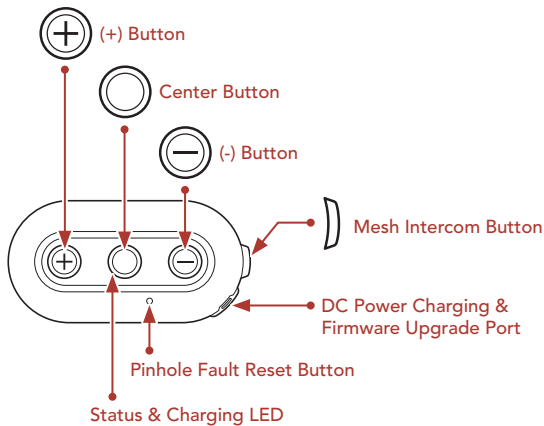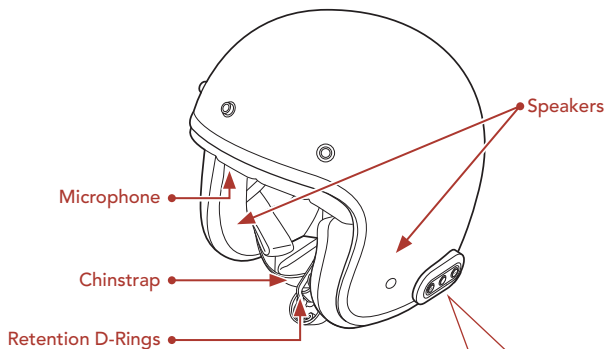

Bluetooth System's Buttons

■ Putting on the Helmet


Gently pull the padded chinstrap outward and slide the helmet onto your head. Route the chinstrap under your chin, then thread it through both D-Rings. To fasten securely, thread chinstrap back through the D-Ring closest to your neck, and pull.

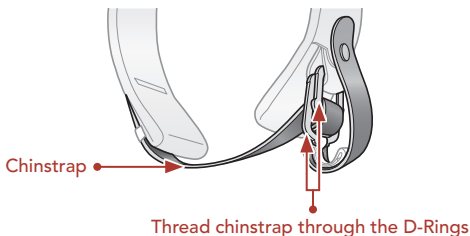

Note: Check the chinstrap's position and tension regularly to ensure proper fit.

■ Accessory Installation: Visor

Harley-Davidson provides both a long and short visor in the package. Align the buttons of the visor with the helmet and press hard to attach.

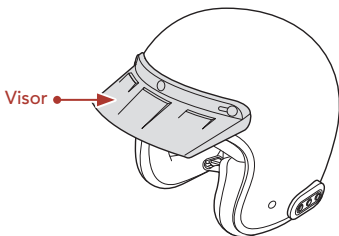

Icon Legend



Tap button the specified number of times



Press and Hold button for the specified amount of time

 


"Hello"


Audible prompt

Basic Operations


Powering On




Powering Off

 

Volume Up

 

Volume Down

 

Checking the Battery Level

Powering On



=



=



=



■ Phone Pairing



- ② Select **FURY N04** in the list of Bluetooth devices detected.

 



- The Bluetooth system will enter the **Phone Pairing mode** automatically when you **initially turn on** the Bluetooth system.
- For more information on phone pairing, refer to the User's Guide.

Bluetooth Pairing with WHIM

Pairing with WHIM

- ①  Boom! Box radio go to:
Home > Setup > Wireless
Headset Setup > Pair Rider
(select)

- ②   →  "Configuration menu"

 - ③   →   "Phone pairing"

- ④  Select: **FURY N04 v1.0...**

■ Using the Phone

Answer a Call



End a Call



Reject a call



Voice Dial

 


■ Music Control


Play/Pause



Track forward



Track backward

 

■ Mesh Intercom™

Open Mesh™: communication within the same channel.

Group Mesh™: communication within the same private group.

- For more information on **Mesh Intercom**, refer to the User's Guide.

Mesh Intercom On



Mesh Intercom Off



Note: When **Mesh Intercom** is on, the **FURY N04** will automatically connect to nearby **FURY N04** users and the Bluetooth system will be in **Open Mesh (default: channel 1)** initially.

■ Open Mesh


Channel Setting (Default: channel 1) in Open Mesh

Using the Button

- ① Enter into the **Channel Setting**.



- ② Navigate between channels.
(1 → 2 → ... → 8 → 9 → Exit → 1 → ...)

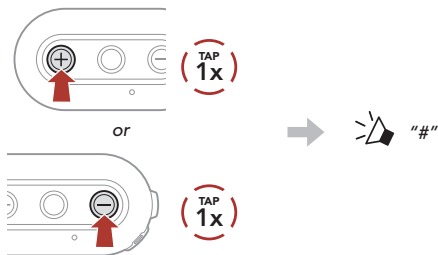

- ③ Save the channel.



Using the Sena Motorcycles App


You can select the channel through the **Sena Motorcycles App**.

■ Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each Bluetooth system.

1) Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh users**.

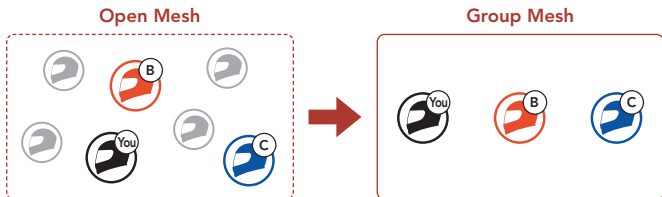

- ① **Users (You, B, and C)** enter into **Mesh Grouping** to create a **Group Mesh**.




- ② When **Mesh Grouping** is completed, the **users (You, B and C)** will hear a voice prompt on their Bluetooth system as **Open Mesh** switches to **Group Mesh**.



2) Joining an Existing Group Mesh

One of the **current users** in an **Existing Group Mesh** can allow **new users (one or more)** in **Open Mesh** to join the **Existing Group Mesh**.

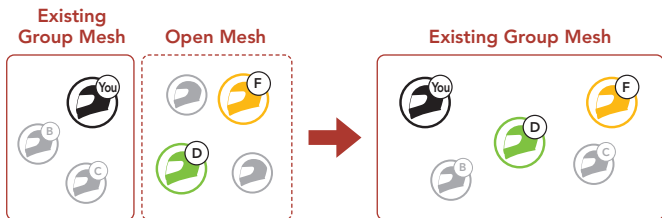

- ① One (**You**) of the **current users** in the **Existing Group Mesh** and **new users (D and F)** in **Open Mesh** enter into **Mesh Grouping** to join the **Existing Group Mesh**.



- ② When **Mesh Grouping** is completed, the **new users (D and F)** will hear a voice prompt on their Bluetooth system as **Open Mesh** switches to **Group Mesh**.



■ Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.



■ Reset Mesh

If a Bluetooth system in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.

 


■ FM Radio

FM Radio On/Off



Start/Stop Scanning



Seek Forward



Seek Backward



Navigating Preset Stations



Note: You can also save the current station from the **Sena Motorcycles App**.

■ Configuration Menu

Accessing the Configuration Menu



Navigating Between Menu Options




Execute Menu Options




Troubleshooting

Factory Reset

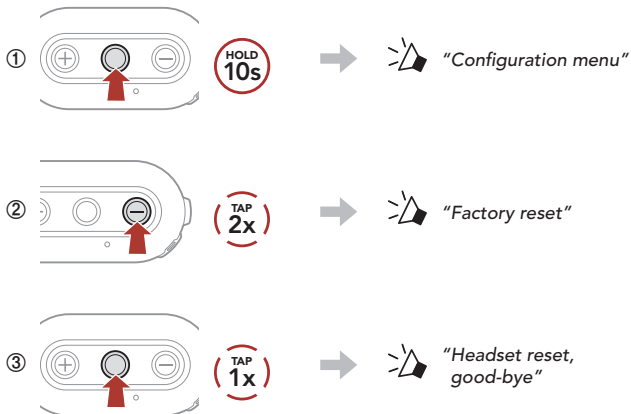

Fault Reset

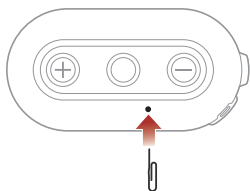

Note: Fault Reset will not restore the Bluetooth system to the factory default settings.

Quick Reference

TYPE	OPERATION	BUTTON COMMANDS
 Basic Operations	Power on	  
	Power off	  
	Volume up/Volume down	 or  
 Mobile Phone	Answer phone call	 
	End/reject phone call	 
	Voice Dial	 
 Music	Play/Pause music	 
	Track forward	 
	Track backward	 

TYPE	OPERATION	BUTTON COMMANDS
 Mesh Intercom™	Mesh Intercom on/off	 
	Channel setting	 
	Mesh Grouping	 
	Reset Mesh	 
	Enable/Disable Mic	 
 FM Radio	FM radio on/off	 
	Select preset	 
	Seek forward/backward	 or  
	Scan up FM band/ stop scanning	 