

Introduction

The Dimension 200® is a router/engraver for three-dimensional signage created for use with the GRAPHIX ADVANTAGE® or other computer systems along with ART Path™ software.

The ART Path Software Option allows the GRAPHIX ADVANTAGE to fully control the routing operation, enabling you to send jobs directly from ART Path on the GRAPHIX ADVANTAGE through the ADVANTAGE Router™ Control (ARC) station.

The Dimension 200 can cut designs from a variety of materials, as well as draw all types of text or graphics. In addition, the Dimension 200 is an excellent solution for creating ADA-compliant (Americans with Disabilities Act) signage.

Warning: THE DIMENSION 200 IS A COMPUTER-CONTROLLED MACHINE TOOL AND SHOULD BE OPERATED ONLY BY TRAINED OPERATORS. THE SAFETY GUIDELINES IN THIS MANUAL MUST BE FOLLOWED AT ALL TIMES TO AVOID RISK OF INJURY.

Manual Contents

This manual provides installation, operation, and maintenance procedures as well as safety guidelines for the Dimension 200. Covering the basic information needed for using the Dimension 200, it is arranged as follows:

- Router requirements and package contents
- Stand assembly instructions
- Router and optional equipment installation instructions
- Safety guidelines
- Principles of operation
- System preparation and use

- Cleaning and maintenance procedures
- Recommended feed rates for various materials (card)

Conventions

The following conventions are used in this manual:

Note: A note contains important information which could affect successful completion of a task.

CAUTION: A caution statement contains information which, if not observed, could result in damage to the equipment.

WARNING: A warning statement contains information which, if not observed, could result in personal injury.

Customer Support



If you require assistance installing or operating your Dimension 200, contact your Gerber distributor or the Router Support Group at 800-336-1698 (USA and Canada) or fax at 203-290-5568.

If possible, please use a phone that is close to your GRAPHIX ADVANTAGE system and have the following information available before calling:

- MS-DOS® and Microsoft® Windows™ version numbers
- GSP System ID number
- System serial number
- GRAPHIX ADVANTAGE, Windows, MS-DOS, and hardware utilities disks
- GRAPHIX ADVANTAGE, Windows, and MS-DOS user manuals

Router Requirements

This section discusses the work space, equipment, and electrical requirements for the Dimension 200 router system.

Work Space Requirements

Warning: THERE MUST BE SUFFICIENT SPACE PROVIDED IN THE PRODUCTION AREA AROUND THE ROUTER FOR MATERIAL STORAGE AND SAFE ACCESS FROM ALL SIDES.

A 3-ft. clearance on all sides of the router stand is the recommended minimum work area. In addition, all equipment should be kept reasonably close together. The T-Vac™ blower must be located close to the rear of the table.

CAUTION: Do not place a router in a damp work area. The operating environment should fall within a temperature range between 32 - 99°F (0 and 37°C) and within a relative humidity range between 0 and 70%.

Equipment Requirements

ROUTER STAND

A 48 in. square table or stand (with 3-ft. clearance on all sides, or more if the paneling feature is used) is needed. If the stand is not used, the table must be a heavy duty table able to support 300 lbs.

ELECTRICAL BOX

Gerber recommends placing the electrical box on the table beside the unit or under the table. The power switch must be easily accessible. Do not set the box directly on concrete floors because of condensation potential. The electrical box must also be protected from any coolant.

HIGH FREQUENCY SPINDLE OPTION AND SPEED CONTROLLER

The Speed Controller is used only with the High Frequency Spindle Option. Mount the Speed Controller vertically a minimum of 3 ft. away from the system, with the controls easily accessible. Do not set the Speed Controller directly on concrete floors because of condensation potential. The Speed Controller must also be protected from coolant.

MIST COOLANT COMPRESSED AIR

The optional Mist Coolant System requires 30-100 psi of compressed air. The compressor is purchased separately.

CHIP REMOVAL SYSTEM

The Chip Removal System requires a wet/dry shop vacuum with a 2 1/2" hose diameter to attach to the Chip Removal System.

T-VAC VACUUM SYSTEM (FACTORY-INSTALLED)

The optional T-Vac Vacuum System requires a vacuum blower and filter (purchased and installed separately) and a dedicated line installed by a licensed industrial electrician. The vacuum filter must be placed directly under the rear of the router table, with the vacuum blower nearby. To obtain additional information on the vacuum blower, please contact your authorized Gerber distributor.

Electrical Requirements

The Dimension 200 has specific power requirements which must be supplied for the system to work properly. Gerber recommends that all power requirements be installed by a licensed industrial electrician.


Note: The High Frequency Spindle Speed Controller and T-Vac Vacuum System electrical service MUST be installed by a licensed industrial electrician.

Requirements are as follows:

Electrical Box:


- Domestic systems: 200, 208, 220, 230, or 250V AC, 30 amp, 60 Hz, single phase, dedicated line.

NEMA Reference
3-POLE, 4-WIRE
Receptacle: L14-30R
Plug: L14-30P

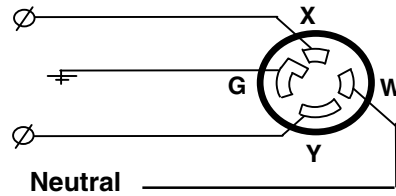

- Export systems: 200, 208, 220, 230, or 250V AC, 20 amp, 50 Hz, single phase, dedicated line.

NEMA Reference
3-POLE, 4-WIRE
Receptacle: L14-20R
Plug: L14-20P

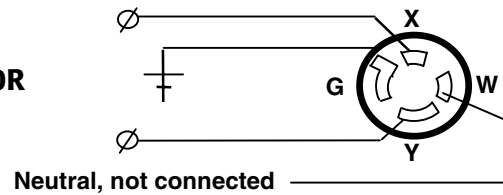


T-Vac Vacuum System:

- 220V AC, 10 amp, 50/60 Hz, single phase, dedicated line. The plug and receptacle will be determined by the licensed industrial electrician at the time of installation.
- 220V AC, 10 amp, 50/60 Hz, three-phase, dedicated line. The plug and receptacle will be determined by the licensed industrial electrician at the time of installation.

Speed Controller:

- 200-240V AC $\pm 10\%$, 20 amp, 50/60 Hz, single phase, dedicated line.

NEMA Reference
2-POLE, 3-WIRE
Receptacle: 6-15R
Plug: 6-15P

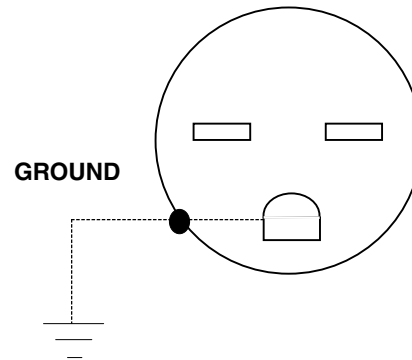

Note: If the High Frequency Spindle Option is purchased, a licensed industrial electrician must install a dedicated power line for the Speed Controller. Instructions for this installation are supplied separately.

Router Package Contents

Contents of the large shipping crate for the Dimension 200 are listed below. Check each part against the list and inspect all parts for any damage which may have occurred during shipping.

WARNING: Do not attempt to assemble and install the Dimension 200 without adequate assistance. Though small, the router table is heavy. At least four people are needed to move the Dimension 200.

caution: BE EXTREMELY CAREFUL WHEN UNPACKING THE DIMENSION 200 SO AS NOT TO DAMAGE THE EQUIPMENT.

Crate:

- 1 ADVANTAGE Router Control (ARC) Station
- 1 Electrical Box
- 1 Dimension 200 Router Table
- 1 Table Stand Kit
- 1 Small components box
- 1 Mist Coolant System (optional)
- 1 Engraver System (optional for the Dimension 200, standard for the Dimension 200E)
- 1 Engraver Vacuum System (optional for the Dimension 200, standard for the Dimension 200E)
- 1 8' x 2 1/2" diameter Chip Removal System hose
- 1 20' braided copper ground strap (may be assembled inside the Chip Removal System vacuum hose)
- 1 7' x 2" diameter hose for the T-Vac Vacuum System (optional)
- 1 T-Vac filter and blower fitting (optional)
- 2 Hose clamps (optional)
- 1 Training video
- 1 ADA material sample
- 1 Tool Kit

Small Components Box:

- 1 ARC station power supply
- 1 Ground strap with connectors and instructions
- 1 Power cord for the ARC station power supply
- 1 100' 9-pin to 25-pin RS-232 cable
- 1 8' 37-pin cable
- 1 Owner's Guide
- 1 Warranty

Stand Kit:

- 4 Legs
- 2 Front/Rear Cross Members
- 2 Side Cross Members
- 2 Front/Rear Tie Members
- 2 Side Tie Members
- 36 M6 Bolts (10 mm)
- 36 M6 Nuts (10 mm)
- 8 M8 Nuts (13 mm)
- 12 M8 Washers
- 4 M8 Bolts (13 mm)
- 1 Instruction Illustration

Chip Removal System:

- 1 Fully Assembled Vacuum Shroud

Mist Coolant System (Option):

- 1 Mist coolant applicator with gauge, flexible coolant tubing, screws and washers
- 1 Hole drilling template
- 1 Installation and Usage Guide

Tool Kit Contents

Tool Kit contents are listed below and identified in the illustration. Metric sizes are shown in parentheses.

- 1 Collet wrench set
- 1 Collet nut
- 1 .250" collet (6 mm)
- 1 .125" router bit sleeve (3 mm)
- 1 .500" collet
- 3 .125" Gerber Gold™ bits (3 mm)
- 3 .250" Gerber Gold bits (6 mm)
- 1 .020" profile cutter (engraver type) (6 mm)
- 1 Table surfacing bit
- 1 Pen assembly
- 1 Tool Height Gage
- 1 Step Height Gage
- 1 5 mm hex key
- 4 T-nut assemblies
- 4 Work clamps
- 4 Clamp nuts

Note: The contents of your tool kit may vary from the photograph.

Router Stand Assembly

Warning: THIS PROCEDURE REQUIRES AT LEAST FOUR PERSONS TO LIFT THE ROUTER TABLE BECAUSE OF ITS WEIGHT.

CAUTION: When removing the four foot subassemblies from the Dimension 200 router table, do not set the table on the ground. Damage to the undercarriage will occur. Use the wooden packing materials to block up the router table.

Assemble the Leg Assembly

1. Unpack the router and use the wooden packing materials to block up the router table.
2. Unscrew and remove the four foot subassemblies from the bottom of the Dimension 200 router table.
3. Attach one foot subassembly to the bottom of each leg of the stand (as shown on the next page) using the specified parts. DO NOT tighten the nuts or install the M8 bolt and washer at the top of each leg at this time.

Note: The top of each leg has one bolt hole on each outside surface. The bottom of each leg has three bolt holes on each outside surface. Refer to the Assembled Stand figure.

LEG ASSEMBLY

Assemble the Stand

1. Attach the front, side, and rear cross members to the legs (as shown in the Assembled Stand figure) using the specified parts. Do not yet tighten the nuts.
2. Attach the front, side, and rear tie members to the legs (as shown in the Assembled Stand figure) using the specified parts. Do not tighten the nuts at this time.
3. Use a carpenter's square to align all parts of the stand. Hand tighten all nuts.

Mount the Router Table on the Stand

1. Carefully place the router table on the stand. Align the holes where the foot subassemblies on the bottom of the router table were with the holes in the top of the legs.
2. Secure the router table to the stand with the M8 bolts and washers as shown in Leg Assembly figure. Use a wrench to tighten all nuts on the stand assembly.

Level the Stand and Router Table

1. Use the foot subassemblies to level the stand and router table.

Note: It may be easier to screw the nuts up or down on the foot subassembly if someone assists you by slightly lifting the router table to take some of the weight off the foot subassembly.

ASSEMBLED STAND

2. To lower a foot subassembly, use a 13 mm wrench to loosen the top nut inside the leg frame. When the foot is lowered sufficiently, tighten the bottom nut against the bottom of the leg frame.
3. To raise a foot subassembly, use a 13 mm wrench to loosen the bottom nut on the bottom of the leg frame. When the foot is raised sufficiently, tighten the top nut inside the leg frame.

Router Installation Procedure

Before You Begin

WARNING: Turn OFF power to the GRAPHIX ADVANTAGE and unplug the system from the outlet. DO NOT plug in power until instructed to do so.

WARNING: Turn OFF and unplug any lettering systems or plotters connected to the GRAPHIX ADVANTAGE.

WARNING: THE MAIN POWER BREAKER SWITCH ON THE FRONT PANEL OF THE ELECTRICAL BOX MUST BE OFF (POINTING DOWN). THE ROUTER MOTOR SWITCH (LOCATED ON THE ROUTER MOTOR) MUST BE OFF.

Note: Should problems occur while you install the hardware to your system, contact the Router Support Group at 800-336-1698 (USA and Canada) or fax at 203-290-5568.

Power Off Check

- The main power breaker switch on the front panel of the electrical box must be OFF (pointing down).

ARC Station

Connect Power Supply to ARC Station

1. Plug the single-pronged end of the ARC station power cord into the port labeled R831 on the ARC station (the other end already connects to the power supply box). See the above illustration.
2. Locate the power cord and plug the three-slotted end into the power supply box.
3. Plug the three-pronged end of the power cord into either receptacle labeled ARC STATION/ACCESSORY on the back of the electrical box.

Connect Router Table to ARC Station

1. Plug the 14-pin round X and Y limit switch connector from the router table into the receptacle labeled R892 on the ARC station. (See the illustration above.)

Connect Electrical Box to ARC Station

1. Plug one end of the 37-pin to 37-pin cable into the receptacle labeled R830 on the ARC station. Tighten the screws.
2. Plug the other end into the receptacle labeled R846 on the electrical box. Tighten the screws.

Connect Electrical Box to Router Table

1. Plug the 3-pronged power cord from the router table into the receptacle labeled R849 on the electrical box.
2. Connect the cable labeled P856 (X motor cable bundled with the Y and Z motor cables on the router table) to the receptacle labeled R856X.
3. Connect the cable labeled P857 (Y motor) to the receptacle labeled R857Y.
4. Connect the cable labeled P858 (Z motor) to the receptacle labeled R858Z.

Electrical Box

Connect Chip Removal System

The Chip Removal System helps keep the work area clean during the routing operation. In addition, its pressure foot provides downward force to keep the workpiece from lifting due to forces exerted by the routing bit. The pressure foot pad rests on the workpiece and slides easily over the workpiece surface, while the tool bit extends through an opening in the pressure foot pad.

Two pads are supplied, one with a 1.5" (38 mm) opening for normal use, and one with a 0.4" (10 mm) diameter opening for cutting very small pieces. The 1.5" diameter opening pad, which is installed at the factory, is used for the mat milling procedure. The 0.4" diameter opening pad is included the tool kit.

A heavy duty wet/dry shop vacuum is required and is not supplied with the router system. A 2 1/2" (64 mm) diameter hose and all necessary fittings are provided with the Dimension 200.

INSTALLING THE CHIP REMOVAL SYSTEM

WARNING: BEFORE INSTALLING THE CHIP REMOVAL SYSTEM, UNPLUG THE ELECTRICAL BOX FROM ITS POWER SOURCE.

WARNING: SCRAP CHIPS GENERATED BY CUTTING CREATE STATIC CHARGES WHICH CAN BE HARMFUL TO THE OPERATOR AS WELL AS MACHINERY COMPONENTS. A PROPERLY INSTALLED GROUND STRAP CABLE (ALSO CALLED STATIC DRAIN WIRE) REDUCES THE CHANCES OF STATIC SHOCK HAZARD. THE GROUND STRAP CABLE IS ALREADY INSTALLED IN THE VACUUM HOSE SUPPLIED WITH THE SYSTEM. YOU MUST CONNECT IT TO THE ELECTRICAL BOX.

► ***To install the vacuum shroud***

The vacuum shroud is installed by Gerber. Should you need to reinstall it, follow the procedure below.

1. Align the screw holes on the vacuum shroud with the screw holes in the carriage sidewalls.
2. Insert and tighten the screws.

► ***To attach the vacuum hose***

1. Attach the vacuum hose onto the pressure foot of the Dimension 200. (One end of the ground strap cable is already connected at this end in the interior of the hose.)
2. Lead the vacuum hose and the ground strap which extends from the end of the vacuum hose to the electrical box. Make sure that there is ample slack on the strap to comfortably connect in the next procedure.

3. Now lead the vacuum hose and ground strap to the shop vacuum canister, inserting some of the ground strap into the canister.
4. Make sure that some of the ground strap still extends from the vacuum hose and that there is enough slack on the ground strap. (The ground strap goes in and comes back out of the canister to connect to the electrical box in the next procedure.)

Connect the Ground Strap Cables

Ground strap cables are static protection devices that reduce the risk of static electricity damage to the router system's integrated circuitry. The Dimension 200 comes equipped with three ground strap cables which connect as follows:

- ARC station to the electrical box
- foot mount block on the Dimension 200 router table to the electrical box
- vacuum hose pressure foot to the electrical box.

All three ground strap cables must connect at the same point on the electrical box. Both ends of all ground strap cables must be securely fastened to ensure a reliable ground connection.

► *To connect the ground strap cable at the router table*

1. At the left rear of the Dimension 200 router table, remove the left capscrew that secures the foot mount block to the router bed.
2. Locate the ground strap cable (recognizable by the yellow ring lug) fastened to the limit switch and motor cables.
3. Insert the capscrew through the ground strap ring lug and reinstall.
4. Securely tighten the capscrew to ensure a reliable ground connection.

► **To connect the ground strap cable at the ARC station**

1. Looking at the ARC station from the back, remove the screw located on the right side near the back. (In some models, the screw may instead be located underneath the rear of the ARC station.)
2. Place the ground strap ring lug over the removed screw.
3. Place the star washer over the screw.
4. Reinstall the screw into the side of the ARC station and tighten securely.
5. Use the tie wraps supplied to fasten the ground strap cable to the 37-pin interface cable.

► **To connect the ground strap cable at the vacuum shroud**

Note: The ground strap is already connected to the vacuum shroud.

► **To connect all ground strap cables to the electrical box**

1. Looking at the rear of the electrical box, remove the screw located on the right side of the electrical box near the attention label (triangle with an exclamation point).
2. Insert the removed screw through the ring lug of all three ground strap cables (from the Dimension 200 router table, the ARC station, and the vacuum shroud).
3. Place one star washer over the screw.
4. Reinstall the screw into the side of the electrical box. To ensure a reliable connection, tighten the screw securely.
5. Coil up any excess ground strap cable extending from the vacuum hose and place it inside the reservoir of the shop vacuum canister.
6. Insert the end of the vacuum hose into the receptacle on the side of the shop vacuum canister.

Connect GRAPHIX ADVANTAGE to ARC Station

1. Plug the 9-pin D-connector of the RS-232 cable into the port labeled **PLOTTER** or **COM** at the rear of the GRAPHIX ADVANTAGE. Carefully align all pins and press all the way in.
2. Tighten the connector thumb screws to secure the cable to the system.
3. Plug the 25-pin D-connector into the receptacle labeled R829 on the ARC station (see the illustration on page 16). Tighten the thumb screws.

Power Connections

1. Plug the power cord from the electrical box into an appropriately grounded outlet.
2. If necessary, plug in the router motor power cord into the receptacle, as shown.
3. Plug the shop vacuum into the duplex receptacle on the electrical box labeled **SHOP VAC/BLOWER**.
4. Turn ON power at the electrical box.

5. Turn ON power at the GRAPHIX ADVANTAGE system.

The ARC station displays the message **SLEW TO THE POINT OF ORIENTATION** in the display panel after performing power-up diagnostics. The router system is now ready to operate. Refer to the section on setting up the ARC station later in this chapter.

6. Turn ON the router motor power switch when ready to cut.

Set Up the ARC Station

The ARC station can support several different routers. When you first install your system, follow the procedure below to configure the ARC station for the Dimension 200. (See page 39 for an illustration of the front panel of the ARC station.)

1. With the main power switch off on the electrical box, press and hold down the RESET and UP arrow keys on the ARC station.
2. While holding these keys down, turn the main power switch on.
3. Release the ARC station keys after the second beep. The **SYSTEM:** message appears.
4. Press SELECT.
5. Press the left or right arrow key until **DIMENSION 200** is displayed.
6. Press SELECT.
7. **LIMIT SWITCH** displays. (Gerber recommends that the limit switch be set to **ON**.)
8. Press SELECT.

Below is an illustration of the basic Dimension 200 system and its peripherals to assist you in installing and checking the connections. The illustration does not depict the actual connections or placement of the equipment.

Optional Equipment Installation

This section addresses the installation of optional equipment for the Dimension 200: the Mist Coolant System, the T-Vac Vacuum System, High Frequency Spindle and Speed Controller, and the Engraver and vacuum.

Mist Coolant System

The Mist Coolant System option is used to cool and lubricate the cutting tool as it cuts metals such as aluminum or brass. It is not intended for use with non-metallic materials such as wood or plastic.

The Mist Coolant System is equipped with an 8½ oz. coolant reservoir that can be filled under pressure with no need to disconnect air input or stop the system. The coolant drip rate is easily adjustable from one drop every six minutes to 30 drops per minute.

The Mist Coolant System requires 30-100 psi of compressed air. The compressor is purchased separately.

The Mist Coolant System is designed to be used with Gerber Cool coolant, a high performance spray lubricant available from Gerber Scientific Products, Inc. Gerber Cool is a non-toxic, biodegradable coolant custom-formulated for Gerber routers. It meets all FDA and USDA requirements for use in areas with incidental food contact and will not harm the environment.

Note: The Mist Coolant System cannot be used at the same time as the Chip Removal System or the Engraving Option.

INSTALLING THE MIST COOLANT SYSTEM

WARNING: Turn off the GRAPHIX ADVANTAGE and unplug the Dimension 200 from the AC outlet before installing the Mist Coolant System to avoid possible electrical shock.

1. Remove the top two screws from the Dimension 200 right end plate on the right end of the beam when viewed from the front.
2. Insert these screws through the top hole of each hanging bracket, reinsert into the end plate, and finger tighten.
3. Align the standoffs on the hanging brackets with the semi-circular openings in the sides of the mist coolant system.
4. Insert one M4 x 50 mm Phillips panhead screw with flat and lock washers through semi-circular openings in the mist coolant reservoir into each threaded standoff in the hanging brackets. Tighten the hanging bracket and the mist coolant mounting screws.
5. Cut out the hole drilling template provided in the option kit, fold the top edge along the fold line, and hold the template against the left side of the carriage with the folded portion on top of the carriage wall and the right edge along the front edge of the carriage wall.
6. Drill a 1/4" hole in the carriage wall where indicated by the template.
7. Insert the socket head capscrew through the M6 flat washer and through the carriage wall from the right and into the nozzle coupling mounting block on the outside of the carriage wall. Tighten using a 5mm Allen wrench.
8. Run the coolant hose from the reservoir along the cable harness in the cable trough at the back of the beam. Run the coolant hose *along the entire length of the cable harness*, then across the beam to the X carriage. This will prevent the hose from stretching as the carriage moves. Run the hose to the left

side of the carriage when viewed from the front. See the illustration at right.

The illustration below shows the Dimension 200 carriage with the optional High Frequency Spindle Motor installed (on the upper left) and Mist Coolant Option components (on the lower right).

9. Attach the two tie mounts on top of the carriage (as shown in the illustration on the previous page) and secure the hose.
10. Use the tie wraps to secure the hose to the cable harness in the cable trough. Place a tie wrap about every 8" along the cable. Tie the wraps firmly but not so tightly that coolant flow is restricted.
11. Insert the barb fitting on the air line intake and connect the air line.
12. Insert the quick-disconnect fitting to the opposite end of the air line and connect to the compressor.
13. Turn on the Dimension 200. Make sure the coolant hose travels smoothly in the cable trough by slewing the carriage from one end of the beam to the other. The coolant hose must not stretch as the carriage moves.

T-Vac Vacuum System

The optional T-Vac Vacuum System uses vacuum to hold down a workpiece easily and securely on the router table. Depending on the material and the job, vacuum hold-down may be used with adhesive and sacrificial material.

T-Vac requires a vacuum blower, filter, and relief valve purchased separately. The blower, filter, and relief valve must be connected to the router table. Hose and necessary attachment fittings are supplied with the router table.

► *To install the T-Vac Vacuum System*

1. Place the filter directly below the intake opening at the rear of the router table.
2. Position the blower as close to the filter as possible.

3. Insert the 2" diameter hose supplied in the kit on the intake opening on the table and secure with a hose clamp.
4. Insert the 2" adapters supplied in the kit on the reducing tee as shown above.
5. Insert the 1.5" adapter in the relief valve.
6. Install the relief valve on the reducing tee as shown above.
7. Cut the hose to fit in a straight line between the manifold intake opening and the air filter/relief valve.
8. Attach the hose to the air filter/relief valve assembly and secure with a hose clamp.
9. Attach one end of the remaining hose to the filter exhaust opening with a 2" barb adapter and secure with a hose clamp.

10. Attach the other end of the hose to the vacuum blower with a 2" barb adapter, cutting the hose as short as possible to increase the efficiency of the blower. Secure with a hose clamp.
11. Have a licensed industrial electrician with industrial motor experience wire the vacuum blower.

Speed Controller System

Refer to the illustration below when installing the Speed Controller System:

► *To install the Speed Controller System*

1. Plug the AC power cord into a dedicated wall outlet.
2. Plug the Spindle remote ON/OFF cable labeled P894 into the connector labeled R894 (top) on the back of the electrical box.
3. Plug the Spindle Motor cable into the connector located on the High Frequency Spindle motor and latch it.

USING THE SPEED CONTROLLER SYSTEM

The Speed Controller System is used to control the spindle speed of the High Frequency Spindle motor. The thickness and type of material, as well as the tool selected, determine the correct spindle speed. The recommended speed for various materials may be found at the end of this manual.

The speed selection knob located on the Speed Controller selects a spindle speed as follows:

Knob	Spindle Speed
0	0
10	2,800
20	5,600
30	9,400
40	12,200
50	14,000
60	16,800
70	19,600
80	22,400
90	25,200
100	28,000

Note: The Speed Controller System must be installed by a qualified electrician. Installation instructions are supplied with the speed controller.

Engraver Vacuum System Option

The optional Engraver Vacuum System is a quiet, conveniently-sized system used to clean debris from the table and engraving area.

► *To assemble the Engraver Vacuum System*

1. Remove and discard the plugs from the holes labeled *IN* and *OUT* on the front of the vacuum motor.
2. Thread the long end of the pipe elbow into the "in" receptacle on the vacuum motor and tighten. Make sure the elbow points up.
3. Insert the short pipe fitting into the end of the protruding elbow and tighten.
4. Place the vacuum tank on the short pipe fitting and rotate the tank to tighten.
5. To securely tighten the entire attached assembly, one person should hold down the motor while another person turns the entire assembly until it is tight.
6. Insert the reducer fitting into the hole on top of the vacuum tank and tighten.
7. Insert the barbed fitting into the reducer fitting and tighten.
8. Slip one end of the hose over the end of the barbed fitting on top of the tank.
9. Place the assembled vacuum system near the router, preferably on the right side.

Safety Guidelines

Warning: THE DIMENSION 200 IS A HIGH-SPEED CUTTING MACHINE. ITS USE MAY BE HAZARDOUS IF YOU DO NOT OBSERVE THE FOLLOWING PRECAUTIONS. THESE GUIDELINES ARE NECESSARY FOR THE SAFE AND EFFICIENT OPERATION OF THE DIMENSION 200.

WARNING: DO NOT STORE WET ALUMINUM CHIPS IN A CLOSED CONTAINER AND DO NOT USE THE VACUUM HOSE TO CLEAN UP WET ALUMINUM. WET ALUMINUM PRODUCES HYDROGEN GAS. THIS GAS MAY REACH EXPLOSIVE CONCENTRATIONS WHEN WET ALUMINUM CHIPS ARE STORED IN A CLOSED CONTAINER.

1. Only a trained operator should attempt to run the equipment.
2. Wear protective eyewear, such as goggles or safety glasses, which cover the front and sides of the face.
3. Do not use the router in a damp or wet location.
4. Do not store wet aluminum chips in a closed container.
5. Do not use the vacuum hose to clean up wet aluminum.
6. Stand in front of the ARC station during system operation to provide easy access to the RESET key and the main power switch on the electrical box. (This also prevents any clothing from getting caught in the machine.)
7. Keep the work area clear for easy access to the main power switch.
8. Unplug or turn off the router motor when changing tools.
9. Tie back or cover long hair.

10. Remove loose jewelry, ties, and loose clothing. Wearing a long-sleeved shop coat is strongly recommended.
11. Wear ear protection.
12. Keep all personnel at a safe distance from the machine when it is operating.
13. Carefully secure the workpiece with clamps.
14. Use the proper tool for the material. Do not use small tools with heavy material.
15. Make a test cut whenever possible to test the tool in the material.
16. Perform all periodic maintenance procedures on a regular basis.

Operating Principles

Overview

Note: It is essential that you read this section before operating the Dimension 200. This section introduces the operating principles of the router system.

The complete Dimension 200 router system consists of these major components:

- the Dimension 200 router table
- the electrical box
- the ARC station

Text and graphics are cut or drawn by the router after being prepared for routing by ART Path. During router operation, the cutting table and clamped workpiece remain stationary. All operating motion is performed by the router motor, carriage, and tool.

X, Y, Z Axes

The Dimension 200 has three basic axes of movement:

- The **X** (horizontal) axis is oriented from left to right.
- The **Y** (vertical) axis is oriented from front to back.
- The **Z** (depth) axis is oriented up and down.

When the router cuts a design, the tool moves in the X, Y and Z axes of movement.

Z Axis

The Z axis of the router is the up and down movement of the tool. Initializing the Z axis is an essential procedure when using the Dimension 200. It establishes the location of the tool above the workpiece at the start of a job.

CAUTION: The Z axis must be set every time the tool or material is changed, and whenever the operator prepares to cut or draw. Failure to initialize the Z axis properly will cause the machine to cut at the wrong depth. This may destroy the material and cause the tool to cut into the router table.

The Z axis may be positioned by:

- the Z INIT function key located on the ARC station keypad
- a Z axis adjustment knob located on top of the Z axis motor
- the ART Path depth of cut

The workpiece and sacrificial material must be mounted on the router table when the Z axis is initialized. See the Z INIT portion of the ARC station section in this manual for instructions on initializing the Z axis.

Job Home Position

The job home position is the position on the router table which corresponds to the job 0,0 point or starting position of the job. The job home position is stored in the ARC station and is maintained even when power is interrupted.

The job home position (start position) is also controlled by ART Path. ART Path considers the current tool position to be job home. The actual job starting position may be modified by a pre-position (either absolute or relative) set in the ART Path Output dialog box.

The SET JOB HOME function of the ARC station allows the router operator to modify the home position either before or after a job has been received at the ARC station and the job header, material and tool messages have been displayed.

The job home position of each job is stored when the job starts. The RETURN HOME function of the ARC station returns the carriage to the stored job home position. In the event of a power failure or other job interruption, the operator can use the RETURN HOME function to return the router carriage easily to the stored home position. This also simplifies starting multiple jobs from the same position.

See the “Set Job Home” and “Return Home” descriptions in the ARC station section of this manual for more information. Also see the *ART Path User Manual* for information on job positioning.

Power Switch

The main power switch is located on the front of the electrical box, encircled by a yellow border. It switches power on and off at the ARC station. Turn the power on or off here for normal use.

Before turning on the main power switch, make sure that the ARC station power supply is connected to both the ARC station and the appropriate grounded outlet on the back of the electrical box.

Emergency Power Switch

The main power switch on the front of the electrical box also serves as the emergency power switch. Turn off power here for emergencies.

ROUTER MOTOR POWER SWITCH

The router motor power switch turns the motor on and off. The router motor has a thumb switch on the top labeled **ON** and **OFF**.

WARNING: The router motor must be **OFF** during vacuum shroud installation, mist coolant installation, tool changing, Z axis initialization, or when performing any other functions around the cutter.

CAUTION: The router motor switch should be off until the job is ready to begin. **DO NOT** turn the router motor on when pen plotting.

1. When the job is ready to begin, turn **ON** the router motor power switch.
2. Press the **START** key to start the job.

*Note: There is a delay before the tool begins cutting. This delay gives the router motor time to come up to full speed before cutting begins, and the operator time to stop the job if the router motor is not **ON**.*

ARC Station

The Advantage Router Control (ARC) station is the communication link between the GRAPHIX ADVANTAGE and the router system. It can do the following:

- send and receive messages and commands to and from the GRAPHIX ADVANTAGE
- display messages to the operator
- control router motor movements
- change feed rates
- return the router carriage to the job home position
- set motor delay

FRONT PANEL

The front panel of the ARC station consists of a message display panel and nine function keys:

- START/STOP
- RESET
- Z INIT
- SELECT
- right, left, up, and down arrow keys.

The ENTER key is not used.

Display Panel

The bottom right of the message display panel may contain indicators for the operator:

- **W, w** - Alternating uppercase and lowercase indicates that the router is waiting for a job.
- **J, j** - Alternating uppercase and lowercase indicates that there is a job ready for routing. Pressing START will begin or continue processing the job.
- **I, i** - Alternating uppercase and lowercase indicates the job is incomplete, which occurs when a partial job is sent from ART Path. Power interruption at the GRAPHIX ADVANTAGE or a pause status in the Plot Spooler application will cause partial transmission.

WARNING: WHEN THE INCOMPLETE JOB INDICATOR (I,I) AND START JOB ARE DISPLAYED, THE ROUTER CARRIAGE MAY MOVE WITHOUT FURTHER WARNING.

The top right of the message display panel at times may contain an asterisk (*). When a job is running and the operator presses the STOP key, the asterisk appears to show that the machine has received the message and will pause at the next logical point. The router will resume cutting when the START key is pressed again.

Power-Up Tests

When the power is turned **ON**, the ARC station performs diagnostic self-tests, and displays the operating set revision level. The ARC station requests the operator to slew the router carriage near the point of orientation, which is the absolute 0,0 point. To slew to the point of orientation, use the arrow keys to move the router carriage as far toward the front and to the left as possible.

When the carriage is at 0,0, the carriage will move away from the limit a preset distance in X and Y. The **ORIENTATION** message will appear in the display panel, followed by the **STOP READY** message.

If an error occurs:

- The system emits a constant audible tone.
- Press the RESET key to clear the error and to rerun the failed test(s).
- If the same error recurs or if RAM ERROR, ROM ERROR, or INTR_ERROR is displayed, contact the Router Support Department at 800-336-1698 (USA and Canada).

When testing successfully completes, the **STOP READY** message displays.

 
Function Keys

The function keys located on the front panel of the ARC station perform specific routines. Each function key is discussed individually in the following pages.

ARROW KEYS



The arrow keys are most frequently used to slew the router carriage into position. *Slewing* refers to positioning the X and Y axes where desired.



The arrow keys are also used to scroll through available choices at the ARC station after a selection has been made in the Menu Select mode. See the page in this section on Menu Select mode.

► **To slew the Dimension 200**

- To position the tool to the left or right over the router table surface, press the left or right arrow keys until the desired placement is reached.
- To position the tool forward or backward over the table surface, press the up or down arrow keys until the desired placement is reached.
- To slew diagonally, press two keys at the same time (left or right with up or down).
- You cannot slew past the table edges if the limit switches have been set.

START/STOP



This key toggles between the START and STOP modes.

Start Mode

START mode, as shown by a message in the display panel, may be in one of two states:

- START READY - the system is ready to receive a job
- START JOB - the system has received a job and is processing it

The following keys are available in START mode:

- RESET - immediately aborts router movement and purges the job
- START/STOP - pauses processing the job

Start Ready

WARNING: In START READY mode, the carriage may move without further warning.

1. While in the STOP READY mode, use the arrow keys to slew the carriage to the starting location of the job.
2. Press the START/STOP key to display the **START READY** message.

The Dimension 200 is now in a “ready” state and the message remains until the data arrives from the GRAPHIX ADVANTAGE. The current tool position becomes the start point for the job.

Start Job

When the job data is received, the **START JOB** message appears, indicating that the Dimension 200 is in a “run” state. ART Path sends a header or tool message, the system goes into STOP JOB mode and instructs the operator to load material. Press START/STOP again to display the tool assignment. To begin the job, press START/STOP again.

WARNING: The carriage may move without further warning.

Stop Mode

STOP mode, as shown by a message in the display panel, may be in one of two states:

- STOP READY - the router is in an idle state waiting to receive data
- STOP JOB - the router is in a pause state during a job

The following keys are available in STOP mode:

- START/STOP
- RESET
- Z INIT
- SELECT
- arrow keys

Stop Ready

In STOP READY, the GRAPHIX ADVANTAGE sends data to the ARC station. The system beeps when data is received and **J, j** is displayed in the lower right corner of the message display panel.

- Press the START/STOP key to begin the job.
- The carriage can be slewed to establish a start position for the next job.

The job start position can be changed in the STOP READY mode. It can also be changed when one of the following occurs:

- SET HOME is selected from the menu
- the job completes
- the operator presses RESET to abort the job and clear it from the ARC station
- the ARC station receives a terminate command from the GRAPHIX ADVANTAGE Plot Spooler.

Stop Job

If you press the START/STOP key while in the START JOB mode, the machine enters pause mode and results in the following:

- the **STOP JOB** message appears
- no incoming data processes
- the job stops at the next logical break point
- the tool raises
- the router motor turns off
- an asterisk appears in the upper right corner of the message display.

When the router is in pause mode, you can slew the router carriage for tool changes or other tasks. Press START/STOP to return the router tool to the position in the job where the operator paused the system. The job can be resumed without position or data loss.

Resume Processing

After pausing temporarily, press the START key to resume processing without position or data loss.

Change Tools

If a tool change is required, follow the steps below:

1. In STOP JOB mode, slew the carriage to a safe tool change position.

Note: If a tool is changed during a job, the system remembers the tool position and returns from slew to the appropriate location.
2. Turn OFF the router motor and disconnect the router motor power cable from the router motor.
3. Change the tool. (See the sections on “Tool Installation” and “Tool Replacement” in this manual, if necessary.)
4. Initialize the Z axis. (If needed, see the Z INIT function key explanation in this section of the manual.)
5. Change the Feed Rate parameter, if necessary.
6. Reconnect the router motor power cable and turn ON the router motor.
7. To avoid hitting clamps, manually slew close to where the job will resume.
8. Reset the vacuum shroud (lower it back to the material surface).
9. Press the START/STOP key to continue the job. The carriage will return to the pause position, then enter STOP JOB mode. Press START/STOP again to resume the job.

Repeat Job

To repeat a job at the same position as the previous job, before pressing START/STOP:

1. Press SELECT while in the STOP READY mode to access the Menu Select mode.
2. Press the right or left arrow key until **RETURN HOME** appears in the message box.
3. Press SELECT. The router carriage will move to the job home position.
4. Press START/STOP to begin processing the job.

RESET

The RESET function key immediately halts the job that is running.

In Start Mode

If in START JOB mode and the operator presses the RESET key:

- the tool raises
- the carriage X,Y travel stops
- current job data from the router and the GRAPHIX ADVANTAGE clears
- the **STOP/READY** message displays.


In Menu Select Mode

RESET exits the menu without saving changes.

In Other Modes

If in any other mode and the operator presses the RESET key, the **ABORT ???** message appears.

- To cancel the job, press the RESET key again.
- To continue the job without data loss, press START/STOP.

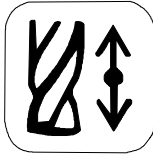Z INIT

The Z INIT function key initializes the Z axis tool height above the work surface. The Z INIT key may be used only when the **STOP JOB** or **STOP READY** message displays. You may use either the tool height gage or the step height gage for initialization.

CAUTION: The Z axis must be set every time the tool or material is changed. Failure to initialize the Z axis properly will make the tool cut into the material at the wrong depth. This may destroy the material and cause the tool to cut into the router table.

CAUTION: Do not turn the Z axis knob after the Z axis has been initialized.

► **To perform Z Init**


1. Place the step height gage on top of the material to be cut. (See the procedure in this manual for "Using the Step Height Gage.")
2. Slew the carriage to position the tool over the gage.
3. Press the Z INIT key. The Z motor is now OFF to allow for manual adjustment. The **Z UNLOCKED** message appears.
4. Turn the Z axis knob to lower the tool until it just touches the surface of the step height gage.

CAUTION: Excessive pressure will cause tool damage.


5. Press Z INIT to raise the tool.

Note: If RESET is pressed, the Z motor locks and the Z INIT process is exited.

6. Remove the step height gage.

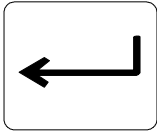ENTER

This function key is not used in this release. Press SELECT to exit a selection and store values. Press RESET to exit a selection without storing values.

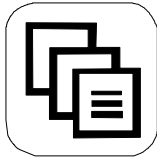SELECT

This function key allows access to the Menu Select mode to set system parameter values. It is available in STOP mode when the **STOP READY** or **STOP JOB** message is displayed.

Using Select

To access the Menu Select mode, press SELECT while in the STOP READY or STOP JOB mode.

The choices available are as follows:

- Absolute (X,Y):
- Set Job Home
- Return Home
- Feed Rate:
- Motor Delay:
- Test:
- Display:
- Default

Note: A colon (:) following a menu selection indicates additional choices are available when the item is selected. Each menu selection is explained and contains directions on changing parameters.

To exit the Menu Select mode and return to STOP mode **without changing settings**, press RESET.

► To make a selection in Menu Select mode

1. Press the right arrow key to scroll forward (right) through the menu list or press the left arrow key to scroll backward (left) through the menu list.
2. When the desired menu item appears, press the SELECT key to display the choices available under the selected menu item if the item is followed by a colon (:), or to execute the function.
3. Use the arrow keys to display available choices.

ABSOLUTE X,Y:

The Absolute X,Y function displays the exact position of the router tool relative to the absolute 0,0 position on the router table established during orientation when the router was turned on. The Absolute X,Y display allows the operator to position the router tool with great precision and helps set the job home position. Each coordinate is precise to three decimal places (000.000) in inches, two decimal places (0000.00) in mm.

► *To display the absolute X,Y position*

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Absolute (X,Y):** appears in the message box.
3. Press SELECT to display the current position.

X: +000.000 INCH Y: +000.000 INCH

4. Press any arrow key to move the router carriage. The message box will display the new coordinate position when the arrow key(s) are released.
5. Press any key to exit.

SET JOB HOME

The job home position is the point that corresponds to the starting point of the job. It is the point by which a job is positioned on the router table. ART Path considers the current tool position to be job home. The actual job starting position may be modified by a pre-position (either absolute or relative) set in the ART Path Output dialog box.

The SET JOB HOME function allows the router operator to modify the home position *after* a job has been received at the ARC station and the job header, material, and tool messages have been displayed.

The job home position of each job is stored when the job starts. The RETURN HOME function returns the carriage to the stored job home position. In the event of a power failure or other job interruption, the operator can use the RETURN HOME function to return the router carriage easily to the stored home position.

To place multiple jobs in the same home position on the table, the operator must use the Return Home parameter prior to sending the job from the GRAPHIX ADVANTAGE to move the router carriage to the exact job home position.

Note: If the router carriage hits a clamp or fixture when moving, position may be lost. Turn power to the system off and on. As instructed on the message display, reestablish position by using the arrow keys to move the router carriage to the extreme front, left point (the point of orientation).

Setting Job Home Position

The tool position when you press START/STOP is the job home position, unless a job pre-position has been set in the Output dialog box in ART Path. In that case, the pre-position becomes the job home position.

You can set job home from the ARC station using the following procedure, but a job must be in the queue for the job home position to be stored.

WARNING: Do not use the Set Job Home parameter to reset job home after cutting has begun. The carriage will move unpredictably when the job is restarted.

► ***To set job home***

1. Slew the carriage to the desired job home position by pressing the arrow keys. This position will be stored as job home when you press START/STOP.
2. Press SELECT while in the STOP JOB mode.
3. Press the right or left arrow key until **SET JOB HOME** appears in the message box.
4. Press SELECT. The ARC station will beep twice to indicate the position has been stored.

► ***To change job home***

Move the carriage to any position on the table and repeat the steps above. The new position replaces the previously stored position in the ARC station.

► **To display current job home**

1. To avoid hitting clamps, slew the carriage near the home position using the arrow keys.
2. Press SELECT while in the STOP READY or STOP JOB mode.
3. Press the right or left arrow key until **RETURN HOME** appears in the message box.
4. Press SELECT to move the carriage to the precise Job Home position.
5. Press the right or left arrow key until **Absolute (X,Y):** appears in the message box.
6. Press SELECT to display the current position. This is the current Job Home position.

*Note: **Make note of this position.** If the carriage hits a clamp or fixture and router position is lost, you can slew to this position or set an absolute pre-position in ART Path and repeat the job, but only if you reorient the system by turning the power off and then on again.*

JOB HOME POSITION AND JOB BOUNDARIES

Job boundaries cannot exceed the active cutting area of the router table. The Dimension 200 and ART Path interpret job boundaries for certain job types in these ways:

- **Output repeats** are considered to include all repeats within the job boundary.
- **Paneled jobs** are treated as separate jobs. The largest panel must fit on the table.
- **Inplace repeats** include the park position within the job boundary.
- **PrePosition** set in ART Path is included in the job boundary.

If the Job Home position will cause the job being processed to exceed the table boundaries, the ARC station displays **JOB WILL EXCEED TABLE BOUNDARY** in the message box.

► ***To clear the boundary message***

1. Press START/STOP to display the correction necessary to permit the job to fit.
2. Press the arrow keys to move the carriage the distance in X and Y indicated in the message. When the carriage is in an acceptable position, the X and Y distances will be zero.
3. Press START/STOP again. If the job still exceeds boundaries, the correction message is displayed again. If the job fits, **PRESS START TO SET HOME** is displayed.
4. Press START/STOP again to set the current position as Job Home and start the job.

RETURN HOME

The Return Home feature allows the operator to return the carriage to the last Job Home position. The Job Home position is stored when a job is started or when the Set Job Home function is used.

► To return home

1. To avoid hitting clamps or fixtures, move the carriage near the home position using the arrow keys.
2. Press SELECT while in the STOP READY or STOP JOB mode.
3. Press the right or left arrow key until **RETURN HOME** appears in the message box.
4. Press SELECT to move the carriage to the precise Job Home position.

FEED RATE:

The Feed Rate is set in ART Path at the GRAPHIX ADVANTAGE. It is the absolute speed in inches per minute or millimeters per second at which the tool travels along the tool path. To override this rate and reduce or increase the feed rate, change the established Feed Rate by a percentage described below. The feed rate will not exceed maximum velocity of the router.

The Feed Rate parameter is most frequently changed in the STOP JOB mode when the Feed Rate has been set too high or too low for the job in progress. The feed rate override is not cleared after the job completes and will be applied to the next job.

The feed rate will not exceed maximum velocity of the router. However, if the Feed Rate set in ART Path is less than the maximum, you may increase it using the Feed Rate parameter. A Feed Rate of 200% would double the Feed Rate set in ART Path.

► ***To change feed rate***

CAUTION: The feed rate override is not cleared after the job completes and will be applied to the next job received.

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Feed Rate:** appears in the message box.
3. Press SELECT to obtain the Feed Rate percentage.
4. Press the right or left arrow keys to move the cursor to the desired digit.
5. Press the up or down arrow keys to increase or decrease the digit under the cursor. Acceptable values are 1% to 1000%.
6. Press SELECT to save the new value.

If the value is valid (1 - 1000%), the system beeps twice and returns to the STOP READY or STOP JOB mode.

If the value is not valid, the display remains until a valid value is entered or until RESET is pressed to exit the menu without changing the Feed Rate.

MOTOR DELAY:

The Motor Delay parameter sets the time the tool will wait for the router to reach full speed before it descends to the material. Valid values are 0 to 99 seconds. Gerber recommends a setting of 05 (five seconds).

► To change motor delay

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Motor Delay:** appears in the message box.
3. Press SELECT to obtain the Motor Delay time.
4. Press the right or left arrow keys to move the cursor to the desired digit.
5. Press the up or down arrow keys to increase or decrease the digit under the cursor. Acceptable values are 00 to 99.
6. Press SELECT to save the new value, or RESET to exit without saving the value.

TEST:

This function allows testing both the router table and the ARC station to ensure machine accuracy and integrity. The ARC station does not accept data from the GRAPHIX ADVANTAGE during testing.

A power-on test restarts the system, displays the revision level of the system, and repeats orientation of the carriage at the lower left corner of the table.

The remaining tests are not used by the operator unless instructed to do so by Gerber technicians.

DISPLAY:

This function allows you to set the language and units which display in the ARC station message box.

It also allows you to turn Auto Scroll on or off. When on, Auto Scroll automatically scrolls messages that are too long to fit in the message box. When Auto Scroll is off, truncated messages are displayed. Normally, Auto Scroll should be left on.

► To change the language

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Display:** appears.
3. Press SELECT.
4. Press the right or left arrow key until **Language:** and the current language appear.
5. Press the right or left arrow key to scroll through the language choices.

Language: English

6. Press SELECT to save the selected choice.

The system beeps twice and returns to the STOP READY or STOP JOB mode displayed in the entered language.

► To change units

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Display:** appears.
3. Press SELECT.
4. Press the right or left arrow key until **Units:** and the current units appear.

5. Press the right or left arrow key to scroll through the units choices (inches or millimeters).

Units: Inches

6. Press SELECT to save the selected choice.

The system beeps twice and returns to the STOP READY or STOP JOB mode displayed.

► **To turn Auto Scroll on or off**

1. Press SELECT while in the STOP READY or STOP JOB mode.
2. Press the right or left arrow key until **Auto Scroll:** appears.
3. Press SELECT.
4. Press the right or left arrow key to display **On** and **Off**.
5. Press SELECT to save the choice.

DEFAULT

This function allows you to reset all value parameters back to the factory default settings.

► **To reset the defaults**

1. Press SELECT while in the STOP READY mode.
2. Press the right or left arrow key until **Default** appears.
3. Press the SELECT key to reset all value parameters to the factory default settings. The system beeps twice and returns to the STOP READY mode.

System Preparation and Use

This section discusses the procedures to follow before and during the operation of the Dimension 200:

- Preliminary preparation
- Router motor installation/removal
- Tool selection, installation, removal, and replacement
- Table mat milling and engraving
- Material selection and preparation
- Workpiece attachment to sacrificial material
- Workpiece mounting to the router table
- Chip removal system use
- Mist coolant system use
- Step height gage use

Preliminary Preparation

Before preparing the Dimension 200 for operation, complete the following steps:

1. Turn OFF the electrical box power switch.
2. Unplug the router motor power cable.
3. Raise the router motor by manually turning the Z axis adjustment knob, located on top of the Z axis motor.
4. Adjust the feet of the Dimension 200 to a higher or lower position to ensure that the router table is level.

Router Motor Installation/Removal

For your convenience, the Dimension 200 is shipped with the router motor already installed. However, should a problem occur requiring the motor to be removed, please follow the instructions below.

► To remove the router motor

1. Turn off and unplug power at the router, electrical box, and GRAPHIX ADVANTAGE.
2. Loosen the screws on the collar of the motor mount and carefully slide the motor up the mount to remove it.

► To install the router motor

Note: The photograph below is for illustration purposes only and may vary somewhat from your router motor.

1. Locate the router motor and note the small pin or pins (depending on the model) projecting from it.
2. Ease the router motor into the motor mount, matching the pins to the grooves.
3. Slide the motor to the bottom of the mount.

4. Tighten the screws on the collar of the motor mount and plug in the router motor cord into the outlet on the router.

Note: The photograph below is for illustration purposes only and may vary somewhat from your router motor.

The ARC station displays **STOP READY** after performing diagnostics. The router system is now ready to operate.

5. Turn ON power at the router when ready to cut.

Tool Selection

PEN TOOLS

When first using the Dimension 200, be sure to learn as many system functions as possible with the pen tool. Do not try to cut material with the router until you have mastered the basic system functions using the pen.

CUTTING TOOLS

The tool kit contains six spiral fluted solid carbide cutting tools. Cutters used with the Dimension 200 must have a .499 - .500, .249 - .250, or .124 - .125-inch shank for use with the .50 or .25-inch collets, or the .125-inch collet adapter supplied in the tool kit. All cutters must have plunge capabilities.

Note: Metric collets and tools are available from a Gerber distributor.

TOOL INFORMATION

The tools supplied in the tool kit are basic tools for average cutting jobs. As you gain more experience, you may wish to purchase additional cutters. The information below may be helpful in your use and selection of tools.

- The .25-inch cutter is the strongest cutter supplied and has a longer cutting edge length than the .125-inch cutter.
- The .25-inch cutter has a higher surface speed at the outside edge, creating a higher chip removal rate and a smoother edge finish.
- The .25-inch cutter has a 0.75-inch cutting edge length. Any material which is thicker than 0.75 inches requires a router bit with a longer cutting edge length.
- The .25-inch cutter creates a .125-inch radius on all inside corners.
- The .125-inch cutter creates a .0625-inch radius on all inside corners.

- A .25-inch cutter may not fit through some openings. If this occurs, use the .125-inch cutter if possible.
- You may discover that characters can be cut smaller than the recommended limits. If a .25-inch cutter is used, double the size limit for the smallest characters in each style. If larger bits are purchased, scale the limitations proportionally for larger cutters.
- Gerber sells a complete line of high quality cutting tools that provide optimum cutting performance. Contact your Distributor for details.

COLLETS

The tool kit contains two collets. One is a 1/2" collet intended for use with the pen tool. The other is a 1/4" collet intended for use with all 1/4" cutters.

- A 1/4" cutter must have a diameter of .249-.250, and a 1/2" cutter must have a diameter of .499-.500 inches.
- If the cutter has a 1/8" shank, insert it into the 1/8" adapter provided and use the 1/4" collet.
- The cleanliness of the collet and the spindle is essential. Damaged surfaces will affect the holding ability of the collet. Be sure that the tapered inside diameter of the spindle, the tapered outside diameter of the collet, and the inside diameter of the collet are free of chips and debris.
- The outside diameter of the cutting tool is an important factor in the collet's ability to hold tools tightly in place. Use only cutting tools that have a -.001 inch (or less) tolerance on the nominal outside diameter. Gerber authorized cutters comply with these tolerances.
- Insert the collet into the nut before you insert the tool. Insert the tool bit, then install the nut on the bottom of the spindle. This will make it easier to remove the adapter.

TOOL INSTALLATION

Solid carbide tools, such as those included in the tool kit, **must** be handled very carefully.

caution: DO NOT STRIKE THE CUTTING EDGE WITH THE COLLET OR ADAPTER DURING TOOL INSTALLATION.

► To install the tool

1. Turn OFF the router motor.
 2. Select the desired tool and the appropriate collet from the tool kit.
 3. Insert the tool into the collet and tighten with the wrenches provided in the tool kit.
-
- When installing the pen, position the bottom of the collet about half-way up the shank of the tool.
 - When installing a cutter, position the bottom of the collet approximately even with the top of the flutes. The collet should not cover any portion of the flutes, and very little of the straight portion of the shank should be exposed below the collet.
4. Slew the carriage to near the front edge of the router table.
 5. Remove the retaining nut from the base of the router motor using the wrenches supplied in the tool kit.

6. Be sure that the collet and spindle are clean and undamaged.

7. Insert both the tool and collet into the opening at the base of the router motor, as shown below.
8. Hold the collet to prevent the tool from falling out and hand tighten the retaining nut.
9. Hold a wrench in one hand and place it on the flats of the router motor chuck.
10. Hold the other wrench in the opposite hand and place it on the flats of the retaining nut.
11. Tighten the retaining nut by pushing the wrenches with a firm even force.

TOOL REMOVAL

CAUTION: When removing a tool, do not attempt to gain leverage by jamming one wrench against the carriage while pushing on the other.

DO NOT position the router motor over the router table without any material underneath, such as foam board or a soft cloth. The tool might fall out when the retaining nut is loosened and break or damage the cutting edge.

► ***To remove a tool***

1. Use the slew keys to position the carriage near the front of the router table.
2. Turn OFF the router motor.
3. Loosen the retaining nut using one wrench while holding the router motor chuck firmly with the other wrench.
4. Remove the tool from the collet.

PEN TOOL REPLACEMENT

► ***To replace a pen***

1. Unscrew the top of the pen assembly.
2. Remove the spring.
3. Remove the pen.
4. Insert the replacement pen into the pen barrel.
5. Replace the spring, and replace the cover on top of the barrel.

REPLACEMENT CUTTERS

Replacement cutters are available from Gerber. Different cutters purchased from other dealers may or may not provide satisfactory results with the Dimension 200.

Gerber is not responsible for results obtained with cutters not recommended in this manual or purchased from other dealers. Be sure to get only the highest quality cutters for use with the Dimension 200.

Table Mats

The Dimension 200 table mats provide accurate depth control and minimize the need for sacrificial material. They are installed at the factory but are milled on-site after installation to provide a perfectly flat surface.

A grid that aids alignment can also be engraved into the mats. Files containing data for both operations are supplied with ART Path, and bits for both operations are supplied in the tool kit.

Note: Gerber recommends using the Chip Removal System and pressure foot for this procedure.

MAT MILLING

The mat milling data is supplied with ART Path in the file D200MILL.RTP.

1. In ART Path, choose Open from the File menu.
2. Highlight Router Files under List Files of Type to open D200MILL.RTP. Click on OK.
3. In the Setup menu, select Start/End position.
4. Set the Start/End position to start and end the machine at the lower left.
5. Click on OK.
6. Install the table surfacing bit supplied in the tool kit.
7. On the ARC station, press Z INIT once to unlock the Z axis.
8. Place the tool height gage on the surface of the mats under the bit. Use the Z axis knob to lower the tool until it just touches the gage.
9. Press Z INIT once. This lifts the Z axis once and locks it. The tool is now initialized to the table surface.

10. Using the arrow keys, move the carriage to the extreme lower left corner (absolute 0,0 or the orientation point) of the table.
11. In ART Path, click on Output. The Job Output dialog box appears. (Make sure that no pre-position moves have been entered.)
12. Click on Rout.
13. Press START/STOP three times to begin table milling. This displays the header and tool messages and begins routing.

Grid Engraving


The grid consists of a numbered grid that assists in precise alignment of material on the table. It should be engraved on the mats after the mats have been milled.

After milling the table mats, choose the appropriate grid engraving procedure described to engrave the grid:

- normal grid engraving
- grid engraving with the T-Vac System option installed

NORMAL GRID ENGRAVING

The grid engraving data needed is supplied with ART Path in the file ENGRGRID.RTP.

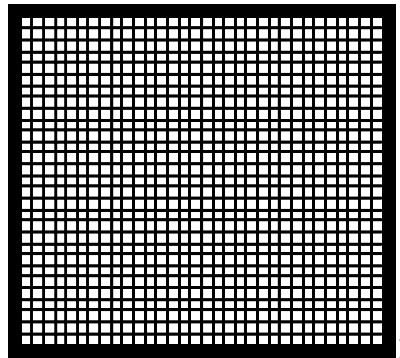

ENGRGRID.RTP

The number data is supplied in the file GRIDNUMB.RTP.



GRIDNUMB.RTP

► ***To engrave the grid***

1. In ART Path, choose Open from the File menu.
2. Highlight Router Files under List Files of Type to open ENGRGRID.RTP. Click on OK.
3. In the Setup menu, select Start/End position.
4. Set the Start/End position to start and end the machine at the lower left.
5. Click on OK.
6. Install the .020 engraving bit supplied in the tool kit.
7. On the ARC station, press Z INIT once to unlock the Z axis.
8. Place the tool height gage on the surface of the mats under the bit. Use the Z axis knob to lower the tool until it just touches the gage.
9. Press Z INIT once. This lifts the Z axis once and locks it. The tool is now initialized to the table surface.
10. Using the arrow keys, move the carriage to the extreme lower left corner (absolute 0,0 or the orientation point) of the table.

11. In ART Path, click on Output. The Job Output dialog box appears. (Make sure that no pre-position moves have been entered.)
12. Click on Rout.
13. Press START/STOP three times to begin grid milling. This displays the header and tool messages and begins routing.

► **To engrave the grid numbers**


Note: Use the same .020 engraving bit as above.

1. In ART Path, choose Open from the File menu.
2. To engrave the numbers, highlight Router Files under List Files of Type to open GRIDNUMB.RTP. Click on OK.
3. In the Setup menu, select Start/End position.
4. Set the Start/End position to start and end the machine at the lower left.
5. Click on OK.
6. On the ARC station, press Z INIT once to unlock the Z axis.
7. Place the tool height gage on the surface of the mats under the bit. Use the Z axis knob to lower the tool until it just touches the tool height gage.
8. Press Z INIT once. This lifts the Z axis once and locks it. The tool is now initialized to the table surface.
9. Using the arrow keys, move the carriage to the extreme lower left corner (absolute 0,0 or the orientation point) of the table.
10. In ART Path, click on Output. The Job Output dialog box appears. (Make sure that no pre-position moves have been entered.)
11. Click on Rout.

12. Press START/STOP three times to begin table milling. This displays the header and tool messages and begins routing.

GRID ENGRAVING WITH T-VAC OPTION

The grid engraving program is supplied with ART Path in the VACGRID.RTP file. The VACGRIDM.RTP file contains a similar grid for use with a metric system.

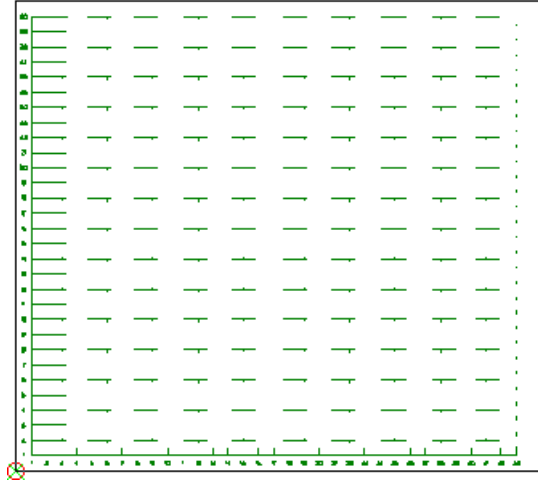

VACGRID.RTP3

► To engrave the grid

1. In ART Path, choose Open from the File menu.
2. Highlight Router Files under List Files of Type to open VACGRID.RTP (or VACGRIDM.RTP). Click on OK.
3. In the Setup menu, select Start/End position.
4. Set the Start/End position to start and end the machine at the lower left.
5. Click on OK.
6. Install the .020 engraving bit supplied in the tool kit.
7. On the ARC station, press Z INIT once to unlock the Z axis.

8. Place the tool height gage on the surface of the mats under the bit. Use the Z axis knob to lower the tool until it just touches the gage.
9. Press Z INIT once. This lifts the Z axis once and locks it. The tool is now initialized to the table surface.
10. Using the arrow keys, move the carriage to the extreme lower left corner (absolute 0,0 or the orientation point) of the table and set Job Home Position.
11. In ART Path, click on Output. The Job Output dialog box appears. (Make sure that no pre-position moves have been entered.)
12. Click on Rout.
13. Press START/STOP three times to begin the grid. This displays the header and tool messages and begins routing.

Material Selection and Preparation

The Dimension 200 can draw on any kind of material suitable for a ballpoint pen, and cut virtually any routable material including those listed below.

ROUTABLE MATERIALS

Plastics	Woods	Metals*
Acrylic	Hard	Aluminum
Polycarbonate	Soft	Brass
Phenolic	Masonite	Copper
Styrene	Plywood	Bronze
Foam Board	Particle Board	

* All metals require use of the Mist Coolant system.

CAUTION: Steel or stainless steel is not recommended for use with the Dimension 200.

Because different routable materials have different densities, varying cutting speeds are required. A table of recommended cutting speeds for various materials is included at the back of this manual.

CHOOSING SACRIFICIAL MATERIAL

You may place a piece of sacrificial material under the workpiece when cutting. The best sacrificial materials are foam or acrylic. Pressed boards such as chip board and masonite can be used; however, pressed boards contain glue, which is abrasive to cutters. Abrasive materials can wear out the tips of cutters and degrade their plunge capabilities.

- Acrylic is recommended over pressed board.
- When using acrylic as a sacrificial material, remove the protective paper coating from the sacrificial acrylic surface.
- Select sacrificial material of similar density to the material being cut.

Attaching the Workpiece to Sacrificial Material

When not cutting to the mask, attach the workpiece to the sacrificial material using one of the following methods:

- Double-Sided High Tack Tape
- Double-Sided Tape
- Spray Adhesive

Follow the guidelines below when attaching the workpiece to the sacrificial material before mounting the workpiece on the router table.

Hard Metals

- **For brass, other metals, or hard wood:**

Use Double-Sided High Tack Tape. Specially formulated Double-Sided High Tack Tape is unaffected by mist coolant spray and is

especially suitable for securing metals which produce high cutting forces.

High Tack Tape is available through Gerber or most industrial and office supply distributors.

Note: Using both tape and spray adhesive is a good alternative on rough-textured wood.

Thin Metals

- **For thin aluminum or other thin metals:**

Use less aggressive Double-Sided Tape. The 3M™ #410 Double-Sided Tape is especially suitable for securing thin aluminum or other light materials to avoid bending the metal when lifting them after cutting. This tape is available from most industrial and office supply distributors.

Note: Do not use foam-filled Double-Sided mounting tape. Spray adhesive works well on thin aluminum.

Non-Metals

- **For plastic, Styrofoam, thin wood, or other non-metallic materials:**

Use Spray Adhesive. Spray Adhesive is especially suitable for securing plastic, Styrofoam, wood or other non-metallic materials.

Spray Adhesive is available from Gerber or most industrial and office supply distributors. Low-tack tape may also be appropriate for certain types of wood, which tend to splinter when high-tack tape is removed.

*Note: When using acrylic materials as a workpiece, **do not** remove the protective paper sheets which preserve the acrylic surface from scratches during cutting. If the acrylic materials are supplied unmasked, you may wish to apply the transfer tape before spraying on the adhesive.*

USING TAPE

Follow these guidelines when using tape to attach the workpiece to the table mats:

- Place the tape in closely spaced strips.
- Do not overlap the strips.
- Make sure the centers of letters like O, B, and P are held securely by the tape.

► ***To use double-sided tape***

Follow these steps when using double-sided tape to secure the workpiece to the sacrificial material:

1. Lay the tape across the underlying material.
2. Place the workpiece on top of the tape.
3. Press firmly to bond securely.

USING SPRAY ADHESIVE

When using spray adhesive, refer to the manufacturer's suggestions on the can.

WARNING: Apply spray adhesive only in a well-ventilated area.

CAUTION: Spray adhesive is sticky. Do not spray near the router table.

► ***To attach the workpiece to the sacrificial material***

1. Spray the adhesive in smooth, even strokes across the back of the workpiece.
2. Coat the entire surface uniformly, including edges and corners, until tacky, but not wet.
3. Press the workpiece firmly onto the sacrificial material.

Mounting the Workpiece

After adhering the material to sacrificial material, or if you are not using sacrificial material, you may mount the workpiece on the table using clamps, the T-Vac, or a combination of both.

USING CLAMPS

After the workpiece is adhered to the sacrificial material (if used), attach the entire workpiece to the router table with work clamps. Use all four work clamps to ensure that the workpiece is held down securely. The clamps can be reversed so that they may be used with either thick or thin material, as shown below.

Note: Your router may vary from the photographs.

If the workpiece is thick, use a clamp block (shim) of equal thickness under the free end of the work clamp to keep the clamp level and maximize its holding ability.

CAUTION: When moving the router motor with the slew keys, or during router operation, take care not to run the vacuum shroud into the work clamps. Make sure the work clamps are not in the tool path.

► **To use the clamps**

1. Press the slew key to move the router carriage to the back of the router table.
2. Place the workpiece in the center of the router table.
3. Locate the work clamps in the tool kit. Each work clamp consists of a strap, clamping nut, and nut/stud assembly.
4. Insert the strap over the stud and thread on the clamping nut before clamping the material.
5. Position the work clamp on the edge of the workpiece.
6. Hand-tighten the work clamp by hand.

Note: Over tightening the clamps can bend them, making them less effective.

7. Slew the router motor and tool over the workpiece.

Note: The descriptions of drawing and cutting that follow assume no (or minimal) vacuum hold-down. Less clamping is needed with T-Vac.

Drawing

If the workpiece is thin, use the thinner side of the clamp, as shown on the previous page. When drawing, two work clamps are normally sufficient to hold the paper and sacrificial material securely in place.

Cutting

When cutting, use all four work clamps to hold the workpiece and sacrificial material securely in place.

USING T-VAC VACUUM HOLD-DOWN

The T-Vac Vacuum System reduces the need for adhesives and sacrificial materials because it holds the workpiece securely on the table without adhesives. With certain materials, you may wish to use sacrificial material. T-Vac is not recommended for use with very small workpieces, very thick or porous materials, or materials with irregular surfaces.

CAUTION: IT IS ADVISABLE TO USE CLAMPS IN ADDITION TO T-VAC VACUUM HOLD-DOWN IF THE WORKPIECE IS THICK OR THE JOB IS LARGE TO PREVENT ACCIDENTAL WORKPIECE MOVEMENT IF THE VACUUM IS INTERRUPTED.

When using T-Vac vacuum hold-down, follow these guidelines:

- The workpiece must be flat.
- Do not use T-Vac with porous materials, very thick materials, or materials with irregular surfaces.
- The workpiece must cover most of the vacuum holes. Up to 30 holes may be uncovered at the start of the job. Additional holes may be uncovered as the job progresses. Use scrap material to cover the holes that are not covered by the workpiece.
- Use the Chip Removal System and keep the table surface clean.

USING BOTH CLAMPS AND T-VAC

For large jobs, it is advisable to also clamp the workpiece to prevent movement if a power outage or other condition interrupts the vacuum.

Using the Chip Removal System

Use the Chip Removal System when cutting plastic, Styrofoam, and wood. Disconnect the removal system when pen plotting or cutting metals such as aluminum or brass.

CAUTION: The Chip Removal System cannot be used with the Mist Coolant System.

► *To use the Chip Removal System*

1. Make sure that the Chip Removal System has been properly installed. (See the section on installation, if necessary.)
2. Press the START key on the ARC station to start the job. The vacuum is switched on by the electrical box when the job starts.

PRESSURE FOOT AND PRESSURE FOOT PAD

The Chip Removal System includes a pressure foot to hold material flat against the router table to prevent it from lifting while routing.

The pressure foot also makes the router safer by preventing chips and small pieces of material from being thrown out of the machine while routing.

Using the pressure foot saves time and money by reducing the need for bonding and sacrificial material.

The pressure foot has a removable pad that rests on the workpiece and slides smoothly over it during cutting operations. The tool extends through an opening in the pressure foot pad. Two pads are supplied, one with a 1.5" (38 mm) diameter opening for normal use, and one with a 0.4" (10 mm) diameter opening for cutting very small pieces without risk of pulling the piece off the table and into the vacuum.

► *To install the pressure foot*

1. Align the pressure foot to the four pins attached to the shroud.
2. Turn counterclockwise to install.

► *To remove the pressure foot*

1. Grasp the pressure foot with your hand (or insert a screw driver into a vent hole).
2. Turn clockwise to remove.

► ***To replace the pressure foot pad***

1. Align the pad screw holes with the holes on the pressure foot.
2. Replace the screws and tighten just enough to compress the cushion slightly. A thread locking compound should be used. Loctite® Thread Locker is recommended.
3. Replace the pressure foot window.
4. Replace the screws and tighten.

Using the Mist Coolant System

CAUTION: The Mist Coolant System has been designed to be used with Gerber Cool coolant. **DO NOT** dilute Gerber Cool prior to use.

CAUTION: Use of other types of fluids may damage the system. **DO NOT** use toxic or volatile liquids.

The adjustable drip rate allows for a wide range of mist "wetness" and cooling capability. The evaporation of the mist provides the desired cooling effect and minimizes heat build-up of the remaining lubricant as well.

► To use the Mist Coolant System

1. Turn on the compressor and set the air pressure at 20-40 psi as indicated on the mist coolant air pressure gage.
 - To increase air pressure, turn the air pressure regulator *clockwise*.
 - To decrease air pressure, turn the air pressure regulator *counterclockwise*.
2. Remove the brass filler plug using a flat head screwdriver and fill the reservoir with Gerber Cool coolant. The reservoir should remain full to assure proper lubrication. Add coolant periodically to maintain the level.
3. Adjust the coolant nozzle so that it is directed at the point of cutting.

CAUTION: Keep the nozzle at a safe distance to avoid damaging it with the cutter.

4. Open the shut off valve near the nozzle coupling mounting block. When open, the handle is aligned vertically with the coolant tubing.

5. Starting with a drip rate of six drops per minute, adjust the drip rate and air pressure to provide a mist wet enough to create a slight beading of moisture on the workpiece. Avoid an excessively "dry" mist. Better cooling and mist placement are achieved when larger mist droplets are used. Ideally the coolant should evaporate during cutting.
6. Adjust the drip rate and lubricant flow by turning the drip regulator on the top of the coolant reservoir.
 - To increase the drip rate, turn the regulator *counterclockwise*.
 - To decrease the drip rate, turn the regulator *clockwise*.

Using the Step Height Gage

The step height gage enhances the depth accuracy of the Dimension 200. When working with a milled table surface, you can set the depth of cut so precisely that masked materials, such as acrylic sheet, can be cut while leaving the bottom layer of masking paper intact. This eliminates the need for separate adhesives to hold the cut shape in the workpiece and can do away with the need for sacrificial material.

UNLOCK AND INITIALIZE THE Z AXIS

1. Place the step height gage on the milled table surface next to the workpiece to be cut. Ensure that the table surface is clean.

Note: Debris under the gage will cause inaccurate measurement and poor results.

2. Using the arrow keys, position the tool over the step on the gage marked with the thickness of the material to be cut.

Note: The actual step height is larger than the thickness marked. Do not use the step height gage as a measuring device.

3. Press Z INIT on the ARC station. Turn the Z axis ways knob until the tool just touches the appropriate gage step.

CAUTION: Excessive pressure will cause tool damage.

4. Press Z INIT once.

DEPTH OF CUT

Set the depth of cut in ART Path to the decimal equivalent of the step height selected on the step height gage. This will leave the bottom mask layer intact. Decimal equivalents of step heights are shown below.

Step	Decimal Equivalent
1/16	.063
1/8	.125
3/16	.188
1/4	.250
5/16	.313
3/8	.375
7/16	.438
1/2	.500
9/16	.563
5/8	.625
11/16	.688
3/4	.750
13/16	.813
7/8	.875
15/16	.938
1	1.000

Cleaning and Maintenance

The Dimension 200 is relatively simple to operate and easily maintained. However, routine checking and cleaning of the equipment can significantly reduce the likelihood of major problems.

Router maintenance is based on **daily inspection** of the equipment and **daily and weekly cleaning** procedures.

Daily and weekly inspections of the router are recommended to help establish a cleaning schedule appropriate to the environment. Use the charts provided as inspection guidelines.

Daily Inspection

Component	What To Check For
Entire machine surface	Chip buildup, mist coolant buildup, table slot debris
X and Y ways	Debris buildup
Lead screws	Debris buildup
Router carriage, linear bearing seals	Debris buildup
Mist coolant nozzle	Coolant buildup
Mist coolant tank	Coolant level
T-Vac filter	Debris buildup
Electrical box air filter	Debris buildup

Cleaning Recommendations

WARNING: BEFORE PERFORMING ANY CLEANING PROCEDURE, TURN OFF THE ROUTER MOTOR AND UNPLUG THE ELECTRICAL BOX FROM ITS POWER SOURCE.

DAILY CLEANING

Use the daily inspection to help establish a cleaning schedule that is appropriate for the router environment. The daily cleaning procedures recommended are based on average use of the Dimension 200.

TWICE WEEKLY CLEANING

Clean the T-Vac air filter twice a week or even more frequently if there is heavy use. Debris buildup in the filter will reduce vacuum hold-down and may cause the vacuum to overheat and fail.

SUPPLIES

The following tools and supplies are recommended for the cleaning procedures:

- Shop vacuum
- Lint-free cloth
- Hand broom
- 1" (25 mm) nylon or natural bristle brush
- 2.5 mm and 4 mm hex head wrenches
- Light machine oil

Daily Cleaning***Y AXIS WAYS***

The Y axis ways are the shafts on which the beam moves. There is one Y axis way on each side of the work table, running the length of work table.

1. Locate the Y axis ways.
2. Clean the Y axis ways by wiping them with a lint-free cloth.

X AXIS WAYS

The X axis ways are the shafts located on the beam on which the router motor carriage moves.

► *To clean the X axis ways*

1. Locate the two X axis ways.
2. Clean the X axis ways by wiping them with a lint-free cloth.

LEAD SCREWS

The lead screws are located along the width of the router motor carriage below the ways, on the Z axis, and beneath the center front of the router. (See the previous photograph and illustration.)

CAUTION: DO NOT OIL THE LEAD SCREWS.

1. Use a brush to remove debris from the lead screws.

Note: The “teflon” coating on the lead screws will gradually wear away. This is normal and will not affect performance.

ROUTER TABLE SURFACE

► To clean the router table surface

1. Use a hand broom to clean the router table surface after each operation, brushing away the chips from around the router motor and the work table.
2. Use the lint-free cloth to wipe the table clean.

MIST COOLANT

The Mist Coolant System requires two maintenance procedures: checking the mist coolant fluid level and cleaning the mist coolant nozzle.

► To check the mist coolant

1. Regularly check the mist coolant tank to ensure that it contains enough coolant to avoid running out during a job.
2. If the coolant level is low, fill the tank to within one inch (25 mm) of the top of the level indicator. Overfilling may result in the tank leaking.

► To clean the mist coolant nozzle

1. Use a lint-free cloth to wipe off any coolant build-up.

Weekly Inspection

Component	What To Check For
Z axis ways	Debris buildup
X and Y axis ways	Debris buildup
Electrical box air filter	Debris buildup on filter element

Weekly Cleaning

The weekly cleaning and maintenance procedures include the following:

- cleaning and oiling the ways
- cleaning the electrical box air filter

Z AXIS WAYS

1. Locate the Z axis ways on either side of the router motor.
2. Lower the router motor to its lowest position by turning the Z axis adjustment knob.
3. Clean and oil the upper part of the Z axis ways.
4. Use a lint-free cloth to clean the way.
5. Lightly oil the Z axis way with light machine oil.
6. After cleaning the upper part of the Z ways, raise the router motor to its highest position by turning the Z axis adjustment knob.
7. Clean and oil the lower part of the Z axis ways.
8. Use a lint-free cloth to clean the way. Lightly oil the way.

X AND Y AXIS WAYS

See the photograph under the “Daily Cleaning” section for parts identification.

1. Use a lint-free cloth to clean the X and Y axis ways.
2. Lightly oil the X and Y axis ways with a light machine oil.

ELECTRICAL BOX AIR FILTER

The air filter is located on the electrical box. In harsh environments, the air filter may need more frequent cleaning than recommended.

1. Turn OFF the main power switch and unplug the electrical box from its power source.
2. Snap off the air filter cover from the front of the electrical box.
3. Remove the air filter from the cover.
4. Vacuum thoroughly to remove any dust or debris.
5. Return the air filter to the cover.
6. Return the cover to its former position and snap into place.

ROUTER MOTOR LUBRICATION

The router motor bearings are lubricated during assembly but must be lubricated after every 1000 hours of operation. This procedure refers to the High Frequency Spindle Motor Option only.

1. Use a lithium-based, NLGI grade 2 grease, such as Optimal Longtime PD2 or Leuber Isoflex LDS 18 Special A.

CAUTION: Before lubricating the bearings, clean the grease nipples carefully to prevent dust or dirt from entering the motor.

2. Lubricate each bearing with 2 grams of grease.

CAUTION: Do not over-lubricate. Over-lubrication will cause excessive heat build-up.

3. Weekly, clean and grease the cams with lithium-based or white grease.

Index

A

Absolute X,Y	52
Acrylic	77, 78, 79
Aluminum	33
ARC Station.....	16
connect to GA.....	22
display panel.....	40
front panel	40
function keys	42
functions	39
power supply	16
power-up tests	41
setting up	23
testing.....	59
to electrical box	16
to router table.....	16
ART Path	
job home position	37
mat milling data	72, 73, 76
Auto Scroll.....	60, 61
Axes	
of movement	35
X, Y, Z.....	35

B

Boundary message	56
------------------------	----

C

Changing tools.....	46
Chip Removal System.....	4, 18, 83
installation	18
pressure foot.....	83
using	83
vacuum shroud.....	19
with mat milling.....	72
Clamps	81, 82
Cleaning	

air filter	97
daily.....	92
lead screws	94
mist coolant tank and nozzle.....	95
supplies.....	93
weekly.....	96
work table.....	93
X and Y axis ways	97
Z axis ways.....	96
Collets	68
Coolant	86
Customer Support.....	2
Cutting.....	82
Cutting tools	67

D

Daily cleaning	92
Daily inspection.....	92
Default settings.....	61
Depth of cut	87, 89
Diagnostics.....	66
power-up	23
DISPLAY	60
Display panel.....	40
Double-sided high tack tape.....	78
Double-sided tape.....	79, 80
Drawing.....	82

E

Electrical box.....	3, 5, 16
air filter cleaning	97
to router table.....	17
Electrical requirements.....	4
Engraver vacuum system	32
Engraving	
grid numbers.....	75

F

Feed Rate	57
Function keys	

arrows	42
Reset	48
Select.....	50
Start.....	45
Start/Stop	43
Stop.....	45
Z Init.....	36, 49

G

Gerber Cool coolant	25, 86
Grid engraving	73
grid numbers.....	75
normal.....	73
with T-Vac	76
Grid engraving data.....	73
Grid numbers.....	75
Ground strap cables.....	20

H

Hard metals.....	78
High Frequency Spindle Option 4, 6, 25, 27, 31, 98	
Home Position	37
current.....	55

I

Initializing	
Z Axis	36
Inplace repeats	56
Installation	
Chip Removal System.....	18
Mist Coolant System	25
pressure foot.....	84
router	15
router motor	65
Speed Controller.....	30
T-Vac Vacuum System.....	28

J

Job boundaries	56
----------------------	----

Job Home Position	37, 53, 56
-------------------------	------------

L

Language	60
Lead screws.....	92, 94
Low-tack tape	79

M

Main power switch	38
Mat milling data	72
Material selection	77
Menu Select mode.....	48
Menu selection	
Absolute X,Y	52
Default	61
Display	60
Feed Rate	57
Motor Delay	59
Return Home	57
Set Job Home.....	53
Test	59
Metals.....	77, 78
Mist coolant	
fluid level.....	95
nozzle	95
Mist Coolant System.....	25
air pressure.....	86
compressed air.....	4
drip rate adjustment	87
installation.....	26
using.....	86
Motor Delay	59

N

Non-metals.....	79
-----------------	----

O

Operating principles.....	35
Orientation	52, 59
Orientation point.....	41, 72, 74, 75, 77

Output repeats56

P

Paneled jobs56

Pause mode45

Plastics77, 79

Point of orientation41

Power connections22

Power switch

 emergency38

 main38

 rotor motor38

Power-up diagnostics23

Preposition37, 53, 55, 73, 75, 77

PrePosition56

Pressure foot83

 installation84

 removal84

 replacement85

R

Repeat job47

Replacement cutters71

Resume processing46

Return Home57

Rotor motor

 bearings98

Routable materials78

Router maintenance91

Router motor

 installation65

 lubrication98

 removal65

Router motor power switch38

Router stand3

S

Sacrificial material78, 81

Safety guidelines33

Select key51

Slew42, 81

Speed controller4, 6

 installation30

Speed Controller System31

Spindle speed31

Spray adhesive79

Start Job44

Start Mode43, 48

Start position37

Start Ready43

step height gage49, 87- 89

step heights

 decimal equivalents89

Stop Job45

Stop Mode44

Stop Ready45

Styrofoam79

T

Table Mats72

Thin metals79

Tool change46

Tool height gage49, 72, 75, 77

Tools

 bits67

 cutting67

 information67

 installation69

 pen71

 removal70

 replacement71

T-Vac vacuum

 and clamps83

 guidelines83

T-Vac Vacuum System4, 5, 28, 82

 air filter cleaning92

 and grid engraving76

 installation28

U

Units60

V

Vacuum hose.....19

W

Weekly Cleaning96

Weekly Inspection.....96

Wood77, 78, 79

Work clamps81

Work Space.....3

Workpiece

attachment78

mounting81

using double-sided tape80

using spray adhesive80

using tape79

X

X axis35

X axis ways.....97

cleaning94

X, Y, Z Axes35

Y

Y axis35

Y axis ways.....97

cleaning93

Z

Z axis35, 36, 49, 64

Initializing36, 38, 46, 49, 88

Z axis ways

cleaning96

Z INIT.....36, 49

Table of Contents

INTRODUCTION.....	1
Manual Contents.....	1
Conventions	2
Customer Support.....	2
ROUTER REQUIREMENTS	3
Work Space Requirements	3
Equipment Requirements	3
Router Stand.....	3
Electrical Box.....	3
High Frequency Spindle Option and Speed Controller	4
Mist Coolant Compressed Air.....	4
Chip Removal System.....	4
T-Vac Vacuum System	4
Electrical Requirements.....	4
Router Package Contents.....	7
Tool Kit Contents	9
ROUTER STAND ASSEMBLY	11
Assemble the Leg Assembly	11
Assemble the Stand	13
Mount the Router Table on the Stand	13
Level the Stand and Router Table	13
ROUTER INSTALLATION PROCEDURE	15
Before You Begin.....	15
Connect Power Supply to ARC Station.....	16
Connect Router Table to ARC Station	16
Connect Electrical Box to ARC Station	16
Connect Electrical Box to Router Table.....	17
Connect Chip Removal System.....	18
Installing the Chip Removal System.....	18
Connect the Ground Strap Cables	20
Connect GRAPHIX ADVANTAGE to ARC Station	22
Power Connections.....	22
Set Up the ARC Station.....	23

OPTIONAL EQUIPMENT INSTALLATION	25
Mist Coolant System	25
Installing the Mist Coolant System	26
T-Vac Vacuum System	29
Speed Controller System	31
Using the Speed Controller System	32
Engraver Vacuum System Option	33
SAFETY GUIDELINES	35
OPERATING PRINCIPLES	37
Overview	37
X, Y, Z Axes	37
Z Axis	38
Job Home Position	39
Power Switch	40
ARC Station	41
Front Panel	42
Power-Up Tests	43
Function Keys	44
START/STOP	45
RESET	50
Z INIT	51
ENTER	52
SELECT	52
Using Select	53
Absolute X,Y	54
Set Job Home	55
Job Home Position and Job Boundaries	58
Return Home	59
Feed Rate	59
Motor Delay	61
Test	61
Display	62
Default	63
SYSTEM PREPARATION AND USE	65
Preliminary Preparation	66
Router Motor Installation/Removal	67
Tool Selection	69
Pen Tools	69

Cutting Tools.....	69
Tool Information	69
Collets	70
Tool Installation	71
Tool Removal.....	73
Pen Tool Replacement	74
Replacement Cutters	74
Table Mats	75
Mat Milling	75
Grid Engraving	76
Normal Grid Engraving.....	76
Grid Engraving with T-Vac Option	79
Material Selection and Preparation	80
Routable Materials	80
Choosing Sacrificial Material	81
Attaching the Workpiece to Sacrificial Material.....	81
Using Tape	83
Using Spray Adhesive.....	83
Mounting the Workpiece	84
Using Clamps	84
Using T-Vac Vacuum Hold-Down	86
Using Both Clamps And T-Vac	87
Using the Chip Removal System.....	87
Pressure Foot and Pressure Foot Pad	88
Using the Mist Coolant System.....	90
Using the Step Height Gage	91
Unlock and Initialize the Z Axis	92
Depth of Cut.....	93
CLEANING AND MAINTENANCE.....	95
Daily Inspection.....	96
Cleaning Recommendations	96
Daily Cleaning	96
Twice Weekly Cleaning.....	97
Supplies.....	97
Daily Cleaning.....	97
Y Axis Ways	98
X Axis Ways	98
Lead Screws	99
Router Table Surface	99
Mist Coolant.....	99
Weekly Inspection	100

Weekly Cleaning	100
Z Axis Ways.....	100
X and Y Axis Ways	101
Electrical Box Air Filter.....	101
Router Motor Lubrication	102

