

 
A4

297mm

210mm



How To Use

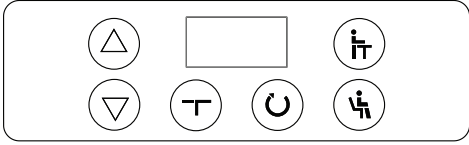

1. Position Reset

- Unplug the power cable and motor cable and re-plug in.
- Press and hold the "O" button for around 3 seconds until the controller " - - - " and then release the button.
- After that the desk will automatically drop to the lowest height, rise to the maximum height, which means the initial setting was successful.

2. Raising and Lowering the Desk

- Press the "△" button to lift the desk, and press the "▽" button to descend the desk.
- Press the "△" button for 3 seconds until the screen flashes and release the button; then the desk will automatically rise to the highest position, and press any button to stop halfway.
- Press the "▽" button for 3 seconds until the screen flashes and release the button; then the desk will automatically descend to the sitting position, and press any button to stop halfway.

3. Height Memory Setting

- Adjust the desk height to your desired standing position.
- Press and hold the "H" or "M" button; when the screen flashes, it means the height memory setting is successful.

To go to standing position memory height:

Press the "H" or "M" button, and then release the button, and the desk will automatically rises or descends to the memory height position. Press any button to stop halfway.

4. Sedentary Reminder

 
To turn on the reminder setting:

- Press the "T" button to turn on the sedentary reminder, then press it again to change between "r30/ r45/ r60", representing 30 minutes/45 minutes/60 minutes.
- Choose one of the time options "30/45/60" according to your own needs by pressing "T" button. After choosing, you don't need to press any other buttons, and then wait until the screen is turned off, which mean the initial setting is successfully.
- When the selected reminder time is reached, the display will flash "Chr" for 1 minute.
- After 3 consecutive reminders at 5 minutes interval and the table is not used, the screen will automatically turn off.





To turn off the reminder setting:

- Press the "T" button; when the screen displays the digital height, which means the reminder is turned off.
- In the sedentary reminder state, you can press the "△" or "▽" button to adjust the height, and the sedentary reminder will restart the countdown.

Screw List

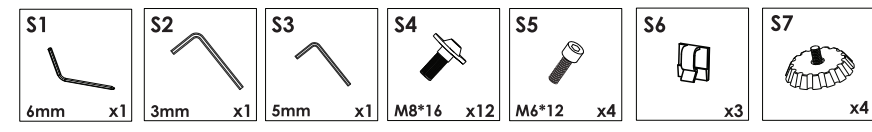

Part List

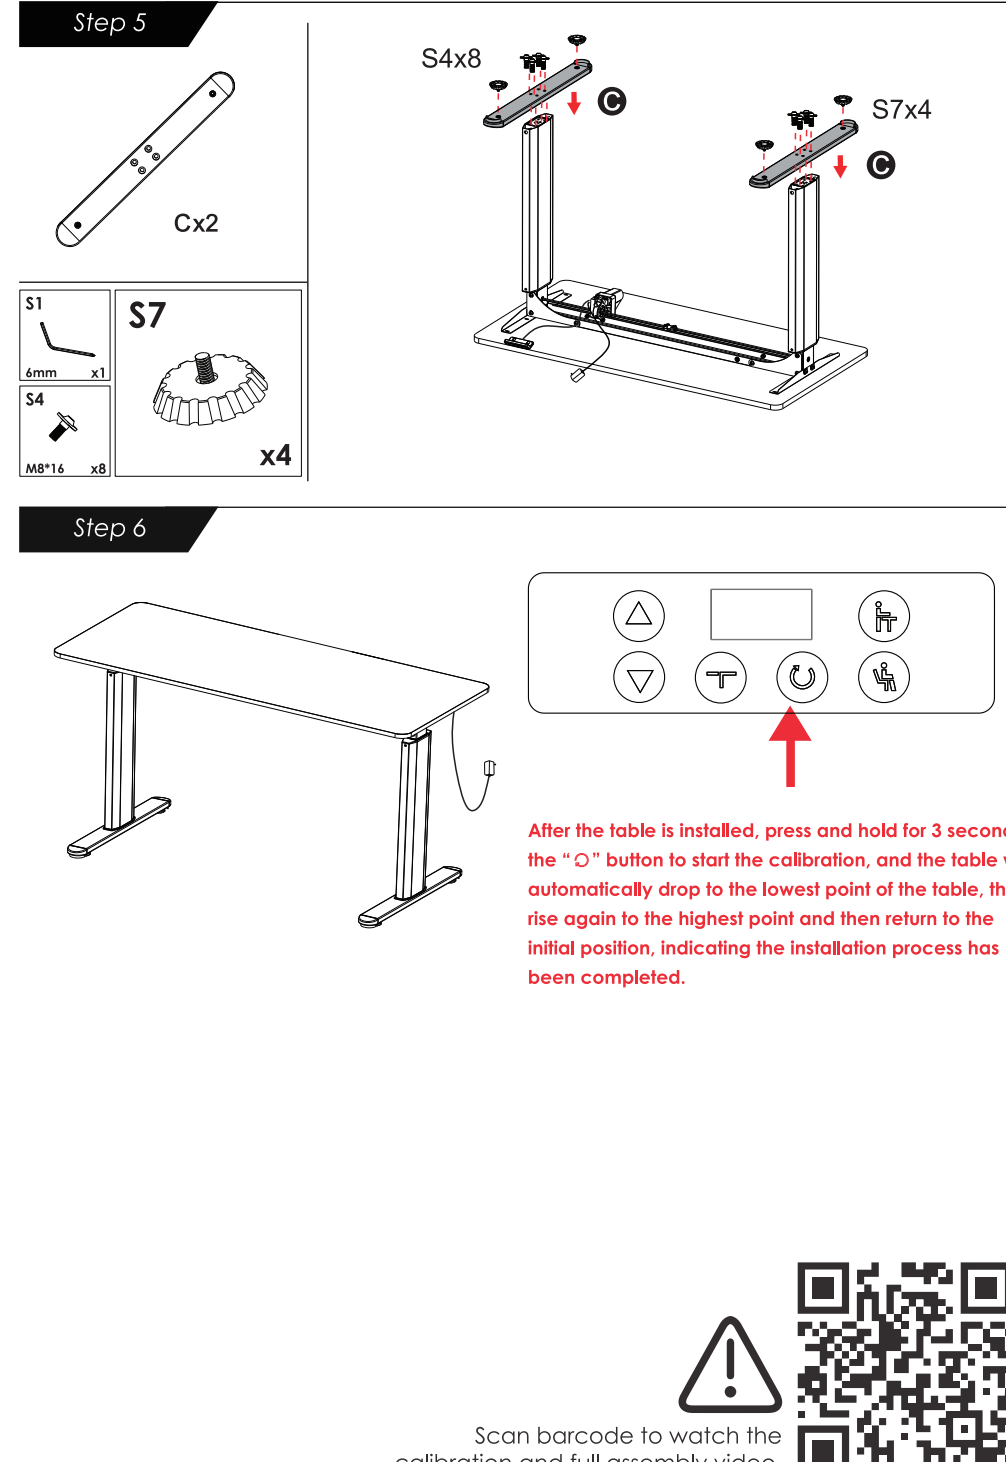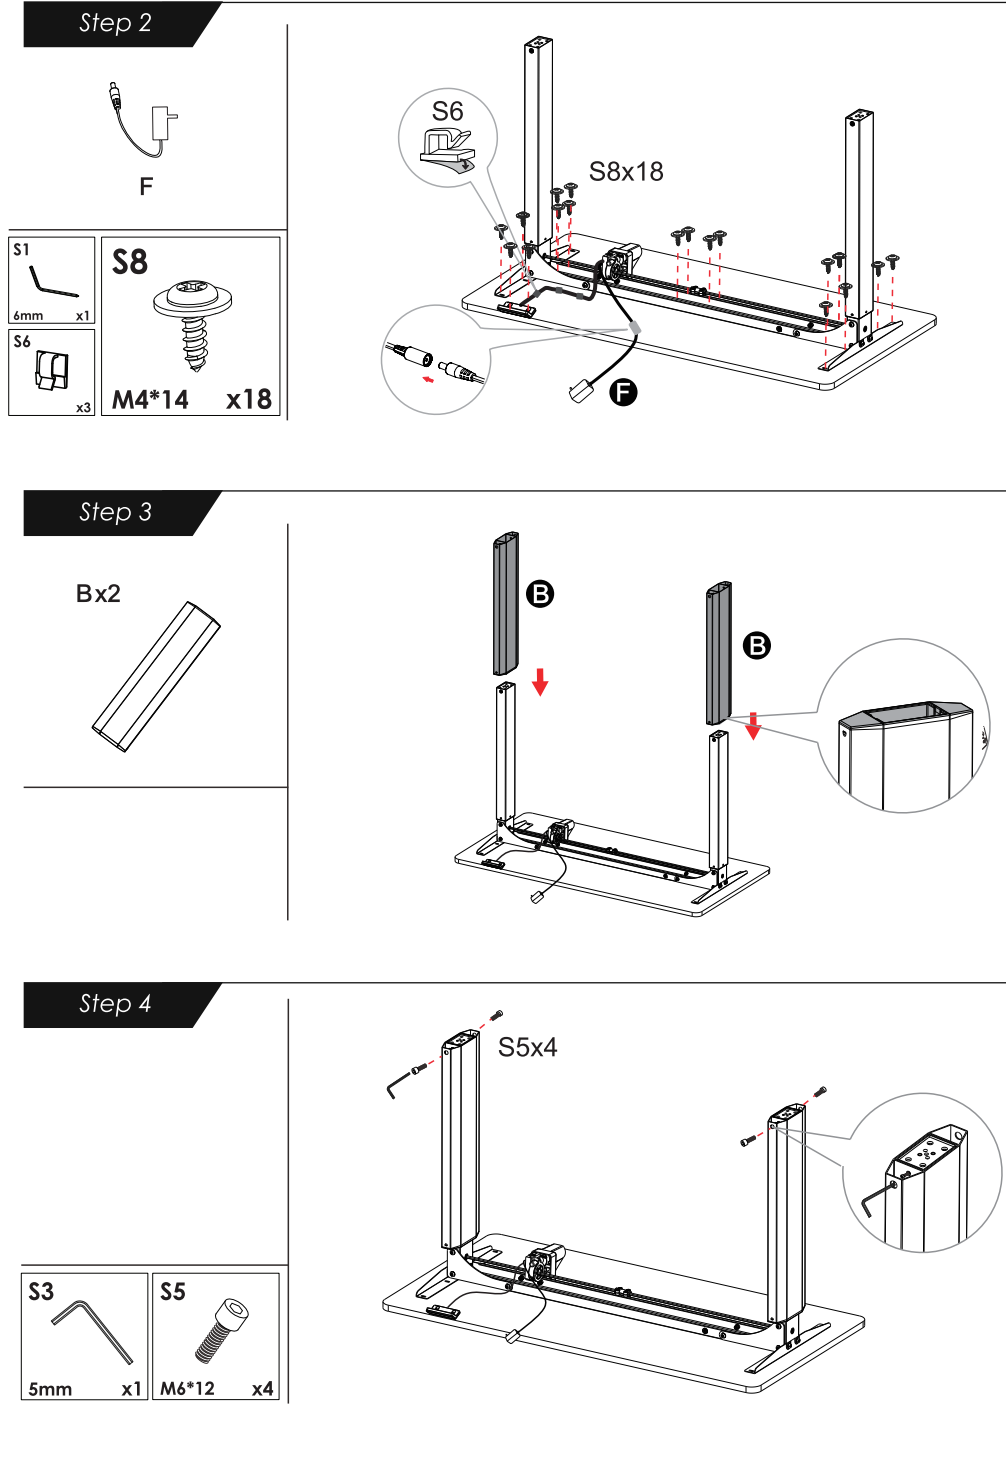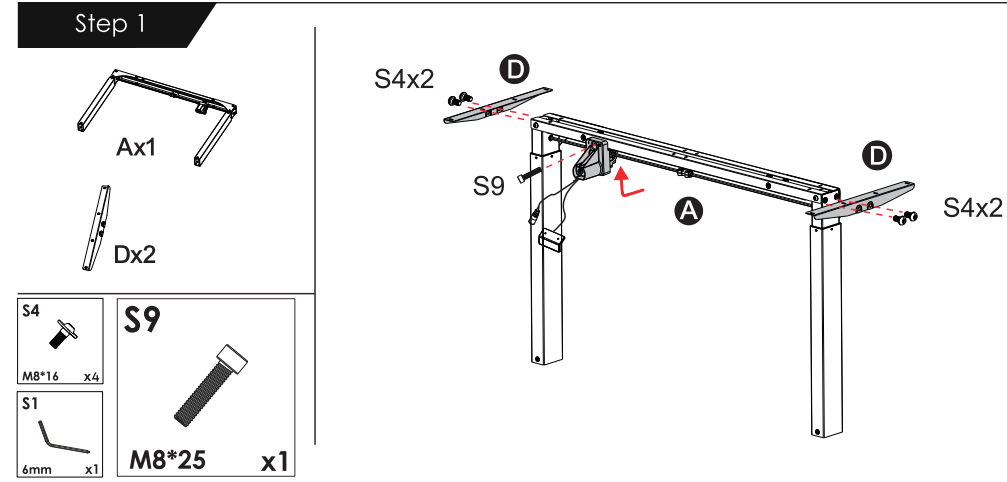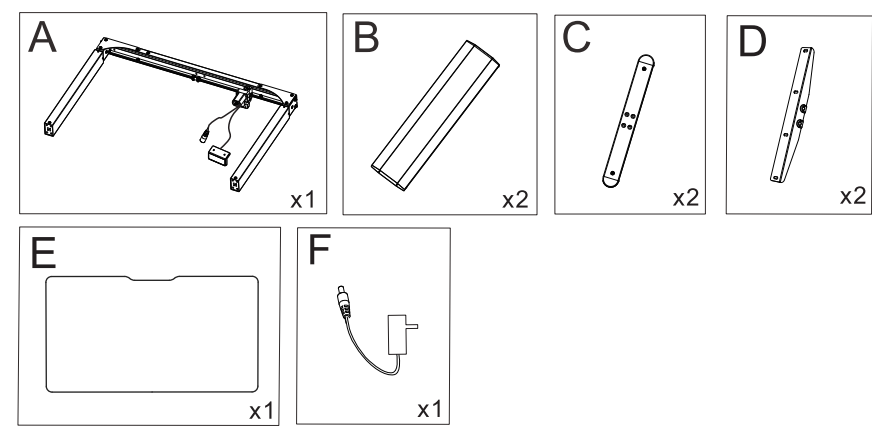    

PAGE

1

2

3

4

 
5

6

7



Cara Penggunaan

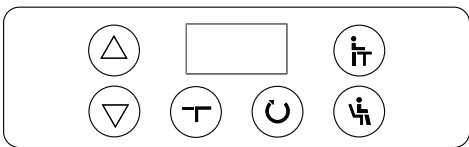

1. Pengaturan Ulang Posisi

- Cabut kabel daya dan kabel motor lalu colokkan kembali.
- Tekan dan tahan tombol "O" selama sekitar 3 detik sampai kontroler " - - - " kemudian lepaskan tombol.
- Setelah itu otomatis meja akan turun ke ketinggian terendah, naik ke ketinggian maksimum yang berarti pengaturan awal berhasil.

2. Menaikkan atau Menurunkan Meja

- Tekan tombol "△" untuk menaikkan meja, dan tekan tombol "▽" untuk menurunkan meja.
- Tekan tombol "△" selama 3 detik hingga layar berkedip dan lepaskan tombol; maka meja akan otomatis naik ke posisi tertinggi, dan tekan tombol apapun untuk memberhentikannya.
- Tekan tombol "▽" selama 3 detik hingga layar berkedip dan lepaskan tombol; maka meja akan otomatis turun ke posisi duduk, dan tekan tombol apapun untuk memberhentikannya.

3. Pengaturan Memori Ketinggian

- Sesuaikan ketinggian meja ke posisi yang Anda inginkan.
- Tekan dan tahan tombol "H" atau "M"; bila layar berkedip berarti pengaturan ketinggian memori berhasil.

Untuk menuju ke posisi berdiri tinggi memori:

Tekan tombol "H" atau "M", lalu lepaskan tombol maka meja secara otomatis naik atau turun ke memori posisi ketinggian, lalu tekan tombol apapun memberhentikannya.

4. Peningat Berdiri

 
Untuk mengaktifkan pengaturan peningat:

- Tekan tombol "T" untuk mengaktifkan peningat berdiri, lalu tekan lagi untuk mengubah antara "r30/ r45/ r60", yang merupakan 30 menit/45 menit/60 menit.
- Pilih salah satu opsi waktu "30/45/60" sesuai kebutuhan Anda dengan menekan tombol "T". Setelah memilih, Anda tidak perlu menekan tombol apapun, lalu tunggu hingga layar mati, yang berarti pengaturan berhasil disimpan.
- Ketika waktu hitung mundur habis, layar akan menampilkan "Chr" selama 1 menit.
- Setelah layar menampilkan peningat selama 3 kali berturut-turut dengan interval 5 menit dan meja tidak digunakan, layar akan mati secara otomatis.

Untuk mematikan pengaturan peningat:

- Tekan tombol "T", saat layar menampilkan ketinggian digital, yang berarti peningat dimatikan.
- Pada saat peningat berdiri aktif, Anda dapat menekan tombol "△" atau "▽" untuk menyesuaikan ketinggian, dan hitungan mundur akan memulai kembali dari awal.

Daftar Baut

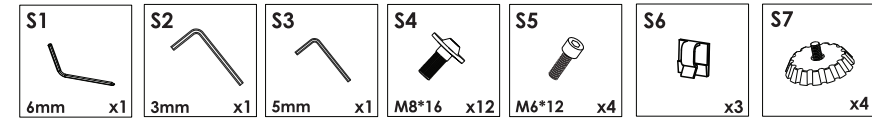

Daftar Baut

