



Original	Replacement	Original	Replacement
 Standby/On	 Power	 Enter	 Ok
 I<<	 I<<	 Up	 Up
 Pause	 Pause	 Down	 Down
 Stop	 Stop	 Right	 Right
 >>I	 >>I	 Left	 Left
 Play	 Play	 Channel+/CM	 Ch +
 <</II/<I	 <<	 CH+ Tv	 Shift + Ch +
 I>/II>/>>	 >>	 Channel-/CM Back	 Ch -
 Rec	 Rec	 Red	 Red
 Stop Rec	 Shift + Stop	 Green	 Green
 Info	 Info	 Yellow	 Yellow
 Home Menu	 Menu	 Blue	 Blue
 Help	 Shift + Smart	 1	 1
 Disc Navigator/Top	 Smart	 2	 2
 Guide	 Guide	 3	 3
 Return/Exit	 Exit	 4	 4
 A.TV/D.TV	 Back	 5	 5



