





VPB-262

denver.eu



 
Safety Information

 <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user of presence of important operating and maintenance (servicing) instruction. In the literature accompanying the appliance.</p>
---	--	---


1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product: the device may contain parts with deadly voltage.
5. Repairs or service should only be performed by qualified personnel.
6. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So make sure there is space around the power outlet for easy access.
7. Do not expose to heat, water, moisture, direct sunlight!
8. Clean only with dry cloth.
9. Do not block any ventilation openings. Install in accordance with these instructions.
10. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

12. Only use accessories supplied with the product.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

LOCATION OF CONTROLS

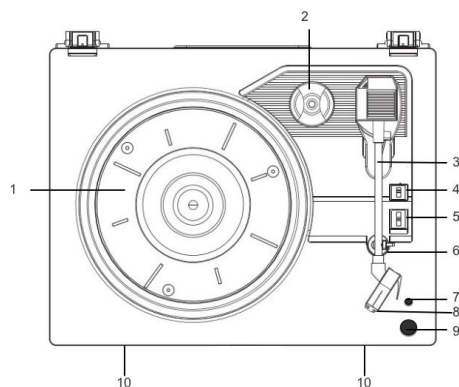

 1. Platter
2. 45 rpm adapter
(This adapter allows you to play 45RPM records)
3. Tone arm
4. Autostop Switch on/off
5. 33/45/78 RPM switch
Use to adjust the RPM of the turntable platter
6. Arm clip
7. Phono/ BT LED indicator
8. Stylus cartridge
9. Power knob/ Volume control
10. Stereo speakers
11. RCA output (R) - used to connect to external amplifier or active speakers. (not included)
12. RCA output (L) - used to connect to external amplifier or active speakers. (not included)
13. DC jack- used to connect to external power adaptor

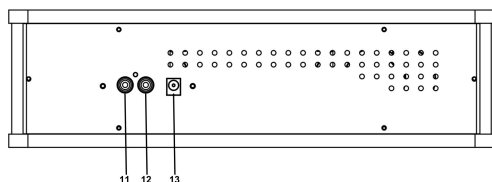

OPERATING THE UNIT ON AC POWER

Insert DC jack end of the supplied power cord into the DC 9V IN Jack located at the rear of the unit and the power plug end into the Wall outlet.

OPERATION

Tune the Power knob clockwise, until you hear a “click” sound and the LED indicator is on , this means the unit is turned on.

Record Player

1. Place the record on the turntable. If required, also place the adaptor on the record spindle.
2. Choose the desired playing speed using the speed selection switch between 33, 45 and 78 RPM.
3. Turn on the power knob, note that this also controls volume.
4. Release the tone arm lock.
5. Raise the arm with your hand lightly.
6. Place the stylus vertically over the first track of the record, the turntable will start turning automatically.
7. The red indicator is on.
8. Lower the stylus slowly onto the record to play.
9. When a record comes to the end, the turntable will stop automatically if the auto-stop switch is in the ON position. If the switch is in the off position then it will keep revolving until the tone arm is returned to the tone arm rest.
10. Lift up the tone arm and put it on the rest when finished.
11. Replace the protective cap on the stylus and close the tone arm lock.
12. Turn off the power at mains.

Important

1. Raise and lower the tone arm always using the cue lever.
2. Do not turn or stop the turntable manually.
3. Moving or jarring the turntable without securing the tone arm clamp could result in damage to the tone arm.
4. Before playing, the needle and record should be cleaned properly to avoid

premature wear.

- Gently swipe the needle with a cleaning brush back to front. - With a special record cloth carefully wipe the record.

5. Before playing make sure that the needle is still in good condition, as it is prone to natural wear and tear during use. Used or splintered needles need to be replaced as they can cause damage to the record while playing. Only replace with original needles.

 
 
NOTE:

a. REMOVE THE STYLUS PROTECTOR.

b. BE SURE THAT THE TONE ARM IS DETACHED FROM THE TONE ARM REST BEFORE OPERATING AND RE-SECURED AGAIN AFTERWARDS.


Record care and maintenance

To ensure the best sound and the least amount of wear on your records, it's essential that they are kept clean. Make sure your records, especially older ones, are sufficiently cleaned prior to playing them. Thoroughly clean dust off the stylus and record regularly. Use a soft brush to clean the stylus. Brush from the base to the tip as shown below.

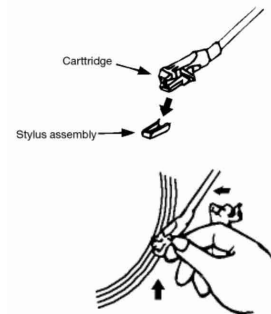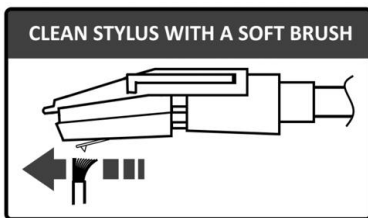

For records with only light amounts of dust, we recommend brushing them off with a carbon fiber brush or velvet pad before playing them. Use a good-quality record cleaner and brush set to keep your records clean. Carbon fiber brushes,

 velvet pads, and record cleaning kits are available online or in local record stores.

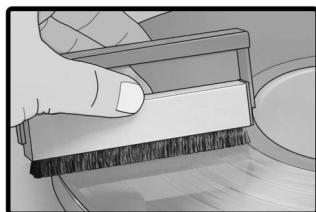

Autostop switch ON/OFF

This switch turns the auto stop-function on/off. When the automatic stop is enabled, the platform will start rotating as soon as the tone arm is placed over the record and will stop rotating when it has reached the end of the record. Some vinyl records stop before the end or do not stop when the end is reached. In this case set Auto-stop to OFF

Arm clip

This arm clip secures the tonearm while at rest or when not in use. The arm clip has been designed to remain in the up position whilst unlocked

IN Bluetooth MODE

1. Turn on the Power knob, note that this also controls volume.
2. The tonearm should be at the lock position.
3. The blue indicator is now flashing.
4. To pair the unit with your phone:
 - a. Turn on the Bluetooth function in the phone or tablet. For instructions, see your mobile phone user guide.
 - b. Please make sure the unit is in BT mode. Choose "VPB-262" on your phone to connect the unit's Bluetooth. After connected, your phone will show "Connected".
 - c. After the connection is successful, the indicator light will become a blue color without flashing. Then it can start to play from your device.
 - d. Turn the VOLUME CONTROL KNOB to adjust the volume. (The mobile phone or tablet PC's volume control may also impact on Volume Level so ensure this is also turned up or down).

Troubleshooting Note: If the unit isn't detected, power it off, restart it, and search for "VPB-262" again on your phone/tablet.

MUSIC PLAYBACK ON YOUR OWN SPEAKER SYSTEM

Connect your own speaker system to the RCA port with an RCA audio cable (not included).

You can enjoy the music of the vinyl records on your own speaker system.

EN	
Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Fushigang Technology Co., Ltd 301, 401 No. 8 Building, Shiguan Industry Park, Shangcun Community, Gongming Street, Guangming District, Shenzhen, Guangdong, P.R. China
Model identifier	AS1201A-0901000EUL
Input AC frequency	50/60Hz
Input voltage	100-240VAC
Output voltage	9.0V
Output current	1.0A
Output power	9.0W
Average active efficiency	≧81.34%
Efficiency at low load (10%)	/
No-load power consumption	<0.1W

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type VPB-262 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: VPB-262. Now enter product page, and RED directive is found under downloads/other downloads.

1. Max Output Power: 2 x 30W/ 2 x 3W RMS
2. Bluetooth frequency: 2.402-2.4805 GHz.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**

(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**

Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**

E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**

E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

