
 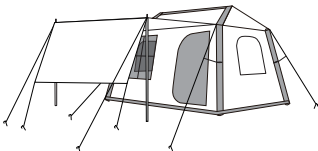

 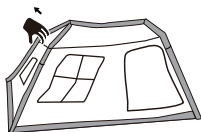
 


User Manual

 
 

Setup

1. Take the tent out of its storage bag.
2. Unfold the tent and lay it flat. Then, secure it with pegs at the four corners and the center.
3. Find the inflation switch on the tent and press the button, allowing the tent to inflate itself.
4. If the tent does not stand up automatically during the inflation process, lift it up manually to assist.
5. Once the tent is standing upright, use two canopy poles to raise the canopy.
6. Adjust and secure the guy ropes to the ground to complete the setup.




Storage

1. Open the exhaust valves on the air tubs (there is 1 valve on each of the front two air tubs, totaling 2 valves).
2. Wait for the tent to return to its original state.
3. Fold the bottom edges of the tent inward on both sides.
4. Fold the tent in half to create a long rectangular shape.
5. Starting from one end, roll the tent into a cylindrical shape.
6. Place the folded tent and its accessories into the storage bag in the correct order. Packing is now complete.


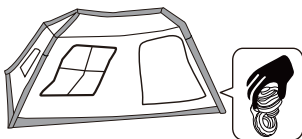


Notes

Canopy pole Extension pole

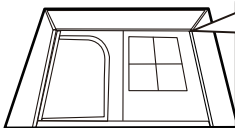

*To ensure safety, please retract the canopy when there is strong wind or heavy rain. Connect the canopy pole to the extension pole as a support rod, and place the support rod between the two air tubes to enhance the stability of the tent.

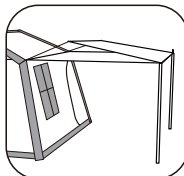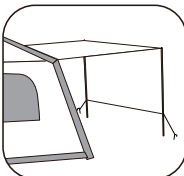

*When the front end of the canopy is dropped vertically to the ground, it can be used as a projection screen.

*The canopy can be folded upward and stored.

Accessories

Peg*16



Tent guy
rope*10



Canopy pole*2
Extension pole *2



Type-C charging
cable*1



TPU repair
patch*2



Storage
bag *1



About the Battery

- Please do not attempt to replace the battery yourself. If you suspect battery damage, contact the manufacturer's authorized dealer or a professional for replacement.
- **Battery Disposal Instructions:**
Do not dispose of the battery with regular household waste. Take it to a nearby recycling center or service center for proper disposal.
- **The following instructions are not for general users, but for those responsible for the final disposal of the battery:**
The built-in battery of this device contains chemicals that can pollute the environment. Before disposing of the product, please ensure to remove the battery from the device. The battery should be handed over to a professional battery recycling center for proper disposal.
- **Be Careful!**
 - 1.If the battery leaks or exudes any substance, make sure it does not come into contact with your eyes or skin.
 - 2.If accidentally touched, wash your hands with clean water immediately and rinse your eyes. If discomfort persists, seek medical attention immediately.
- **Remove the Battery:**
The information below is applicable only when discarding this product and is not for daily operational instructions! Only remove the battery when it is completely drained of power. Under no circumstances should the battery come into contact with metal objects.
- **Steps to Remove the Battery:**
 - 1.Run the product until it is completely out of power without connecting the battery.
 - 2.Turn off the power switch.
 - 3.Remove the product screws.
 - 4.Take out the battery.

Warning

- Children under 12 should use the product under adult supervision.
- Please do not place the air pump in water or liquids.
- Do not dismantle the product without authorization. Contact the seller for disassembly.
- Keep the inflation/deflation ports clean when the air pump is operating.
- Do not remove the air pump from the tent without authorization, to avoid air leakage issues during reinstallation.

After-Sales

For after-sales issues, please contact the authorized dealer or official customer service.

Weight: 14.25kg

Packed Size: 75*28*28cm

Unfolded Size: 305*230*200cm

Air Tube Material: TPU

Tent Fabric Material: Polyester + PU

Air Pump Material: ABS + Silicone

Power: 23W

Battery: 12V-2000mAh

Input: 5V --- 2A

Charging Time: 4.5 hours

Tips

- When inflating, make sure to tighten the air release valve at the base of the air column to prevent air leakage during pumping.
- During charging, keep the pump away from water sources. If charging outdoors on rainy days, ensure the charging port is waterproofed. Once fully charged, promptly secure the charging port with the silicone plug.
- If the product will not be used for a long time in the future, fully charge the air pump before storing.
- Store the product away from humid environments to prevent pump malfunctioning due to moisture.
- When using outdoors, clear the ground around the product to prevent sharp objects like stones, branches, and glass shards from scratching the fabric. If cleaning up is difficult, place a protective pad underneath the product.
- In case of minor damage to the air tubes, you can use the repair patch for emergency repairs:
 - 1.Clean the area that needs repair.
 - 2.Peel off the repair patch and firmly press the transparent side (TPU) onto the hole.
 - 3.Let the patched area sit for 4 hours.
 - 4.Inflate and use as normal.
- If there are stains on the product's surface that cannot be removed with plain water, you can use a neutral detergent or soapy water to wipe and clean.
- Every time you use or store the tent, be careful to protect the air pump to avoid dropping it and causing damage that may prevent it from inflating.

Basic Information

Product Name: Yuanshang

Brand: YIXIU

Model: ZT1-02

Brand Owner: Shanghai Micronovelty Co., Ltd.

Brand Owner Address: Room 102, Building 2, Lane 88,
Shengrong Road, Pudong District,
Shanghai, China

Website: www.aerogogo.com

Email: service@aerogogo.com

Manufacturer: Huzhou MicroNovelty Technology Co., Ltd.

Manufacturer Address: Room B213, Building 3, Area B,
Qixing Technology Entrepreneurship
Park, No. 666, Qixing Road, High-tech
Zone, Wuxing District, Huzhou City,
Zhejiang Province, China

Country of Origin: China

Production Batch Number: **KS2023-03-01**