 


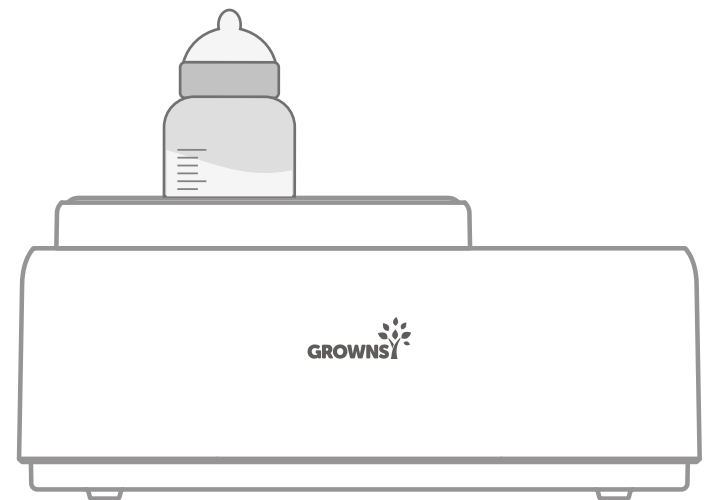

USER MANUAL



Sincerely Thank you

Thank you so much for purchasing from us and placing your trust in our brand.
Growsy - Parent's best helper.

Growsy committed to creating modern and thoughtful baby products that let parents enjoy the parenthood. We are always passionate and devote to making the ideal products that show love and care. Customer satisfaction is our first priority. For any product issue, please don't hesitate to contact us.

For any questions or issues, please email us:

service@growsyofficial.com

We will go above and beyond to resolve any customer issue within 24 hours.

Best Regards,

Randell

Founder of GROWNSY



 
Ps. we mean it when we say we are grateful for every single customer..and that's why we would love to send you \$40 Gift Card!

Visit growsyofficial.com/gift



Please read this user manual carefully before using and save it for future reference.

GROWNSY Water-Free bottle warmer

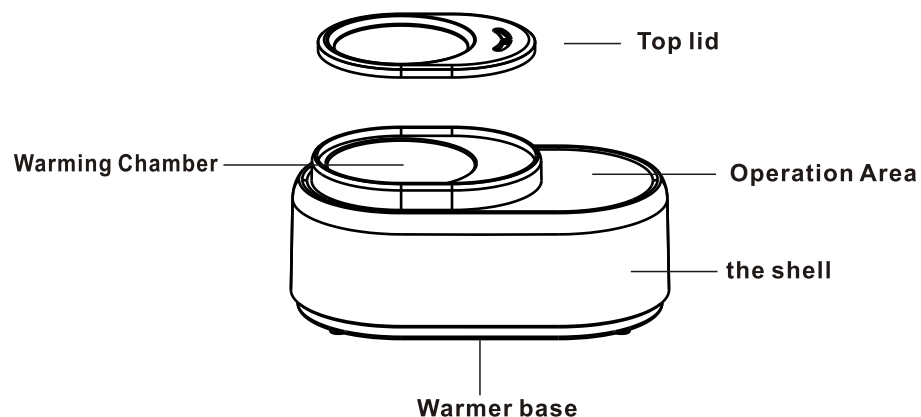


SPECIFICATIONS


Name	Water-Free bottle warmer
Product Model	ZB-A200
US Version	120V~60Hz
Rate power	230W
Recommended bottle warmer size	Diameter ≤ 80mm/3.15inch
Recommended Material	Glass, plastic, silicone, storage bags
Product Size	8.77×5.11×3.77inch

Instruction


1. Place the top lid on the bottle warmer before use, as shown in the figure below
(Note: Do not need to place the top lid If the diameter of the bottle is greater than 3 inch)

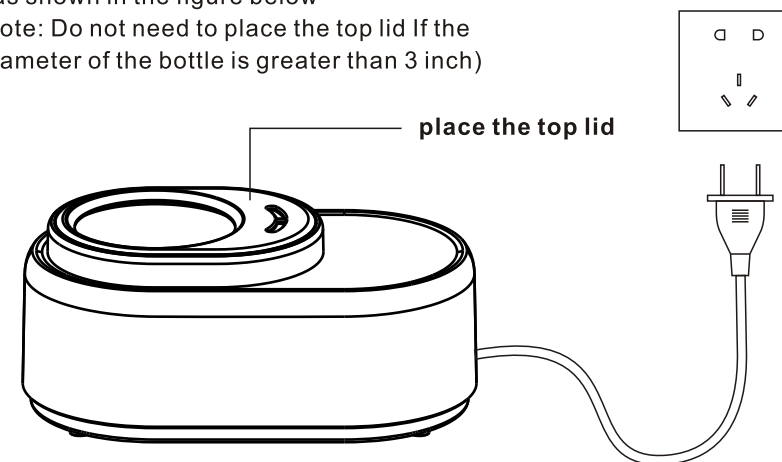

2. Plug in the power and make sure the current is greater than 10A;
3. Place the bottle in the **CENTER** of the warming chamber and gently press the bottle so that the bottom of the bottle can touch sensor. Make sure the bottle is in the center so milk can be evenly heated.

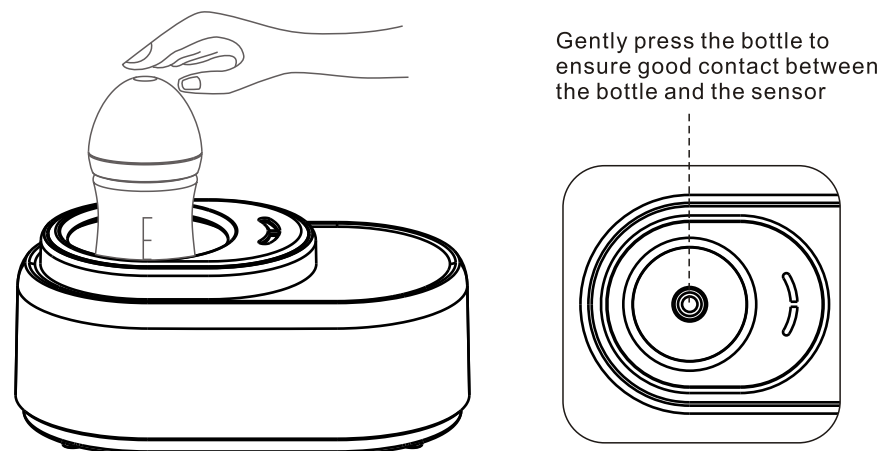

Instruction

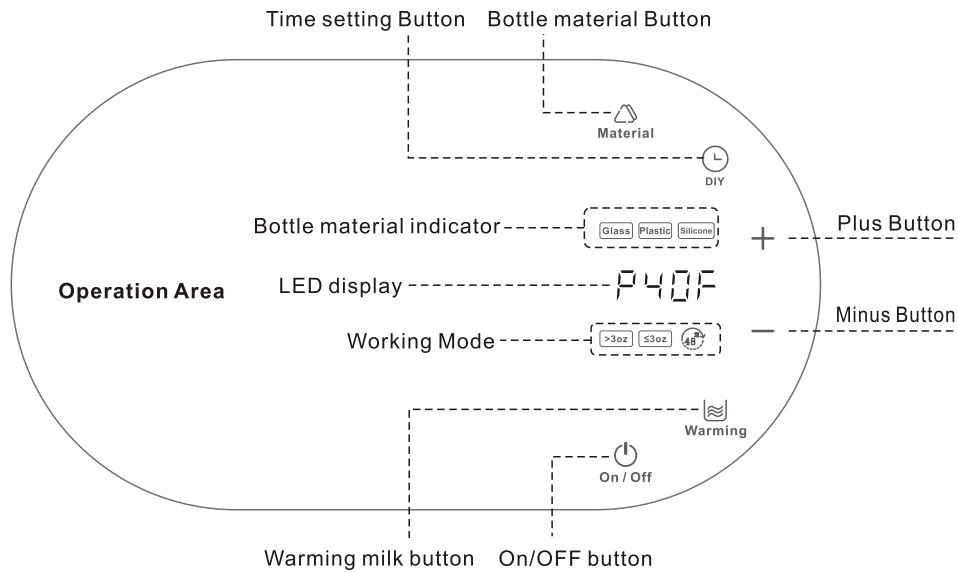

- Press the "On/OFF" button to turn on.
- Press the "material" button to select the material of the bottle.
- Press the "Warming" button to select mode.
There are 3 modes: > 3OZ, ≤ 3OZ and 48 hours constant warming
When the milk volume > 3OZ, select > 3OZ
When the milk volume ≤ 3OZ, select ≤ 3OZ
Choose constant warming function If don't need to feed immediately
- Press "+" or "-" to set target temp.
- When the milk is ready, it will "beep" 9 times and will turn to 48 hours keep warm mode automatically.

Instruction

Note: Final temp may vary a little bit due to different ambient temp, milk volume/initial temp and bottle material.

If the milk is not warm enough, you can take the bottle out 1-2 minute later after mode turn to 48H. Milk will reach desired temp and keep warm in this mode.

Always check the temperature before you feed your baby. Gently shake the bottle or milk storage container and check the temperature of the milk by sprinkling a few drops on the inside of your wrist.

- DIY Function:** DIY function is designed for condition when you want to set heating time according to your own wish. Press the DIY button to set heating time, and use "+" or "-" to adjust time, the adjustment range is 5-45 minutes. and it will "beep" 9 times when time is up.

Please also don't forget to choose material when use DIY function.

How to use DIY function

If you are using breastmilk storage bag, Please use DIY function. Reference time setting to reach 98.6°F as below:

Milk volume	Refrigerated	Frozen
1-3oz	5-9 min	10-20 min
3-5oz	9-12min	20-30 min
5-8oz	12-16min	30-40 min


Final temp may vary based on different milk initial temp or room temp. When you find the milk is not warm enough, you can place the bag back into the appliance for extra warming.

Caution: If you leave the bag in the bottle warmer longer then the time indicated in the setting table, the milk may become overheated.

This smart bottle warmer have memory function. It will remember your setting of last time to save your trouble to set again for next warming.

Precautions

- 1) Never add water into this warmer.
- 2) Make sure plug in single-phase source above 10A, and unplug during maintenance and transportation.
- 3) Stop using the product if there is any abnormality such as peculiar smell, noise, smoke, etc.
- 4) Never use the product in places with high temperature, humidity.
- 5) The product must be placed on a horizontal place.
- 6) Unplug when there no need to use, wipe the Warming Chamber and dry it.
- 7) Never use volatile solvents such as soap, detergent, gasoline, alcohol, etc for cleaning
- 8) Keep away from this machine during working to prevent burning.
- 9) Never Wash this product for Cleaning
- 10) Please ensure that the distance between the bottle warmer and the wall is greater than 2cm to maintain air intake.
- 11) If the power cord is damaged, immediately contact GROWNSY service.
- 12) Keep children away from this product.

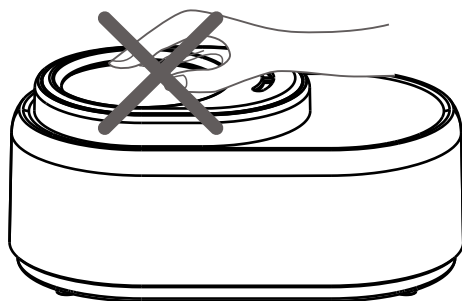

Warning

Do not touch warming chamber
while working to prevent scalding

Cleaning and Maintenance

1. The rest of the accessories can be washed while the bottle warmer can only be wiped for cleaning.
2. Never use volatile solvents such as soap, detergent, gasoline, alcohol, etc for cleaning
3. Never use hard materials such as metal balls to wipe the machine to avoid scratches.
4. Please save it carefully if there no need for use.

Customer Service

GROWNSY strives for user friendly products for newborn and household items. We aim not only to create a product, but also an item that is filled with care love from us to our customers.

If you have any issues at all, please contact us directly (service@grownsyofficial.com) and we will help you out.

Register Your Free Warranty

At GROWNSY we only use the highest quality products standard - but please don't forget to register for your FREE one year warranty just in case...

www.grownsyofficial.com/warranty