

First to Use Before the first use, please tear off the isolating film on the earbuds. Put the earbuds into the case, then charge both earbuds and charging case via supplied Type-C charging cable for at least 10mins (or after not use for a long time), do not take out the earbuds during this period. ear off the isolating film How to Wear

1. Take the earbuds out of the charging case;

2. Hold them just above your ears:

3. Rotate the ear hooks downward along the auricle of the ear to achieve proper positioning;

4. Complete insertion.




How to Pair

1. Open the charging case and take the earbuds out to immediately enter Bluetooth pairing mode, with the indicator lights of the main earbud flashing red-blue alternately and the secondary earbud blinks blue slowly, which indicates the earbuds have entered pairing mode.

2. Enable the Bluetooth function and select "OW7".

3. The device will display the successfully connected when complete, and play the "connected" tone. The indicator lights of the main earbud blinks blue for 2 seconds and then turns off.



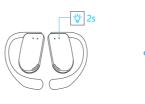

* If the earbuds are not connected to any devices over 5 minutes, they will power off automatically.

Mode Contro

Call Control Answer/End a call Double-tap (R/L) Tap and hold for 2 seconds (R/L) Reject a call

* Call volume adjustment: Use the volume control button on the paired Bluetoot

Music Control	
Play/Pause	Double-tap (R/L)
Next Track	Triple-tap (R)
Previous Track	Triple-tap (L)
Volume+	Tap and hold (R)
Volume -	Tap and hold (L)

* In single ear mode, the volume of the earbuds could not be adjusted.

Voice Assistant

Activate/Stop Siri or Triple-tap R/L (No music program is running) other voice assistant

Single Earbud Control

Both earbuds support independent use for mono music or calls. When used alone, the earbuds could not adjust the volume, only switch music to next song.

05

Power On/Off

Power On

1. Pick up buds from the charging case

2. Tap and hold for 2s

(* Each bud needs to be powered on separately.)



Power Off

- 1. Put back into the charging case 2. Not connected to any devices over 5mins
- 3. Non-music playing and calling, tap and hold for 5s any buds
- (* Earbuds will be powered off simultaneously.)




How to Charge

Charging the Earbuds

- Place the earbuds in the charging case until they are magnetically attached.
- The indicator light of the earbuds blinks red slowly. • The LED indicator in the charging case will show the state of the remaining power of the charging case for 10 seconds, and then it is turned
- indicates a middle battery level (31-70%), and a red light indicates a low battery level (0-30%).

off. A blue light indicates a high battery level (71-100%), a green light

• The earbuds will be fully charged after approx. 1.5h-2hrs in the charging case and the indicator light of the earbuds goes out.

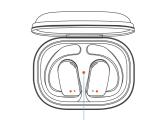

There are three colors of the indicator light, each color represents different battery levels.












Charging the Charging Case

Insert the USB-A to USB-C charging cable into the charging case and USB-A power supply or certified wall charger. A solid red light on the charging case indicates that the charging case is charging. A solid blue light indicates the charging case is fully charged.

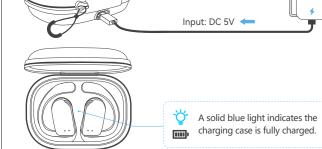


• It takes approx. 2 hours for the charging case to be fully charged. The charging case uses the standard 5V±5A USB voltage. Using a high-voltage power source to charge the earbuds is not recommended. It may also take longer to charge the charging case with a third-party charging cable. • Before charging, ensure that the charging port is dry and free of liquid


residue like sweat. Use a soft dry cloth to wipe any liquid residue from the charging port.

1. Earbuds:

It is recommended to use a soft and clean dry cloth to clean the earbuds. When cleaning the earphone mesh, gently brush away dirt and earwax with a clean and dry cotton swab, then wipe with a soft cloth.

- Before cleaning and maintenance, please stop using the earbuds and disconnect all connections with other devices
- This product does not support washing with water. Do not wash the earbuds directly with water or use ultrasonic cleaning.
- Do not allow liquid to enter any opening of the earbuds.
- To avoid damage, deformation, and discoloration of the earbuds, please do not use an abrasive cleaner or spray, high-concentration cleaner, chemical cleaner, alcohol, or acetone solvent for cleaning. Do not use any sharp or abrasive objects.

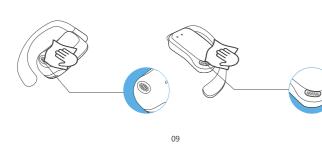


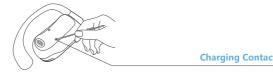

2. Charging Case:

It is recommended to clean the charging case with a soft and clean, dry cloth. Use a clean, dry, soft brush to remove debris from the charging interface. Use a clean and dry cotton swab to wipe the charging contact surface of the charging box gently.

- Before cleaning and maintenance, please disconnect the charging case from the charging cable.
- Do not use abrasive items to clean the charging case.

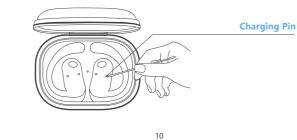

Product Parameters

Model No.	OW7
Bluetooth Version	5.3
Battery capacity	50mAh* 2 (earbuds), 500mAh (charging case)
Charging port	Туре-С
Transmission range	10m/33ft (with no obstacle)
Charging Time	1.5h-2hrs for earbuds, 2hrs for charging case
Charging Time	1.5h-2hrs for earbuds, 2hrs for charging case

Auto Connect

1. When the earbuds are on, they will automatically try to connect to the most recently connected device and issue a prompt when the connection

2. During use, the earbud may disconnect from the paired device due to limitations of connection range. If the earbud automatically re-connects within 5 minutes, it will issue a prompt.

* The paired devices must be within connection range (10m) and must be powered on. Make sure your intended device has Bluetooth enabled.

How to reset


What should I do if any of the following problems occur?

- The sound and video are out of sync
- There's no sound in one earbud
- The earbuds keep disconnecting or cutting in and out from time to time - The earbuds can't pair with my device - Cannot be searched in the Bluetooth list

You can follow these steps below:

- 1. Turn off the Bluetooth of all devices
- 2. Out of the case, tap the touch area on the R and L earbud 5 times
- 3 Both earbuds flash red and blue simultaneously 3 times, and the voice prompt "power off", indicating that the reset is complete
- 4. Put the earbuds back into the charging case
- 5. Take out the earbuds from the charging case and they enter pairing mode (one earbud will flash red-blue alternately and the other earbud will blink blue slowly to enter pairing mode)

6. Search for "OW7" and tap to connect on your device

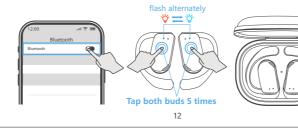

What should I do if the earbuds disconnect or the sound is choppy?

- A Please note that this doesn't necessarily mean there is an issue with the earbuds, but may have something to do with the connected device and environment, Bluetooth signals may be influenced by obstructions, such as walls, pillars, home appliances, Wi-Fi, and more. To ensure a stable connection, we recommend avoiding such obstructions. To fix this issue, please try the following.
- 3. Check the earbuds with another Bluetooth device in a different

• What should I do if any of the following problems occur?

- 4. Only one earbud has sound.
- enough battery).

- 1. Fully charge and reset your earbuds as stated above and re-pair them (see page 12).
- 2. Check the earbuds by listening to a downloaded song/video.
- environment to see if it works well.

- 1. Cannot pair or reconnect with my device.
- 2. One side does not pair with the other side of my device. 3. No music plays after connecting with my device.
- (A) 1. Remove the protective film covering the connectors on the earbuds. 2. Forget all the pairing records of your earbuds on your device and turn off Bluetooth.
- 3. Reset the earbuds refer to page 12 (make sure your earbuds have

If there is a pop-up window to confirm pairing for "OW7", please select "Pair". If you accidentally select "Cancel", you need to refresh (turn off and turn on) the Bluetooth of your device and pair the earbuds again.

4. Turn on the Bluetooth of your device and search for "OW7" and pair.

What should I do if any of the following problems occur?

- 1) The earbuds don't recharge in the charging case.
- 2) The earbuds stay connected to the device even after being placed in the charging case with the lid closed. 3) The earbuds don't turn on when taken out of the charging case.
- A 1. Confirm the charging case has power left. 2. Clean the charging pins with a dry cloth and an alcohol-based
- disinfectant. This is to ensure all charging contact pins on the earbuds and charging case are completely clean and dry from sweat and water. Then put the earbuds correctly into the case, The light will flash when the earbuds are placed in the case.
- 3. Please use the certified charging cable and wall charger.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in aresidential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference toradio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna. 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced Radio/TV technician for help. This device complies with part 15 of the FCC Rules.
- Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

Any questions, please send message to us, we'll help you solve it as soon as possible. You can choose us with confidence. Thanks.



cause undesired operation.



f© C€ 😘 RoHS 🕲 🗵

¬ Kindly scan the QR code to activate the lifetime warranty of your earbuds within 15 days.

OW7-小尺寸使用说明书

材料: 128g双铜 工艺: 四色印刷, 风琴折

尺寸: 94*108mm

