


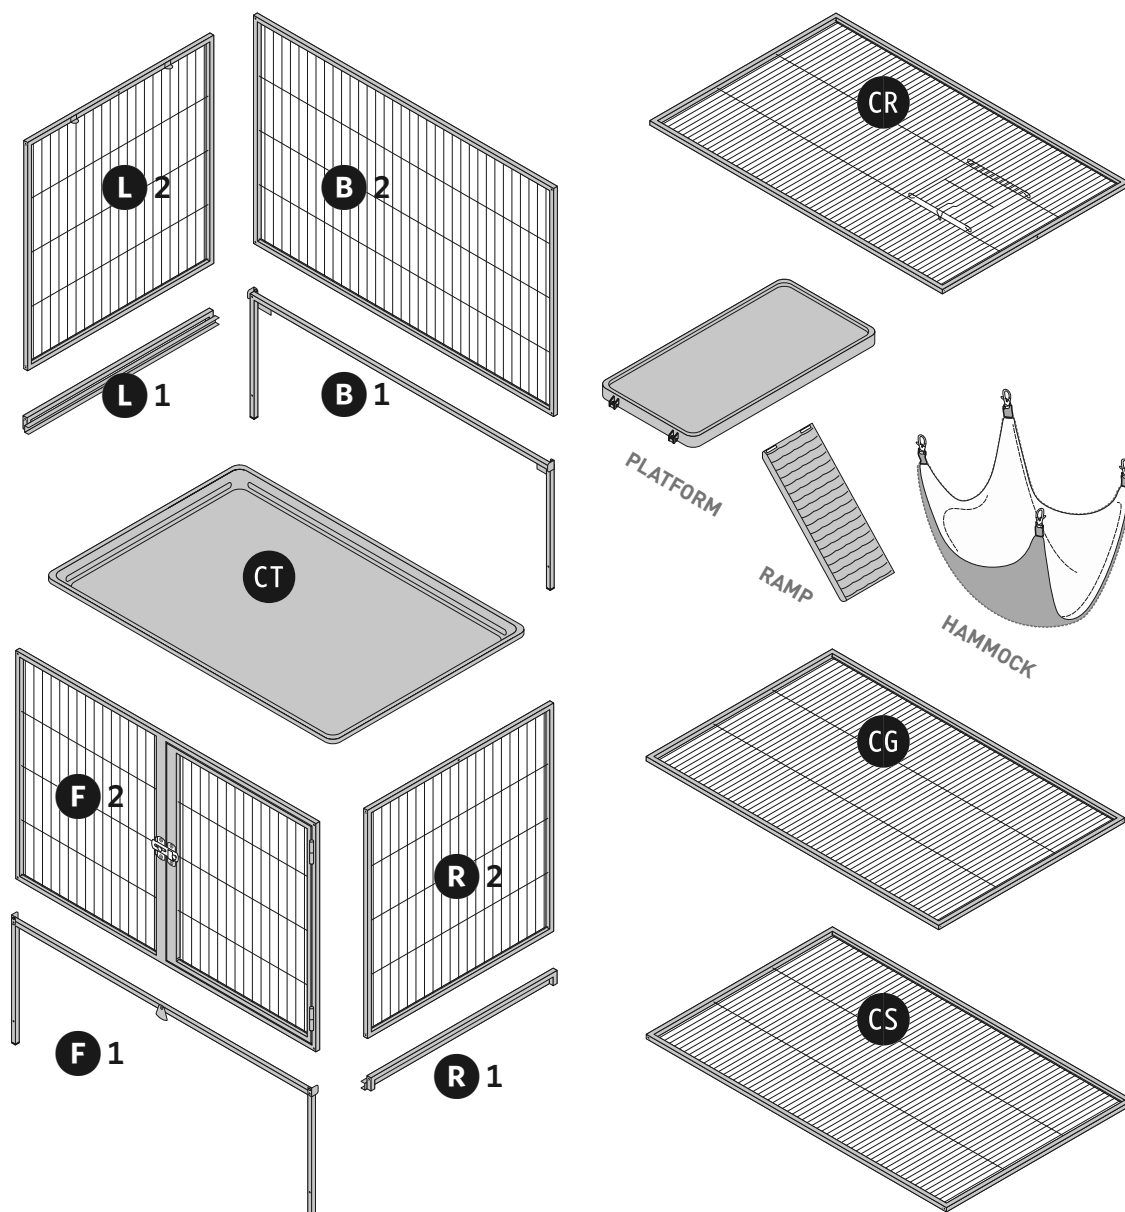

KEY:

L = Left Side

B = Back

F = Front

R = Right Side

CR = Center/Roof

CG = Center/
Floor Grille

CT = Center/Tray

CS = Center/Shelf

HARDWARE & TOOLS:



Hex Screws
18 pcs



Hex Key



Casters
4 pcs




These pieces are
interchangeable:

L 1 = R 1

L 2 = R 2

HOW TO TELL THE DIFFERENCE:

Several parts and panels may look similar. Here's how to tell the difference:

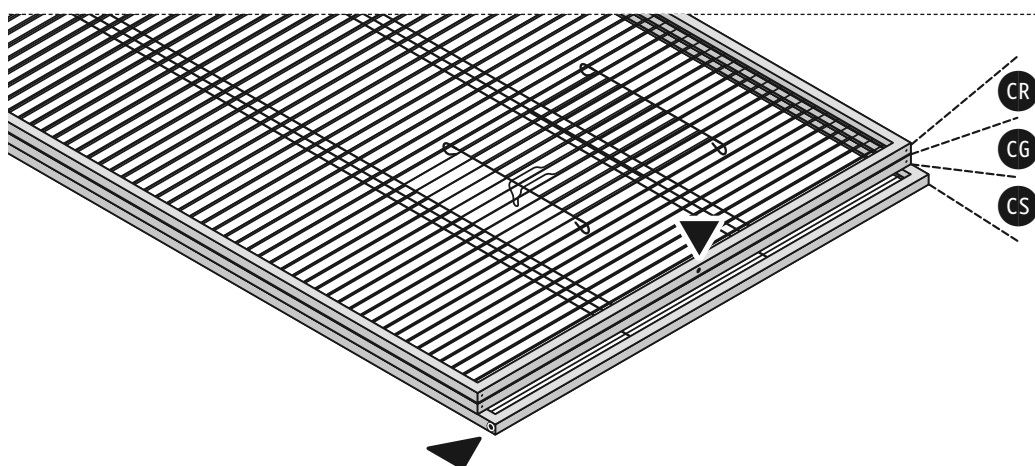

CENTER PANELS

The **roof panel** (CR) has an attached sliding door on top, and a screw hole on both ends of the frame.


The **ground floor grille panel** (CG) has NO door and NO screw hole on the ends.

The **shelf** (CS) is longer, and has threaded screw holes on the front and back corners of the frame.

NO ADDITIONAL TOOLS REQUIRED • For best results, follow the Assembly Steps in the order presented.

KEY:
L = Left Side
B = Back
F = Front
R = Right Side
CR = Center / Roof
CG = Center / Floor Grille
CT = Center / Tray
CS = Center / Shelf


1 PIECES

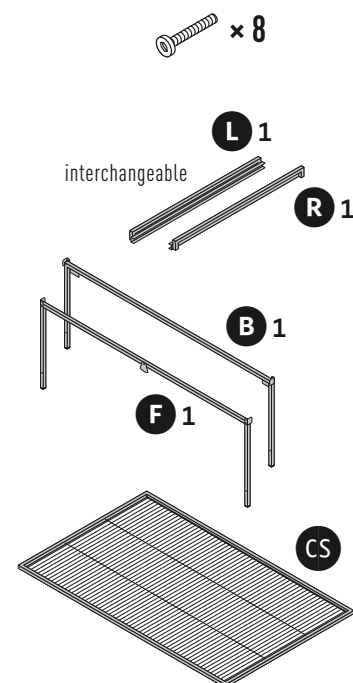

Orient the **front legs** (F1) with the windbell lock facing forward.

The extended portion of the **tray channel rail** (L1) dovetails into the inside of the frame leg.


Attach frames together with a hex screw through the bottom hole.

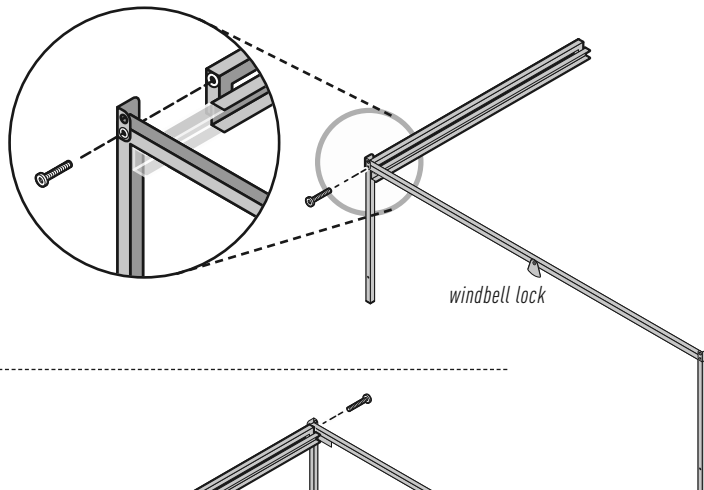


Orient the **back legs** (B1) with the tray channel backstop facing the back.

Attach legs to sides with hex screws in the bottom holes.


Attach the **shelf** (CS) with hex screws through the holes near the base of the legs.

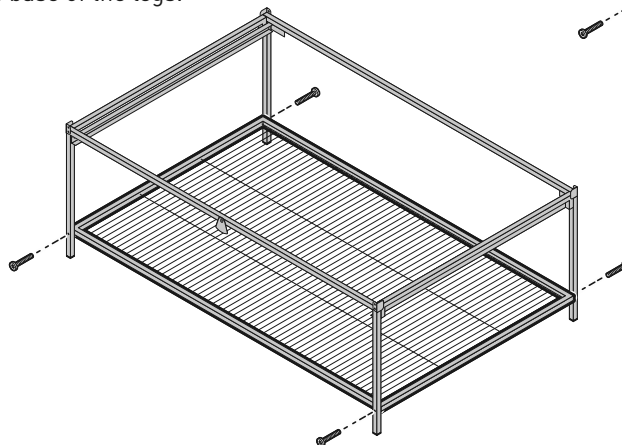


2 PIECES

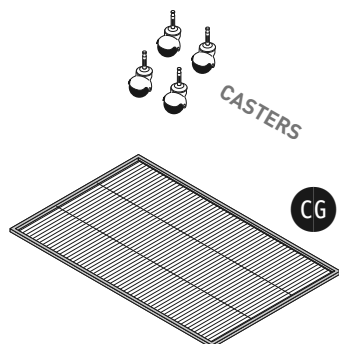

Turn the assembled unit upside down. Fully insert a **caster** in each leg.

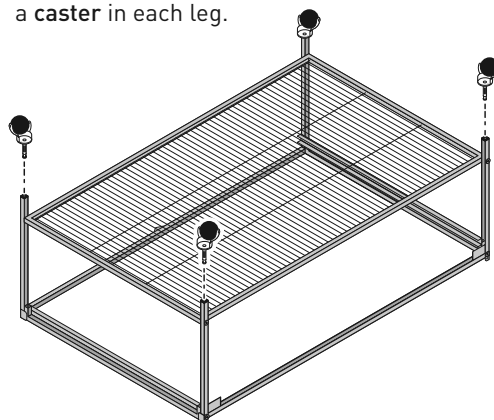


Turn it right-side up and set the **floor grille** (CG) in place.

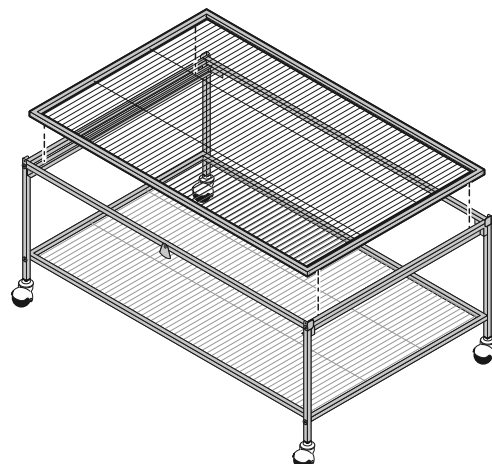

3 PIECES

× 10

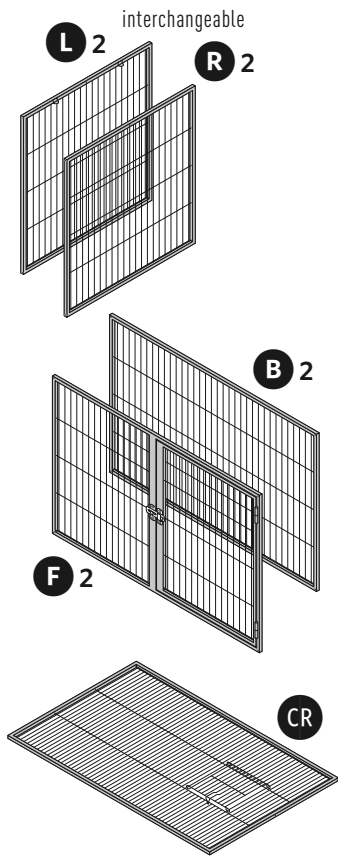


Stand the **side panel (L2)** and the **lower back panel (B2)** in position and attach together with a hex screw at the top and bottom corners. →





Hand-tighten the screws so they remain loose. This will ease the assembly of the roof.

Continue adding and attaching the **right side (R2)** and **front (F2)]** panels with hex screws at the top and bottom corners.


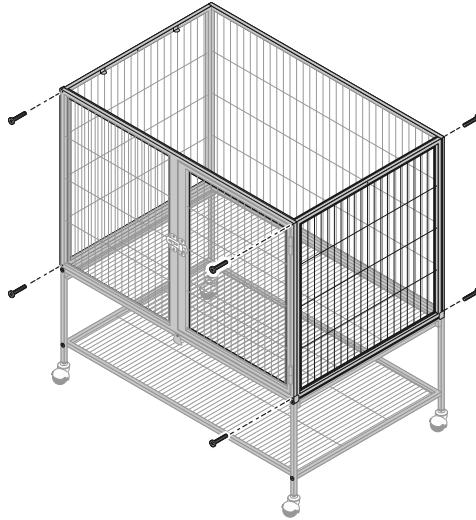


Place the **roof (CR)** in position and attach and attach with a hex screw on each end.

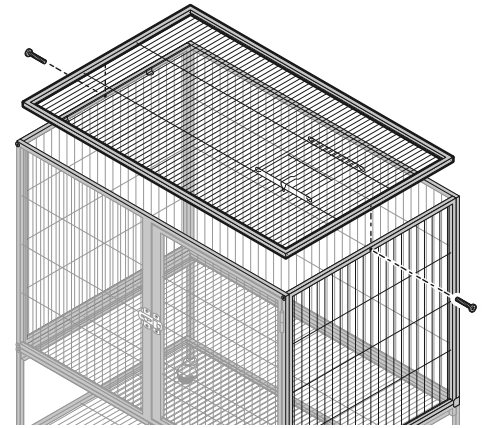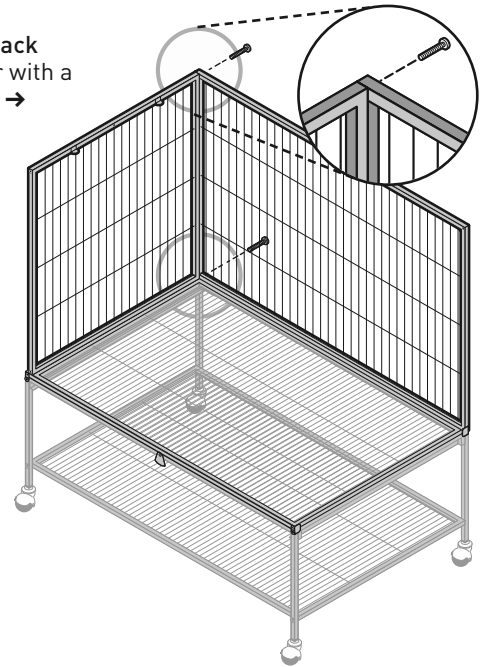

Tighten the screws over the entire cage with the hex key until all screws are snug.

4 PIECES

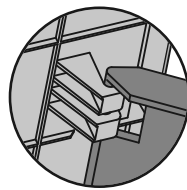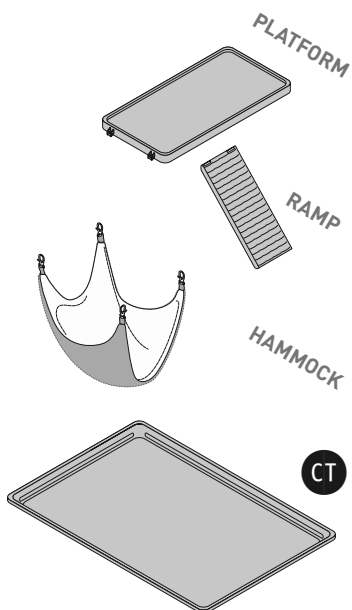

Hook a **ramp** to the underside of the **platform**.




Place the platform in the cage, on the middle horizontal wire.



Add the **hammock**.

Rotate the windbell lock up and slide the **tray** into the channels.

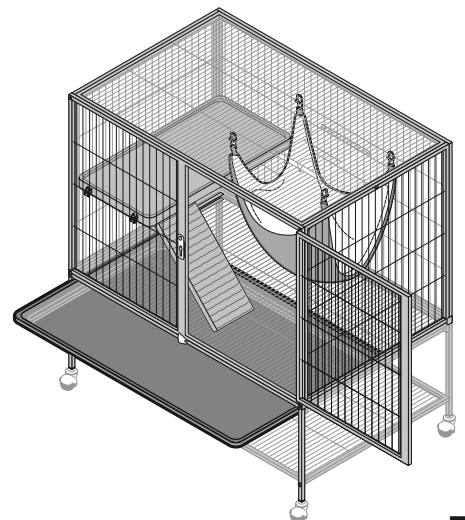

Assembly completed.