


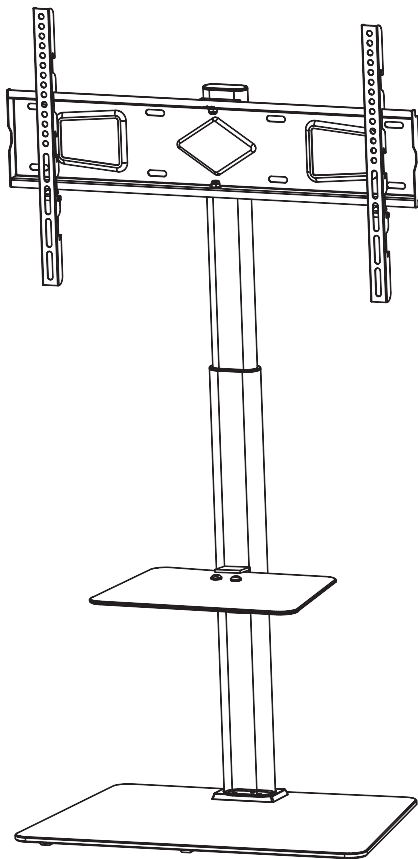

TV Floor Stand

**TVDVD-6**

| | |
|---------|---------|
| 100x100 | 100x400 |
| 100x200 | 200x400 |
| 200x200 | 300x400 |
| 200x300 | 400x400 |
| 300x300 | 400x600 |



CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



support@wallelectric.com

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



TIPOVER WARNING

 
**SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER.
TO HELP PREVENT TIPOVER:**

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL.

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIP OVER.

SMALL PARTS- NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

Supplied Parts List



① (x1)



② (x1)



 
③ (x1)



④ (x1)



⑤ (x1)




⑥ (x2)



⑦ (x1)



 ⑧ (x1)




M6x40
A (x4)



Plastic Washer
M6x18x1.5
B (x7)



 
Steel Washer
M6x16x1.5
C (x13)



M8x50
D (x2)



 Steel Washer
M8x16x1
E (x2)



M6x25
F (x9)



M8x16
G (x2)



Plastic Washer
M8x16x2
H (x2)



I (x2)



J (x2)



K (x2)



L (x6)



M5
M (x1)



M4
N (x1)

FOR TV INSTALLATION



M4x30
TV1 (x4)



M6x16
TV2 (x4)



M6x35
TV3 (x4)



M8x15
TV4 (x4)



 
M8x35
TV5 (x4)




M8x50
TV6 (x4)



2.5mm
TV7 (x8)



10mm
TV8 (x4)


 


22mm
TV9 (x4)





Washer with 3 holes
TV10 (x4)

Step 1

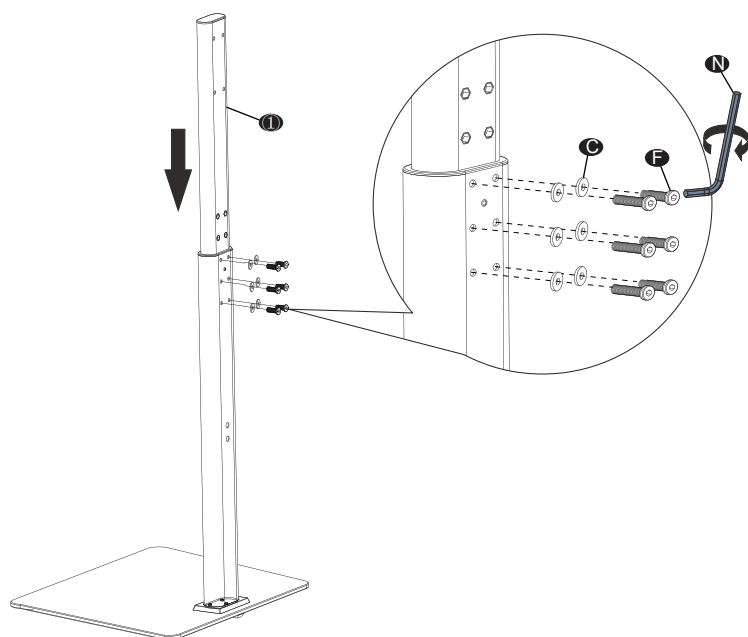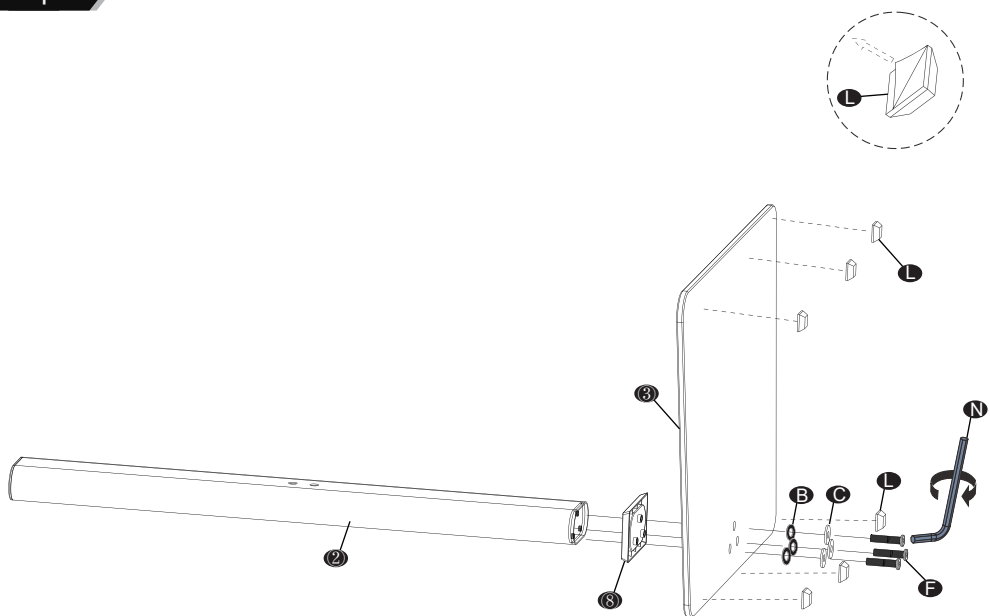


Step 2

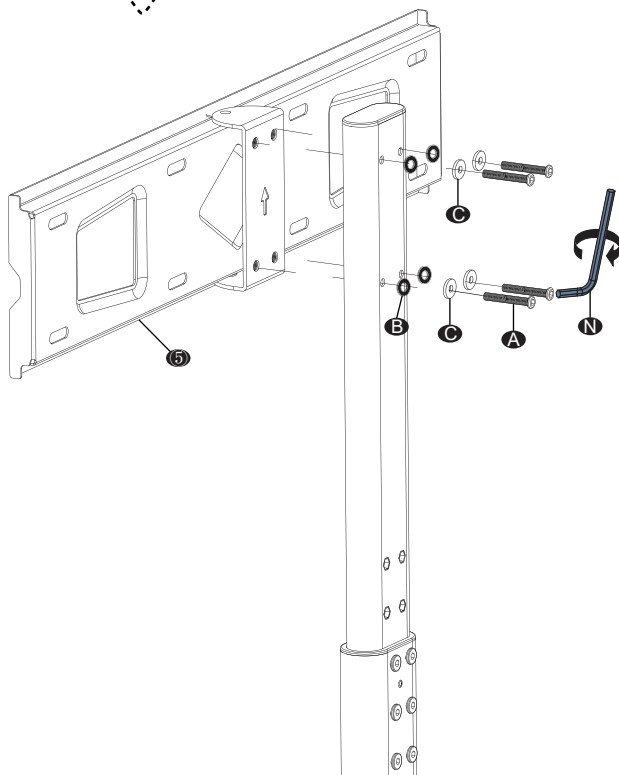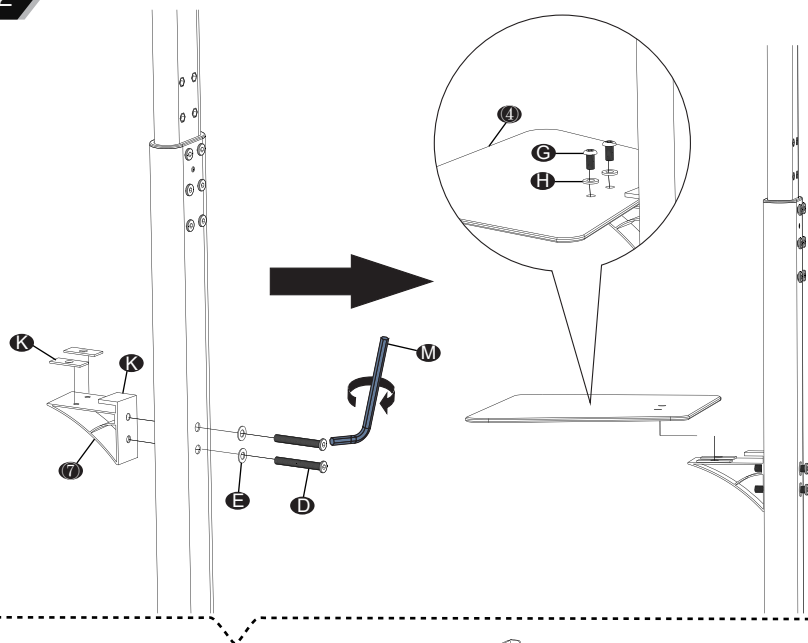


Step 3

Measure the TV fixing holes Width and Height

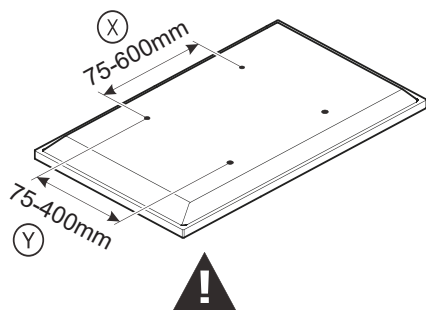

If width **X** is greater than 600mm or height **Y** greater than 400mm STOP installation now and contact the customer help line.

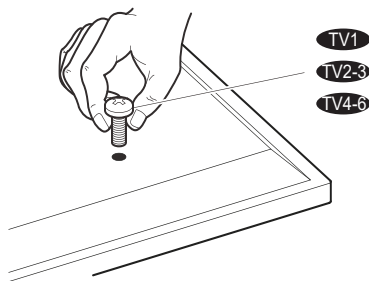


You are provided with 4 diameters of TV fixing screws, **M4, M6** and **M8**. Determine the screw diameter that fits.

Spacers


SP

For TVs with irregular/obstructed back

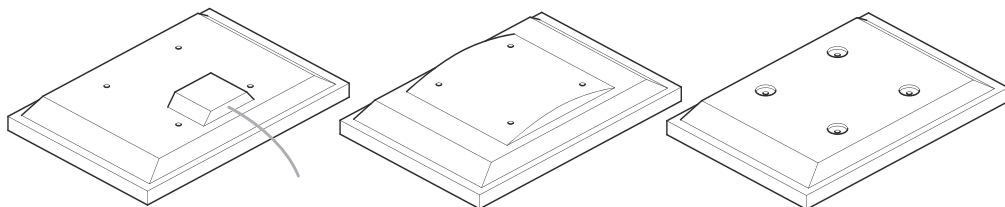


No Spacers

For TVs with flat/unobstructed back

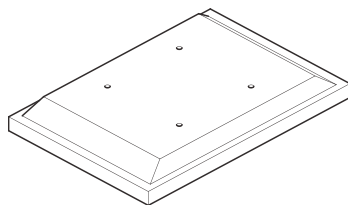


WARNING

Please keep for future reference.

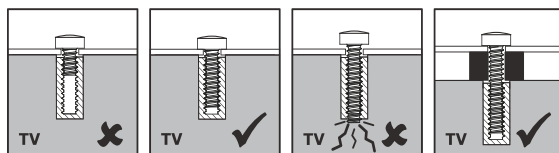

Step 4

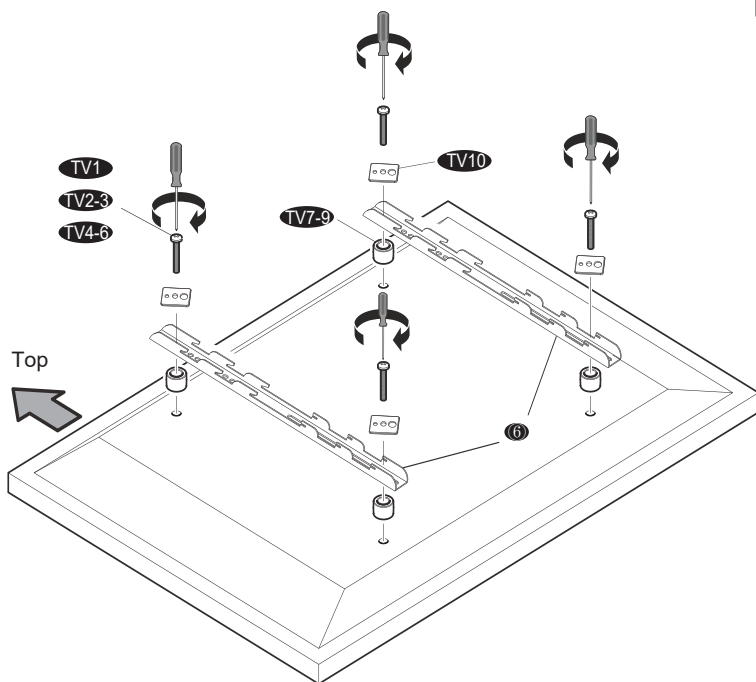

| |
|---------------|
| M4 |
| TV1 X4 |

+



| |
|---------------------|
| Washer with 3 holes |
| TV10 X4 |

+



+



| |
|---------------|
| 2.5mm |
| TV7 X8 |



| |
|---------------|
| 10mm |
| TV8 X4 |



| |
|---------------|
| 22mm |
| TV9 X4 |



| |
|-----------------|
| M6 |
| TV2-3 X4 |

+



| |
|---------------------|
| Washer with 3 holes |
| TV10 X4 |

+



+



| |
|---------------|
| 2.5mm |
| TV7 X8 |



| |
|---------------|
| 10mm |
| TV8 X4 |



| |
|---------------|
| 22mm |
| TV9 X4 |



| |
|-----------------|
| M8 |
| TV4-6 X4 |

+



| |
|---------------------|
| Washer with 3 holes |
| TV10 X4 |

+



+



| |
|---------------|
| 2.5mm |
| TV7 X8 |



| |
|---------------|
| 10mm |
| TV8 X4 |



| |
|---------------|
| 22mm |
| TV9 X4 |

Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

Step 5

