

# HONOR 9X LITE

## User Guide

HONOR

# Contents

## Exciting Features

Featured Usage Tips	1
Camera Tips	2
Working with Ease	3
More Features	4

## New Device

New Device Configuration	6
--------------------------	---

## Home Screen

Navigation Bar	8
Use Shortcut Switches to Quickly Enable Frequently Used Features	9
Notification Panel and Status Bar	9
Screen Lock and Unlock	10
Go Back to Basics with Simple Mode	11
Home Screen Management	12

## Contacts

Search Contacts	14
Managing Contacts	14
Link Contact Information with Social Media Accounts	15

## Dialing

Basic Calling Functions	16
Enable VoLTE to Enjoy HD Calls	17

## Message

Basic Messaging Functions	18
---------------------------	----

## Camera

Use an Assistive Grid to Compose Your Photos	20
Use Portrait Mode to Take Stunning Portraits	20
Use Wide Aperture Mode to Highlight Your Shooting Subjects	21
Use Panorama Mode to Take Panoramic Photos	21
More Capture Modes	22

## Gallery

Photo Management	24
------------------	----

## Phone Manager

Use Optimize	27
Manage Mobile Data Usage	27
Use Auto-launch to Prevent Unwanted App Activities	27

Enable Virus Scanner	28
<b>Email</b>	
Add Email Accounts	29
Manage Email Accounts	29
Manage VIP Email Contacts	30
Import Important Events to Calendar	30
<b>Calendar</b>	
Import To-Dos to Keep Your Work Organized	31
View Global Holidays	31
<b>Clock</b>	
Use the Clock	32
<b>Utilities</b>	
Use Recorder to Make Audio Notes	33
Reset Your Phone	33
<b>Device Connection</b>	
Transfer Data between Your Phone and Computer	35
Use Huawei Share to Quickly Share Files Between Huawei Devices	36
<b>Security and Privacy</b>	
Face Unlock	37
Fingerprint	38
Enable or Disable Location Services	39
Enable App Lock	39
<b>Wi-Fi and Network</b>	
Wi-Fi	40
Connecting to the Internet	41
<b>Apps and Notifications</b>	
App Twin: Log In to Two Social Media Accounts at Once	42
Customize App Permissions to Use Your Phone Your Way	42
<b>Sound and Display</b>	
Set Up Do Not Disturb Mode	43
Use Shortcuts to Access Frequently Used Features	43
<b>Smart Assistance</b>	
Access Phone Functions from Anywhere with Navigation Dock	44
Enable or Disable Mistouch Prevention	44
<b>System</b>	
Change Input Method	45

Accessibility	45
General Settings	45

**System Update**

Update the Phone System Online	47
--------------------------------	----

**Legal Notice**

Legal Notice	48
Personal Information and Data Security	49
More Information	50

# Exciting Features


## Featured Usage Tips

### Enroll Your Facial Information and Enable Face Unlock

Face unlock allows you to unlock your Phone quickly and securely, without the need of a password.

- ⚠️ • Face unlock can only be used when the owner account is logged in. It is not supported by PrivateSpace.
- Face unlock is not available if the lock screen password has not been entered for three or more days in a row, or if your Phone has been remotely locked or restarted.
- When using Face unlock, keep your eyes open, and face your Phone straight on from a distance of 20–50 cm (about 8–20 in.). In order to scan your face accurately, avoid using this feature when you are in a dark environment or facing direct light.
- Currently, only one face can be enrolled. Delete the current facial data to enroll again.

**1** Open  **Settings**. Go to **Security & privacy > Face recognition** and enter your lock screen password.

-  If you haven't set up a lock screen password, set one first. Besides the 6-digit PIN, you can set up other types of passwords: **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**.


**2** Selecting **Enable Pick up to wake device to enhance the Face unlock experience** will allow the screen to turn on and unlock when you pick up your Phone and hold it to your face. If you do not need this feature, leave it deselected. Touch **Enroll face**, and enroll your face.

**3** Face unlock modes:

- **Select an unlock method:** On the **Face recognition** screen, touch **Unlock device**. If you select **Direct unlock**, your Phone identifies your facial features and unlocks your screen when the screen is on. If you select **Slide to unlock**, after your Phone identifies your facial features, you can slide the lock screen to unlock. Selecting **Off** will disable Face unlock.
- **Smart display of lock screen notifications:** Enable **Show notifications**. On the lock screen, your Phone hides notification details and displays them only after recognizing the owner's face.
- **Access App lock:** Enable **Access app lock** to access App lock and locked apps using Face unlock.

### Access Phone Functions from Anywhere with Navigation Dock

 
In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your Phone. You can enable the Navigation dock feature on your Phone to avoid using navigation buttons and to comfortably operate your device with one hand.

Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back:** Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.
- **Home:** Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps:** Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.



## Use Shortcut Switches to Quickly Enable Frequently Used Features

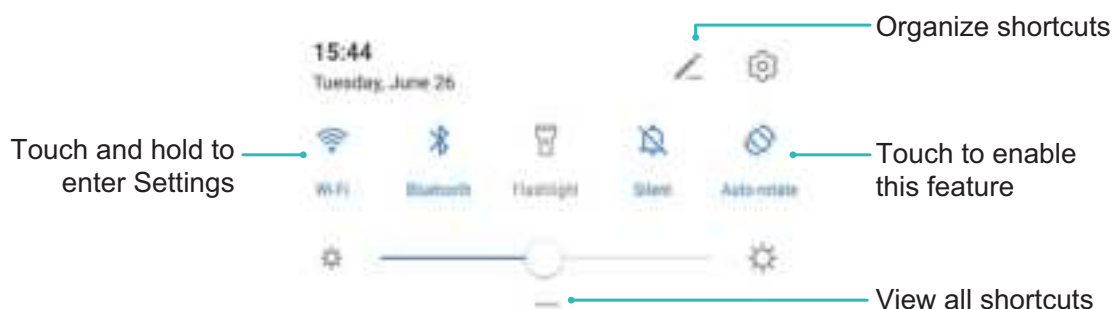





Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.



## Camera Tips

### Use Portrait Mode to Take Stunning Portraits

Go to  **Camera > Portrait**, select one of the effects, then touch  to take a portrait.





- **Blurred effect:** Touch the  icon in the viewfinder and select a blurred effect.
  -  A light source (such as neon light or street light) in a relatively well-lit background will contribute to a better blurred effect. Taking a photo from afar will reduce the stage lighting effect.
- **Beauty effect:**
  - **Shoot using the rear camera:** Touch  in the viewfinder and drag the slider to adjust the beautification settings.
  - **Shoot using the front camera:** Touch  in the viewfinder. Adjust settings as desired for better selfies.
    -  To disable the beauty effect, touch the  icon in the viewfinder and drag each setting to its minimum value.

### Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

- i** When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one color.

- 1** Go to  **Camera > More > Panorama.**
- 2** Touch  at the bottom of the screen to configure the shooting direction.
- 3** Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the center line.
- 4** Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.



## Working with Ease

### Transfer Data between Your Phone and Computer

Use a USB cable to connect your Phone to your computer and transfer data.

#### Select USB connection mode

Use a USB cable to connect your Phone to the computer, you can then select a default connection method. You can transfer photos and files between your Phone and computer, or charge your Phone through the USB connection to your computer.

Swipe down from the status bar to open the notification panel, then touch **Settings > Touch for more options** and select a method for connecting your device and your computer.

- **Transfer photos:** Transfer photos between your Phone and computer.
- **Transfer files:** Transfer files between your Phone and computer.
- **Charge only:** Charge your Phone with just a USB cable.
- **Input MIDI:** Use your Phone as a MIDI input device and play music on your computer.


#### Transfer data over a USB port

Connect your Phone to your Computer using a USB cable to transfer data and perform other tasks.


- **Transfer files:** Media Transfer Protocol (MTP) is a type of transmission protocol for media files. You can transfer files between your Phone and computer using this connection method. First, install Windows Media Player 11 or later on your computer.  
Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer files**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the files on your Phone. You can use Windows Media Player to view the media files on your Phone.
- **Transfer images:** Picture Transfer Protocol (PTP) is a protocol that allows you to transfer images. You can upload and share photos between your Phone and computer using this connection method.  
Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer photos**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the images on your Phone.
- **Transfer MIDI data to your Phone:** MIDI (Musical Instrument Digital Interface) is an industry standard audio format for composing music established by electronic instrument manufacturers. Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Input MIDI**. You can then use Phone to receive and process MIDI messages transmitted by other devices.


## Use Huawei Share to Quickly Share Files Between Huawei Devices

You can use Huawei Share to quickly transfer photos, videos and other files between Huawei devices. Huawei Share uses Bluetooth to detect other nearby Huawei devices and then uses Wi-Fi Direct to quickly transfer files without using mobile data.

-  Huawei Share uses Wi-Fi and Bluetooth to transfer data. When Huawei Share is enabled, both Wi-Fi and Bluetooth are automatically enabled.

**Use Huawei Share to send files:** Select the files you want to share and then touch **Share**. To send files, select a receiving device from the list of nearby devices and confirm.

**Use Huawei Share to receive files:** Swipe down from the status bar to open the notification panel, and then touch  to enable Huawei Share. Touch **ACCEPT** when the file transfer notification is displayed. Received files are saved by default to your **Huawei Share** folder in **Files**.

-  No confirmation is required if the two Huawei devices have been logged in using the same HUAWEI ID.


## More Features


### Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your Phone or unlock the screen, you will be asked to enter your App lock password when opening these apps. App




lock adds an extra layer of protection for your private information and prevents unauthorized access to important apps on your Phone.



**Enable App lock:** Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

**Set your App lock password:** Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.

## Use App Drawer to Store Apps

Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.

Open  **Settings**, go to **Home screen & wallpaper > Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

 **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.


# New Device

## New Device Configuration




### Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

#### Connecting to a Wi-Fi network




- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold  to open the Wi-Fi settings screen.
- 3 Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

#### Connecting using mobile data

-  Before using mobile data, ensure that you have a data plan with your carrier to avoid incurring excessive data charges.
- 1 Swipe down from the status bar to open the notification panel.
  - 2 Touch  to enable mobile data.
    -  To save battery power and reduce data usage, disable your mobile data connection when you don't need it.

### Enroll Your Facial Information and Enable Face Unlock

Face unlock allows you to unlock your Phone quickly and securely, without the need of a password.


-  • Face unlock can only be used when the owner account is logged in. It is not supported by PrivateSpace.
  - Face unlock is not available if the lock screen password has not been entered for three or more days in a row, or if your Phone has been remotely locked or restarted.
  - When using Face unlock, keep your eyes open, and face your Phone straight on from a distance of 20–50 cm (about 8–20 in.). In order to scan your face accurately, avoid using this feature when you are in a dark environment or facing direct light.
  - Currently, only one face can be enrolled. Delete the current facial data to enroll again.
- 1 Open  **Settings**. Go to **Security & privacy > Face recognition** and enter your lock screen password.
    -  If you haven't set up a lock screen password, set one first. Besides the 6-digit PIN, you can set up other types of passwords: **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**.

- 2 Selecting **Enable Pick up to wake device to enhance the Face unlock experience** will allow the screen to turn on and unlock when you pick up your Phone and hold it to your face. If you do not need this feature, leave it deselected. Touch **Enroll face**, and enroll your face.
- 3 Face unlock modes:
  - **Select an unlock method:** On the **Face recognition** screen, touch **Unlock device**. If you select **Direct unlock**, your Phone identifies your facial features and unlocks your screen when the screen is on. If you select **Slide to unlock**, after your Phone identifies your facial features, you can slide the lock screen to unlock. Selecting **Off** will disable Face unlock.
  - **Smart display of lock screen notifications:** Enable **Show notifications**. On the lock screen, your Phone hides notification details and displays them only after recognizing the owner's face.
  - **Access App lock:** Enable **Access app lock** to access App lock and locked apps using Face unlock.

## Enroll a Fingerprint

You can enroll a fingerprint on your Phone and then use your fingerprint to unlock your screen or access your Safe or App Lock without a password.

- ⚠ • Fingerprint unlocking is only available when your unlock method is set to **Pattern**, **PIN** or **Password**. You will be required to unlock your Phone using the screen unlock password after the device is restarted or if your fingerprint is not recognized.
- Before enrolling a fingerprint, make sure your finger is clean and dry.


- 1 Open  **Settings**.
- 2 Go to **Security & privacy > Fingerprint ID > Fingerprint management > Change unlock method**, select **Pattern**, **4-digit PIN**, **Custom PIN** or **Password**, and then follow the onscreen instructions to set an unlock password.
- 3 After enrollment is complete, touch **OK**.

 
# Home Screen





## Navigation Bar

### Configure Your Navigation Bar Layout

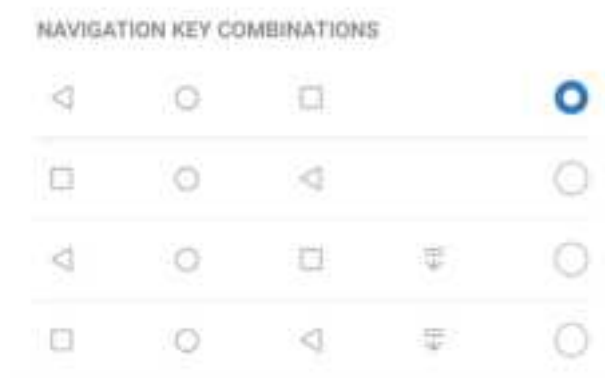Using the navigation bar, you can conveniently access the home screen, return to the previous page, exit an app, or view recent apps used.


To configure your navigation bar layout, open  **Settings**, then go to **System > System navigation > Three key navigation > Settings**, and select the navigation key combination and enable or disable **Hide navigation keys** based on your usage habits.




-  **Back key**: Touch to return to the previous page or exit an app. Touch to close the onscreen keyboard when inputting text.
-  **Home key**: Touch to return to the home screen. Touch and hold to display the Google Assistant icon and swipe upwards on the icon to enable Google Assistant.
-  **Recent key**: Touch to open a list of recently used apps. Touch and hold to enable split screen mode.
-  **Downward swipe notification key**: Touch to open the notification panel.

### Use the Recent Key to Manage Background Apps

If you want to quickly switch to a recently used app, you might try using the Recent key. The Recent key can help you quickly switch between several recently used apps. You can also use it to close your background apps to increase your Phone's operating speed.

Touch  . You can view, switch to, close, or lock recently used background apps:


- **View recently used apps**: Recently used apps will be displayed on the screen and you can check them by swiping left or right.

- **Switch to a recently used app:** Swipe left or right on the screen to find the app you want to use, and touch the app tab.
- **Close an app:** Swipe up on an app tab to close the corresponding app.
- **Close all apps:** Touch  to close all apps.

## Navigate with Gestures

 
Navigate with gestures to quickly go back to the previous screen, return to the home screen, or view recent tasks.

Open  **Settings**, go to **System > System navigation**, and select **Gestures**. You can:

- **Go back to the previous screen:** Swipe inward from the left or right edge of the screen.
- **Return to the home screen:** Swipe upwards from the bottom of the screen.
- **View recent tasks or end a task:** Swipe upwards from the bottom of the screen and hold to view recent tasks. Swipe up on an app preview to close an app, or touch  to close all apps.
- **Enable Google Assistant:** Touch **Settings**, and enable **Google Assistant**. Swipe upwards from either of the bottom corners of the screen to enable Google Assistant.

## Use Shortcut Switches to Quickly Enable Frequently Used Features

Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.

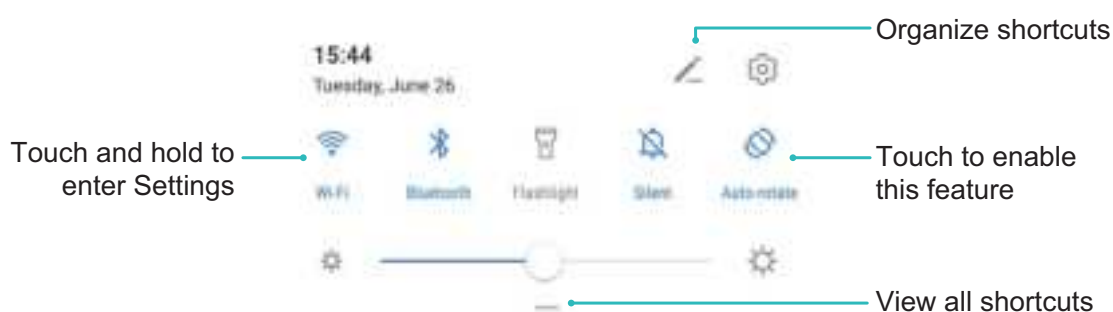

## Notification Panel and Status Bar

### Disable App Notifications

Open  **Settings** and touch **Notifications**. From here you can:

- **Block notifications from an app:** Select the app, then disable **Allow notifications**.
- **Block notifications from multiple apps:** Touch **Batch management**, then disable **All**.

- To block notifications from an app, you can also swipe down from the status bar to open the notification panel, touch and hold an app notification, then disable **Allow notifications**.

## Customize Notification Settings

Customize the notification settings to use your device the way you want.


Open  **Settings**, then go to **Notifications > More notification settings**. From here you can:

- **Enable Notifications turn on screen:** Enable **Notifications turn on screen** to set the screen to turn on when notifications are received.

## Screen Lock and Unlock

### Set a Lock Screen Password to Protect Your Privacy

Your Phone stores a lot of sensitive information, such as personal photos, contact information, banking apps (for example, Alipay). Set a lock screen password so that a password is required each time you unlock your Phone. A lock screen password helps to protect your private information if your Phone is lost or accessed by an unauthorized user.

**Set a lock screen password:** Open  **Settings**, go to **Security & privacy > Lock screen password**, and set the type of lock screen password you prefer.

- **Set a PIN:** A PIN number is a sequence of digits. Entering a PIN to unlock your Phone is quick and simple. For better security, use a long sequence of random numbers as your PIN. Go to **Set lock screen password**, follow the prompts to set up a PIN. Alternatively, touch **Change unlock method**, and set **4-digit PIN** or **Custom PIN**.
- **Set a pattern:** Unlock your Phone by drawing a preset pattern on the screen. For better security, use a pattern that includes overlapping line segments. Go to **Set lock screen password > Change unlock method > Pattern** and draw the same pattern twice. The pattern must connect at least 4 dots.
- **Set a password:** A password made up of numbers, letters, and special characters is more secure than a PIN or pattern. For better security, use a password with 8 or more characters that includes numbers, letters, and special characters. Be sure to memorize the password so that you don't get locked out of your Phone if you forget it. Go to **Set lock screen password > Change unlock method > Password**, follow the prompts to set up a password.
- **Unlock your device using a smart band:** If your device supports unlocking with a smart band, the screen will automatically light up when the band comes within 80 cm of your device. Swiping on the screen of your Phone will instantly unlock the device. Touch **Smart unlock**, and follow the onscreen prompts to complete the setup.

- **Unlock your device using a fingerprint:** If your device supports fingerprint unlock, this is the recommended unlock method. Using a fingerprint is a secure and quick way to unlock the device. After setting a lock screen password, touch **Enroll** in the dialog box that pops up and follow the onscreen prompts to enroll your fingerprints.
- **For security reasons, please do not disable the lock screen password:** A lock screen password prevents unauthorized access to your device. For the security of your device, do not select **Disable lock screen password** as the screen lock method.
- **Regular password prompts help you to remember your password:** If you have not entered your screen lock password for 3 days, the system will require that you enter the password to unlock your device.

## Lock the Screen to Quickly Secure Your Phone

If you don't use your Phone for a set period of time, the screen will turn off and lock. As long as the screen stays on, you can use your Phone without needing to unlock the screen. Lock your screen when you are not using your Phone to protect your privacy and prevent mistaken inputs.

- Set a lock screen password to help protect your privacy. You can lock your device in the following ways:


**Lock the screen instantly with the Power button:** Press the **Power button** to lock the screen at any time.

**Lock the screen with one-touch screen lock:** Pinch two fingers together on the home screen to enter the editing screen. Touch **Widgets > Screen Lock** and add the **Screen Lock** widget to your home screen. This helps reduce wear and tear on your power button. After leaving the home screen editing mode, touch the **Screen Lock** widget to instantly lock your screen. To lock your screen this way, first switch to the home screen page where the **Screen Lock** widget is located.

- You can swipe up from the bottom of the Magazine unlock screen to display the Magazine unlock shortcut panel and use widgets such as recorder, calculator, and flashlight.

## Go Back to Basics with Simple Mode

Does your home screen look cluttered with app icons and small text? Simple mode maximizes the system volume and displays larger icons and fonts on the home screen, adopting a more concise layout which is easy to navigate.

Open  **Settings**, go to **System > Simple mode**, and touch **Enable**.

In Simple mode, you can:

- **Edit home screen icons:** Touch and hold any icon to drag or uninstall certain non-system apps.
- **Exit Simple mode:** Touch **Settings** and select **Exit Simple mode**.


- In **Simple mode**, go to **Settings > More settings > System > Reset > Reset all settings**. You will be directed to the default system home screen and all your settings in **Simple mode** will be reset.

# Home Screen Management

## Manage Home Screen Icons


**Move an app icon or folder:** On the home screen, touch and hold an app or folder icon until your Phone vibrates, then drag it to any position on the home screen.

**Delete an app icon:** On the home screen, touch and hold the icon of the app you want to uninstall until your Phone vibrates, then touch **Uninstall**.


 To ensure that the system runs normally, some pre-installed system apps cannot be uninstalled.


**Lock the home screen layout:** Open  **Settings**, go to **Home screen & wallpaper > Home screen settings**, and enable **Lock layout**.

**Create a folder:** On the home screen, touch and hold an app icon until your Phone vibrates, then drag it on top of another app icon. The two icons will be placed in a new folder.

**Delete a folder:** Open a folder, touch , deselect all the apps, then touch **OK**. The folder will be deleted and all app icons in the folder will be moved to your home screen.

**Rename a folder:** Open a folder and touch the folder name to enter a new name.


**Add or remove app icons from a folder:** Open a folder and touch . Select the apps you wish to add to the folder, deselect those you wish to remove, then touch **OK**.

 Another way to remove an app icon from a folder is to touch and hold the icon in the folder until your Phone vibrates, then drag it to an empty space on the home screen.

## Manage Your Home Screen

Too many icons on your home screen? You can add a new page to your home screen and customize it to your liking.

Pinch in with your fingers on the home screen to enter home screen editing mode. You can do the following:

- **Add a new screen page:** Touch  at the left or right side of the screen to add a new screen page.

- **Delete an empty screen page:** Touch  to delete the page.

 Screen pages with app icons or widgets on them cannot be deleted.


- **Modify screen page order:** Touch and hold the screen page you want to move, then drag it to the desired position.



- **Set a default home screen page:** Touch  in the upper part of the home screen to set the selected screen page as your default home screen page.



## Use App Drawer to Store Apps


Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.



Open  **Settings**, go to **Home screen & wallpaper** > **Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

 **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.

# Contacts

## Search Contacts

Open  **Contacts**. Use any of the following search methods:

-  For better results, make sure your device is displaying all contacts. From the contacts list screen, go to  > **Settings** > **Display preferences** and touch **All contacts**.
- Drag the index on the right to quickly scroll through the contacts list.
- In the search bar at the top of the contacts list, enter the contact's name, initials, phone number, or email address. The search results will be displayed below the search bar. Enter multiple keywords for your search, such as "John London", to quickly find matching contacts.

## Managing Contacts

### Import and Export Contacts


When you switch to a new Phone, you'll need to transfer your existing contacts.


Open  **Contacts**, go to  > **Settings** > **Import/Export**, and then select one of the following:



- **Import contacts**: Select **Import from storage**, **Import via Bluetooth**, or **Import from SIM** and follow the onscreen instructions.
- **Export contacts**: Select **Export to storage**, **Share contacts**, or **Export to SIM** and follow the onscreen instructions. By default, .vcf files exported through **Export to storage** are saved in the root directory of your device's internal storage. Open **Files** to view exported files.



### Manage Your Contacts

The Contacts app includes a host of features for managing contacts. Simplify your contacts list by viewing contacts on your Phone or SIM card only. Favorite contacts to find them easily.

**Merge duplicate contacts**: Use the **Merge duplicate contacts** function to merge duplicate contacts. From the contacts list screen, go to  > **Settings** > **Organize contacts** > **Merge duplicate contacts**. Select the contacts you want to merge and touch **Merge**.



**Display contacts for different accounts**: From the contacts list screen, go to  > **Settings** > **Display preferences**, and select the accounts for which you want to display contacts. You can also:

- **Enable Simple view**: Go to  > **Settings** > **Display preferences**, and enable **Simple view**.
- **View contact storage space**: Go to  > **Settings** > **Display preferences**. The **Accounts** area displays the total and available storage space on your SIM card.



**Delete contacts:** From the contacts list screen, touch and hold the entry you want to delete, then touch **Delete**. To delete contacts in batches, go to  > **Settings** > **Organize contacts** > **Delete multiple contacts**, select the entries you want to delete, then touch .

## Link Contact Information with Social Media Accounts

Use third-party social media apps (such as LinkedIn) to find out more information about your contacts.

**Link with LinkedIn accounts:** Open  **Contacts**, go to  > **Settings** > **Link LinkedIn account** and follow the onscreen instructions to log in to your LinkedIn account. Once logged in, the contact information in your Phone will be updated. To sync all LinkedIn contact information, from the LinkedIn settings screen in **Contacts**, go to **Sync LinkedIn contacts** > **All LinkedIn contacts**, and select **Sync** or **Auto-update LinkedIn**.

**View contact information provided by LinkedIn:** Open a LinkedIn contact and touch **View LinkedIn profile online**.





**Unlink a LinkedIn contact:** Open  **Contacts**, go to  > **Settings** > **LinkedIn**, and select **Disassociate**.


# Dialing


## Basic Calling Functions

### Make Calls

On the dialer screen of your Phone, enter part of the phone number, the first letter of the contact's name, or the contact's initials to find a contact.


Open  **Phone**. From the dialer screen, enter the phone number, the first letter of the contact's name, or the contact's initials (for example, enter "jl" for John Lucas) to find a contact. Touch the contact you want to call from the list. If you are using a dual-SIM device, touch  or  to make the call. Touch  to hang up.





 You will be prompted to paste recently copied phone numbers when you enter the dialer screen.

**Press the Power button to hang up:** If a number has been dialed accidentally and the call screen is hidden, you can still hang up quickly. The **Power button ends call** feature hangs up the call when the Power button is pressed. On the **Phone** screen, go to  > **Settings** > **More**, and enable **Power button ends call**.

### Enable Call Waiting to Never Miss Important Third-Party Calls


Receiving an incoming call while you're already on a call? Call waiting allows you to answer the new call and then switch between the two calls.



 Some carriers may not support this feature.

Open  **Phone**, go to  > **Settings** > **More**, and enable **Call waiting**. When receiving another call, touch  to answer the call and place your first call on hold. Touch  or the call on hold in the call list to switch between calls.

### Enable Call Forwarding and Never Miss a Call

If you are unavailable to answer calls, you can set your device to forward calls to another number.



 Some carriers may not support this feature.

Open  **Phone**, and go to  > **Settings** > **Call forwarding**. If you have a dual-SIM device, in the **SIM 1** or **SIM 2** section, touch **Call forwarding** and select a forwarding method. Enter the number you want to forward your calls to, then confirm. When call forwarding is enabled, your device will automatically forward eligible calls to the preset number.

### Delete Call Logs

You can delete call logs that you no longer need.

Open  **Phone** and touch  to hide the dialpad. You can now perform one of the following:

- **Delete a single record:** Touch and hold an entry, then touch **Delete entry**.
- **Delete multiple records:** Go to  > **Delete multiple entries**, select the entries you want to delete or **Select all**, then touch .



## Set Up Video Ringtones

If you are bored with traditional incoming call ringtones, you can set a video as your call ringtone.


Open  **Phone**, go to  > **Settings** > **Ringtones & vibration** > **Ringtone**, touch **Video ringtones**, and select a video.


## Use International Roaming

When you travel abroad for work or a holiday, you can make calls when your Phone is roaming without having to dial the country code.


- 1 Contact your mobile carrier to enable the international toll or international roaming service.
- 2 Open  **Phone** or  **Contacts** to make a call.

## Enable VoLTE to Enjoy HD Calls

-  Some carriers may not support this feature.
- Only dual-SIM phones support both SIM card slots enabling 4G, VoLTE, and VoWiFi.

Open  **Settings**, and go to **Wireless & networks** > **Mobile network**. In the settings section for SIM 1 or 2 (if supported by your carrier network), you can:

- **Enable 4G:** Turn on **4G**. The **4G** switch may be unavailable for your device due to your carrier's settings. This indicates that the 4G network is enabled by default.
- **Enable VoLTE calling:** Turn on **VoLTE HD calls**.
- **Enable Wi-Fi calling:** Turn on **Wi-Fi calling**.

After the setting is complete, select the contact you want to call and touch  to make a video call.





You can also touch  on the screen during a voice call to switch to a video call.

# Message

## Basic Messaging Functions

### Send Messages


Text messages give you a quick and easy way to communicate with friends, family and colleagues. In addition to text, you can also add emojis or insert pictures and audio files to enrich your messages.


**Send a message:** Open  **Messages**. From the Messaging list screen, touch  and select contacts or groups. Enter your message content, touch  to add other types of content, and touch  to send the message.


**Save a draft message:** Touch  **Back key** to save a message as a draft.


### Manage Messages

The Messaging app makes it easy to stay on top of your messages.


Open  **Messages**. In the list of message threads, touch a contact name or phone number to view the conversation thread.

**Reply to messages:** Enter the message content in the text box and touch .

**Archive a message:** Worried about accidentally deleting an important message? Touch and hold a message and then touch  to archive the message.

**Delete a message:** Tired of the clutter created by too many messages? Delete unneeded conversations or messages to clean up your Messaging list. To delete conversations or messages, touch and hold the conversations or messages to enter the editing screen, select the conversation or message, and touch . Deleted messages cannot be recovered.

**Search messages:** Want to find a message quickly? From the Messaging list screen, enter the keywords in the search bar and the relevant results will be displayed beneath the search bar.


**Block a contact:** Want to stop someone from sending you spam messages? Touch and hold a message and then touch  to block the contact.

### Block Spam Messages

Tired of receiving spam messages? Enable message blocking and say goodbye to spam messages!

Open  **Messages**.


Use the harassment filter to perform the following:

**Block messages:** Touch and hold a message and touch  to block messages and calls from that number.

**Unblock messages:** Touch  and touch **Blocked contacts**. Touch  at the end of the phone number to unblock the number.

## Set MMS Message Automatic Download Rules

Set MMS message automatic download rules to prevent costly mobile data usage.

Open  **Messages** and touch . Go to **Settings > Advanced**.

From here you can configure the following:



**Whether to retrieve MMS messages automatically:** Disable **Auto-download MMS** to prevent your device from automatically downloading MMS messages.

**Whether to retrieve MMS messages automatically when roaming:** Disable **Auto-download MMS when roaming** to prevent your device from automatically downloading MMS messages in roaming mode.

# Camera



## Use an Assistive Grid to Compose Your Photos


Avoid skewed and off-center photos. Use your camera's assistive grid feature to help you line up the perfect shot.


Open  **Camera**, touch  to enter the **Settings** screen, and enable **Assistive grid**. Grid lines will now appear when you take photos. The four intersecting points on the grid are the focus areas of the picture. Place the subject of your photo on one of the intersecting points to achieve a good composition.



## Use Portrait Mode to Take Stunning Portraits





Go to  **Camera** > **Portrait**, select one of the effects, then touch  to take a portrait.

- **Blurred effect:** Touch the  icon in the viewfinder and select a blurred effect.

 A light source (such as neon light or street light) in a relatively well-lit background will contribute to a better blurred effect. Taking a photo from afar will reduce the stage lighting effect.







### • Beauty effect:

- **Shoot using the rear camera:** Touch  in the viewfinder and drag the slider to adjust the beautification settings.
  - **Shoot using the front camera:** Touch  in the viewfinder. Adjust settings as desired for better selfies.
-  To disable the beauty effect, touch the  icon in the viewfinder and drag each setting to its minimum value.

## Use Wide Aperture Mode to Highlight Your Shooting Subjects

Wide aperture mode produces photographs with a shallow depth of field. This creates a blurred background that lends greater emphasis to the photo's subject.


**Take a wide aperture photo:** Go to  **Camera > Aperture**. When shooting, touch the screen to select a focal point, and then touch  to take the photo.





-  • For optimal results, ensure that the subject is positioned no more than 2 m away from the camera.
- Touch  and swipe left or right on the slider to adjust the aperture level. The smaller the aperture value, the more blurred the background will appear.

## Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

-  When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one color.


- 1 Go to  **Camera > More > Panorama**.
- 2 Touch  at the bottom of the screen to configure the shooting direction.
- 3 Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the center line.
- 4 Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.







## More Capture Modes

### Use Time-Lapse to Create a Short Video

Use Time-lapse mode to capture images over a long period of time and condense them into a short video. Capture and watch nature in its entirety: blooming flowers, drifting clouds, or even star trails against the night sky.

-  • Recording a time-lapse video continuously for long period of time may consume battery power and use up storage space.
- Place your device on a tripod or flat surface to keep it steady while recording.
- Before you start, ensure that the scene is well lit and the camera is in focus. Position the camera carefully to fit relevant background objects as much as possible.



- 1** Go to  **Camera > More > Time-lapse**, and touch  to start recording a time-lapse video.
- 2** Touch  to finish recording.
- 3** You can then go to **Gallery** to play your time-lapse video.




-  For best and optimal result, the recording and playback speeds are automatically adjusted by the system.



### Take Moving Pictures


Make your photos more dynamic and fun by taking moving pictures to prolong life's wonderful moments.

With moving pictures, you can record a scene approximately one second before and after pressing the shutter button. When browsing photos in Gallery, view the static picture taken or play a dynamic moving picture effect and sound.

**Take moving pictures:** Open  **Camera**, go to **More > Moving picture**, then touch  to take a moving picture.

**View moving pictures:** Moving pictures will be saved to **Gallery** in JPG format. Go to  **Gallery** > **Albums** > **Camera**, touch pictures with the  icon, and touch  on the top of the picture to view a dynamic effect. The moving picture automatically stops after a complete playback. You can also touch the screen to stop the playback.

**Share moving pictures:** Go to  **Gallery** > **Albums** > **Camera**, touch the moving picture you want to share, then touch  to select a sharing method.



-  Moving pictures can be shared directly through Wi-Fi, Bluetooth, Huawei Share, and more. The receiving device must be a HONOR device that supports the capture of moving pictures in order to play the moving picture effect. When you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.






 





# Gallery

## Photo Management

### Edit Photos


Crop, rotate, and apply a variety of effects (such as graffiti, custom watermarks, and filters) to your photos in Gallery.

Open  **Gallery**, select the photo you want to edit, then touch . Edit the photo in the following ways:

- **Rotate:** Touch  and drag the angle wheel to the desired orientation. You can also touch **Rotate** to rotate your photo 90 degrees or touch **Mirror** to flip it.
- **Crop:** Touch  and drag the grid or its corners to make your selection. You can also select a fixed ratio and drag the corners of the grid to crop the photo.
- **Add filter effects:** Touch  to select a filter.
- **Color splash:** Touch  to select the colors you want to highlight. Other parts of the photo will be black and white.
- **Blur:** Touch , select a blur mode, and drag the slider to adjust the blurriness.
- **Adjust photo effects:** Touch  to adjust the brightness, contrast, saturation, and other qualities of a photo.
- **Beautify a portrait:** **Beauty** is provided for portraits. Touch  to apply features such as **Smooth**, **Blemish**, **Thin face**, and **Enhance eyes** to make a portrait more attractive.
- **Pixelate:** Touch  to select a mosaic style and size to censor parts of a photo.
- **Graffiti:** Touch  to select a brush and color to add graffiti.
- **Add watermarks:** Touch  to select a watermark (such as **Time**, **Location**, **Weather**, or **Mood**).
- **Add a text element:** Touch  to select an element style and font format.



### Browse and Share Photos or Videos

All photos and videos are stored in Gallery and can be viewed by time, location, or album.


**View photos in full screen:** Open  **Gallery** and touch a photo to view it in full screen mode. Touch the screen again to hide the menu. In full screen mode, you can:

- **View basic information about a photo or video:** Swipe up on a photo or video to view basic information.

- **Zoom in and out:** Spread or pinch together two fingers on the screen to zoom in and out. If a photo has a higher resolution than that of the screen, you can zoom in using two fingers. Once you take your fingers off the screen, the photo can only be enlarged up to twice its original size.
- **View shooting settings:** Touch ⓘ and scroll down to view details about the photo in the pop-up box, including ISO (sensitivity), EV (exposure compensation), and resolution.
- **Rename the photo:** Touch ⋮ > **Rename** to enter a new name.
- **Set the photo as a home screen wallpaper or contact picture:** Go to ⋮ > **Set as**, then select **Wallpaper** or **Contact photo**.

**Share a photo or video:** Open  **Gallery**. On the **Photos** tab, touch and hold any item to access the selection screen. Select the items you want to share, touch , then select a sharing method, and follow the steps to complete the process.



**Switch between daily and monthly views:** On the **Photos** tab, separate or pinch together two fingers on the screen to view photos by day or by month.



**View by shooting location:** Photos or videos taken while **GPS tag** is enabled (in **Camera** settings) can be viewed in Map view. On the **Photos** tab, touch . Photos or videos containing location information will be marked on the map. Separate two fingers on the screen to zoom in on the map and view details about the shooting location. Touch a photo thumbnail to view all the photos and videos taken at that location.



**View by album:** You can view photos and videos by album. Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Videos** album. Screenshots and screen recordings are saved in the **Screenshots** album.


## Organize Albums



**Add an album:** From the **Albums** tab, touch **Add album**, name the album, then touch **OK**. Select the photos or videos you want to add.

**Move photos and videos:** Move photos and videos from various albums into the same one for easy management and browsing. Touch and hold a photo or video you want to move until  is displayed, then select all the photos and videos that you want to move. Touch  to select the desired album. Once the items are moved, they will no longer be in their original albums.

**Add photos and videos to favorites:** Add photos and videos to favorites for easier viewing. Open the photo or video that you want to add to the **My favourites** album, then touch . Favorited photos and videos will remain in their original albums and have a  icon on their thumbnails.

**Delete photos and videos:** Touch and hold a photo or album until the  icon appears. Select the items you want to delete, then go to  > **Delete**. Deleted photos and videos will remain for a time in the **Recently deleted** album before being permanently deleted. Days remaining before deletion are


marked on the photos. To permanently delete a photo or video manually, touch and hold its thumbnail, then go to  > **Delete**.

**Recover deleted photos and videos:** In the **Recently deleted** album, touch and hold a photo or video until the  icon appears. Select the items you want to recover and touch  to restore them to their original albums. If the original album has been deleted, a new one will be created.

# Phone Manager

## Use Optimize

Have you noticed that your Phone has slowed down recently? Do you worry that it might be vulnerable to malware and other security threats? Use Optimize to make your Phone run smoother and protect it from security threats.

Open  **Phone Manager**, and touch **OPTIMIZE**. Your Phone will automatically optimize its overall performance, security, battery performance, and device management. You can also customize the optimization options. The system will recommend that you use Optimize. This will help you increase running speed, check for security risks, optimize power consumption, and monitor and block unknown phone numbers and harassment calls.

## Manage Mobile Data Usage

Manage mobile data usage to avoid incurring extra charges.


Open  **Phone Manager** and touch **Data usage** to view data usage statistics or enable **Smart data saver**.

- **Data usage this month:** Check the data usage ranking of apps.
- **Network access:** Manage Internet access permissions for each app.
- **Smart data saver:** Enable the data saver and select the apps that are allowed to use mobile data while running in the background.

## Use Auto-launch to Prevent Unwanted App Activities



Worried about third-party apps secretly running, occupying system resources, and consuming power in the background? Use Auto-launch to help you identify and prohibit unwanted app activities.


Open  **Phone Manager**, touch  > **App launch**, and you can:

- **Automatically manage apps:** Enable **Manage all automatically** or toggle on the switches for individual apps. The system will automatically analyze app usage and prohibit apps from automatic launch, secondary launch, and background running.
- **Manually manage apps:** If you have not enabled **Manage all automatically**, touch the switch of a desired app and enable or disable automatic launch, secondary launch, and background running accordingly.
- **View launch records:** Go to  > **Launch records** to view the detailed launch history for each app.

## Enable Virus Scanner

Accessing unauthorized ads or links may infect your device with Trojans and malware that may secretly install themselves and steal your personal data. Running a virus scan can locate and remove potential threats on your Phone.

**Virus scan** is enabled by default. To view it, open  **Phone Manager** and touch **Virus scan**. The **Secure** icon indicates that your device is safe. You can also return to the **Phone Manager** home screen and go to  to configure the following settings:


- **Smart tune-up:** If this option is selected, the system will obtain the latest app configuration data from the cloud to ensure better app performance.
  - **Auto-clean junk files:** If this option is selected, the system will automatically identify junk files and permanently delete them after 14 days.
  - **Auto-update cleanup database** and **Online virus scan:** Auto-update the cleanup database, or scan for viruses under the conditions of **Wi-Fi only** or **Any network**. Select **Never** to disable these options.
-  The virus scan reminder is enabled by default. You will be notified if no anti-virus scan has been performed for more than 30 days.




# Email

## Add Email Accounts

Add your email account to your Phone for convenient email access at any time. If you have questions about specific settings while configuring your email, please consult your email account provider.

**Add a personal email account:** Open , select an email service provider or touch **Other**, enter your email address and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings.







**Add an Exchange account:** Exchange is developed by Microsoft and used by companies as their internal email system. If your company email uses Exchange servers, you can log in to your work email on your Phone. Go to  > **Exchange**, enter your email address, username, and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings.

After configuration, the system will open the **Inbox** screen by default.

## Manage Email Accounts

You can manage multiple email accounts concurrently on your Huawei Phone.



Open  **Email**. You can:

- **Check emails:** On the **Inbox** screen, touch , and then select an email account to view the list of your emails. Swipe down to refresh the list of emails. Open an email to read, reply, forward, or delete it. Swipe left or right on the screen to view the previous or next email. To delete multiple emails, touch and hold an email to go to the email management screen, select the emails, and touch .
- **Sync emails:** Swipe down on the **Inbox** screen to refresh the emails list. Go to  > **Settings**, touch an account, and then enable **Sync email**. To sync automatically, touch **Sync frequency** and select the syncing time to complete configuration.
- **Search emails:** On the emails list screen, touch the search bar, and enter a keyword, such as email subject and content.
- **Add multiple email accounts:** Go to  > **Settings** > **Add account**, select your email service provider, and enter your information.
- **Switch between email accounts:** On the emails list screen, touch , and then touch an account name to switch to.
- **Configure email accounts:** On the emails list screen, go to  > **Settings**, select an account to set **Account name**, **Default account**, and **Remove account**.

## Manage VIP Email Contacts



Worried about missing an important contact's email among a sea of emails? You can add important contacts to the VIP list. Your device will automatically copy emails from VIP contacts to the VIP mailbox.

Open  **Email**, and go to  > **Settings** > **VIP contacts**. From the **VIP list** screen, go to **Add** > **Create** or **Add from contacts**.

**Add or remove VIP contacts:** On the **VIP list** screen, touch  or  to manage VIP contacts.

## Import Important Events to Calendar



Worried about missing an important event among a sea of emails? You can import important events to Calendar and view them at anytime and anyplace.


Open  **Email**, select the event from the email, and select  > **Add to calendar**.

# Calendar

## Import To-Dos to Keep Your Work Organized


Many to-dos cannot be handled in time. What can I do if I forget to handle them? Import each to-do item to Calendar for easy reference and you will not miss any important events.



**Import meeting reminders:** Open  **Calendar**, go to  > **Manage accounts** > **Add account**, and follow the onscreen prompts to add your work emails (Exchange account) to the calendar to check meeting reminders.

**Share an event:** Touch an event on the calendar or under schedule, then touch  and follow the onscreen prompts to share the event using any of the multiple methods.

## View Global Holidays

Traveling overseas for work or holiday? Download your destination country's holiday information ahead of time to better plan your work and schedule.



 This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.


Open  **Calendar**, go to  > **Settings** > **National/Regional festivals**, and enable the corresponding switch for your destination country. Your device will automatically download the holiday information.


# Clock

## Use the Clock

You can find various functions, including alarm, world clock, stopwatch, or timer in Clock.

**View the time all over the world:** Open  **Clock**, touch  on the **World clock** tab, and enter the name of a city or select one from the list of cities.




**Display the time in two different regions:** Open  **Settings**, and then go to **System > Date & time**. Enable **Dual clocks**, and set **Home city** to display the time in the region where you are currently located and the time in your home city on the lock screen.

 Two times will only be displayed if you are in a different region than the one you selected as your home city; otherwise you will only see one.

# Utilities



## Use Recorder to Make Audio Notes

Have you ever felt like you do not have enough time to take important notes during a meeting? Do you need to sort out a pile of notes from an interview or class? Recorder lets you record audio files that you can conveniently play back later.

Open  **Recorder**, and touch  to begin recording. While recording, you can add tags at important points. Touch  to finish recording and save the audio file.

After the recording is completed, you can:


- **Play recording from tag:** In the recording file list, touch a recording to go to the play screen. On the play screen, you can then touch a tag that you have added and play the recording from that point.
- **Manage recordings:** Touch and hold a recording for options such as sharing or deleting the recording.

 In the recording file list, touch and hold a recording file, and then touch  > **Details** to view its storage location.


## Reset Your Phone

If the operating speed of your Phone starts to slow down due to long-term accumulation of caches and residual files, you can reset your Phone to erase these cached files completely and restore your device's factory settings.


**Reset network settings:** This will restore your Wi-Fi, mobile data network, and Bluetooth settings, including hotspot tethering and Bluetooth pairing information. It won't change other settings on your Phone, or delete any data or files.

Open  **Settings**, go to **System > Reset > Reset network settings**, touch **RESET NETWORK SETTINGS**, and follow the onscreen instructions to reset the settings.

**Restore all settings:** This will restore your device's initial network settings, fingerprint data, face data, and lock screen passwords. It won't reset settings for Find my Phone or HUAWEI ID, nor will it delete any data or files.

Open  **Settings**, go to **System > Reset > Reset all settings**, touch **Reset all settings**, and follow the onscreen instructions to reset the settings.

**Restore factory settings:** This will delete all data in your device's memory and storage, including your account settings, system settings, app data, installed apps, music, images, and documents, and restore your Phone to its original factory settings. Back up your data before restoring your device to its factory settings.

Open  **Settings**, go to **System > Reset > Reset phone**, touch **Reset phone**, enter the screen unlock password (if any), and follow the onscreen instructions to reset the settings.

# Device Connection

## Transfer Data between Your Phone and Computer

Use a USB cable to connect your Phone to your computer and transfer data.

### Select USB connection mode

Use a USB cable to connect your Phone to the computer, you can then select a default connection method. You can transfer photos and files between your Phone and computer, or charge your Phone through the USB connection to your computer.

Swipe down from the status bar to open the notification panel, then touch **Settings > Touch for more options** and select a method for connecting your device and your computer.

- **Transfer photos:** Transfer photos between your Phone and computer.
- **Transfer files:** Transfer files between your Phone and computer.
- **Charge only:** Charge your Phone with just a USB cable.
- **Input MIDI:** Use your Phone as a MIDI input device and play music on your computer.

### Transfer data over a USB port

Connect your Phone to your Computer using a USB cable to transfer data and perform other tasks.

- **Transfer files:** Media Transfer Protocol (MTP) is a type of transmission protocol for media files. You can transfer files between your Phone and computer using this connection method. First, install Windows Media Player 11 or later on your computer.

Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer files**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the files on your Phone. You can use Windows Media Player to view the media files on your Phone.


- **Transfer images:** Picture Transfer Protocol (PTP) is a protocol that allows you to transfer images. You can upload and share photos between your Phone and computer using this connection method.

Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer photos**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the images on your Phone.


- **Transfer MIDI data to your Phone:** MIDI (Musical Instrument Digital Interface) is an industry standard audio format for composing music established by electronic instrument manufacturers. Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Input MIDI**. You can then use Phone to receive and process MIDI messages transmitted by other devices.


## Use Huawei Share to Quickly Share Files Between Huawei Devices

You can use Huawei Share to quickly transfer photos, videos and other files between Huawei devices. Huawei Share uses Bluetooth to detect other nearby Huawei devices and then uses Wi-Fi Direct to quickly transfer files without using mobile data.

-  Huawei Share uses Wi-Fi and Bluetooth to transfer data. When Huawei Share is enabled, both Wi-Fi and Bluetooth are automatically enabled.

**Use Huawei Share to send files:** Select the files you want to share and then touch **Share**. To send files, select a receiving device from the list of nearby devices and confirm.

**Use Huawei Share to receive files:** Swipe down from the status bar to open the notification panel, and then touch  to enable Huawei Share. Touch **ACCEPT** when the file transfer notification is displayed. Received files are saved by default to your **Huawei Share** folder in **Files**.

-  No confirmation is required if the two Huawei devices have been logged in using the same HUAWEI ID.



# Security and Privacy


## Face Unlock

### Enroll Your Facial Information and Enable Face Unlock

Face unlock allows you to unlock your Phone quickly and securely, without the need of a password.

- ⚠️ • Face unlock can only be used when the owner account is logged in. It is not supported by PrivateSpace.
- Face unlock is not available if the lock screen password has not been entered for three or more days in a row, or if your Phone has been remotely locked or restarted.
- When using Face unlock, keep your eyes open, and face your Phone straight on from a distance of 20–50 cm (about 8–20 in.). In order to scan your face accurately, avoid using this feature when you are in a dark environment or facing direct light.
- Currently, only one face can be enrolled. Delete the current facial data to enroll again.

**1** Open  **Settings**. Go to **Security & privacy > Face recognition** and enter your lock screen password.

-  If you haven't set up a lock screen password, set one first. Besides the 6-digit PIN, you can set up other types of passwords: **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**.


**2** Selecting **Enable Pick up to wake device to enhance the Face unlock experience** will allow the screen to turn on and unlock when you pick up your Phone and hold it to your face. If you do not need this feature, leave it deselected. Touch **Enroll face**, and enroll your face.

**3** Face unlock modes:

- **Select an unlock method:** On the **Face recognition** screen, touch **Unlock device**. If you select **Direct unlock**, your Phone identifies your facial features and unlocks your screen when the screen is on. If you select **Slide to unlock**, after your Phone identifies your facial features, you can slide the lock screen to unlock. Selecting **Off** will disable Face unlock.
- **Smart display of lock screen notifications:** Enable **Show notifications**. On the lock screen, your Phone hides notification details and displays them only after recognizing the owner's face.
- **Access App lock:** Enable **Access app lock** to access App lock and locked apps using Face unlock.

### Delete Face Data

If you no longer use Face unlock or want re-input your face data, you can delete the current face data.


Open  **Settings**, go to **Security & privacy > Face recognition**, follow the onscreen instructions and enter the lock screen password, then touch **Delete facial data** and follow the onscreen instructions to delete your current face data.


- Facial data will be erased if you reset all settings, restore your device to its factory settings, or set your password to none.
- Facial data will not be erased after online update.

## Fingerprint

### Enroll a Fingerprint


You can enroll a fingerprint on your Phone and then use your fingerprint to unlock your screen or access your Safe or App Lock without a password.

-  Fingerprint unlocking is only available when your unlock method is set to **Pattern**, **PIN** or **Password**. You will be required to unlock your Phone using the screen unlock password after the device is restarted or if your fingerprint is not recognized.
- Before enrolling a fingerprint, make sure your finger is clean and dry.

- 1 Open  **Settings**.
- 2 Go to **Security & privacy > Fingerprint ID > Fingerprint management > Change unlock method**, select **Pattern**, **4-digit PIN**, **Custom PIN** or **Password**, and then follow the onscreen instructions to set an unlock password.
- 3 After enrollment is complete, touch **OK**.

### Add or Modify a Fingerprint

You can enroll a maximum of five fingerprints on your device. You can also delete or rename your fingerprints.


- 1 Open  **Settings**.
- 2 Go to **Security & privacy > Fingerprint ID > Fingerprint management**.
- 3 In the Fingerprint list section, you can:
  - **Rename or delete a fingerprint:** Touch a previously enrolled fingerprint to rename or delete it.
  - **Identify a fingerprint:** Touch **Fingerprint recognition** to identify and highlight enrolled fingerprints.

### Use a Fingerprint to Quickly Access Private Information

Tired of having to enter a password each time you want to access private information in your Safe or a locked app? You can use your fingerprint to quickly access your private information. This method is convenient and safe.


- 1 Open  **Settings**.
- 2 Go to **Security & privacy > Fingerprint ID > Fingerprint management**.


Now you can:


- **Use a fingerprint to access the Safe:** Open  **Files** and touch **Safe**, you can then access the Safe using your fingerprint.
- **Use a fingerprint to access apps locked by App lock:** You can now open locked apps on your home screen using your fingerprint.

## Enable or Disable Location Services

After obtaining the location information permission, apps can obtain your location at any time. If your location information is obtained by a malicious app, you may be at risk of harm or fraud. You can enable or disable location services as needed and regularly monitor and manage the allowed permissions for your apps to protect your privacy and security.


**Enable or disable location services:** Open  **Settings**, go to **Security & privacy > Location access**, and enable or disable **Access my location**. When location services are disabled, aside for pre-installed software, your Phone will stop all apps and services from collecting and using your location information. The system will ask you to enable location services when you attempt to use these apps.


-  Features may vary depending on your carrier.
  - Huawei only uses location data to provide you with necessary functions and services, not for the purpose of identifying and collecting your private information.

**Set indoor positioning assistance:** Open  **Settings**, go to **Security & privacy > Location access > Advanced settings**, and enable or disable Wi-Fi and Bluetooth scanning. Scanning Wi-Fi networks and Bluetooth devices will improve the accuracy of indoor positioning.

## Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your Phone or unlock the screen, you will be asked to enter your App lock password when opening these apps. App lock adds an extra layer of protection for your private information and prevents unauthorized access to important apps on your Phone.

**Enable App lock:** Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

**Set your App lock password:** Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.


# Wi-Fi and Network


## Wi-Fi

### Transfer Data Using Wi-Fi Direct



Wi-Fi Direct allows you to rapidly transfer data between Huawei devices. Wi-Fi Direct is faster than Bluetooth and does not require devices to be paired. It is better suited to transferring large files over short distances.




**Send files with Wi-Fi Direct:** Open  **Files**, touch and hold a file you want to send, and go to **More > Share > Wi-Fi Direct**. When another device is detected, touch its name to establish the connection and begin file transfer.

**Receive files with Wi-Fi direct:** Enable **Wi-Fi**. In the Wi-Fi settings screen, touch  **> Wi-Fi Direct** to enable detection. When you receive an incoming file prompt, touch **Accept** to begin the transfer. The received file will be saved under **Files** in the **Wi-Fi Direct** folder by default.

### Turn Wi-Fi+ On or Off


Open  **Settings**, go to **Wireless & networks > Wi-Fi >  > Wi-Fi+**, and choose to enable or disable **Wi-Fi+**.

-  Your Phone will automatically connect to the optimal network available after Wi-Fi+ is enabled.
- Wi-Fi+ may automatically switch to your mobile data network, depending on strength of Wi-Fi+ signals in your area. Note that using mobile data to download or view videos and other large files may incur additional data usage fees. To avoid excessive data charges, purchase an appropriate data plan.
- After Wi-Fi+ is enabled, even if Wi-Fi is disabled manually, the device may automatically switch to a Wi-Fi network when it detects a viable Wi-Fi network you have previously connected to.




## Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

### Connecting to a Wi-Fi network

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold  to open the Wi-Fi settings screen.
- 3 Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.


### Connecting using mobile data


-  Before using mobile data, ensure that you have a data plan with your carrier to avoid incurring excessive data charges.
- 1 Swipe down from the status bar to open the notification panel.
  - 2 Touch  to enable mobile data.
-  To save battery power and reduce data usage, disable your mobile data connection when you don't need it.

# Apps and Notifications

## App Twin: Log In to Two Social Media Accounts at Once

Have you ever wished you could log in to two WeChat and Facebook accounts on your Phone without the hassle of constantly switching between them? App twin lets you log in to two WeChat and Facebook accounts at the same time, allowing you to keep your work and private life separate.


-  The App twin feature is currently limited to WeChat, QQ Messenger, LINE, Facebook, Snapchat, WhatsApp, and Messenger. Please download and install the latest version of these apps before using the App twin feature.


Touch  **Settings**, and go to **Apps > App twin**. Enable App twin as required.

When App twin is enabled for an app, two app icons are displayed for the app on the home screen. This means that you can log in to two accounts at the same time. Touch and hold the twinned app icon on the home screen to quickly disable App twin.


## Customize App Permissions to Use Your Phone Your Way

Worried about third-party apps obtaining too many important permissions and disclosing your personal information? You can monitor the permissions of each app and deny unwanted permissions.

-  Disabling a permission may cause an app function to become unavailable. For example, if the location permission for a map app is disabled, the app will be unable to provide you with location and navigation services.

**Set app permissions:** Want to deny unwanted permissions? Open  **Settings**, and go to **Apps > Apps**, select the app and touch **Permissions** on the **App info** screen and then enable or disable the unwanted permissions.

**Check and modify permissions:** Want to check which apps are allowed important permissions?

Open  **Settings** and touch **Apps > Permissions**, select the permission you want to view and touch the switch next to an app to allow or deny the permission for that app.

# Sound and Display


## Set Up Do Not Disturb Mode

Do not disturb mode blocks calls from strangers and only notifies you when you receive calls and messages from chosen contacts.

Open  **Settings**, then go to **Sounds > Do not disturb** to do the following:

- **Do not disturb:** Touch **Do not disturb** to immediately enable or disable this function.
- **Schedule rule:** Prevent interruptions at set times, such as weekends or evenings. Touch **Scheduled** to set the time period and repeat cycle.
- **Allow calls from important contacts:** Select **Calls**, then select **Contacts only** or **Favourites only**.
- **Allow messages from important contacts:** Select **Messages**, then select **Contacts only** or **Favourites only**.
- **Allow repeated calls to ring:** **Repeated calls** is enabled by default. Your device will ring when the same phone number calls more than once within 3 minutes.

## Use Shortcuts to Access Frequently Used Features

-  If you touch and hold an app icon and no shortcut is created, the app does not support home screen shortcuts.

Each app supports up to four frequently used features. These are preset by the app and cannot be changed.


**Quickly access frequently used app features:** Touch and hold an app icon, and then touch a frequently used feature to access it. For example, to take a selfie, touch and hold the Camera icon, and then touch **Selfie** in the pop-up menu to create a selfie shortcut.

**Add shortcuts to your home screen:** Touch and hold an app icon on your home screen to bring up the menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut. For example, you can add a shortcut for the camera's selfie feature to the home screen.

# Smart Assistance

## Access Phone Functions from Anywhere with Navigation Dock


In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your Phone. You can enable the Navigation dock feature on your Phone to avoid using navigation buttons and to comfortably operate your device with one hand.

Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back**: Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.
- **Home**: Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps**: Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.

## Enable or Disable Mistouch Prevention

Enable Mistouch prevention to prevent unintended operations resulted from accidental touches on the screen.


Open  **Settings**, touch **Smart assistance**, then enable or disable **Mistouch prevention** as required.



# System

## Change Input Method


Change the input method on your Phone according to your personal preference.


**Switch input method:** Open  **Settings**, go to **System > Language & input > Default keyboard**, and select an input method.

## Accessibility

### Enable Color Correction



Color correction enables your device to compensate for color blindness.

 When color correction is enabled, users with normal color vision may have difficulty viewing some colors.


Open  **Settings**, go to **Smart assistance > Accessibility > Color correction**, then enable **Color correction**. Touch **Correction mode** to select the required color correction mode.

### Use Select to Speak

Enable Select to Speak to hear selected screen content read aloud.

Open  **Settings**, go to **Smart assistance > Accessibility > Select to Speak**, enable **Select to Speak**, and touch **OK**. The  icon will be displayed in the lower right corner of your screen. You can also:

**Read text on images:** Touch **More settings**, then enable **Read text on images**.


To use **Select to Speak**, touch the  icon, then tap texts or images with text on your screen to hear content read aloud.

 You need to use the three-key navigation method for this feature to work.

## General Settings

### Change Your System Language

You can change the system language on your Phone as needed.

Open  **Settings**, go to **System > Language & input > Language and region**, then select the language you want to use. If the language you want to use is not listed, touch **Add language** to search for additional languages. You can also touch **Region** to select the country/region. The system interface is displayed according to the local habits of the selected region.

## Set the System Date and Time


If you travel abroad or change your SIM card, your Phone will automatically display the date and time provided by the local mobile network. You can also adjust the date and time manually, change the time format, or set dual clocks on your lock screen.

Open  **Settings**, and go to **System > Date & time**. From here you can:

- **Change the date and time:** Enable **Set automatically** to sync your device's date and time with that of your mobile network. Disable **Set automatically** to set your date and time manually.
- **Change the time zone:** Enable **Set automatically** to sync your device's time zone with that of your mobile network. Disable **Set automatically** to set your time zone manually.
- **Change the time format:** Enable **24-hour time** to set your time format to 24 hours. Disable **24-hour time** to set your time format to 12 hours.
- **Set dual clocks on your lock screen:** When you are roaming outside of your home country, your Phone will automatically display the local date and time provided by the local mobile network. Enable **Dual clocks** and set **Home city** to display dual clocks on your lock screen. One clock will display the local time and the other clock will display the time in your home country.

## Set Scheduled Power On/Off

Use the Schedule power on/off feature to power your Phone on and off at set times in order to save power and prevent interruptions while resting.


Open  **Settings**, go to **Smart assistance > Scheduled power on/off**, enable **Scheduled power on/off**, then set the power on and power off times as well as the repeat cycle. Your device will power on and off automatically at the selected times.

To disable **Scheduled power on/off**, toggle the switch off.

## View Memory and Storage Status

Unsure of how much memory and storage you have left after using your Phone for a long time? You can view your Phone's memory and storage information to help you monitor your memory and storage use and decide whether to perform a cleanup.

 Not all devices support memory cards.

Open  **Settings**, and touch **Storage** to view the memory usage, and free up more space in a timely manner based on the available storage space.

**Clean up space:** Select **CLEAN UP**, you can view the usage details of apps. Based on the scan result, you can also manually clean up the system as recommended or specify items to clean up.

# System Update

## Update the Phone System Online

- Before installing the update, connect your Phone to the Internet. Online updates consume mobile data, so it is recommended that you use a Wi-Fi network.
- Make sure that the battery level remains above 30% during the update.
- Using unauthorized third-party software to update your Phone may damage your Phone or put your personal information at risk. You are advised to update your Phone online or bring your Phone and proof of purchase to an authorized Huawei Customer Service Center for updates.
- Back up important data before updating your Phone.
- After the update, certain third-party apps, such as e-banking and game apps, may be incompatible with the new system. Regularly update such third-party apps to fix compatibility issues.

**1** Open  **Settings**.

**2** Go to **System > Software update**. When the system detects a new version, go to **New version > DOWNLOAD AND INSTALL**.

 To disable system updates, go to  and disable **Auto-download over Wi-Fi**.

Phone updates take some time. Do not perform any operations during the update. After an update, your Phone will automatically restart.

# Legal Notice





## Legal Notice

**Copyright © Huawei Technologies Co., Ltd. 2019. All rights reserved.**

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

### Trademarks and Permissions

 HONOR,  HUAWEI,  and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd. Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

**Qualcomm® aptX™**  and **Qualcomm® aptX™ HD**  are registered trademarks of Qualcomm Inc. (NASDAQ: QCOM).

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

### Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

### Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

## **DISCLAIMER**

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

## **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

## **Personal Information and Data Security**

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorized use.
- Set your device screen to lock and set a password or unlock pattern.
- Periodically back up personal information stored on your SIM card, memory card, or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorized access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or authorized third-party application providers.
- Using unauthorized third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Huawei.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

## More Information

Read the Quick Start Guide included with your phone.

Touch **Settings** > **System** > **About phone** > **Legal** to read the legal information.

Visit <http://consumer.huawei.com/en/> for more information.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Note: Remember the Google account your phone last logged in to. During an untrusted factory settings restoration or microSD card-based update, Google's anti-theft mechanism requires you to enter the Google account your phone last logged in to on the startup navigation screen for identity authentication. Your phone can properly power on only after the identity authentication passes.

Please visit <http://consumer.huawei.com/en/support/hotline> for recent updated hotline and email address in your country or region.

Model: JSN-L21  
JSN-L22  
JSN-L23

EMUI 9.1\_01