

Visit Our Website



**SCAN ME**  
PyleUSA.com

# PYLE

PyleUSA.com



## ***PBMSPG1BK***

### **Bluetooth BoomBox Speaker System**

# ***USER GUIDE***

**Please take the time to read this manual carefully before you begin using your new device. Any future revisions of the manual will not be announced again, and we are not responsible for any consequences caused by faults or oversights in this manual.**

### ***FEATURES:***

- Portable Bluetooth Speaker
- Compact & Portable Radio System
- Travel-Friendly Boom Box Speaker Style
- Digital FM Radio with Auto-Search
- Built-in Rechargeable Battery
- Full Range Sound Reproduction
- Ported Enclosure for Extended Bass
- MP3 Digital Audio File Playback
- Connect & Stream Audio from External Devices
- USB Flash & Micro SD Memory Card Readers
- Aux (3.5mm) Input Jack
- Built-in Digital Audio Amplifier
- Convenient Carry Handle for Travel
- Front Panel Button Audio Control Center
- Rugged & Durable Construction Housing Design
- Portable Home Speaker System for Indoor / Outdoor Use

### ***BLUETOOTH CONNECTIVITY:***

- Built-in Bluetooth for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc.
- Bluetooth Version: 5.0
- Bluetooth Network Name: 'PYLEUSA'
- Bluetooth Password, If Prompted: '0000' (4 Zeros)
- Wireless Range: Up to 35'+ ft.

## **WHAT'S IN THE BOX:**

- Portable Bluetooth Speaker
- Type C Charging Cable
- Audio (3.5mm) Connection Cable

## **TECHNICAL SPECS:**

- Peak Power: 11W
- RMS Power: 9.5W
- Speaker Type: Portable Radio Boombox
- Sound System: 4" Tweeter Speaker
- Impedance: 4 Ohm
- Frequency Response: 130-13kHz
- S/N Ratio: 65dB, +/-2dB
- SPL: 89dB (1W/M)
- T.H.D.: <1%
- USB Interface Type: Micro, 2.0
- Digital Audio File Support: MP3, WMA
- Battery Life: Up to 2+ Hours
- Maximum USB/Micro SD Flash Memory Support: Up to 32GB
- Construction Material: Engineered LG, Metal Alloy
- Rechargeable Battery: 3.7V Li-ion, 1500mAh - 5.55Wh - 42.0g
- Power Supply: DC 5V
- Total Speaker Size (L x W x H): 11.7" x 5.0" x 5.6" -inches

### **California Prop 65 Warning**




#### **WARNING:**

This product contains Cadmium (Cd) which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

## PRODUCT DESCRIPTION

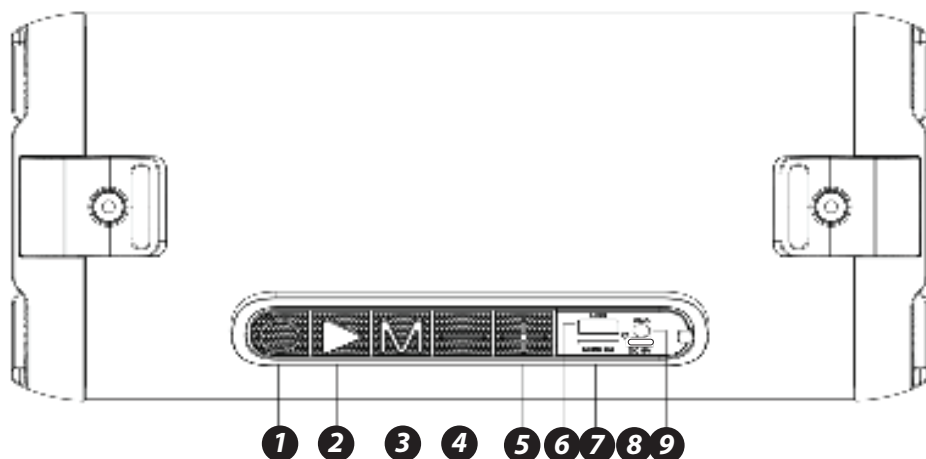

- |  |                         |
|--|-------------------------|
| 1. Power ON/OFF  | 5. Forward/Volume Up    |
| 2. Play/Pause  | 6. USB port             |
| 3. MODE (Wireless BT Switch,<br>USB disk, FM and AUX-IN state) | 7. Micro SD slot        |
| 4. Backward/Volume down  | 8. Type C Charging port |
|  | 9. AUX IN               |

### WIRELESS BT STREAMING:

1. Turn the power button to "ON". You will hear a "**Bluetooth Device Ready To Pair**" tone, and the LED light will blink quickly. The speaker is now in pairing mode.
2. Activate Wireless BT on your mobile phone and search for the device named "**PYLEUSA**", then connect to it. Once paired successfully, the Blue LED will blink slowly, and you will hear a tone saying "**Bluetooth Device Connected Successfully**".
3. Play music from your mobile phone and enjoy.
4. Use the Forward or Backward button on the device or on your mobile phone to select songs you like.
5. Use the Play/Pause button on the device or on your mobile phone to play/pause the music.
6. Press and hold the Forward or Backward button to adjust the volume up and down or adjust the volume on your mobile phone.

## ***PLAYING MUSIC FROM USB DISK & MICRO SD CARD:***

1. Turn the Power button to "ON".
2. Insert a Micro SD card or USB flash disk into the slot. The speaker will make a tone indicating "**Music Play Mode**", and play the stored music automatically.
3. While in playing mode, short press the Forward or Backward button to select songs you like. Press and hold to adjust the volume up and down.
4. Press Play/Pause to play or pause.

### **Remark:**

Under Wireless BT playing mode, inserting a Micro SD or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the **MODE** button to switch to Wireless BT mode again.

## ***FM RADIO:***

1. In FM radio state, the provided audio cable is the antenna.  
Please insert the audio cable to get the best FM signal before use.
2. Turn the power button to "ON", then press the "**MODE**" button.  
The speaker will prompt "**The Radio Mode**" when entering FM state.
3. While in playing mode, short press the "**Play/Pause**" button to auto-search the FM Channel and store it automatically.
4. Use the Forward or Backward button to change the stored FM channel.

### **TWS FUNCTION:**

1. Turn ON two identical speakers you want to pair. Please note that they must have the same BT pairing name, both under BT mode. You only need to set up one of the two units.
2. Press and hold the "**PLAY/PAUSE**" button for around 4 seconds. The speaker will make a tone "**di**" to start pairing and will repeat the "**di**" voice three times once successfully paired.
3. Connect Wireless BT with your mobile phone to play music through the two paired speakers to create a more powerful surround sound effect.
4. If you want to exit the TWS mode, press and hold the "**TWS**" button (of the unit that you set at the beginning) again to exit the TWS function.

### **Remark:**

You can connect the TWS function through either Wireless BT or AUX, but if you connect your mobile phone via the provided audio cable, you cannot switch to Wireless BT mode by pressing the Mode button.

### **AUX-IN:**

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "**Line Out**" to the "**Aux In**" of this device. You will hear an "**Aux input mode**" tone once the cord is inserted.

When using an external device, all functions can be controlled by the external device except pause.

## Remarks:

1. To turn the unit ON, press and hold the Power button for 3 seconds.
2. Press the MODE button to switch between different modes.  
The order is Wireless BT, USB disk, Micro SD, FM radio, and AUX-IN.
3. The default volume is set at 50% of the maximum volume.
4. Turn the power button to "OFF" if not in use.

## HOW TO CHARGE:

1. The charger is not included in the accessories. Please use a Universal 5V/1A charger to charge this device. We are not responsible for any damage caused by using another charger.
2. Power off the unit, then insert the provided Type C charging cable into the charging slot of the unit. Connect the other end to your PC or another charger with a 5V output.
3. Charging time should be between 3 to 5 hours. The indicator light will be red while charging and will switch off when fully charged.

**Note:** When playing music during charging, please set the volume to the middle. For some music with heavy bass, the charger may not be able to handle the high current temporarily under maximum volume.

4. To prolong the life of the battery, please do not charge for more than 8 hours.

## Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

## Start Here



Model Number:  
**PBMSPG1BK**  
[PyleUSA.com/pages/register](http://PyleUSA.com/pages/register)

# PYLE

PyleUSA.com



**Questions or Comments?**

**We are here to help!**

**Phone: 1.718.535.1800**

**[PyleUSA.com/ContactUs](https://PyleUSA.com/ContactUs)**