
# OPERATOR'S MANUAL DUAL FUEL GENERATOR

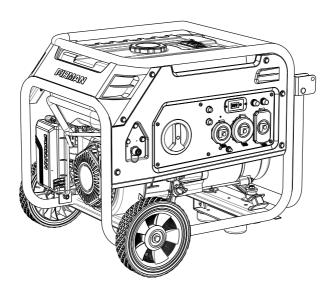









H03655
Rev Level:01

Record product information to reference when ordering parts or obtaining warranty coverage.

DO NOT RETURN TO STORE!
CALL US FIRST 1-844-347-6261
FOR QUESTIONS OR SERVICE INFORMATION

SERIAL	NUMBER:	

<b>PURCHASE</b>	DATE:	

# **Table of Contents**

Introduction	1
Features and Controls	5
Operation	.10
Maintenance - Storage	. 23
Troubleshooting- Specifications	
Parts Diagrams - Parts Lists - Wiring Diagram	. 32
Service - Warranty	

# **REGISTER YOUR PRODUCT**

Register your product using the QR code provided or at www.firmanpowerequipment.com.



### INTRODUCTION

Thank you for purchasing a FIRMAN generator. You have selected a high-quality, precision engineered generator set designed and tested to give you years of satisfactory service. This generator is dual fuel and capable of running on gasoline and liquid petroleum gas (LPG). This generator is not intended to be run unattended or to supply power to life safety support.

This manual contains safety information to make you aware of the hazards and risks associated with generator products and how to avoid them. This generator is designed and intended only for supplying electrical power for operating compatible electrical lighting, appliances, tools and motor loads, and is not intended for any other purpose. It is important that you read and understand these instructions thoroughly before attempting to start or operate this portable generator. Save these original instructions for future reference.

All information in this publication is based on the latest production information available at the time of approval for printing. The manufacturer reserves the right to change, alter or otherwise improve the generator and this documentation at any time without prior notice.

SIGNAL WORDS						
<b>△</b> DANGER	<b>△ WARNING</b>	<b>△</b> CAUTION	NOTICE			
Indicates a hazard which, if not avoided, will result in death or serious injury.	which, if not avoided,		Indicates information considered Important, but not hazard-related.			



Safety Alert Symbol-Indicates a potential personal injury hazard.



Operator's Manual- Failure to follow warnings, instructions and operator's manual could result in death or serious injury.



Toxic Fumes- Engine exhaust contains carbon monoxide, a poisonous gas that will kill you in minutes. You cannot smell it or see it.



Generator could cause electrical shock resulting in death or serious injury.



Fire-Fuel and its vapors are extremely flammable which could cause burns or fire resulting in death or serious injury. Engine exhaust could cause fire resulting in death or serious injury.



 $Hot \, Surface \hbox{-}\, Muffler \, could \, cause \, burns \, resulting \, in \, serious \, injury.$ 

### INTRODUCTION



WARNING! This product can expose you to chemicals including gasoline engine exhaust, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

This outdoor generator can be used to power outdoor items using extension cords. **NOTICE** If you have questions about intended use, contact FIRMAN customer service. This portable generator is designed to be used only with FIRMAN authorized parts.


### **System Ground**

The generator neutral is floating, which means that the AC stator winding is isolated from the grounding fastener and the AC receptacle ground pins. On a floating neutral generator the AC receptacle ground pins are not functional. Electrical devices, such as a ground fault circuit interrupter (GFCI), requiring a functioning AC receptacle ground pin will not operate.

### **Compliance Requirements**

There may be Federal or State regulations, local codes, or ordinances that apply to the intended use of the generator. Consult a qualified electrician, electrical inspector, or the local agency having jurisdiction. This generator is not intended to be used at a construction site or similar activity as defined by NFPA 70-2020 (NEC) section 590.6.

### To Restore Power Using Extension Cords

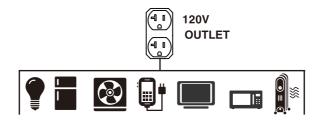

1. Only use grounded cords marked for outdoor use rated for your loads.

To provide power using extension cords			
Total	Minimum Gauge, Outdoor Rated		
Amperage	<b>Up to 50 FT (15</b> m)		
Up to 13A	6		
Up to 15A	14		
Up to 20A	12		
Up to 30A	10		


- 2. Follow cord safety instructions.
- 3. Install carbon monoxide alarm(s).
- 4. When operating portable generator with extension cords, make sure portable generator is located in an open, outdoor area, at least 20 ft. (6 m) from occupied spaces with exhaust pointed away.
- 5. Extension cords running directly into your home, powering indoor items IS NOT RECOMMENDED.



DANGER! Engine exhaust contains carbon monoxide, a poisonous gas that will kill you in minutes. You cannot smell it, see it, or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas.

- Extension cords running directly into the home increase your risk of carbon monoxide poisoning through any openings.
- If an extension cord running directly into your home is used to power indoor items, the operator recognizes that this increases the risk of CO poisoning to people inside the home and assumes that risk.

### **FEATURES AND CONTROLS**

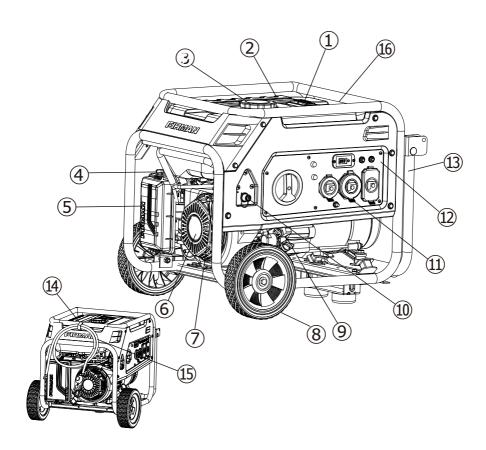


- 1- Fuel Gauge
- 3- Fuel Cap
- 4- Choke Lever(behind air filter box) 12- Control Panel
- 5- Air Filter
- 6-208cc FIRMAN OHV Engine
- 7- Recoil Starter
- 8-8.0"(20.3cm) Flat Free Wheel

- 9-Oil Filler Cap
- 2-5.0 Gallon(19L) Capacity Fuel Tank 10-LPG Hose Connector(Inlet)
  - 11- Outlet Cover

  - 13- Handle
  - 14- Hose Holder
  - 15-LPG Hose with Regulator
  - 16- Data Decal/Series Number

<sup>\*</sup>We are always working to improve our products. Therefore, the enclosed product may differ slightly from the image on this page.

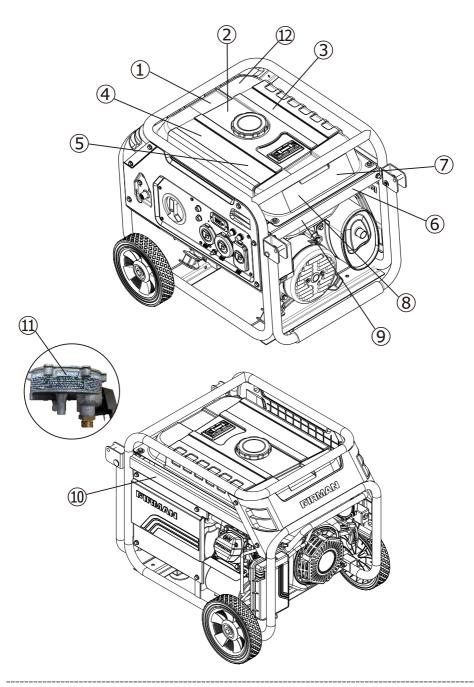

### FEATURES AND CONTROLS

# **A DANGER**



Monoxide alarms inside home.



Tampering with the CO ALERT system will cause Carbon Monoxide poisoning, Install Carbon



Generator could cause electrical shock. . Do not run indoors to avoid wet conditions. . Do not run in rain or wet weather.



Hot exhaust gases could cause fires. Keep at least 5ft. (1.5m)

clearance from any combustibles or structures, incluing overhead.

# JGRO

El incumplimiento de las advertencias, las instrucciones y el manual del operador provocará la muerte o lesiones graves.



envenenamiento por monóxido de carbono. Instale detectores de Monóxido de Carbono dentro de su casa.

El generador podría producir una descarga eléctrica. No utilice en interiores para evitar condiciones de

humedad. No utilice en la

Iluvia o en condiciones de

humedad.

Los gases calientes de salida podrían causar incendios. Manténgase a una distancia mínima de 1,5m de cualquier combustible o estructura incluyendo lugares elevados.

PELIGRO

Utilizar un generador en interiores PUEDE PROVOCARLA

Le non-respect des avertissements, des instructions et du manuel de l'opérateur entraînera la mort ou des blessures graves.

Toute altération du système D'ALERTE du monoxyde de carbone causera un empoisonnement au monoxyde de carbone. Installez des détecteurs demonoxyde de carbone à l'intérieur de la maison

La génératrice pourrait provoquer un choc électrique • Ne faites pas fonctionner à l'intérieur pour éviter les conditions humides • Ne faites pas fonctionner sous la pluie ou par temps pluvieux.

Les gaz d'échappement chauds peuvent provoquer des incendies. Gardez au moins 5 pi (1,5 m) de dégagement de tout comb-ústible ou de toute structure, v compris au-dessus.



### DANGER

Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide This is a poison you cannot see or smell



NEVER use inside a home or garage, EVEN IF doors

 
and windows are open



Only use OUTSIDE and far away from windows.



No utilice NUNCA el gen-erador en el interior de su hogar ni enun garaje, NI SIQUIERA con las puertas y ventanas abiertas.



Utilice sólo AL AIRE LIBRE y lejos de ventanas, puertas y orificios de

1⊞

ventilación.

### 🛕 DANGER

Utiliser un générateur à l'intérieur PEUT VOUS TUER EN QUELQUES MINUTES. Les gaz d'échappement du nérateur contiennent du monoxyde de carbone. Čeci est un poison que vous ne pouvez ni voir ni sentir.



et ouvertures.

À n'utiliser qu'à L'EXTÉRIEUR et à distance de toutes fenêtres, portes



### NOTICE **AVISO AVIS**

doors,and vents

Operate, store and transport surface

on firm level Tilting can cause fuel spillage.

Operar, almacenar v transportar en una superficie firme y nivelada · Inclinarlo puede causar un derrame de

combustible.

Faire fonctionner entreposer et transporter sur une surface plane et ferme. Le basculement peut provoquer des déversements de carburant

(6)

**Point** engine exhaust away from all occupied structures.

Mantenga los gases de escape del motor leios de instalaciones ocupadas.

(is

NF JAMAIS utiliser dans

un garage ou à l'intérieur,

MÊME avec les portes et

les fenêtres ouvertes.

**Pointer** l'échappeme nt du moteur loin de toutes les structures occupées.





# **AUTOMATIC SHUTOFF - YOU**

MOVE GENERATOR TO AN OPEN OUTDOOR AREA, POINT EXHAUST AWAY FROM HOMES. DON'T RUN GENERATOR IN ENCLOSED AREAS (e.g. NOT IN HOUS OR GARAGE). AIR OUT PREMISES (OPEN WINDOWS AND DOORS) BEFORE REOCCUPYING PROPERTY.





### **CORTE AUTOMÁTICO - DEBE** REALIZAR LO SIGUIENTE:

MUEVA EL GENERADOR A UN ÁREA ABIERTA AL AIRE LIBRE, APUNTE EL ESCAPE LEJOS DE LAS CASAS, NO LITHLICE EL GENERADOR EN ÁREAS. CERRADAS (EN CASA O EL GARAJE) VENTILE LAS INSTALACIONES (VENTANAS Y PUERTAS ABIERTAS) ANTES DE VOLVER A OCUPAR LA PROPIEDAD

# ARRÊT AUTOMATIQUE

DÉPLACEZ LA GÉNÉRATRICE DANS UN ESPACE EXTÉRIEUR OUVERT, ÉLOIGNEZ L'ÉCHAPPEMENT DES MAISONS, NE FAITES PAS FONCTIONNER LA GÉNÉRATRICE DANS DES ZONES FERMÉES (P. EX. PAS DANS LA MAISON NI DANS LE GARAGE). AÉREZ LES LIEUX (FENÊTRES ET PORTES OLIVERTES) AVANT DE RÉINTÉGRER LA PROPRIÉTÉ

ALLEZ À L'AIR FRAIS ET OBTENEZ DE L'AIDE MÉDICALE EN CAS DE MALADIE D'ÉTOLIBOISSEMENT OU DE FAIBLESSE



UBÍQUESE EN UN LUGAR DONDE CORRA AIRE FRESCO Y BUSQUE AYUDA MÉDICA SI SE SIENTE MAI MAREADO O DÉBIL



### NNTICE *AVISO*

To prevent engine damage the spark arrester should be cleaned every 100 hours. See Operator's manual.

Para evitar daños en el motor, el supresor I de chispas debe limpiarse cada 100 horas. Consulte el manual del operador.

Pour éviter d'endommager le moteur, le pare-étincelles devrait être nettoyé toutes les 100 heures. Éloignez l'échappement du moteur des structures occupées. Voir le manuel de l'utilisateur.



### OR RESIDENTS OF CALIFORNIA PARA LOS RESIDENTES DE CALIFORNIA

MARNING: This product and the engine exhaust from this product can expose you to chemicals including CO, which are known to the State of California to cause cancer or cause birth defects and other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

ADVERTENCIA: Este producto y el escape del motor de este producto pueden exponerlo a productos químicos, incluido CO que en el estado de California son conocidos por causar cáncer o causar defectos de nacimiento u otros daños reproductivos. Para obtener más información, vaya a www.P65Warnings.ca.gov.

AVERTISSEMENT: Ce produit et l'échappement du moteur de ce produit peuvent vous exposer à des produits chimiques, y compris le CO, qui sont connus par l'État de Californie pour causer le cancer ou causer des

POUR LES RÉSIDENTS DE LA CALIFORNI

malformations congénitales et autres problèmes de reproduction. Pour plus d'informations, visitez www.P65Warnings.ca.gov.



### **▲ WARNING**

Liquid Petroleum gas (LPG) is extremely flammable which could cause burns or fire resulting in death or serious injury If you smell gas, close tank valve and call qualified plumber. Do not place LPG source in the path of muffler outlet

### **AADVERTENCIA**

El Gas Licuado de Petróleo (GLP) es extrmada-mente inflamable, lo que puede causar quemaduras o incendios resultantes en la muerte o lesiones graves. Si huele gas, cierre la válvula del tanque íame a un plomero calificado. No coloque la fuente de GLP en la trayectoria de salida del silenciador.

A AVERTISSEMENT

Le gaz de pétrole liquide (GPL) est extrêmement Inflammable et pourrait causer des brûlures ou un incendie entraînant la mort ou des blessures graves. Si vous sentez une odeur de gaz, fermez le robinet du éservoir et appelez un plombier qualifié. Ne placez pas la source de GPL dans la traiectoire de la sortie du silencieux



# **▲ WARNING**

resulting in serious injury.|quemaduras resultando en Do not touch hot parts Avoid hot exhaust gases

Muffler could cause burns El silenciador podría causar una lesión grave.

 No toque las partes calientes Evite los gases de escape calientes

# **▲ AVERTISSEMEN**

Le silencieux peut causer des brûlures et des blessures graves. Ne pas toucher aux pièces chaudes. Éviter les gaz d'échappement chauds.



### WARNING

This is a NEGATIVE PRESSURE REGULATED gas control. Replace ONLY with the same model number. Carbon monoxide poisoning. fire or explosion could result from improper control replacement.

**ADVERTENCIA** 

Este es un control de gas de PRESIÓN NEGATIVA REGULADA. Reemplace UNICAMENTE con el mismo número de modelo. El

envenenamiento por monóxido de carbono, incendio o explosión podrían ser el resultado de un reemplazo inadecuado del controlador.

**AVERTISSEMENT** Ceci est un contrôle de gaz À

PRESSION NÉGATIVE RÉGULÉE, Remplacez UNIQUEMENT par le même numéro de modèle. Un


empoisonnement au monoxyde de carbone, un incendie ou une explosion pourrait résulter d'un remplacement inadéquat du contrôle.





### **FEATURES AND CONTROLS**

### **Control Panel**

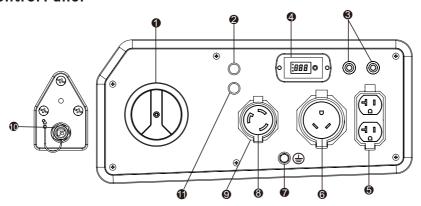

NOTICE Total power drawn from all receptacles must not exceed the data decal rating.

- 1. Fuel Selector Switch Use to select and turn on gasoline or LPG fuel source. Fuel (gasoline) valve is closed when the switch is on "OFF" or "LPG" positions. Engine switch is on when the switch is on "GAS" or "LPG" positions.
- 2. Indicator Light When the fuel selector switch is turned to the "GAS" or "LPG" position, the indicator light will become RED up to 4 minutes(before goes off). Starting the engine successfully during these 4 minutes will turn the indicator light GREEN. You must have a solid red indicator light to be able to start the generator. The generator cannot be started during battery power saving mode unless the fuel selector switch is turned to the "OFF" position and then turned back to the "GAS" or "LPG" position.

See Indicator light-Battery power Saving Mode section for more information.

3. Circuit Breakers - The receptacles are protected by AC circuit protectors. If the generator is overloaded or an external short circuit occurs, a circuit protector may trip. If tripping occurs, disconnect all electrical loads and determine the cause before attempting to continue using the generator. Reset any tripped circuit protectors.

If multiple receptacles are used at the same time, the total current must be kept with-in the portable generator data decal rating.

- 4. 3-1 Data-Minder (Multi-Meter) Push the SELECT button to show the Voltage, Hertz and running hours.
- 5. 120V, 20A Duplex NEMA 5-20R (Not GFCI protected)

A maximum of 20 Amps current may be drawn from this duplex receptacle.

6. 120V, 30A RV - NEMA TT-30R

A maximum of 30 Amps current may be drawn from this receptacle.

- 7. **Ground Terminal** Consult an electrician or authority having jurisdiction for local grounding requirements.
- 8. 120V, 30A Twist Lock NEMA L5-30R

A maximum of 30 Amps current may be drawn from this receptacle.

- 9. Outlet Cover Protects the receptacles from dust and debris.
- 10. LPG Hose Connector(Inlet) Used to connect LPG hose to generator.
- 11. CO Alert™ Carbon Monoxide (CO) Shutdown Indicator Light Indicates the engine shutdown due to carbon monoxide accumulation around the generator or a CO Alert system fault occurred.

### 1.Location



DANGER! Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You CANNOT smell it, see it, or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas.

- Operate portable generator only outdoors, at least 20 ft.(6 m) from occupied spaces with exhaust pointed away to reduce the risk of carbon monoxide accumulating.
- Install battery-operated carbon monoxide alarms or plug-in carbon monoxide alarms with battery back-up according to the manufacturer's instructions. Smoke alarms cannot detect carbon monoxide gas.
- Do not run this portable generator inside homes, garages, basements, crawlspaces, sheds, or
  other partially-enclosed spaces even if using fans or opening doors and windows for ventilation.
   Carbon monoxide can quickly build up in these spaces and can linger for hours, even after this
  product has shut off.
- If you start to feel sick, dizzy, weak or your home's carbon monoxide alarm sounds, get to fresh air right away. Call emergency services. You may have carbon monoxide poisoning.

### Carbon Monoxide Alarm(s)A

Install carbon monoxide alarms inside your home. Without working carbon monoxide alarms, you will not realize you are getting sick and dying from carbon monoxide poisoning.




To better educate yourself about all carbon monoxide risks, go to www.takeyourgeneratoroutside.com.A

### **Reduce Risk of Fire**



**WARNING!** Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death or serious injury.

- Keep portable generator at least 5 ft. (1.5 m) from any structure, trees or vegetation over 12 in. (30 cm) in height.
- Select an outdoor site that is dry and protected from the weather. Do not move portable generator indoors to protect it from the weather.
- Do not locate the portable generator under a deck or other similar structure that may confine heat and airflow.

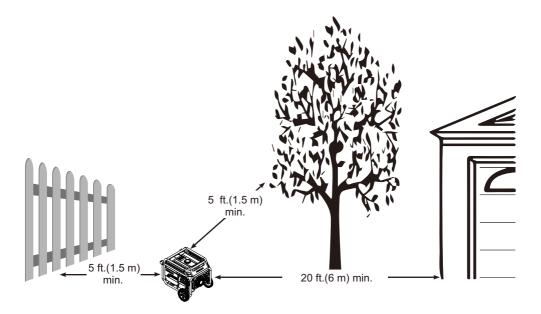


# 2. Oil and Gasoline


# **Add Engine Oil**

We recommend using FIRMAN SAE 10W-30 API SJ oil for best performance. Other high-quality detergent oils (API SJ or higher) are acceptable. Do not use special additives. Ambient temperature determines the proper oil viscosity for the engine. Use the chart to select the proper oil for the outdoor temperature range expected.

**NOTICE** Do not attempt to crank or start the engine before it has been properly filled with the recommended type and amount of oil. Damage due to operation with no oil will void your warranty.

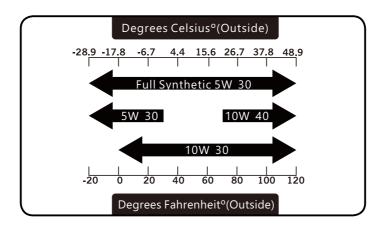


- 1. Place generator on a flat, level surface.
- 2. Clean area around oil fill and remove yellow oil fill cap/dipstick.
- 3. Wipe dipstick clean.

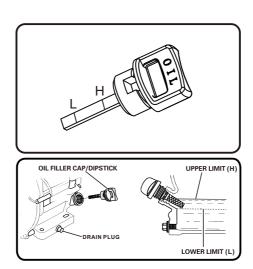

### **OPERATION**

4. Using oil funnel, slowly pour contents of provided oil bottle into oil fill opening until oil reaches upper limit "H" mark on the dipstick. Be careful not to overfill. Overfilling could cause engine starting problems or engine damage.

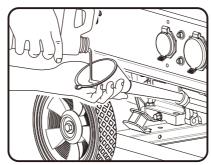

5.Replace oil fill cap/dipstick and fully tighten.

6.Oil level should be checked prior to each use or at least every 8 hours of operation. Keep oil level maintained.

### Low Oil Shutdown

The portable generator is equipped with a low oil shutdown. If the oil level drops below the minimum required level, a sensor will activate an internal switch stopping the engine. If the engine shuts off and the oil level is within specifications, check to see if generator is sitting at an angle. Place portable generator on an even surface to correct this. If engine fails to start, the oil level may not be high enough to deactivate the internal low oil level switch. Make sure the sump is completely full of oil to the upper limit (H). Do not operate engine until oil level issue is corrected. Contact Firman customer service.

### Add Gasoline



**WARNING!** Fuel and its vapors are extremely flammable which could cause burns or fire resulting in death or serious injury.

- Turn generator engine OFF and let it cool at least 2 minutes before removing fuel cap.
- Do Not refuel or move generator when engine is running.
- Move generator outdoors prior to adding or draining fuel
- Keep fuel away from any ignition sources.
- Do not overfill tank, allow space for fuel expansion.
- If any fuel spills, wait until it evaporates before starting engine
- Check and replace fuel lines, tank, cap, and fittings prior to each use if any damage or leaks are found.

Fuel must meet these requirements:

- Clean, fresh, unleaded gasoline with a minimum of 87 octane.
- For high altitude use, see Operation at High Altitude.
- Gasoline with no more than 10% ethanol is acceptable.






**NOTICE** Do not mix oil in gasoline or modify engine to run on alternate fuels not described in this manual. Use of unapproved fuels could damage engine and will not be covered under warranty.

- 1. Clean area around fuel fill cap, remove cap.
- 2. Slowly add unleaded fuel to fuel tank. Be careful not to fill above the RED fuel level indicator. This allows adequate space for fuel expansion.



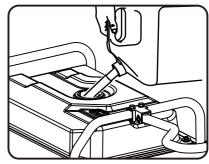

3. Install fuel cap and let any spilled fuel evaporate before starting engine.

# **Operation at High Altitude**

At altitudes over 5,000 feet(1524 meters), a minimum 85 octane gasoline is acceptable. Engine power and generator output will be reduced approximately 3.5% for every 1000 feet (305 m) of elevation above sea level. High altitude may cause hard starting, increased fuel consumption and sparkplug fouling. To operate at high altitudes FIRMAN can provide a high altitude carburetor main jet. The alternative main jet and installation instructions can be obtained by contacting Customer Support.

	208cc	Altitude
Altitude main jet 1	335717004	3000-6000Feet (914-1828 m)
Altitude main jet 2	335717005	6000-8000Feet (1828 - 2438 m)

**NOTICE** Operation using an alternative main jet at elevations lower than the recommended minimum altitude can damage the engine. For operation at lower elevations, the standard main jet supplied must be used. Operating the engine with the wrong main jet may increase exhaust emissions, fuel consumption and reduce performance.

# Operation at High Ambient conditions

Your Firman Power Equipment product is designed and rated for continuous operation at ambient temperatures up to  $104^{\circ}F$  ( $40^{\circ}C$ ). The generator may be operated at temperatures ranging from  $5^{\circ}F(-15^{\circ}C)$  to  $122^{\circ}F(50^{\circ}C)$  for short periods. If the generator is exposed to temperatures outside this range during storage, the generator should be brought back within this range before operation. When operated above  $77^{\circ}F(25^{\circ}C)$  there may be a decrease in power. Maximum wattage and current are subject to and limited by such factors as ambient temperature, altitude, engine conditions etc.


# **Connecting LPG Fuel**



 $WARNING!\ Liquid\ Petroleum\ gas\ (LPG)\ is\ extremely\ flammable\ which\ could\ cause\ burns\ or\ fire\ resulting\ in\ death\ or\ serious\ injury.$ 

- Do not place the LPG sources in the path of muffler outlet or near any ignition source.
- Keep a fire extinguisher near the generator all the time.
- Do not use or store LPG portable sources not in use near generator or in a building, garage or enclosed area.
- All LPG supply lines must be installed by a qualified plumber.
- If you smell gas, close off all gas sources and contact a qualified plumber to inspect and repair the LPG system.
- Prior to each days first use spray a soapy water solution on LPG fuel connections to check for leaks.
- Never use a gas container, LPG connector hose, LPG cylinder that appears to be damaged.
- Do not connect or disconnect the LPG source in an enclosed area.
- LPG is heavier than air and can accumulate in confined / low spaces if there is a leak.

**NOTICE** LPG system must be installed and used in strict conformance with NFPA 58 (Liquefied Petroleum Gas Code), NFPA 54 (National Fuel Gas Code), manufacturers recommendations, and comply with the authority having jurisdiction requirements. To connect your generator to a large propane tank or Natural Gas Supply, contact your gas equipment company or authority having jurisdiction to assure that you are following all required codes and regulations.

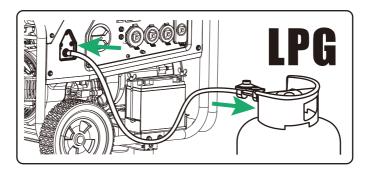

- Always keep the LPG cylinder in an upright position.
- Use only DOT LPG cylinders in vapor service with type 1, right hand ACME threads. Verify the re-qualification date on the cylinder has not expired.
- All new cylinders must be purged of air and moisture prior to filling. The purging process should be done by your propane gas supplier.

Attach the LPG regulator hose assembly (included) to the LPG hose connector (inlet) on the control panel of the generator. Tighten the nut with a 19 mm or adjustable wrench. Remove the safety plug or cap from the LPG cylinder valve. Attach the LPG regulator to the cylinder valve. Do not use a wrench to tighten LPG cylinder nut. Tighten the nut by hand clockwise to a positive stop. Using a wrench may damage LPG cylinder components.

# Indicator light - Battery Power Saving Mode

This generator is equipped with an electronic module which consumes battery power. When the main fuel selector switch is turned to the GAS or LPG position, the indicator light will turn RED for up to 4 minutes (before going off). Starting the engine successfully anytime during the 4 minutes will turn the indicator light GREEN. If portable generator is not started during this 4-minute period the portable generator will switch to Battery Power Saving Mode to conserve battery life.

**NOTICE** Your portable generator is equipped with an internal battery charger that will properly charge the battery only when the engine is running.

The generator cannot be started in Battery Power Saving Mode. Turn main fuel selector switch to the off position and back to the GAS or LPG position to reset the RED indicator 4-minute electronic module.

# 3. Starting the Generator on Gasoline

- 1. Before starting the generator, check for loose or missing parts and for any damage which may have occurred during shipment. Ensure spark plug, muffler, fuel cap, and air cleaner are all in place.
- 2. Move portable generator outdoors to safe operating location at least 20 feet from any occupied spaces.
- 3.If connected make sure the LPG cylinder knob is fully closed or disconnected.





4. Turn the fuel selector switch to "GAS" position.



**NOTICE** When the fuel selector switch is turned to the GAS position, the indicator light will turn RED for up to 4 minutes (before going off). Starting the engine successfully anytime during the 4 minutes will turn the indicator light GREEN. See Indicator light-Battery Power Saving Mode section for more information.

5. Disconnect all electrical loads from the generator. Never start or stop the generator with electrical devices plugged in.



6. Move choke lever located on engine to "START" position. You do not need to choke a warm engine. (For electric start move to step (8))



7. Pull the starter cord slowly until resistance is felt and then pull rapidly to start engine.



8. Do not over-choke. As soon as engine starts and warms up, slowly move the choke lever to the RUN position.




9. Allow portable generator to run at no load for a few minutes to stabilize before plugging in any electrical devices.

**NOTICE** If engine starts but fails to run, or if portable generator shuts down during operation, check oil level. See Low Oil Shutdown section for more information.

# 4. Starting the Generator on LPG

- 1. Before starting the generator, check for loose or missing parts and for any damage which may have occurred during shipment. Ensure spark plug, muffler, fuel cap, and air cleaner are all in place.
- $2.\ Move portable\ generator\ outdoors\ to\ safe\ operating\ location\ at\ least\ 20\ feet\ from\ any\ occupied\ spaces.$
- 3. Connect the LPG hose with regulator to both LPG cylinder and portable generator LPG Hose Connector (inlet).

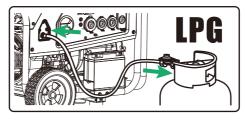

4. Fully open the LPG cylinder knob.



5. Turn the fuel selector switch to LPG position.



**NOTICE** When the fuel selector switch is turned to the LPG position, the indicator light will turn RED for up to 4 minutes (before going off). Starting the engine successfully anytime during the 4 minutes will turn the indicator light GREEN.

See Indicator light-Battery Power Saving Mode section for more information.

6. Disconnect all electrical loads from the generator. Never start or stop the generator with electrical devices plugged in.



7. Move choke lever located on engine to "START" position.



8. PULL-TO-PRIME Pull the starter cord 1-2 times. Pull slowly until resistance if felt and then pull rapidly.



9. Move the choke lever to the "RUN" position.



10. PULL-TO-RUN: Pull the starter cord slowly until resistance if felt and pull rapidly to run the un




If the engine fails to start in 1-2 pulls with choke in the "RUN" position, then move choke lever to "START" position and repeat the "PULL-TO-PRIME" step.

11. Allow portable generator to run at no load for a few minutes to stabilize before plugging in any electrical devices.

**NOTICE** If engine starts but fails to run, or if portable generator shuts down during operation, check oil level. See **Low Oil Shutdown** section for more information.

**NOTICE** Observing frost on LPG cylinder and regulator is common during operation and normally is not an indication of a problem. In unusual situations this frost may eventually restrict the flow of LPG gas to the generator resulting in deteriorating performance. In these rare situations it can be helpful to:

- Exchanging fuel cylinders to allow the first cylinder to warm up, repeating as necessary.
- Placing the LPG cylinder at the end of the generator near the handle, where engine fan air flows out from the generator. This air is slightly heated by air flowing over the engine.
- Do not place the LPG cylinder in the path of the muffler exhaust outlet.

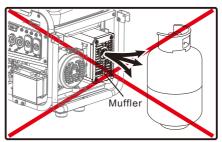

 The LPG cylinder and components can be temporarily warmed by pouring warm water over them.

# 5. Connecting Electrical Loads

This portable generator has been pretested and adjusted to handle its full capacity. The voltage is regulated using an automatic voltage regulator (AVR). Readjusting the AVR will void warranty.





WARNING! Generator voltage could cause electrical shock or burn resulting in death or serious injury.

- Damaged or overloaded extension cords could overheat, arc, and burn resulting death or serious injury.
- Use a ground fault circuit interrupter (GFCI) in any damp or highly conductive area, such as metal decking.
- Do not touch bare wires or receptacles.
- Do not use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- Do not operate generator in the rain or wet weather.
- Do not run indoors to avoid wet conditions.
- Do not handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- 1. Ensure circuit breaker on control panel is in the closed (on) position.
- 2. Start the generator with no electrical load attached.
- 3. Allow the engine to run for several minutes to stabilize.
- 4. Plug in and turn on the first item. It is best to attach the item with the largest load first.
- 5. Allow the engine to stabilize.
- 6. Plug in and turn on the next item.
- 7. Allow the engine to stabilize.
- 8. Repeat steps 5-6 for each additional item.



### **Surge Protection**

There is a remote chance that voltage fluctuations may impair the proper functioning of some sensitive electronic equipment. Electronic devices, including computers and many programmable appliances may use components that are designed to operate within a narrow voltage range and may be affected by the portable generator's momentary voltage fluctuations. While there is no way to prevent all voltage fluctuations, you can take steps to protect your sensitive electronic equipment. Install a plug-in surge suppressor on the receptacles feeding your sensitive equipment. Surge suppressors come in single or multi-outlet styles. They are designed to protect against short duration voltage fluctuations.

# **OPERATION**

# CO Alert<sup>™</sup>

### Carbon Monoxide (CO) Shutdown System

CO Alert automatically shuts down the engine when harmful levels of carbon monoxide accumulate around the generator or a CO Alert fault occurs. After shutdown, the CO Alert indicator light will blink for at least five minutes per the chart below.

CO Alert DOES NOT replace carbon monoxide alarms.

Install battery-powered carbon monoxide alarm(s) in your home. Don't run generator in enclosed areas.

Color	Description
Carbon monoxide accumulated around generator to restart move generator to an open, outdoor 20 ft. (6 m) from occupied spaces with exhaust por away. Air out premises (open windows and doors) is reoccupying property. Automatic shutoff is an indiagenerator was improperly located.  If you start to feel sick, dizzy, weak, or your homes monoxide alarm sounds while using this product,	If you start to feel sick, dizzy, weak, or your homes carbon monoxide alarm sounds while using this product, get to fresh air right away. Call emergency services. You may
Yellow ●● ●●	

 $<sup>\</sup>star$ Yellow light will blink for five seconds at the startup of generator to show CO ALERT is functioning properly.

# 6. Stopping the generator

1. Turn off and remove all electrical loads. Never stop the generator with electrical devices plugged in and turned on. Never stop the engine by moving the choke to the start position.



Let the generator run at no-load for one minute to stabilize internal temperatures of the engine and generator.

2. Turn the fuel selector switch to OFF (O) position.



3. Fully close the LPG cylinder knob.



### **MAINTENANCE SCHEDULE**

ITEM	NOTES	Daily (Before operation)	Initial 25 hours	Every 50 hours	Every 100 hours (or annual)	Every 250 hours
Spark Plug	Check condition. Adjust gap and clean. Replace if necessary.				√	
Engine Oil	Check oil level.	√				
Engine Oil	Replace.		√		√	
Air Filter	Clean, replace if necessary.			√		
Fuel	Clean fuel tank strainer. Replace if necessary.				<b>√</b>	
Fuel Line	Check fuel hose for cracks or other damage. Replace if necessary.	<b>√</b>				
LPG Regulator /Hose Assy.	Check for damage and leaks. Replace if necessary.	√				
Exhaust	Check for leakage. Retighten or replace gasket if necessary.	√				
System	Check spark arrester screen. Clean/Replace if necessary.				√	
Engine	Check adjust valve clearance.*					√
	Clean combustion chamber.*					<b>√</b>
Fittings/ Fasteners	Check. Replace if necessary.				<b>√</b>	

<sup>\*</sup> To be performed by knowledgable/experienced owner or by authorized service center.

### **General Recommendations**

Regular maintenance will improve the performance and extend the life of the generator. See any authorized dealer for service.

The generator's warranty does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain the generator as instructed in this manual.

Some adjustments will need to be made periodically to properly maintain your generator. All service and adjustments should be made at least once each season. Follow the requirements in the maintenanc shedule chart above.

**NOTICE** Once a year you should clean or replace the spark plug and replace the air filter. New spark plugs and clean air filter assure proper fuel-air mixture and help your engine run at peak performance and last longer.

# When Transporting Generator

Transport with fuel tank EMPTY or with fuel valve in OFF position. Do not tip generator at an angle which causes fuel to spill. Disconnect LPG regulator assembly and securely stow away.

# **ENGINE MAINTENANCE**

To prevent accidental starting, remove and ground spark plug wire before performing any service.

# **Change Engine Oil**


Change engine oil every 100 hours. (for a new engine, change oil after 25 hours.) If you are using your generator under extremely dirty or dusty conditions, or in extremely hot weather change the oil more often.

CAUTION! Avoid prolonged or repeated skin contact with used motor oil. Used motor oil has been shown to cause skin cancer in certain laboratory animals. Thoroughly wash exposed areas with soap and water.





KEEP OUT OF REACH OF CHILDREN. DON'T POLLUTE. CONSERVE RESOURCES. RETURN USED OIL TO COLLECTION CENTERS.

(a) On a level surface drain oil into a suitable container by removing the drain plug and the oil filler cap while the engine is warm.

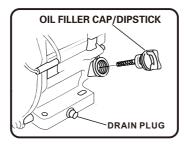

(b) Reinstall the drain plug and fill the engine with oil until it reaches the HIGH(H) level on the oil filler dipstick.

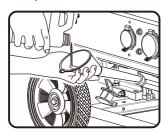

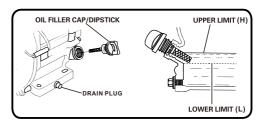


**NOTICE** We recommend using FIRMAN SAE 10W-30 API SJ oil for best performance. Other high-quality detergent oils (API SJ or higher) are acceptable. See *Oil and Gasoline* 

# Maintenance - Storage


# Air Filter Maintenance

(a) Carefully remove foam air filter element and wash it with liquid detergent and water only. Squeeze dry in a clean cloth.



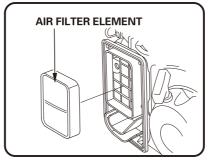

 (b) Saturate foam air filter element with clean engine oil and squeeze in a clean cloth to remove excess oil.




(c) Reinstall clean or new air filter element.


# **Spark Plug Maintenance**

Changing the spark plug will help your engine start easier and run at peak performance.


- (a) Remove the spark plug boot.
- (b) Remove spark plug using provided wrench.

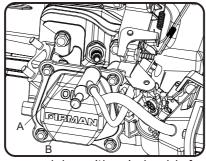

- A- Spark plug B- Spark plug boot
- (c) Inspect spark plug for damage and clean with a wire brush before reinstalling. Replace if damaged.
- (d-1) For spark plug FIRMAN P/N 330723001 Adjust the electrode gap to 0.020 0.024 in. (0.5 0.6 mm).
- (d-2) For spark plug CHAMPION N9YC Adjust the electrode gap to 0.028 0.031 in. (0.7 0.8 mm).
- (e) Seat spark plug in position and thread by hand to prevent cross threading.
- (f) Tighten plug with provided wrench and put the spark plug boot back on spark plug.

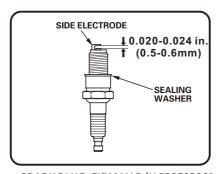

SPARK PLUG: FIRMAN P/N 330723001

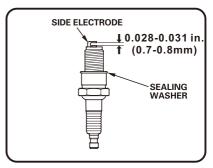

SPARK PLUG: CHAMPION N9YC

SPARK PLUG: FIRMAN P/N 330723001 or CHAMPION N9YC

# **Maintenance Valve Clearance**

Intake: 0.004 - 0.006 in. (0.10 - 0.15 mm) Exhaust: 0.004 - 0.006 in. (0.10 - 0.15 mm)

# **Muffler and Spark Arrester**




WARNING! Contact with muffler area could cause burns resulting in serious injury.

- Do not touch hot parts.
- It is a violation of California Public Resource Code, Section 4442, to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the exhaust system is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order. Other states or federal jurisdictions may have similar laws, reference Federal Regulation 36 CFR Part 261.52.


# Maintenance - Storage

### **Inspect Muffler and Spark Arrester**

- 1.Inspect the muffler for cracks, corrosion, or other damage.
- 2.Remove the screws securing the spark arrester in place and the remove it from muffler.

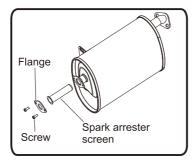

3. Carefully remove the carbon deposits from the spark arrester screen with a wire brush.

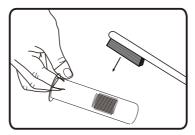

- 4. Replace the spark arrester if it is damaged. If replacement parts are required, make sure to use only FIRMAN original equipment replacement parts.
- 5. Position the spark arrester in the muffler and attach with the screws.

NOTICE Failure to clean or replace spark arrester may result in decreased engine performance.

# **GENERATOR MAINTENANCE**

Run the generator at least 30 minutes every month.


Make certain that the portable generator is kept clean and dry.

Do not expose the unit to excessive dust, dirt, moisture or corrosive vapors.

Do not insert any objects through cooling slots.

Before each use inspect underneath the generator for signs of oil or fuel. Clean any accumulated debris. Keep area around muffler free from any debris. Use a soft bristle brush to remove dirt or caked on oil. Use a damp cloth to clean all exterior surfaces.

# **Battery Replacement**

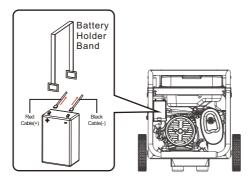

- 1. Disconnect the negative (-) black battery cable first from the (-) battery terminal, then the red positive (+) cable from the (+) battery terminal.
- 2. Remove the battery holder band.
- 3. Remove the battery and recycle.
- 4. Install the new battery with following specification:
  - 12V sealed lead acid 2.5AH
  - LXWXH:3.15X2.75X4.13 in. (80X70X105mm)
- 5. Reattach the battery holder band.
- 6. Connect the red positive(+) battery cable to the battery first.
- 7. Connect the black negative(-) battery cable to the battery second.

# **Battery Charging**

The battery powers the control module. This portable generator is equipped with an automatic battery charging circuit. The battery will receive charging voltage only when the engine is running. The battery will maintain a proper charge if the portable generator is used on a regular basis (about once every two weeks). If it is used less frequently, the battery should be connected to a trickle charger (not included) or battery maintainer (not included) to keep the battery properly charged.

# Maintenance - Storage

# **Long Term Storage**

It is important to prevent gum deposits from forming in essential fuel system components such as the carburetor, fuel hoses or tank during storage. Alcohol-blended fuels (called gasohol, ethanol or methanol) attract moisture, which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.


When the generator set is being stored for more than one month, follow these instructions to avoid engine problems:



**WARNING!** Fuel and its vapors are extremely flammable which could cause burns or fire resulting in death or serious injury.

Do not store fuel near any ignition sources.

When draining fuel move generator outdoors and use a commercially available non-conductive vacuum siphon. Fuel must be drained into an approved container.

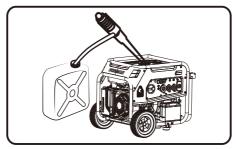

- 1-Treat any stored fuel with fuel stabilizer.
- 2-When storing generator with gasoline in fuel tank, operate the engine for 5-10 minutes to circulate treated fuel into fuel lines and carburetor before shutdown.
- 3- There is no need to drain gasoline from the generator fuel tank if fuel stabilizer is added.
- 4-FUEL STARVATION: If you elect to drain fuel tank move generator outdoors. Once fuel tank is drained turn fuel selector switch to GAS position. Start and run the portable generator outdoors until engine stops from lack of gasoline. This will drain remaining gasoline from tank, fuel lines, and carburetor.
- 5-Always turn fuel selector switch to OFF position prior to storage.
- 6-Allow the portable generator to cool before cleaning and storage.
- 7-Change oil.
- 8-Remove spark plug boot and spark plug. Pour about one teaspoon of engine oil through the spark plug hole, then slowly pull the recoil starter several times to distribute the oil in the cylinder. Reinstall the spark plug and attach the spark plug boot. Pull recoil slowly until resistance is felt. This will close the valves so no moisture enters the engine cylinder.
- 9-Cover the portable generator and store in a clean, dry place out of direct sunlight and away from any ignition sources.

Any damage or hazards caused by using improper fuel, improperly stored fuel, and/or improperly formulated stabilizers, are not covered by manufacturer's warranty.

Do not store gasoline from one season to another season.

# **Troubleshooting - Specifications**

Problem	Cause	Correction
Engine is running, but no AC output is available.	<ol> <li>Circuit breaker is open.</li> <li>Fault in generator.</li> <li>Poor connection or defective cord set.</li> <li>Connected device is bad.</li> </ol>	Reset circuit breaker.     Contact authorized service facility.     Check and repair.     Connect another device that is in
Engine runs good at no-load but "bogs down" when loads are connected.	1. Short circuit in a connected load. 2. Engine speed is too slow. 3. Shorted generator circuit. 4. Clogged or dirty fuel filter.	good condition.  1. Disconnect shorted electrical load. 2. Contact authorized service facility. 3. Contact authorized service facility. 4. Clean or replace fuel filter.
	1. Fuel selector switch set to OFF (O) position. 2. The indicator light is OFF or flashing red. 3. Low oil level.	1. Set fuel selector switch to "GAS" or "LPG" position. 2. Must have solid red indicator light to be able to start the engine. 3. Fill crankcase to proper level or place generator on level surface
Engine will not start; starts and runs rough or shuts down when running.	<ol> <li>Dirty air cleaner.</li> <li>Out of gasoline.</li> <li>Stale gasoline.</li> <li>Spark plug wire not connected to spark plug.</li> <li>Bad spark plug.</li> </ol>	4. Clean or replace air cleaner. 5. Fill fuel tank with gasoline. 6. Drain fuel tank and carburetor; fil with fresh gasoline. 7. Connect wire to spark plug. 8. Replace spark plug.
	<ol> <li>Water in gasoline.</li> <li>Flooded.</li> <li>Excessively rich fuel mixture.</li> <li>Clogged or dirty fuel filter.</li> <li>Starting battery may have insufficient charge.</li> </ol>	<ol> <li>9. Drain gas tank and carburetor; fill with fresh gasoline.</li> <li>10. Wait 5 minutes and re-crank engine</li> <li>11. Contact authorized service facility.</li> <li>12. Clean or replace fuel filter.</li> <li>13. Check battery output and charge battery as necessary.</li> </ol>
	<ul><li>14. Out of LPG.</li><li>15. LPG cylinder knob is not open.</li><li>16. Out of battery power.</li></ul>	<ul> <li>14. Replace LPG cylinder.</li> <li>15. Fully open LPG cylinder knob.</li> <li>16. Start Engine in "GAS" position. Charge or replace battery.</li> </ul>
Engine lacks power.	1. Load is too high. 2. Dirty air filter. 3. Clogged or dirty fuel filter. 4. Clogged spark arrester.	Don't Overload Generator     Replace air filter.     Clean or replace fuel filter.     Clean or replace spark arrester.
Engine"hunts"or falters.	Carburetor is running too rich or too lean.     Clogged or dirty fuel filter.	Contact authorized service facility.     Clean or replace fuel filter.
Engine shuts down when running.	Out of gasoline or LPG.     Dirty air cleaner.     Low oil level.	Fill fuel tank with gasoline or replace LPG cylinder.     Clean or replace air cleaner.     Fill crankcase to proper level or place generator on level surface.
Engine shuts down and yellow CO fault light blinking.	1. CO system fault	Contact authorized FIRMAN service facility.

For all other issues, contact authorized dealer or Firman customer service.


# **Troubleshooting - Specifications**

# **SPECIFICATIONS**


Model		H03655			
Starting Watts	4550(GASOLINE)/4100(LPG)				
Running Watts*	3650(GASOLINE)/3300(LPG)				
Rated AC Voltage	120V				
Rated Fequency	60Hz				
Phase		Single			
Voltage Regulator		AVR			
Power Factor		1			
Alternator Type		Brushed			
Engine		FIRMAN			
Engine Type	Single Cy	rlinder, 4-Stroke OHV	Air Cooled		
Displacement		208cc			
Low Oil Shutdown		Yes			
Ignition System	Breakless	Breakless Ignition Type, Flywheel Magneto			
Starting System	Recoil				
Fuel	Unlead	ded Automotive Gasol	ine/LPG		
Capacity Fuel Tank	5	U.S. Gallons (19L)			
Lubricating Oil Capacity		20.3 oz (0.6L)			
Carburetor Type		Float			
Air Cleaner		Polyurethane Type			
P.T.O. Shaft Rotation	Cour	ter Clockwise (Facing	P.T.O.)		
Oil Type	See "Add Engine Oil" Section				
AC Grounding System	Neutral Floating				
	25% Load	Half Load	Full Load		
LPG fuel consumption	8.67ft³/hr(0.92L/hr) 21,804 BTU/h (6,390 W)	23.7ft³/hr(2.5L/hr) 59,257 BTU/h (17,377 W)			

<sup>\*</sup>Generator certified in accordance with CSA (Canadian Standards Association) standard C22.2No. 100-14, Motors and Generators and complies with PGMA (Portable Generator Manufacturers' Association) standard ANSI/PGMA G300-2018, Safety and Performance of Portable Generators.

# **PARTS DIAGRAM AND PART LIST**

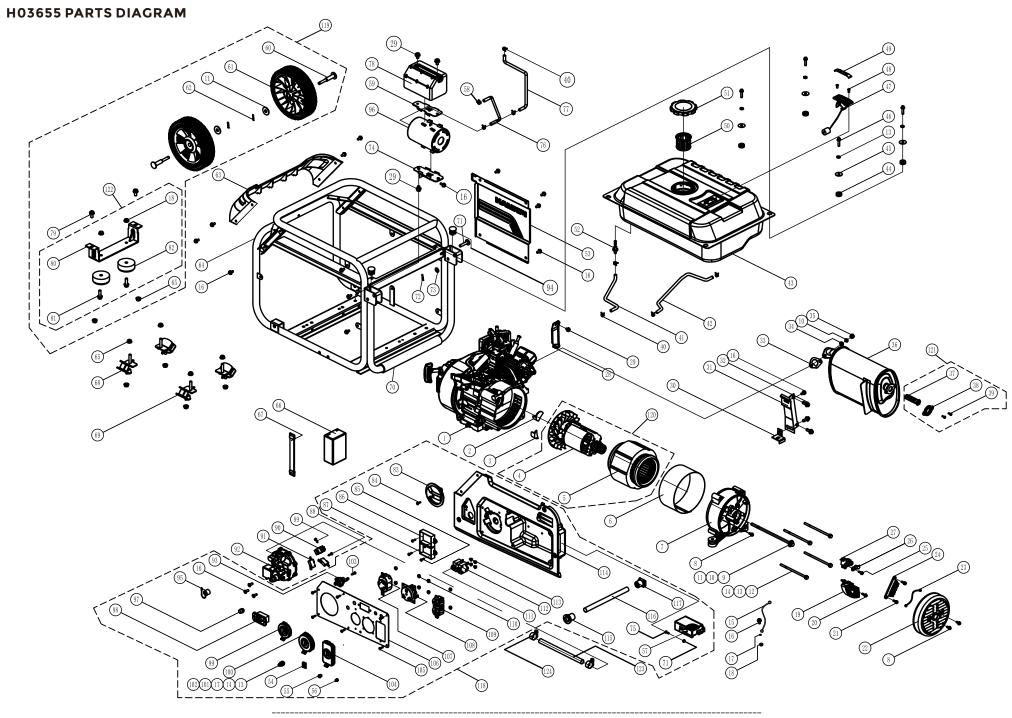

# **208cc ENGINE PARTS DIAGRAM**

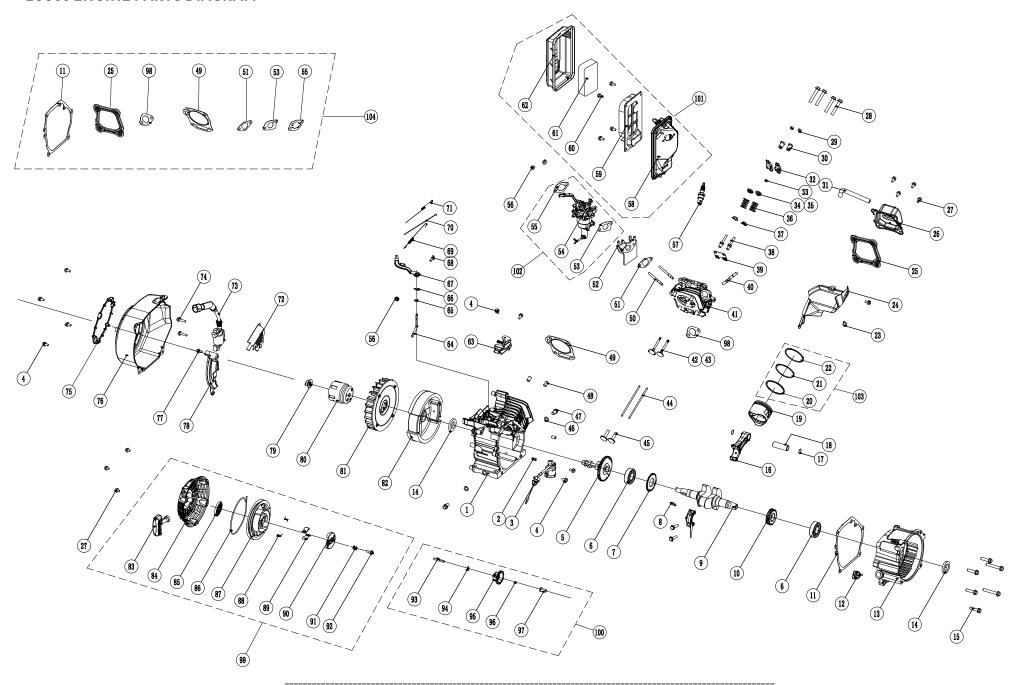

# Parts Diagrams - Parts Lists - Wiring Diagram

# **H03655 Portable Generator**

NO.	Part Number	Description	Qty.	NO.	Part Number	Description	Qty.
1		Engine Subassembly	1	51	336713549	Fuel Tank Cap Comp.	1
2		Rubber Cap 2	1	52	336713807	Tank Fitting With Filter	1
3		Rubber Cap1	ī	53	336713808	Protector, Muff.	1
4		Rotor Assy	1	54	<del>                                     </del>	Engine Switch Cover	1
5		Stator Assy	ī	55		Indicator Light	1
6		Stator Cover	1	56	336755005	Circuit Breaker Cover	2
7	336713506	Generator End Cover	ī	57	392428300	Co Module	1
8		Flange Bolt M5×12	ī	58	330713509	Clip (Ø8.7×8)	2
9	336713508	Flange Bolt M8×252	ī	59	336713639	Carbon Canister Boardll	1
10	336713509	Lock Washer Ø8	3	60	336713554	Axle Comp	2
11	336713510	Flat Washer Ø8	3	61	336713836	Wheel	2
12	336713511	Flange Bolt M6×179	4	62	336713590	Pin, Shaft	2
13	336713512	Lock Washer Ø6	10	63	336713810	Plastic Front Cover	1
14	336713513	Flat Washer Ø6	6	64	336417027	Frame	1
15	336713514	Ground Wire	1	65	336713558	Nut M8	12
16	336713515	Flange Bolt M6×12	22	66	336713838	Battery	1
17	336713516	External Star Washer Ø6	2	67	336713839	Battery Holder Band	1
18	336713517	Nut M6	6	68	336713562	Isolator 1	2
19		AVR	1	69	336713563	Isolator 2	2
20		Flange Bolt M5×16	2	70	336713843	Handle	1
21		Bolt &washer Assemblies	2	71	336713594	Pin, Handle	2
22	336713521	Generator End Cover Cap	1	72	336713590	Pin, Shaft	2
23		Ground Wire	ī	73	336713844	Pin, Shaft	2
24		Terminal Block	1	74	336713650	Carbon Canister Holder	1
25	336713524	Bolt &washer Assemblies	2	75	330713502	Screw M5×20	Ιį
26	336713525	Carbon Brush Holder	1	76	336713680	Pipe	i
27		Carbon Brush Assembly	ī	77	336713635	Pipe	1
28		Air Filter Bracket	ī	78	336713636	Carbon Canister Board	l i
29		Flange, Bolt M6×8	ī	79	336713559	Flange Bolt M8×16	2
30		Muffler Fixed Plate (small)	ī	80	336713560	Support Leg	1
31	336713530	Muffler Fixed Plate(big)	1	81	336713561	Flange Bolt M6×25	2
32	336713531	Bolt M8x20	4	82	336713557	Rubber, Support	2
33	336713532	Muffler Gasket	1	83	336713815	Fuel Selector Switch	1
34	336713533	Flat Washer Ø8	2	84	336713816	Screw M4×12	1
35	336713534	Nut M8	2	85	336713565	Screw M5×14	4
36		Muffler Assembly	1	86	336718319	Control Module&VF Module	1
37		Arrester, Spark	1	87	336713818	Charger	1
38	336713537	Holder, Spark Arrester	1	88	336713819	Tapping Screw	2
39	336713538	Screw&washer Assy M5×14	2	89	336713820	Tapping Screw	1
40	330713508	Clip(Ø10.5×8)	4	90	336713821	Micro Switch 1	1
41	336427010	Hose, Fuel 1	1	91	336713822	Micro Switch 2	2
42	336427011	Hose, Fuel 2	1	92	333715503	Main Regulator Assy.	1
43	336713804	Fuel Tank Assy.	1	93	336713824	Fuel Valve Assy.	1
44	336713542	Grommet, Fuel Tank	4	94	336728307	Plug	2
45	336713543	Washer Tank Buffer	4	95	336713826	LPG Inlet Cover	1
46	310715064	Bolt M6x20	4	96	336713637	Carbon Canister	1
47	336713805	Fuel Meter Assy.	1	97	336713828	Indicator Light	1
48	336713546	Screw M5×10	2	98	357713586	Multi Meter	1
49	336713547	Panel	1	99	336713573	Outlet Cover L5-30R	1
50		Fuel Filter, Wire Mesh	1	100	336713574	Outlet Cover TT-30R	1

# Parts Diagrams - Parts Lists - Wiring Diagram

					<b>I</b>		1
	Part Number	·	Qty.	NO.	Part Number	Description	Qty.
		Flange Bolt M6×22	1				
	357713543		2				
-		Screw&washer Assy M4×20	2				
104	336713575	Outlet Cover 5-20r	1				
105	330713582	Screw&washer Assy M4×14	6				
106	336417028	Control Panel	1				
107	336713832	Receptacle L5-30r	1				
108	336713584	Receptacle Tt-30r	1				
109	336713588	Receptacle 5-20r Duplex	1				
110	336713568	Nut M4	8				
111	330713594	AC 20A Breaker	1				
112	336713586	Circuit Breaker Amp 30A	1				
		Screw&washer Assy M4×8	4				
114	336713833	Control Box	1				
115	336713581	Grommet	1				$\Box$
		Sleeve	1				$\Box$
-	336713587		ī				$\top$
		Control Panel Assy.	ī				$\top$
		Wheel Kit	1				$\top$
		Rotor And Stator Set	i				+
		Spark Arrester Kit	i				$\top$
-		Support Leg Assembly	i				+
	357713591		i				+
		Clamp (ø8-ø14)×b8	i				+
		Regulator/hose Assy.	i				+
123	330713043	Regulatory nose Assy.					+
							+
							+
			$\vdash$				+
							+
			$\vdash$	-			+
				-			+
							+
							+-
			$\vdash$				+
-			$\vdash$	-			+-
			$\vdash$	-			+
			$\vdash$	-			+-
			$\vdash$	-			+
-			$\vdash$	-			+
			$\vdash$	_			+
			$\square$				+
			$\square$				$\perp$
			Ш				$\perp$
			ш				$\perp \perp \mid$
			Ш				
			Ш				$\perp$
			Ш				
			Ш				

English

# Parts Diagrams - Parts Lists - Wiring Diagram

# FIRMAN 208cc Engine

NO.         Part Number         Description           1         336723500         Crankcase Comp.           2         317723516         Locating Pins           3         336723502         Oil Level Sensor           4         336723503         Flange Bolt M6×12           5         336723504         Camshaft Comp           6         336723505         Bearing           7         336723506         Gear, Crankshaft           8         336723507         Woodruff Key           9         336723509         Gear, Drive           10         336723510         Gskt., Crankcase Cover           11         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723521         Ring, Second Piston           20         336723521         Ring, First Piston           21         336723522         Flange	Qty.  1 4 1 8 1 2 1 1 1 1 1 1 2 6 1
2         317723516         Locating Pins           3         336723502         Oil Level Sensor           4         336723503         Flange Bolt M6×12           5         336723504         Camshaft Comp           6         336723505         Bearing           7         336723506         Gear, Crankshaft           8         336723509         Gear, Drive           9         336723509         Gear, Drive           10         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723521         Ring, Second Piston           21         336723523         Ring, First Piston           23         336723524         Ralge Bolt M6×8           24         336723525         Valve Cover <td>4 1 8 1 2 1 1 1 1 1 1 1 2 6</td>	4 1 8 1 2 1 1 1 1 1 1 1 2 6
3         336723502         Oil Level Sensor           4         336723503         Flange Bolt M6×12           5         336723504         Camshaft Comp           6         336723505         Bearing           7         336723506         Gear, Crankshaft           8         336723507         Woodruff Key           9         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723521         Ring, Second Piston           21         336723523         Ring, First Piston           23         336723524         Ralge Bolt M6×8           24         336723525         Valve Cover Assy	1 8 1 2 1 1 1 1 1 1 1 2 6
4         336723503         Flange Bolt M6×12           5         336723504         Camshaft Comp           6         336723505         Bearing           7         336723506         Gear, Crankshaft           8         336723507         Woodruff Key           9         336723509         Gear, Drive           10         336723510         Gskt., Crankcase Cover           11         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston Pin Retainer Ring           20         336723519         Ring, Oil           21         336723521         Ring, First Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524 <td< td=""><td>8 1 2 1 1 1 1 1 1 1 2 6</td></td<>	8 1 2 1 1 1 1 1 1 1 2 6
5         336723504         Camshaft Comp           6         336723505         Bearing           7         336723507         Gear, Crankshaft           8         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723519         Ring, Oil           21         336723521         Ring, First Piston           22         336723522         Ring, First Piston           23         336723523         Ring, First Piston           23         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt	1 2 1 1 1 1 1 1 1 2 6
6         336723505         Bearing           7         336723506         Gear, Crankshaft           8         336723507         Woodruff Key           9         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723529         Ring, Second Piston           21         336723520         Ring, First Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve	2 1 1 1 1 1 1 1 2 6
7         336723506         Gear, Crankshaft           8         336723507         Woodruff Key           9         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723515         Conn, Rod Comp           18         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Second Piston           21         336723521         Ring, First Piston           23         336723522         Ring, First Piston           23         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526 <t< td=""><td>1 1 1 1 1 1 1 2 6</td></t<>	1 1 1 1 1 1 1 2 6
8         336723507         Woodruff Key           9         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Second Piston           21         336723521         Ring, First Piston           23         336723522         Riange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528	1 1 1 1 1 1 2 6
9         336723508         Crankshaft           10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Goll           21         336723521         Ring, Second Piston           22         336723522         Ring, First Piston           23         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723531         Valve	1 1 1 1 1 2 6
10         336723509         Gear, Drive           11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723519         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723531         Valve Rocker           31         336723532	1 1 1 1 2 6
11         336723510         Gskt., Crankcase Cover           12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723529         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723531         Valve Rocker           31         336723532 <t< td=""><td>1 1 1 2 6</td></t<>	1 1 1 2 6
12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723519         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723530         Breather Tube           31         336723531         Valve Rocker           33         336723534         Retaine	1 1 2 6
12         336723511         Oil Dipstick Assy           13         336723512         Cover, Crankcase           14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723519         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723530         Breather Tube           31         336723531         Valve Rocker           33         336723534         Retaine	1 2 6
14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723531         Valve Rocker           33         336723531         Valve Rocker           34         336723534         Retainer, Intake Valve           35         336723535 <td< td=""><td>2</td></td<>	2
14         336723513         Oil Seal           15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723531         Valve Rocker           33         336723531         Valve Rocker           34         336723534         Retainer, Intake Valve           35         336723535 <td< td=""><td>6</td></td<>	6
15         336723514         Flange Bolt M8×32           16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723534         Retainer, Intake Valve           35         336723535         Spring, Valve           36         336723536 </td <td>6</td>	6
16         336723515         Conn, Rod Comp           17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Oil           21         336723520         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723534         Retainer, Intake Valve           35         336723535         Spring, Valve           36         336723536         Oil Seal, Valve           38         336723537	
17         336723516         Piston Pin Retainer Ring           18         336723517         Wrist Pin           19         336723518         Piston           20         336723529         Ring, Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723534         Retainer, Intake Valve           35         336723535         Spring, Valve           36         336723536         Oil Seal, Valve           38         336723537	1 1 1
18         336723517         Wrist Pin           19         336723518         Piston           20         336723520         Ring, Oil           21         336723521         Ring, Second Piston           22         336723522         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723534         Retainer, Intake Valve           35         336723535         Spring, Valve           36         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538	2
19         336723518         Piston           20         336723519         Ring,Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723534         Retainer, Intake Valve           35         336723535         Spring, Valve           36         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540 </td <td>1</td>	1
20         336723519         Ring,Oil           21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540         Cylinder Head	_
21         336723520         Ring, Second Piston           22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540         Cylinder Head	1
22         336723521         Ring, First Piston           23         336723522         Flange Bolt M6×8           24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
23       336723522       Flange Bolt M6×8         24       336723523       Air Guide Lower         25       336723524       Gasket, Valve Cover         26       336723525       Valve Cover Assy         27       336723526       Flange Bolt M6×15         28       336723527       Flange Bolt M8×55         29       336723528       Locknut         30       336723529       Adjusting Nut, Valve         31       336723530       Breather Tube         32       336723531       Valve Rocker         33       336723532       Rotator, Exhaust Valve         34       336723533       Retainer, Intake Valve         35       336723534       Retainer, Exhaust Valve         36       336723535       Spring, Valve         37       336723536       Oil Seal, Valve         38       336723537       Bolt, Rocker Arm         39       336723538       Guide Plate, Push Rod         40       336723540       Exhaust Valves Stud Bolt         41       336723540       Cylinder Head	1
24         336723523         Air Guide Lower           25         336723524         Gasket, Valve Cover           26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540         Cylinder Head	1
25 336723524 Gasket, Valve Cover 26 336723525 Valve Cover Assy 27 336723526 Flange Bolt M6×15 28 336723527 Flange Bolt M8×55 29 336723528 Locknut 30 336723529 Adjusting Nut, Valve 31 336723530 Breather Tube 32 336723531 Valve Rocker 33 336723531 Rotator, Exhaust Valve 34 336723533 Retainer, Intake Valve 35 336723534 Retainer, Exhaust Valve 36 336723535 Spring, Valve 37 336723536 Oil Seal, Valve 38 336723537 Bolt, Rocker Arm 39 336723538 Guide Plate, Push Rod 40 336723539 Exhaust Valves Stud Bolt 41 336723540 Cylinder Head	2
26         336723525         Valve Cover Assy           27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
27         336723526         Flange Bolt M6×15           28         336723527         Flange Bolt M8×55           29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723540         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
28     336723527     Flange Bolt M8×55       29     336723528     Locknut       30     336723529     Adjusting Nut, Valve       31     336723530     Breather Tube       32     336723531     Valve Rocker       33     336723532     Rotator, Exhaust Valve       34     336723533     Retainer, Intake Valve       35     336723534     Retainer, Exhaust Valve       36     336723535     Spring, Valve       37     336723536     Oil Seal, Valve       38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723540     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	1
28     336723527     Flange Bolt M8×55       29     336723528     Locknut       30     336723529     Adjusting Nut, Valve       31     336723530     Breather Tube       32     336723531     Valve Rocker       33     336723532     Rotator, Exhaust Valve       34     336723533     Retainer, Intake Valve       35     336723534     Retainer, Exhaust Valve       36     336723535     Spring, Valve       37     336723536     Oil Seal, Valve       38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723540     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	7
29         336723528         Locknut           30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	4
30         336723529         Adjusting Nut, Valve           31         336723530         Breather Tube           32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	2
31     336723530     Breather Tube       32     336723531     Valve Rocker       33     336723532     Rotator, Exhaust Valve       34     336723533     Retainer, Intake Valve       35     336723534     Retainer, Exhaust Valve       36     336723535     Spring, Valve       37     336723536     Oil Seal, Valve       38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723539     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	2
32         336723531         Valve Rocker           33         336723532         Rotator, Exhaust Valve           34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
33     336723532     Rotator, Exhaust Valve       34     336723533     Retainer, Intake Valve       35     336723534     Retainer, Exhaust Valve       36     336723535     Spring, Valve       37     336723536     Oil Seal, Valve       38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723539     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	2
34         336723533         Retainer, Intake Valve           35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
35         336723534         Retainer, Exhaust Valve           36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
36         336723535         Spring, Valve           37         336723536         Oil Seal, Valve           38         336723537         Bolt, Rocker Arm           39         336723538         Guide Plate, Push Rod           40         336723539         Exhaust Valves Stud Bolt           41         336723540         Cylinder Head	1
37     336723536     Oil Seal, Valve       38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723539     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	
38     336723537     Bolt, Rocker Arm       39     336723538     Guide Plate, Push Rod       40     336723539     Exhaust Valves Stud Bolt       41     336723540     Cylinder Head	2
39 336723538 Guide Plate, Push Rod 40 336723539 Exhaust Valves Stud Bolt 41 336723540 Cylinder Head	2
40 336723539 Exhaust Valves Stud Bolt 41 336723540 Cylinder Head	2
41 336723540 Cylinder Head	1
	2
140 1000 700 744 1344 144	1
42   336723541   Valve, In.take	1
43   336723542   Valve, Exhaust	1
44 336723543 Push Rod	2
45 336723544 Lifter, Valve	2
46 336723545 Washer, Drain Bolt	2
47 336723546 Bolt, Drain	2
48 336723547 Locating Pins	2
49 336723547 Eddating Fins 49 336723548 Gasket, Cyl.head	1
50   336723549   Air Intake Stud Bolt	2
51 336723550 Gskt.,Insulator	1
52 336723551 Insulator, Carburetor	1
53 336723552 Gskt., Carb.	
54 336723619 Carburetor	1
55   336723554   Gskt., Air Cleaner	1
56 336723555 Nut M6	1
57   330723001   Spark Plug	1 1 3
58 336723557 Elbow, Air Cleaner	1

NO.	Part Number	Description	Qty.
59	336723558	Clapboard	1
60	336723559	Mounting Bolt, Air Cleaner	4
61	336723560	Element, Air Cleaner	1
62	336723561	Cover, Air Cleaner	1
63	336723562	Control Assembly	1
64	336723563	Shaft, Governor Arm	1
65	336723564	Rocker Shim	1
66	336723565	Pin, Shaft	1
67	336723566	Arm, Governor	1
68	336723567	Bolt, Governor Arm	1
69	336723568	Spring, Governor	1
70	336723569	Rod, Governor	1
71	336723570	Spring, Throttle Return	1
72	336723572	Wind Deflectors	1
73	336765009	Ignition Coil	1
74	336723574	Flange Bolt M6×25	2
75	336723575	Protect Circle	1
76	336723576	Fan Cover Comp	1
77	336723577	Flange Bolt M6×20	1
78	336723578	Air Guide, Right Side	1
79	336723580	Locknut	1
80	336723581	Pulley, Starter	1
81	336723582	Cooling Fan	1
82	336723583	Flywheel Comp	1
83	336723584	Grip, Starter	1
84	336723585	Case Comp., recoil Starter	1
85	336723586	Spring, Starter Return	1
86	336723587	Cord	1
87	336723588	Pulley, Recoil Starter	1
88	336723589	Spring, Patchet	2
89	336723590	Patchet, Starter	2
90	336723591	Pawl Guide	1
91	336723592	Clip Sprg.,Pawl Guide	1
92	336723593	Screw, Pawl Guide	1
93	336723594	Gov.,Gear Shaft	1
94	336723595	Inner Washer, Gear	1
95	336723596	Gear, Governor	1
96	336723597	Clip, Govorner Gear	1
97	336723598	Bushing, Govorner Gear	1
98	336713532	Auspuffdichtung	1
99	336423500	Recoil Starter Set	1
100	336423501	Governing Gear Set	1
101	336423509	Air Cleaner Set	1
102	336423510	Carburetor Set	1
103	336423504	Piston Rings Set	1
104	336423511	Gasket Set	1

# **Wiring Diagram**

### CIRCUIT BREAKER CIRCUIT BREAKER G/Y G/Y ĞΪΥ MULTI METER GROUND W TERMINAL © INDICATOR LIGHT RI SM3 W/G BRIDGE RECTIFIER R (INTELLIGENT) G/Y DUAL FUEL Br MODULE G/Y 00000 В SM4 INDICATOR LIGHT ALTERNATOR BLOCK W/G MODULE Υ W BRAT FUEL CUT SOLENOID OFF ON work CONTROL BOX BLOCK OFF OFF un-work REGULATOR GASOLINE ON OFF un-work ENGINE BLOCK BLACK Br BROWN B/G YELLOW B/W BLACK WHITE 9888 W/GWHITE GREEN G/Y Ğ GREEN G/Y GREEN YELLOW RED W/L WHITE BLUE W WHITE O ORANGE B/G BLACK GREEN W/G LPG CUT **FUEL CUT** OIL LEVEL SW SOLENOID IGNITION COIL SPARKING PLUG SOLENOID **BATTERY**

Customer Service: 1-844-FIRMAN1

# Service - Warranty

SERVICE INFORMATION CONTACT FIRMAN PRODUCT SERVICE DEPARTMENT AT 1-844-347-6261 or at www.firmanpowerequipment.com to obtain warranty service information or to order replacement parts or accessories.

### **HOW TO ORDER REPLACEMENT PARTS**

Even quality-built equipment such as this electric generator may need occasional replacement parts to maintain it in good condition over the years. To order replacement parts, please give the following information:

- Model No. Rev. Level and Serial No. found on the Data Decal.
- Parts number or numbers as shown in the Parts List section.
- A brief description of the trouble with the generator.

# **FIRMAN 3 Years Limited Warranty**

# **Warranty Qualifications**

FIRMAN GENERATOR will register the warranty upon receipt of your Warranty Registration Card and a copy of your sales receipt from one of FIRMAN's retail locations as proof of purchase. Please submit your warranty registration and your proof of purchase within ten(10) days of the date of purchase.

# Repair/Replacement Warranty

FIRMAN warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of one(1) year(parts and labor) and 3 years (parts and technical support) from the original date of purchase 90 days [parts and labor] and 180 days [parts] for commercial & industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.

### Do Not Return the Unit to the Place of Purchase

Contact the FIRMAN Service Center and FIRMAN will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, FIRMAN will, at its option, authorize evaluation, repair or replacement of the defective part or component at a FIRMAN Service Center. FIRMAN will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

# **Warranty Exclusions**

This warranty does not cover the following repairs and equipment.

### **Normal Wear**

Your product needs periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

### Installation. Use and Maintenance

This warranty will not apply to parts and/or labor if your product is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond the generator's limits, modified, installed improperly or connected incorrectly to any electrical component. Normal maintenance is not covered by this warranty.

### Other Exclusions

This warranty excludes:

- cosmetic defects such as paint, decals, etc.
- wear items
- accessory parts
- failures due to acts of God and other force majeure events beyond the manufacturer's control
- problems caused by parts that are not original FIRMAN parts
- units used for prime power in place of existing utility power where utility is present or in place of utility power where utility power service does not normally exist.

# **Limits of Implied Warranty and Consequential Damage**

FIRMAN disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANT ABLILITY OR FITNESS FOR A PARTICULAR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit.

This warranty gives you certain legal rights which may change from state to state. Your state may also have other rights you may be entitled to that are not listed within this warranty.

### **Contact Information**

You may contact FIRMAN at:

### **Address**

Firman Power Equipment Inc. Attn: Customer Service 8644 W. Ludlow Dr. Peoria, AZ 85381 www.firmanpowerequipment.com

We are FIRMAN POWER - And we are here for you.

# FIRMAN POWER EQUIPMENT INC. Emission Control System Warranty

### CALIFORNIA AND FEDERAL EXHAUST AND EVAPORATIVE EMISSIONS CONTROL WARRANTY STATEMENT

### YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board, US Environmental Protection Agency ("US EPA") and FIRMAN POWER EQUIPMENT INC.(FIRMAN) are pleased to explain the emissions control systems warranty on your 2024-2025 or later Small Off-Road Engine ("SORE") and engine powered equipment. In California, new equipment that use small off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. FIRMAN must warrant the emissions control systems on your SORE and engine powered equipment for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your small off-road engine or equipment leading to the failure of the emissions control system. Your emissions control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter, fuel tanks, fuel lines (for liquid fuel and fuel vapors), fuel caps, valves, canisters, filters, clamps and other associated components. Also included may be hoses, belts, connectors, and other emission-related assemblies.

Where a warrantable condition exists, FIRMAN will repair your SORE and engine powered equipment at no cost to you including diagnosis, parts and labor.

### MANUFACTURER'S WARRANTY COVERAGE:

The exhaust and evaporative emissions control system on your small off-road engine and engine powered equipment is warranted for two years. If any emissions-related part on your small off-road engine and engine powered equipment is defective, the part will be repaired or replaced by FIRMAN.

### OWNER'S WARRANTY RESPONSIBILITIES:

As the SORE and engine powered equipment owner, you are responsible for the performance of the required maintenance listed in your operator's manual. FIRMAN recommends that you retain all receipts covering maintenance on your SORE and engine powered equipment, but FIRMAN cannot deny warranty coverage solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the SORE and engine powered equipment owner, you should however be aware that FIRMAN may deny you warranty coverage if your small off-road engine or engine powered equipment or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.

You are responsible for presenting your small off-road engine and engine powered equipment to a FIRMAN distribution center or service center as soon as the problem exists. The warranty repairs shall be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact FIRMAN at 1-844-347-6261.

### **FIRMAN Emission Control Defects Warranty Provisions**

The warranty period begins on the date the engine/equipment is delivered to an ultimate purchaser. FIRMAN warrants to the ultimate purchaser and each subsequent purchaser that the engine is:

Designed, built, and equipped so as to conform with all applicable regulations adopted by the Air Resources Board and US EPA; and Free from defects in materials and workmanship that cause the failure of a warranted part to be identical in all material respects to the part as described in the engine manufacturers application for certification.

### The warranty on emissions-related parts is as follows:

- (1) Any warranted part that is not scheduled for replacement as required maintenance in the owner's manual supplied, is warranted for the warranty period stated above. If any such part fails during the period of warranty coverage, the part will be repaired or replaced by FIRMAN at no charge to the owner. Any such part repaired or replaced under the warranty will be warranted for the remaining warranty period.
- (2) Any warranted part that is scheduled only for regular inspection in the owner's manual supplied, is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
- (3) Any warranted part that is scheduled for replacement as required maintenance in the owner's manual supplied, is warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part will be repaired or replaced by FIRMAN at no charge to the owner. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
- (4) Repair or replacement of any warranted part under the warranty must be performed at no charge to the owner at a warranty station.
- (5) Notwithstanding the provisions of Subsection (4) above, warranty services or repairs must be provided by FIRMAN that are franchised to service the subject engines.
- (6) The owner must not be charged for diagnostic labor that leads to the determination that a warranted part is in fact defective, provided that such diagnostic work is performed at a warranty station.
- (7) FIRMAN is liable for damages to other engine components proximately caused by a failure under warranty of any warranted part.

English 40 Customer Service: 1-844-FIRMAN1

# Service - Warranty

Customer Service: 1-844-FIRMAN1

- (8) Throughout the emissions warranty period defined in Subsection (b)(2), FIRMAN will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.
- (9) Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of the manufacturer.
- (10) Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claim.

The manufacturer will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

### PARTS COVERED BY WARRANTY

Listed below are the parts (if equipped) covered by the Federal and California Emission Control System Warranty.

- 1. Ignition system including:
- Spark plug
- Ignition coil
- 2. Fuel metering system:
- Fuel tank
- Fuel cap
- Fuel lines (for liquid fuel and fuel vapors) and related fittings/clamps
- Fuel regulator, carburetor and internal parts.
- 3. Catalytic muffler assembly including:
- Exhaust manifold
- Catalytic converter
- Muffler gasket
- -pulse valve

- 4. Air induction system including:
- Intake pipe/manifold
- Air cleaner
- 5. Crankcase breather assembly including:
- Breather connection tube
- 6. Fuel tank evaporative emission control system including:
- Purge valves
- Carbon canister
- Vapor hoses and fitting/clamps

### Limitations

This Emission Control System Warranty shall not cover any of the following:

- (a) Consequential damages such as loss of time, inconvenience, loss of use of the engine or equipment, etc.
- (b) Diagnosis and inspection fees that do not result in eligible warranty service being performed.

FIRMAN POWER EQUIPMENT INC.

www.firmanpowerequipment.com

# **FOLLOW US ON SOCIAL MEDIA**

USE

# #EVERYGENERATORTELLSASTORY TMA

FOR YOUR CHANCE TO WIN FIRMAN SWAG







