



Wireless Desktop Keyboard



Model: WKB-5300UB

QuickGuide

English

www.adesso.com

Limited Warranty

Adesso provides a one year limited warranty for all of its products against defects in material and workmanship.

During this period, Adesso will repair or replace any product which proves to be defective. However, Adesso will not warranty any product which has been subject to improper freight handling, shipping abuse, neglect, improper installation or unauthorized repair. The warranty will not cover products installed with components not approved by Adesso and products where the sealed assembly trace has been broken.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you provided you return it during the warranty period with freight charges pre-paid to Adesso. Before returning any product, you must obtain a Return Merchandise Authorization number (RMA). This RMA # must be clearly marked on the outside of the package you are returning for warranty service. Be certain to also include your name, shipping address (no PO Boxes), telephone number, and a copy of the invoice showing proof of purchase in the package.

SUPPORT

FAQ: <http://www.adesso.com/faqs>.

Email Support: support@adesso.com

Telephone Support:

Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

Contents:

- Wireless Full Size Keyboard
- 2.4 GHz USB Receiver
- Quick Start Guide


Keyboard Specification:

- Key Layout: 104-Key US Layout
- Key Type: Scissor-Switch Technology
- Wireless Technology: 2.4 Ghz Wireless Technology
- Distance: 30 ft (10m)
- Battery: AAA*2
- 5 Hotkeys (Home, Email, Forward, Back, Search)
- Internet Hotkeys: 7 Hotkeys (Play/Pause, Stop, Next Track, Previous Track, Volume Down, and Mute)
- Media Hotkeys: 7 Hotkeys (Play/Pause, Stop, Next Track, Previous Track, Volume Down, and Mute)
- Dimension: 17.5" x 5.3" x 0.7" (445 x 135 x 18.40mm)
- Weight: 1.20 lb (545g)

Requirement:

- Operating System: Windows®11/10/8/7/Vista/XP
- Connectivity: Available USB Port


Keyboard Overview

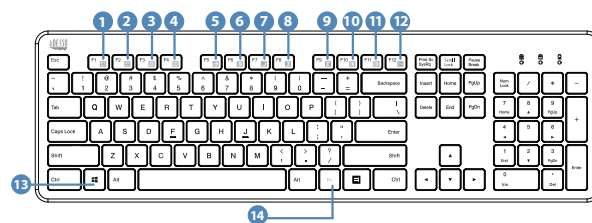

- 1 Home
- 2 E-mail
- 3 Previous
- 4 Next
- 5 Search
- 6 Play / Pause
- 7 Stop
- 8 Previous Track
- 9 Next Track
- 10 Volume Up
- 11 Volume Down
- 12 Mute
- 13 Windows Button
- 14 Function Key


INSTALLATION

1. Place batteries.
 - a). Open the battery cover under the keyboard and place 2 AAA batteries inside.

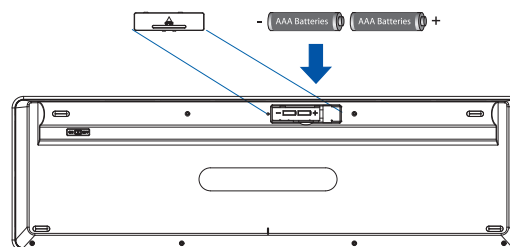

- b). Close the battery compartment cover.
Switch the keyboard to ON

 2. Insert the USB receiver into an available USB port and turn on your computer. operating system will detect the device automatically, no driver required.



TIPS:

- When the Battery Low LED is ON, it means that the device requires to change the batteries.

TROUBLESHOOTING

If wireless keyboard cannot be operated, please try the following:

1. Make sure you have inserted two AAA batteries inside the battery compartment correctly. Switch the keyboard to ON.
2. Make sure you have connected the USB receiver correctly to the computer's USB port. Move the devices 1 foot away from the receiver in order to avoid interference while pairing connection.
3. Wireless phone, routers and other devices that uses 2.4GHz frequenc might cause interference with wireless keyboard and mouse. Please relocate such wireless appliances away from the wireless keyboard.