

Uputstvo za upotrebu (EN)

SENCOR aparat za mlečnu penu SMF 2020WH

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-aparat-za-mlecnu-penu-smf-2020wh-akcija-cena/>

Milk Frother and Warmer

User's manual

EN



SENCOR®

SMF 2020WH

Prior to using this appliance, please read the user's manual thoroughly, even in cases where owners have previously familiarised themselves with using similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this manual for future use.

Save the original shipping box, packaging material, purchase receipt and warranty card for the duration of the warranty. In the event of shipping, pack the appliance using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
DESCRIPTION OF THE MILK FROTHER AND WARMER	5
BEFORE FIRST USE	6
USING THE MILK FROTHER AND WARMER	6
CLEANING AND MAINTENANCE.....	8
TECHNICAL SPECIFICATIONS	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES.....	9

IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is designed for domestic use and similar locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments.
- Do not use the appliance outdoors.
- Only place the appliance on an even, dry and stable surface.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Before connecting this appliance to the socket outlet, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket. Connect the appliance only to a properly grounded socket.
- Do not use the appliance in the direct vicinity of a bathtub, wash basin, shower, pool or other similar sources of water.
- Only use the milk kettle with the base that was supplied with it.
- The appliance is designed for frothing and heating milk. Do not use it for other purposes.
- Before pouring milk into the kettle, make sure that the milk frothing or stirring attachment is properly installed inside.
- Do not start the appliance without the lid in place.
- Do not touch the rotating frothing or stirring attachment.



Warning:

If the kettle is overfilled, milk may splash out during operation.


- Do not open the lid while the appliance is in operation. Pay extra attention when handling a kettle filled with hot milk.
- Do not turn on the appliance when it is empty. The incorrect use of the appliance may negatively affect its lifetime.
- Always disconnect the appliance from the power socket if you will not be using it, before moving it, cleaning it or changing the accessories (attachments).
- Allow the appliance to cool down before replacing accessories and cleaning it.
- Do not wash the milk kettle (except for the removable lid) and the base under running water and do not submerge it in water or in any other liquid.
- Make sure the power cord is not touching a hot surface. Do not place heavy items on the power cord.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

Milk Frother and Warmer

SMF 2020WH

EN

DESCRIPTION OF THE MILK FROTHER AND WARMER

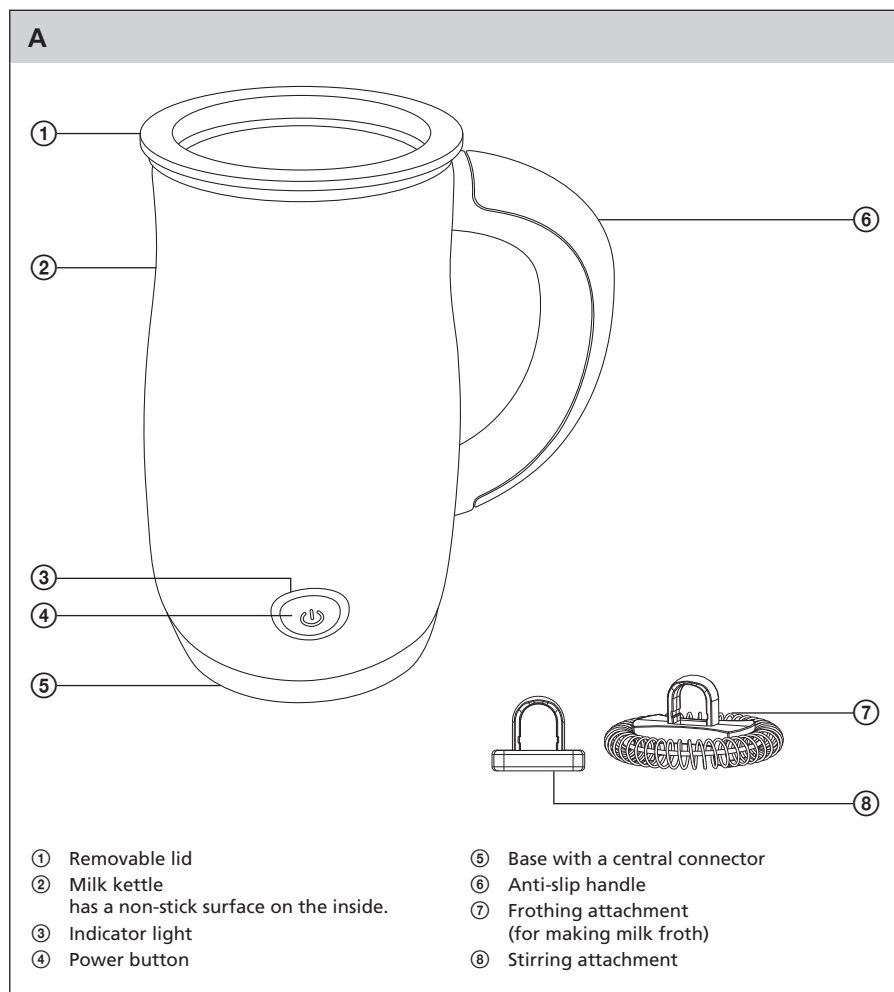

BEFORE FIRST USE

- 1) Take the appliance and its accessories out of the packaging materials.
- 2) Before first use, wipe the inside of the kettle A② using a cloth dampened in a solution of warm water and neutral kitchen detergent. Use a cloth dampened in warm water to thoroughly wipe the surface on to which you applied the kitchen detergent and then wipe it dry.
- 3) Wash attachments A⑦–⑧ and lid A① in warm water using a neutral kitchen detergent. Then rinse these parts under running water and dry them.
- 4) Now the appliance is ready for frothing and heating milk.

USING THE MILK FROTHER AND WARMER

- 1) Unwind the power cord and place the base A⑤ on a stable, even and clean surface.
- 2) Select an attachment A⑦ or A⑧ depending on the operating mode and attach it to the shaft located inside the kettle A②.
The frothing attachment A⑦ is designed for the milk frothing and heating mode or the milk frothing mode without heating. The stirring attachment A⑧ is designed for the milk heating mode without frothing.

- 3) Pour well cooled milk into the kettle A② while following the instructions described below.
If you wish to use the milk frothing and heating mode or the frothing mode without heating, the milk level must not exceed the bottom level mark (100 ml), that is marked on the inside wall of the kettle A②.

If you wish to use the milk heating mode without frothing, the milk level must not exceed the top level mark (200 ml), that is marked on the inside wall of the kettle A②.



Attention:

Do not fill the kettle A② when it is placed on the base A⑤.
If the kettle A② is overfilled, milk may splash out during operation.



Tip:

For creating milk froth, use milk with a higher fat content, ideally full-cream milk (fat content of 3.5 %).

- 4) Place the kettle A② on to the base A⑤. Insert the power plug into an electrical power socket.
When the power cord is inserted the indicator light A③ will be lit red.
- 5) Set the operating mode that corresponds to the attachment inserted in the kettle A②.

Milk Frother and Warmer

SMF 2020WH

EN

Operating mode	Duration	Attachment type	Starting the operating mode and its progress
Frothing and heating milk	approx. 2 min	Frothing attachment A⑦	Press the button A④ once. The indicator light A③ will be lit blue. The attachment A⑦ will rotate to prevent milk from sticking to the inner wall of the kettle and to form froth on the surface of milk. The milk will heat up to a temperature of 65 °C at which the milk does not burn and its flavour characteristics are maintained.
Heating milk without frothing	approx. 3 min	Stirring attachment A⑧	Press the button A④ once. The indicator light A③ will be lit blue. The attachment A⑧ will rotate to prevent milk from sticking to the inner wall of the kettle. The milk will heat up to a temperature of 65 °C at which the milk does not burn and its flavour characteristics are maintained.
Frothing milk without heating	approx. 1.5 min	Frothing attachment A⑦	Press and hold the switch button for 2s. The indicator light A③ will flash blue. The attachment A⑦ will rotate to form froth on the surface of milk.



Note:

The operation of the appliance can be interrupted at any time by pressing the button A④.

- 6) The operating mode will end automatically and the appliance will switch to the stand-by mode. The indicator light A③ will be lit red.
- 7) Carefully remove the lid A① and pour the milk out into a prepared container.



Note:

Do not repeatedly heat up the milk. Always use a new batch of cooled milk for the next heating operation.

- 8) Clean out the inside area of the kettle A② after each use according to the instructions in chapter Cleaning and maintenance.
- 9) Before turning the appliance on again, wait approx 3 minutes. If the appliance is turned on 5 times in sequence without a break, the indicator light A③ will be lit blue and flash. The button A④ is temporarily out of operation. This is a safety function to prevent the appliance from being damaged. After 5 minutes the appliance will switch to the stand-by mode and will be ready for further use. The indicator light A③ will be lit red.
- 10) If you will not be using the appliance, disconnect the power cord from the electrical power socket.

CLEANING AND MAINTENANCE

- Make sure that the appliance is disconnected from the power socket before cleaning and allow it to cool down.
- Remove attachment A⑦ or A⑧ from the kettle A②. Wash it in warm water using a neutral kitchen detergent. Then thoroughly rinse it under flowing water and dry it. Proceed in the same manner when cleaning the lid A①.



Note:

Do not wash attachments A⑦–⑧ and the lid A① in a dishwasher.

- Wipe the inside of the kettle A② using a cloth dampened in a solution of warm water and neutral kitchen detergent. Use a cloth dampened in warm water to thoroughly wipe the surface on to which you applied the kitchen detergent and then wipe it dry.
- Use a dry cloth to clean the outer surface of the kettle A②. In the event of heavier soiling, dampen the cloth in a weak solution of neutral kitchen detergent. After applying the kitchen detergent, wipe the surface of the kettle A② with a lightly dampened cloth and then wipe dry.
- To clean the base A⑤ use only a dry cloth.
- Never use abrasive cleaning products, petrol, solvents, steel wool, etc. for cleaning.

TECHNICAL SPECIFICATIONS

Nominal voltage.....	230 V
Nominal frequency.....	50 Hz
Rated power input.....	450 W
Capacity	200 ml

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Milk Frother and Warmer

SMF 2020WH

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-aparat-za-mlecnu-penu-smf-2020wh-akcija-cena/>