

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: 89100 NAME: Tilda Small Chandelier

MATERIAL TYPE: Iron/Wood FINISH: Black

SOCKET TYPE: E12 SOCKET QTY: 5

BULB WATTAGE: 25W/7W CFL/5W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 21LBS

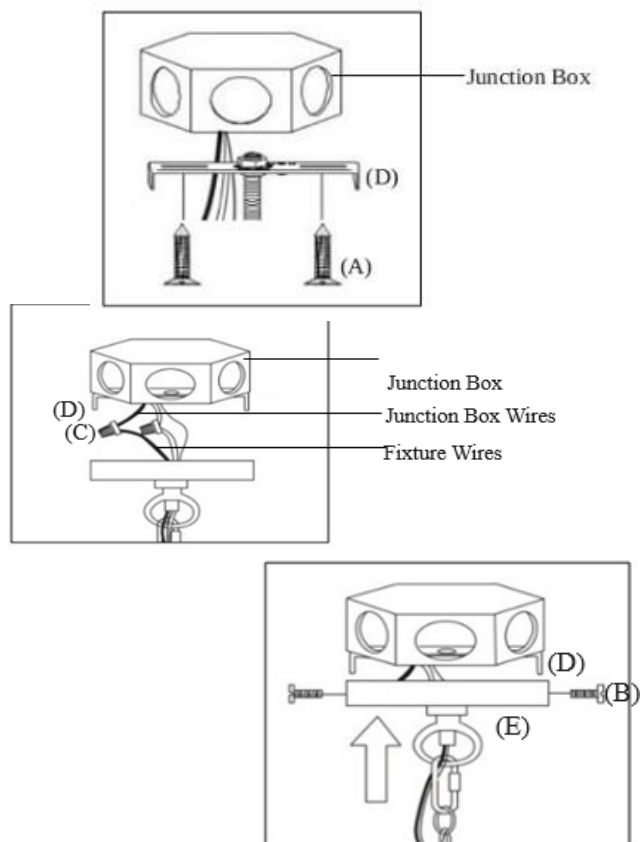

PARTS INCLUDED:

A MOUNTING PLATE	1 PC
B CANOPY	1 PC
C COLLAR LOOP	1 PC
CHAIN	36"
CANOPY SCREW	2 PCS

HARDWARE INCLUDED:

K Plastic Wire Connector	X3
J Mounting Screws	X2

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



Installation Instructions:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Please check you have all parts before beginning assembly.
3. Secure the Crossbar (D) to the Junction Box with the Mounting Screws (A). Tighten until snug.
4. Establish electrical connections: Connect the NEUTRAL FIXTURE WIRE (has ridges molded on the outside insulation) to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. Connect the HOT FIXTURE WIRE (has insulation that is smooth) to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED. If the J-Box includes a ground wire, attach the GROUND WIRE of the fixture to the GROUND J-BOX WIRE. Fasten the wires together with a plastic Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If there is no ground wire in the J-Box, use a screwdriver to secure the end of the chandelier ground wire to the GREEN screw located on the Crossbar (D). Wrap the wire around the screw once clockwise and then tighten the screw. Make sure that the wire is held firmly by the screw and did not slip out during tightening.
5. After all connections are made attach the Canopy (E) to the Crossbar (D). Align the holes of the side portions of the Crossbar (D) with the holes located in the side of the Canopy (E). Using a screwdriver insert the Canopy Screws (B) through each hole of the Canopy (E) and into threaded engagement with the Crossbar (D). Do not over-tighten the screws.
6. Insert (6) 25-watt maximum TYPE B standard incandescent light bulbs (not included) into the sockets. DO NOT EXCEED THE RECOMMENDED WATTAGE.
7. Restore power to ceiling outlet junction box and test fixture.

SECOND PAGE HAS INSTRUCTION ON SHORTENING LENGTH

CARE INSTRUCTIONS:








Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

To Adjust the Suspension Length of the Fixture:

1. The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set Chain and Cable Wire *length is not appropriate for your installation. We recommend that you adjust the chain and cable wire to the proper desired length before cutting the electrical cord.* Determine the lighting fixture suspension length from the ceiling for the product installation, allowing the extra cord length for the outlet junction box wire connections.
 - NOTE: The Chain and Cable Wire must take the weight of the Fixture. When adjusting the Cords, make sure the Cords are longer than the Chain.
2. Pull out the fixtures 2 wire power cord and bare ground wire woven through the Chain (F).
3. The chain length may be shortened from either end. Use two pairs of pliers to gently pry the link apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. Use a cloth or folded piece of paper between the pliers and the link to protect the finish of the link during bending (See A2). Once the Chain (F) is at the desired length, reattach the Chain (F) (See A3)
4. Re-weave the fixtures 2 wire power cord and bare ground wire through every other loop to the top of Chain (F).
5. If needed, cut off the extra power cord length on the 2-wire cord and bare ground wire so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box).
6. To shorten the Cable Wires (G), use a screwdriver to unscrew the Cable Lock (H) onto the Canopy Loop at the bottom of the Canopy (E) (See A6).
7. Pull out the cable wire (G) and using a plier cut off the extra cable wire (G). Once the Cable Wire (G) is at the desired length, reattach the Cable Wire (G) by inserting it to the Cable Lock (H) and tighten each screw with a screwdriver until the Cable Wire (G) is firmly secured (See A7).

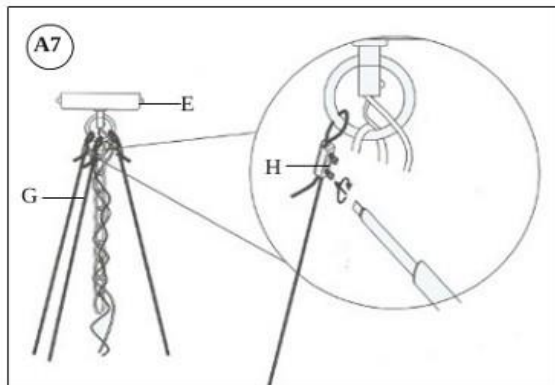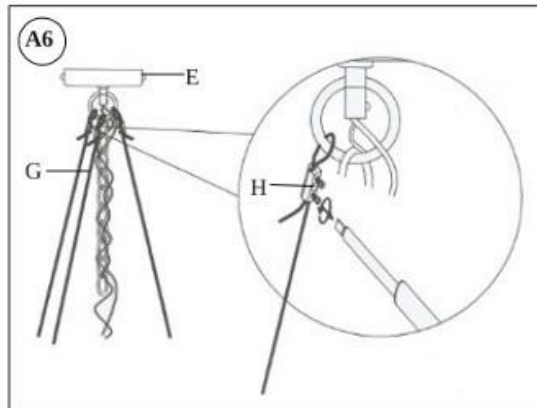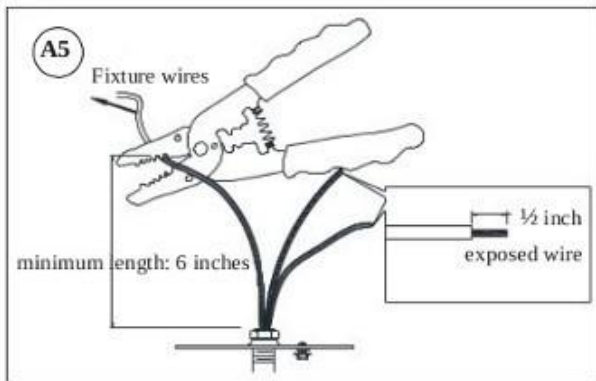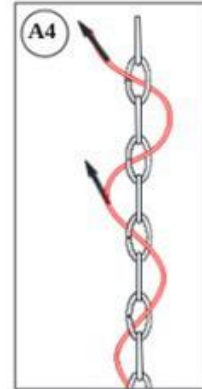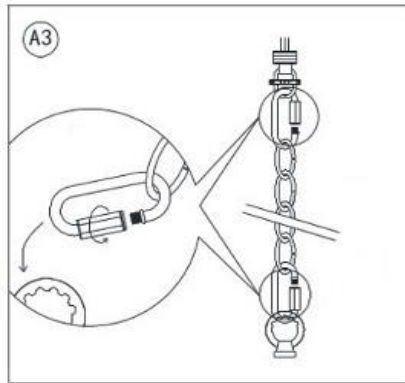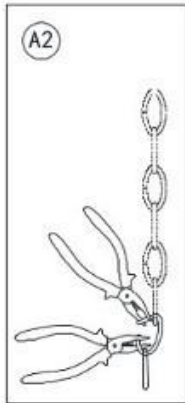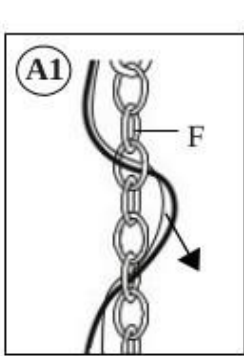

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: 89100 NAME: Tilda Large Chandelier

MATERIAL TYPE: Iron/Wood FINISH: White

SOCKET TYPE: E12 SOCKET QTY: 12

BULB WATTAGE: 25W/7W CFL/5W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 56LBS

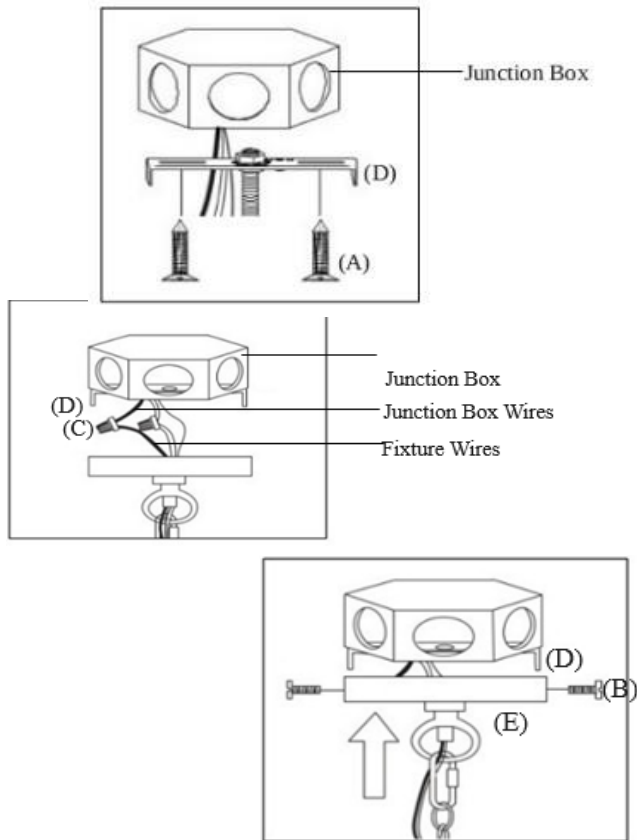

PARTS INCLUDED:

A MOUNTING PLATE	1 PC
B CANOPY	1 PC
C COLLAR LOOP	1 PC
CHAIN	36"
CANOPY SCREW	2 PCS

HARDWARE INCLUDED:

K Plastic Wire Connector	X3
J Mounting Screws	X2

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

Installation Instructions:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Please check you have all parts before beginning assembly.
3. Secure the Crossbar (D) to the Junction Box with the Mounting Screws (A). Tighten until snug.
4. Establish electrical connections: Connect the NEUTRAL FIXTURE WIRE (has ridges molded on the outside insulation) to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. Connect the HOT FIXTURE WIRE (has insulation that is smooth) to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED. If the J-Box includes a ground wire, attach the GROUND WIRE of the fixture to the GROUND J-BOX WIRE. Fasten the wires together with a plastic Wire Connector (C) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If there is no ground wire in the J-Box, use a screwdriver to secure the end of the chandelier ground wire to the GREEN screw located on the Crossbar (D). Wrap the wire around the screw once clockwise and then tighten the screw. Make sure that the wire is held firmly by the screw and did not slip out during tightening.
5. After all connections are made attach the Canopy (E) to the Crossbar (D). Align the holes of the side portions of the Crossbar (D) with the holes located in the side of the Canopy (E). Using a screwdriver insert the Canopy Screws (B) through each hole of the Canopy (E) and into threaded engagement with the Crossbar (D). Do not over-tighten the screws.
6. Insert (6) 25-watt maximum TYPE B standard incandescent light bulbs (not included) into the sockets. DO NOT EXCEED THE RECOMMENDED WATTAGE.
7. Restore power to ceiling outlet junction box and test fixture.

SECOND PAGE HAS INSTRUCTION ON SHORTENING LENGTH

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

To Adjust the Suspension Length of the Fixture:

1. The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set Chain and Cable Wire *length is not appropriate for your installation. We recommend that you adjust the chain and cable wire to the proper desired length before cutting the electrical cord.* Determine the lighting fixture suspension length from the ceiling for the product installation, allowing the extra cord length for the outlet junction box wire connections.
 - NOTE: The Chain and Cable Wire must take the weight of the Fixture. When adjusting the Cords, make sure the Cords are longer than the Chain.
2. Pull out the fixtures 2 wire power cord and bare ground wire woven through the Chain (F).
3. The chain length may be shortened from either end. Use two pairs of pliers to gently pry the link apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. Use a cloth or folded piece of paper between the pliers and the link to protect the finish of the link during bending (See A2). Once the Chain (F) is at the desired length, reattach the Chain (F) (See A3)
4. Re-weave the fixtures 2 wire power cord and bare ground wire through every other loop to the top of Chain (F).
5. If needed, cut off the extra power cord length on the 2-wire cord and bare ground wire so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box).
6. To shorten the Cable Wires (G), use a screwdriver to unscrew the Cable Lock (H) onto the Canopy Loop at the bottom of the Canopy (E) (See A6).
7. Pull out the cable wire (G) and using a plier cut off the extra cable wire (G). Once the Cable Wire (G) is at the desired length, reattach the Cable Wire (G) by inserting it to the Cable Lock (H) and tighten each screw with a screwdriver until the Cable Wire (G) is firmly secured (See A7).

