

How to unlock No-Flight-Zones Using DJI Pilot 2

Note: Internet connection is required during steps 1 to 5. Please prepare these in advance if there is no internet connection in the unlocking area.

STEP 1

Power on the remote controller and the aircraft. Make sure the remote controller has been linked to the aircraft successfully and then launch DJI Pilot 2.


STEP 2

Make sure that the aircraft and remote controller are updated to the latest firmware version.

STEP 3


In DJI Pilot 2 click on the '**profile**' icon in the top left corner. Then, click '**Geo Zone Unlocking**'.

Note: Make sure you are logged in with the DJI account, which was used while submitting your unlock request.

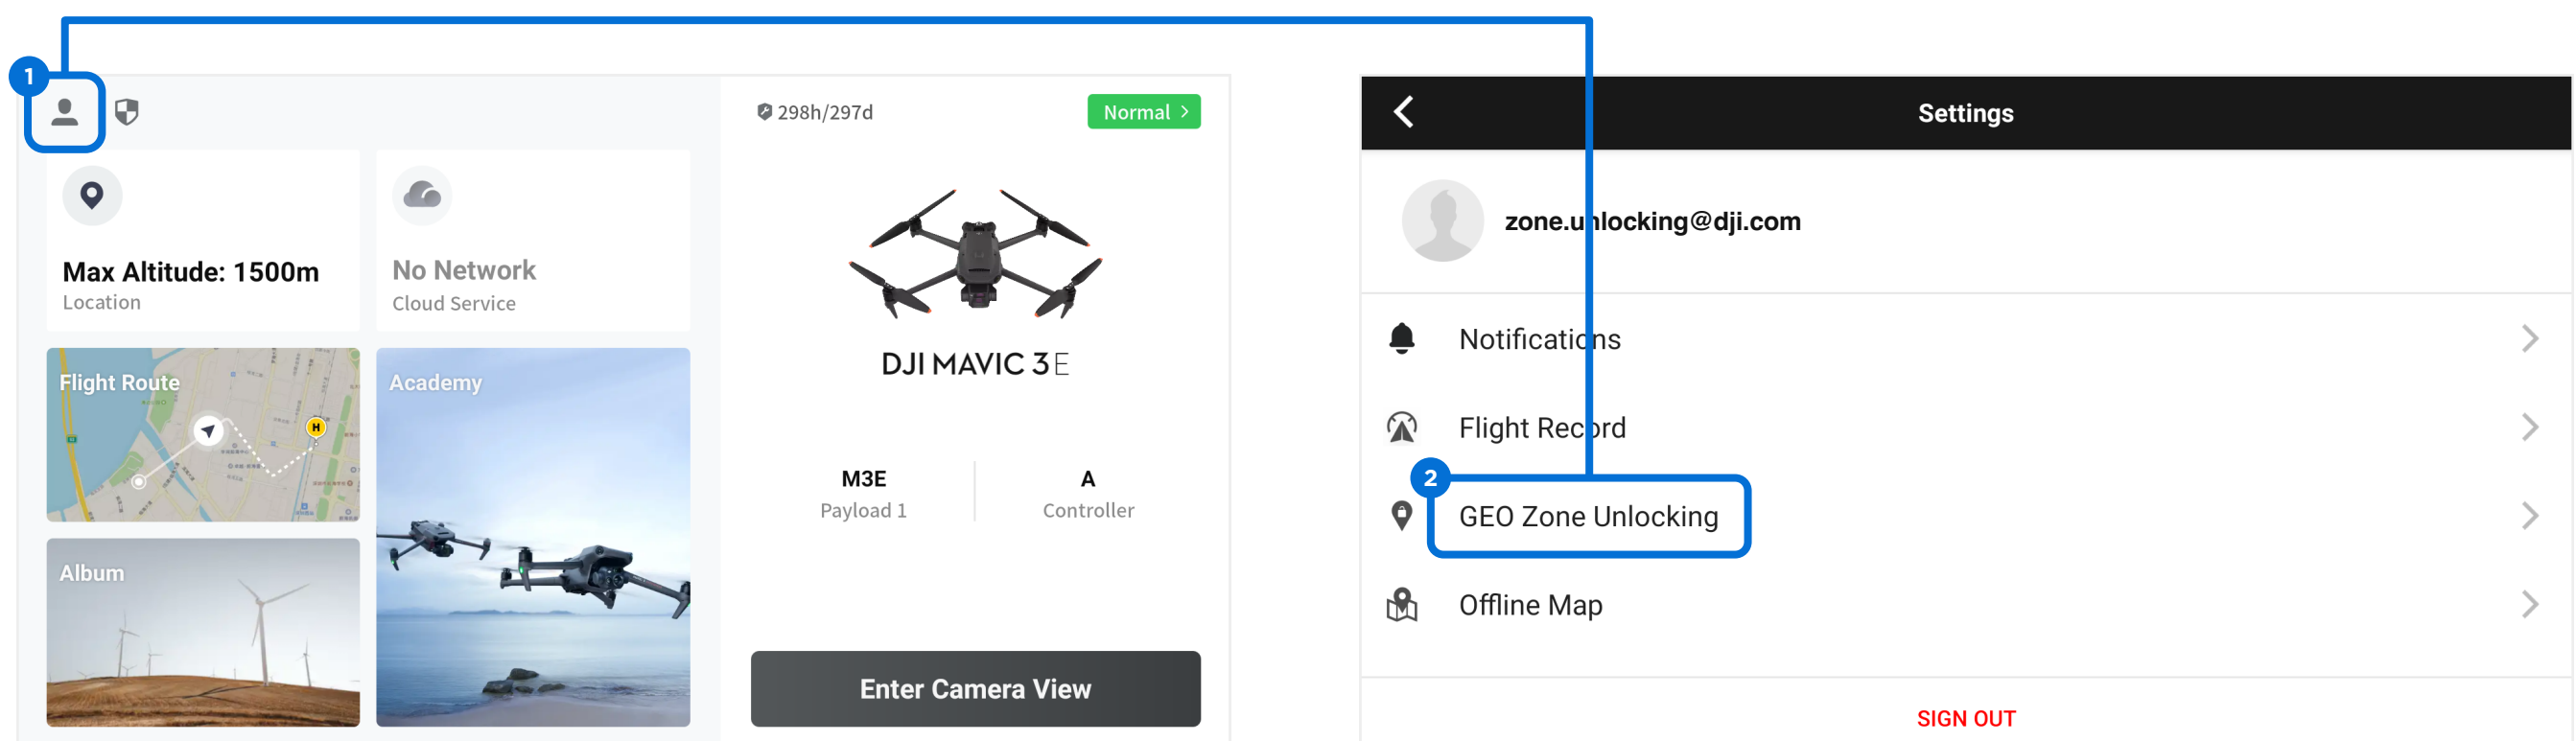


STEP 4

Refresh the NFZ database by clicking on the **‘Refresh’** icon in the top right corner. Then, you will see that there is, at least, one new unlocking package, under the ‘Refresh icon’. **Click ‘Details’**.

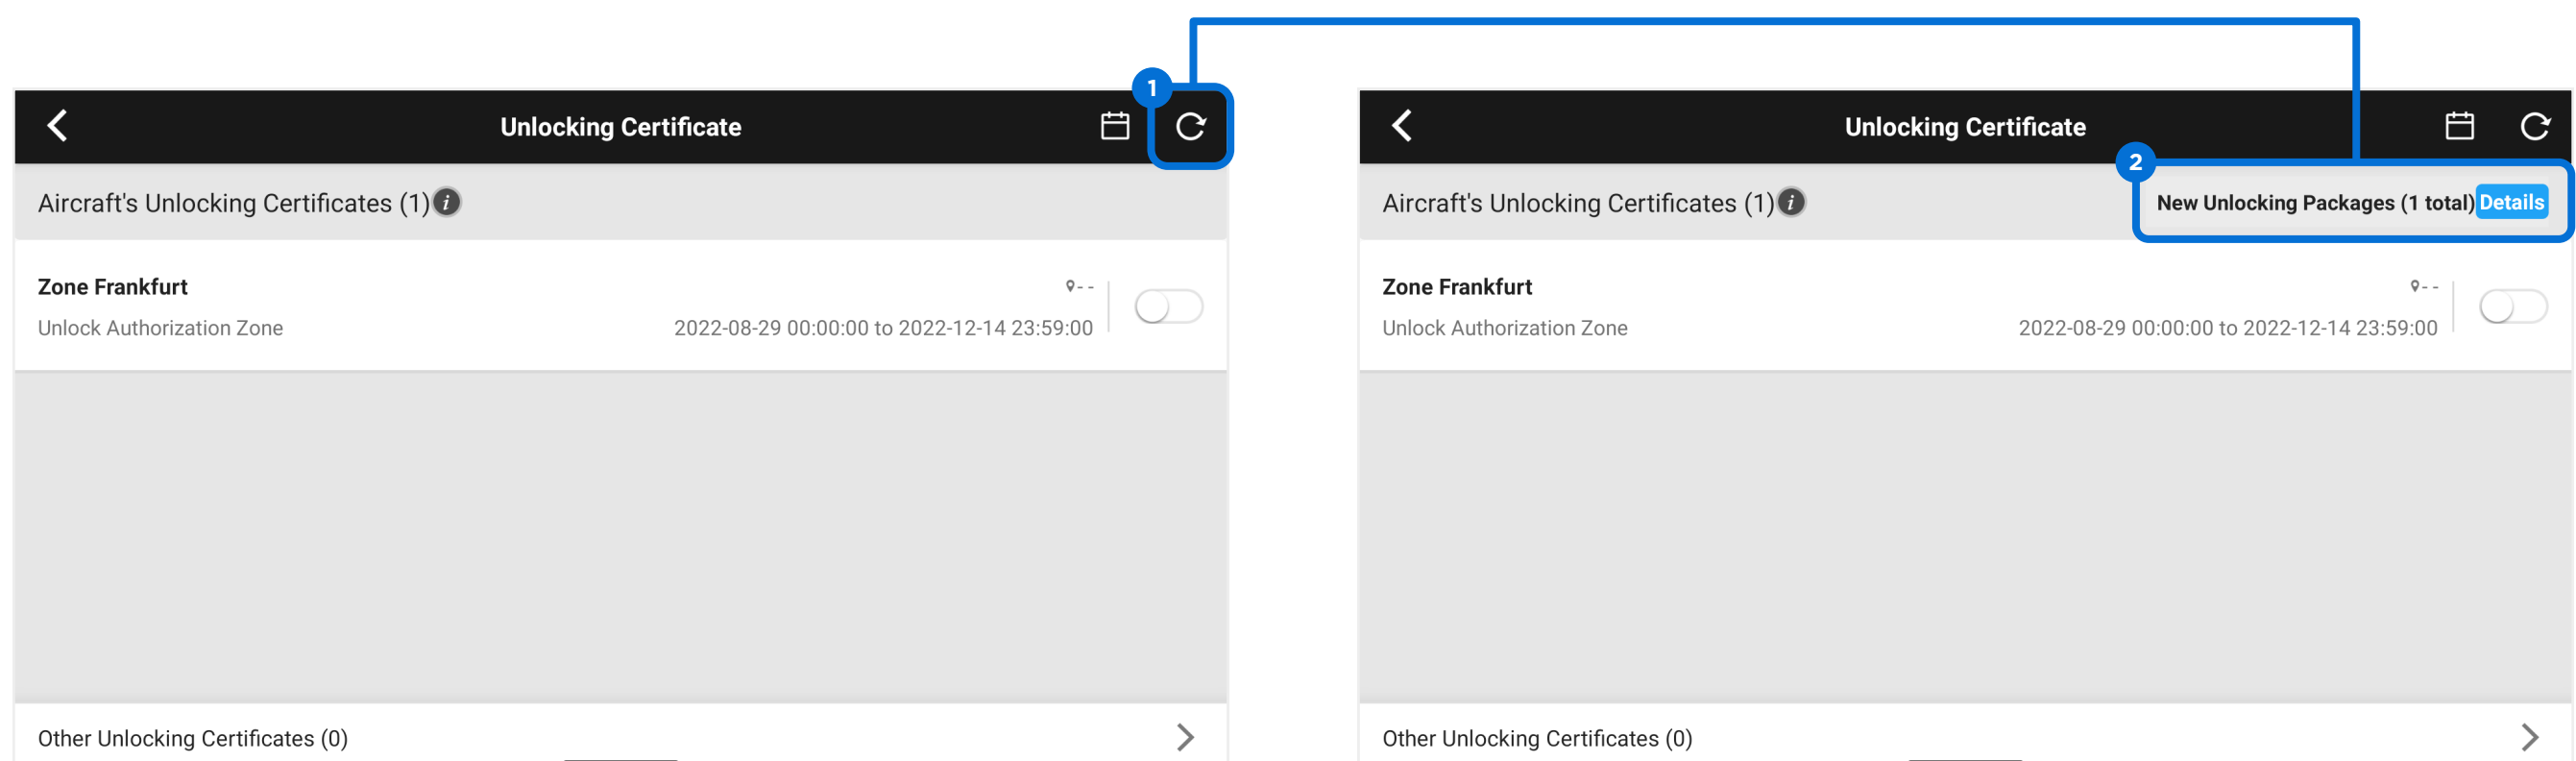


STEP 5

The unlocking licenses need to be imported into the aircraft. **Click ‘Import All’**.

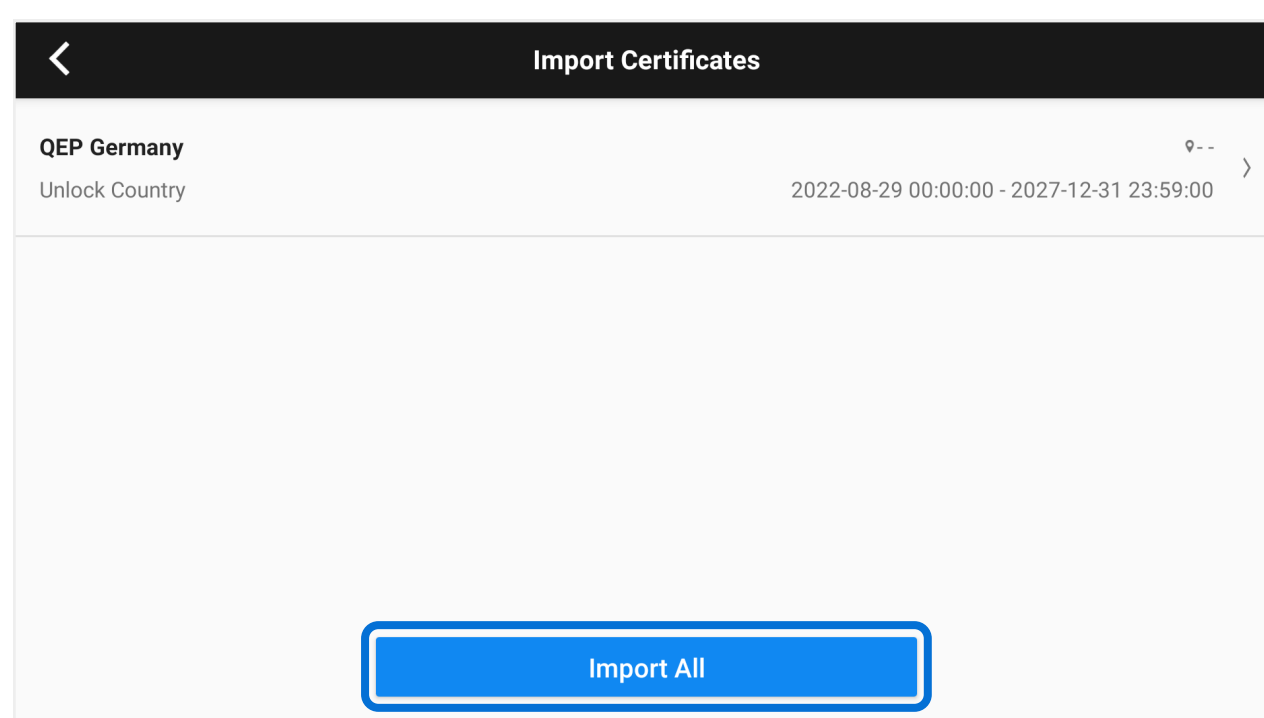


STEP 6

Activate the unlocking certificates with the toggle, and confirm that you are authorized to fly and that you accept full responsibility for your flight.

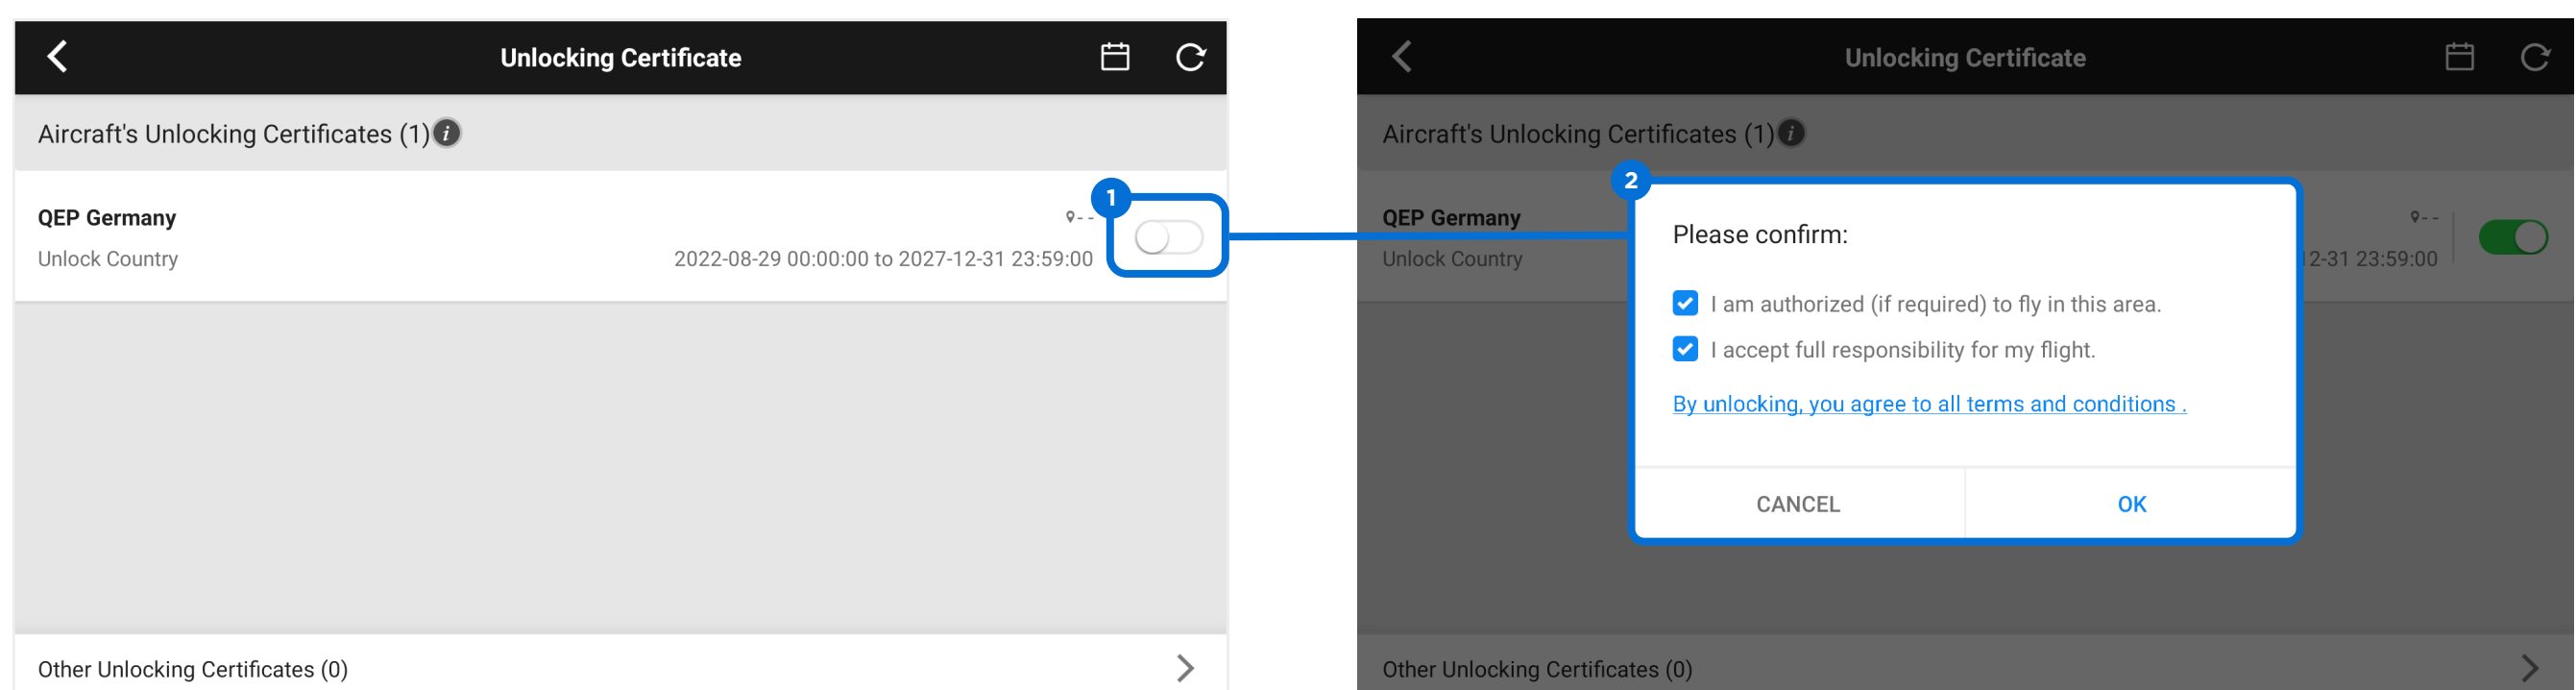

STEP 7 (Optional)

After activating the unlocking certificates, tap to view the Map in the bottom left corner of DJI Pilot 2. The unlocked area will be indicated on the map by a green zone (only for Circle and Polygone licenses).

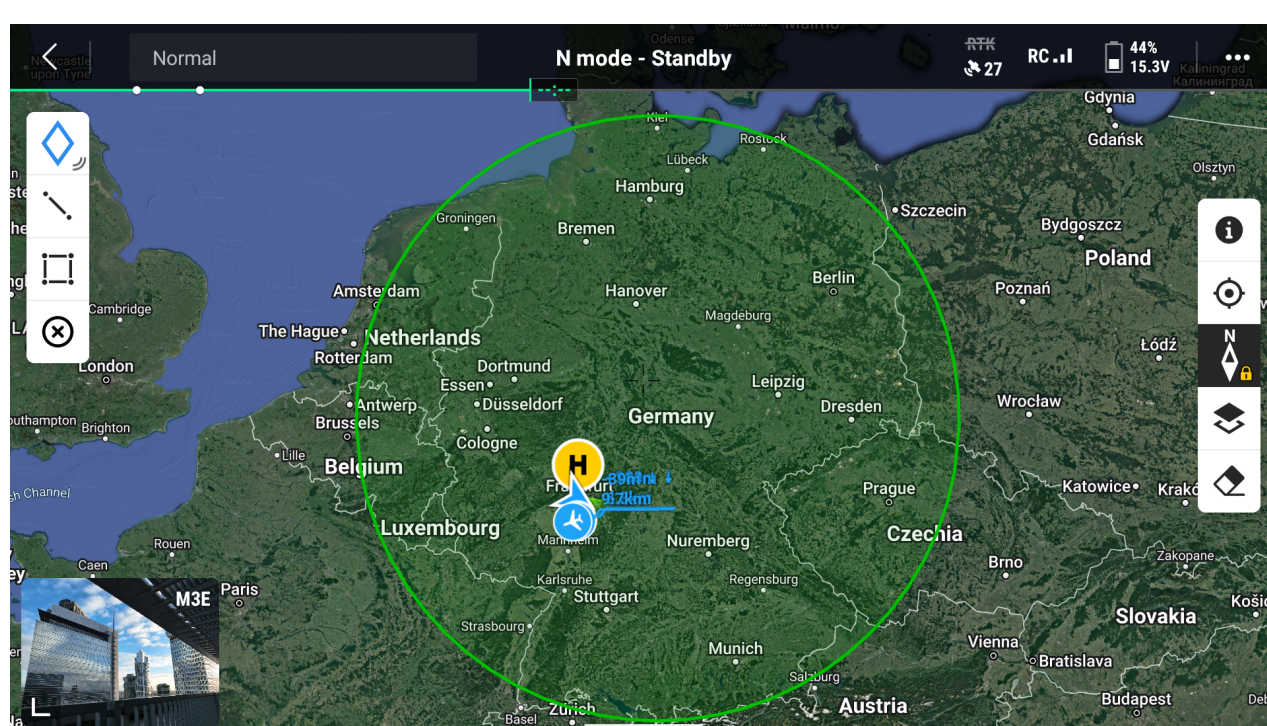

Note: You can only fly the aircraft within the green zone, while the unlocking certificate is activated. To fly outside of the green zone, deactivate the unlocking certificate.

If you have any question or any problem during the unlocking procedure, please send an email to flysafe@dji.com