 
Hello!



INNIOASIS Y1 MP3 Music Player





Click wheel

- ⇒/8 Return / MFB((Multi-Function Buttons)
 Short press to go back to the previous page, long press to activate certain specific functions or shortcut menus, such as A-B repeat, bookmarks, etc.
- Ist Previous (Rewind)

 Short press to skip to the previous track, long press for fast rewind.
- · ►► Next(Forward)

 Short press to skip to the next track, long press for fast forward.
- M/

 Play(Pause)/Stop

 Short press to play or pause, long press to stop playback.
- Volume +(-) or switch options
 Swipe clockwise to increase volume or scroll down or right options.
 Swipe Anticlockwise to lower volume or Scroll up or left options.
- OK / Power ON(OFF)

 Short press to confirm the current option.

 Long press for 3 seconds to power on (off).

3.5mm audio output

Connect external headphones or speakers.

USB-C

Connect to a computer or adapter for charging or files transfer.

Speaker

Built-in speaker for audio output.

Reset

Reset hole is used to force shutdown the device in case of freezing or crash (not reset to factory settings).

How to transfer music to the player

- 1.Connect Y1 player to your computer with the included USB-C cable
- 2.Short press the button on Y1 player to confirm "Turn on USB storage".
- 3.Click "This PC" on your computer's desktop, you will find a USB drive added to the list of devices and drives.
- 4.Copy the music that has been downloaded on the computer and paste it into this newly added USB drive.
- 5.After completing the file transfer, click the button again to turn off USB storage, and press ⇒/ to return to homepage.

Tips: If you turn on USB storage, some apps you're running will stop and may be unavailable until you turn off USB storage.

Home

List all functional options of the Y1 player, including: Now Playing, Music, Audiobook, Bluetooth, Settings, Shuffle Quick. The following actions are available on the click wheel.

Key	Action	Result
0	Swipe clockwise	Scroll down or right options
	Swipe Anticlockwise	Scroll up or left options
ОК	Short press	Confirm selected option
	Long press	Power on or power off

Now Playing

Quickly enter the playback interface to view the currently playing song or audiobook. The following actions are available on the click wheel.

Key	Action	Result
 44	Short press	Prev track
	Long press	Fast rewind
>> I	Short press	Next track
	Long press	Fast forward
	Short press	Back to Prev-level
5/88	Long press	Activate bookmark (for audiobook) Activate A-B repeat (for music)
NII /	Short press	Play / Pause
▶ II/■	Long press	Stop playing
0	Swipe clockwise	Volume +
	Swipe Anticlockwise	Volume -
ОК	Short press	Switch between song info and lyrics
	Long press	Power on or Power off

FAO

- 1) How to shuffle ? In "Setting – Shuffle", switch the status to "ON"
- 2) How to get list loop? In "Setting – Repeat", switch the status to "List loop".
- 3) How to view lyrics?
 In the Now playing window, short press to switch to lyrics display. Short press again to return to the song information display.
- 4) Can I add a bookmark to audiobooks? Yes. When playing audiobooks, long press the key 5/88 to pop up the dialog box, and then confirm to add to bookmark. All created bookmarks are preserved in Audiobook --- Bookmark lists.
- 5) Is there A-B repeat?
 A-B repeat is only available for music playing. When playing music, long press the key 5/88 to activate A-B repeat and generate point A, long press the key 5/88 again to generate point B.
- * If you want to use A-B repeat while playing audiobook, please do not store the audiobook file in the Audiobooks folder. By default, only files stored in the "Audiobooks" folder are recognized as audiobook, while those stored in other folders are recognized as music.

6) Is the player equipped with an equalizer and how to use it?

Yes. Y1 is equipped with EQ. You can go to Settings -- Equalizer to select your favorite preset style, or long press the key ⇒/ to activate the customized EO.

Music

Key	Action	Result
0	Swipe clockwise	Scroll down or right options
	Swipe Anticlockwise	Scroll up or left options
ОК	Short press	Confirm selected track or option
	Long press	Power on or Power off
5/88	Short press	Back to Prev-level
	Long press	Activate shortcut menu

About shortcut menu

Long press the key ⊅/88 in all folders under Music to pop up a shortcut menu for file management:

- · Multi Select-- Select music / file one by one.
- All Select-- One-click to select all music / files in the current folder.
- · Delete File-- Delete the selected music.
- Add to Playlist 1,2,3...- Add selected music to target playlist.

About Playlist

Y1 Player allows you to add, delete, rename playlists. Long press the key 5/8 in the playlist folder to pop up the shortcut menu, and then select the operation you want

- New Playlist add a new playlist, the default name of the new playlist is Playlist
 6. 7...
- **Delete Playlist** delete the current playlist.
- · Rename Rename the current playlist.

About Search

Y1 Player allows you to search for a target track or album by part or all of the song title. Click "Search" and enter some or all of the song names in the pop-up input box to preview the search results above the input box. For more operations, please refer to the table below

Key	Action	Result
144	Short press	backspace - deletes one character per press
	Long press	Continuous backspace
▶ ►	Long press	Space - Enter a space each time press

Key	Action	Result
0	Swipe clockwise	Scroll down or right letter options
	Swipe Anticlockwise	Scroll up or left letter options
ОК	Short press	Enter the current character
	Long press	Power on or Power off
⊅/88	Short press	Close the input box and return to search results
	Long press	Activate shortcut menu

In search results page, long press the key 5/88 to pop up a shortcut menu, which allows you to select all or multiple tracks and add them to the target playlist.

Audiobook

Key	Action	Result
0	Swipe clockwise	Scroll down or right options
	Swipe Anticlockwise	Scroll up or left options
ОК	Short press	Confirm selected book or option
	Long press	Power on or Power off
5/88	Short press	Back to Prev-level
	Long press	Activate shortcut menu

Note: Only books stored in the device's "Audiobooks" folder are recognized as audio books. Audiobooks stored elsewhere will be recognized as music.

About shortcut menu

Long press the key ⊅/88 in all folders under Audiobook to pop up a shortcut menu for file management:

- •MultiSelect-- select music / file one by one.
- •All Select-- one-click to select all book / files in the current folder.
- ·Delete File-- delete selected music.

About Bookmart lists

In the audiobook playback window, long press the button \$\times\$/\text{\text{\text{\$\genty}}}\$ to activate the bookmark function, and all created bookmarks are saved in this list.

Long press the button ⊅/8 in the bookmark list to pop up a shortcut menu, allowing you to select all, multi select, and delete bookmarks.

About Settings

Note: this settings under Audiobook are only available for playing audiobooks.

- ·Shuffle-- enable/disable shuffle mode
- •Repeat-- enable/disable loop playback, Options include: List loop, Single loop, Off.
- •Speed-- Adjust playback speed, Options include: Slow, Normal, Fast, Fastest.
- •Time off -- Set stop playing time, Options include: Off, 10min, 20min, 30min, 60min.

FAO

- 1) How to add a bookmark
 When playing the audiobooks, press the key
 ⇒/₩ in the click wheel to pop up the dialog
 box, and then confirm to add to bookmark.
 All created bookmarks are preserved in
 Audiobook --- Bookmark lists.
- 2) Why didn't I find the audio books uploaded to the device?

To avoid confusion between music files and audiobooks, only books stored in "Audiobooks" folder will be recognized as audiobooks by default. Books stored elsewhere will be recognized as music. Therefore, make sure you upload the audiobooks to the audiobooks folder.

Tips: encrypted audiobooks cannot be recognized, such as .m4b, aax file.

FM Radio

Key	Action	Result
I44	Short press	Prev channel
▶	Short press	Fast channel
	Short press	Back to prev-level
5/₩	Long press	Activate shortcut menu
▶ II/■	Short press	Play / Pause
0	Swipe clockwise	Volume + / Scroll down or right options & frequency
	Swipe Anticlockwise	Volume - / Scroll up or left options & frequency
OK OK	Short press	Activate manual search / add to (remove from) channel list
	Long press	Power on or Power off

About shortcut menu

In the radio broadcast window, long press the key 5/8 to pop up the shortcut menu:

- •Play -- Play the current channel
- ·Pause -- Pause playback.
- •Channel List --List all saved channels for auto search and manual search.
- •Frequency Range --Change frequency area, options included: America, Asia, Australia, Europe, Japan.
- •Re-search Channel -- Start Auto Channel Search.
- •Audio output -- Change the audio output mode: Headset, Speaker. Short press & key to switch.
- •Record FM-- Turn on radio recording to record your favorite radio and programs. All recordings will be stored in the "Recording files" folder by default."

FAQ

1) Is wired headset required as antenna to use FM radio

Yes, you must connect a wired headset to start FM Radio

2) Is Bluetooth headphone available for radio?

Of course. It is recommended that you plug in a wired headset and start FM before connecting your Bluetooth headset.

- Because the default audio output terminal of the player is the last connected device.
- 3) How to search for a station manually. In the FM window, short press the key to call up the manual channel search, and then slide the click wheel counterclockwise or clockwise to adjust the frequency to the best. To save the channel, short press again.
- 4) Can I record FM radio and how?
 Long press the key 5/88 to activate the shortcut menu, then select Record FM to start recording the current station. While recording, the upper left corner of the FM window displays a flashing recording logo. To save the recording, short press the key and confirm to save.

Photo

		Res	ult
Key	Action	In Folder and Photo List Window	In Picture Browse Window
I	Short press	Prev folder or file	Prev picture
▶ ▶I	Short press	Next folder or file	Next picture
	Short press	Back to pre-level	Back to pre-level
5 /88	Long press	Activate shortcut menu	Activate shortcut menu
0	Swipe clockwise	Scroll down or right option and file	Switch down or right picture
	Swipe Anticlockwise	Scroll down or right options and file	Switch up or left picture
OK	Short press	Confirm selected option or file	Exit picture browsing
	Long press	Power on or Power off	Power on or Power off

About shortcut menu

In the folder and picture list window and picture browsing window, long press the key 5/88 to activate the shortcut menu. You can use it to:

- · 间 **Delete --** Delete the selected folder / file / picture.
- MultiSelect -- Activate the multiple selection function and select files one by one.
- Rename -- Rename the current folder or file.
- 🕰 **As Wallpaper --** Set the current picture as desktop or global wallpaper.

FAQ

1) Why do I get a very blurry desktop background when I set the picture as wallpaper?

First make sure your picture pixels are greater than 480 x 360, then go to Settings - Wallpaper, and switch the value of Ground glass to Off.

2) What image formats are compatible with the player?

Both .PNG and .IPG are available.

3) Can I edit the picture?

Only rename is available, no picture editing option is provided.

4) How to operate the input keyboard when renaming?

Please refer to "About Search" in the Music chapter.

Bluetooth

Key	Action	Result
5/88	Short press	Back to prev-level
	Long press	Ignore My Device
0	Swipe clockwise	Scroll down or right options
	Swipe Anticlockwise	Scroll up or left options
OK	Short press	Confirm option / Connect or Disconnect
	Long press	Power on or Power off

FAQ

- How to connect or disconnect devices?
 Connect: After enabling Bluetooth, all available Bluetooth devices around will be listed
 - under other devices. Swipe the click wheel counterclockwise or clockwise to locate the target device, and then short press to pair and connect with the device.

Disconnect: Swipe the click wheel counterclockwise or clockwise to locate the connected device in My Device. Short press and confirm to disconnect the device.

2) How to remove a device from my device list?

Swipe the click wheel counterclockwise or clockwise to locate the target device in My Device. Long press and confirm to remove the device.

How to refresh the device list?Turn Bluetooth off and back on.

Settings

Key	Action	Result
5/88	Short press	Back to prev-level
0	Swipe clockwise	Scroll down or right options
	Swipe Anticlockwise	Scroll up or left options
OK	Short press	Switch & confirm set value
	Long press	Power on or Power off

- Clear cache— Clearing the system cache resolves common issues such as unexpected slow performance, response delays, or errors.
- Timed shutdown-- Set the time of timed shutdown, options included: off, 10min, 20min, 30min, 60min, 90min, 120min. Short press

 to switch.
- Shuffle-- shuffle on or off. Short press to switch. (Only available for music, not for audiobooks)
- Repeat-- Change the loop mode: off, list loop, single loop. Short press to switch.
 (Only available for music, not for audiobooks)

• Equalizer -- Provide 10 preset style: Normal, Classical, Dance, Flat, Folk, Heavy Metal, Hip Hop, Jazz, Pop, Rock. And allow customization of EQ.

Tips: The currently running style is marked with green, and the style being located is marked with light blue.

- Sort by -- Sort files or tracks by file name or creation time. Options include: Name A to Z (ascending), Name Z to A (descending), Time, Time reversal.
- Key lock -- Enable or disable keylock.
 On --In the power-saving mode (screen off), the device will execute the corre sponding command only if you press the key to wake up the screen, and then press other function keys. It prevents accidental key presses from interrupting playback, unpausing or skipping tracks.
 - Off --In the power-saving mode (screen off), pressing any function key will immediately execute the corresponding operation command without waking up the screen. This means that accidental key presses may cause playback to be interrupted, pause to be cancelled, or tracks to be skipped. Need to wake up the screen, just press the key ...

- **Key tone --** Enable or disable key tone. Short press **a** to switch.
- **Key vibration --** Enable or disable key vibration. Short press **a** to switch.
- Wallpaper -- Change the wallpaper of the device desktop or global.

Note: Setting "Ground glass" to "On" will blur the wallpaper.

- Backlight -- Adjust backlight time: 10s, 15s, 30s, 45s, 60s, 2m, 5m, Always. Short press to switch. When the device is idle for more than the set time, the screen will turn off and enter power-saving mode.
- **Brightness** -- Adjust screen brightness by sliding the click wheel clockwise or Counterclockwise.
- **Display battery --** Select whether to display the battery percentage in the title bar.
- Date & Time -- Set the date, time, and time format of the device, etc.
- Language -- Set the language of the device.
- Factory reset -- Reset the device to factory settings.

Warning: all saved files on the device will be deleted. Please be careful.

· About -- view device information

FAO

- 1) How to use custom EQ?
 Navigate to any preset style under
 Settings--Equalizer, and long press the key

 to activate the customized EQ. Then press

 clockwise or anticlockwise to
- swipe clockwise or anticlockwise to change the value of this band. If you are not satisfied with the current customization, you can select "Reset" to restore to the default state.
- 2) How did shuffle and repeat work together?

Shuffle	Repeat	Result
On	Off	Shuffle in the current playlist or folder, stop after all songs are played
	List loop	Shuffle in the current playlist or folder, continue to shuffle after all songs are played
Off	Single loop	Loop the current track
	Off	Play sequentially in the current playlist or folder, stop after all songs are played
	List loop	Play sequentially in the current playlist or folder, continue to sequential play after all songs are played
	Single loop	Loop the current track

Shuffle Quick

Quickly select a song randomly and start music playing.

Specification

Bluetooth version: 4.2

Product Size: 3.8 x 2.4 x 0.3 inch

Weight: 2.3 oz

Screen Size: 2.4 inch (480 x 360 pix)

Battery Capacity: 1250mAh

Charging Time: 90 Minutes

Storage: 128 GB

Music Playtime: 25-35 hours

Music format: MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF,

WV, AIF, AIFF, AU, RA, MKA, AC3, CAF

Photos format: JPG, PNG

FM Receiving Frequency: 87.5 MHz ~ 108 MHz

Warning:

- >> Do not leave the device in an environment where the temperature is too low or too high (below -10°C or above 50°C) for a long time. Extreme tempera ture environ ments will cause the device to deform and shorten the service life of the device;
- >> Do not use the equipment under thunderstorm weather;
- >> Do not place the device in the water for a long time;
- >> Do not expose the equipment to the sun for a long time.

Warranty

Thank you for purchasing our products. You will enjoy the following services when using this product.

Warranty period: Within one year from the date of sale.

Warranty scope: Limited to the product host.

Warranty terms:

- ① Within 1 year after purchase, failure or damage caused by product quality problems can be replaced for free or full refund.
- ② Accessories are not included in the warranty, such as USB cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.
- ③ The following conditions are not covered by the warranty
- ·Out of the warranty period.
- ·It has been disassembled or repaired privately by the customer.
- ·Man-made damage, accidental damage or deformation.
- -Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity..
- ·Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

Contact us:

Email: innioasis-csc@hotmail.com

Online support:

https://www.facebook.com/innioasis/

For more videos on Y1 operation, please visit: https://www.facebook.com/innioasis/



We promise to reply you as soon as possible within 24 hours.