

Installation Guide

10'x10' Outdoor Party Tent with 4 Removable Sidewalls

Package Contents

- 1 × Canopy roof (PE fabric)
 - 4 × Removable sidewalls (3 with windows, 1 with zipper door)
 - 8 × Steel frame legs (with powder coating)
 - Multiple × Connecting tubes and corner joints
 - 1 × Set of stakes and ropes
 - 1 × Carry bag
-

Tools Required

No tools required — assembly is tool-free.

Step 1: Unpack and Sort

- Unfold all parts and lay them out on a flat surface.
 - Check all components against the package contents.
-

Step 2: Assemble the Frame

- Connect steel tubes to form the four vertical legs and horizontal support beams.
 - Secure each connection with the push-button locking mechanism or extra fittings provided.
-

Step 3: Attach the Canopy Roof

- Place the canopy roof over the assembled frame.
 - Align corners and secure the canopy with the Velcro straps or ties attached to the frame.
-

Step 4: Install Sidewalls

- Attach sidewalls to the frame using hook & loop fasteners.
 - Position the 3 sidewalls with clear windows and the 1 zippered door according to your preference.
 - Ensure all edges are securely fastened to prevent gaps.
-

Step 5: Secure the Tent

- Insert stakes through holes in the baseboards at each corner and side to anchor the tent to the ground.
 - Tie ropes to the frame's attachment points and fasten them to stakes for extra stability.
 - Optionally, use sandbags on the baseboards for additional weight (not included).
-

Step 6: Final Check

- Walk around the tent and verify all connections are secure.
 - Adjust sidewalls or canopy tension as needed.
-

Disassembly and Storage

- Remove stakes and ropes.
 - Detach sidewalls.
 - Take off the canopy roof.
 - Disconnect frame tubes.
 - Store all components in the carry bag for easy transport.
-

Safety Tips

- Do not use the tent in severe weather conditions such as strong winds or heavy storms.
- Always secure the tent properly to avoid accidents.
- Keep away from open flames.