


UNIVERSAL REMOTE

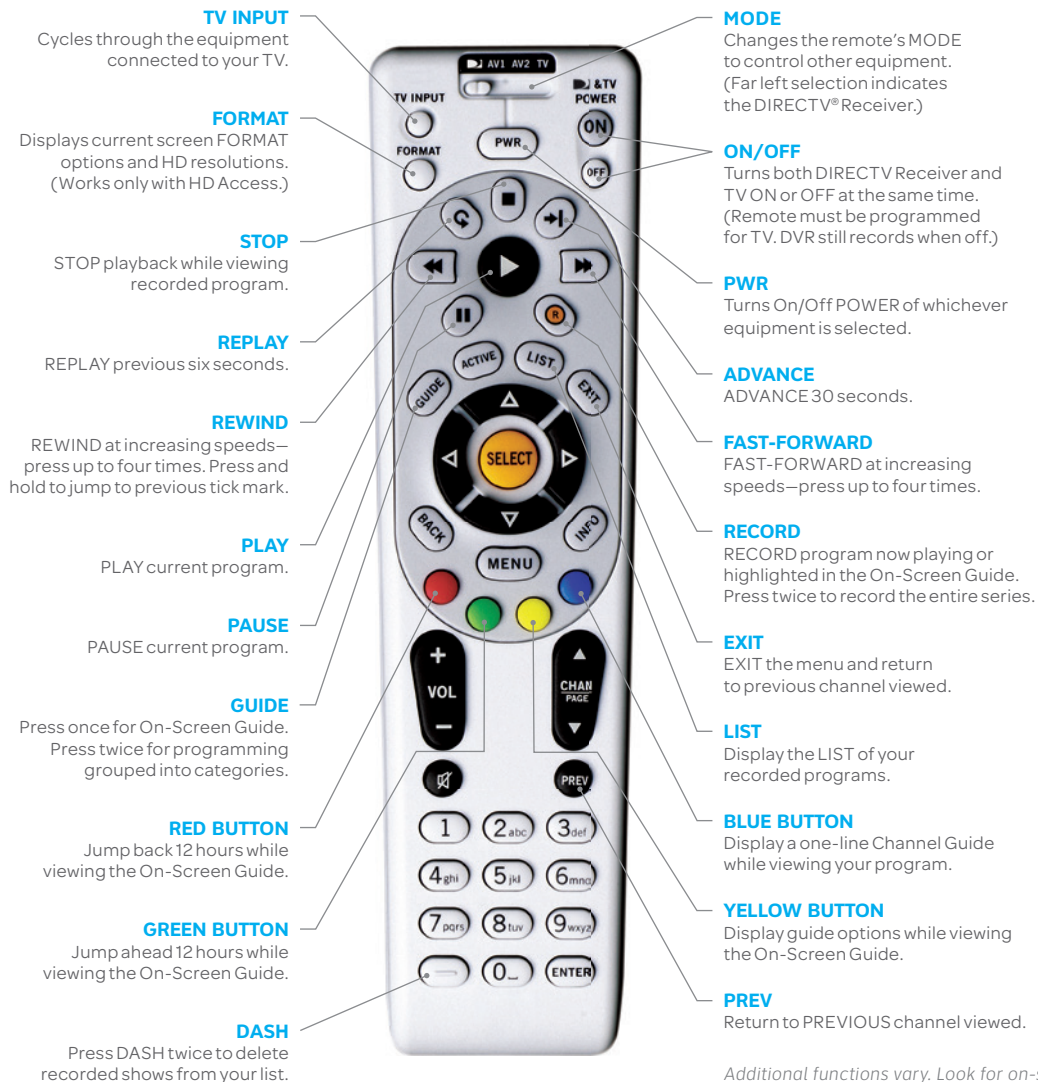

PROGRAM YOUR UNIVERSAL REMOTE

Your new DIRECTV® Universal Remote can control your entire entertainment system—TVs, DVD players, VCRs and stereo systems.

FOR SD RECEIVERS

- Press **MENU**
- Select **PARENTAL, FAV'S & SETUP**
- SYSTEM SETUP**
- REMOTE**

FOR HD RECEIVERS

- Press **MENU**
- Select **SETTINGS & HELP**
- SETTINGS**
- REMOTE CONTROL**

Additional functions vary. Look for on-screen prompts.

GENIE® REMOTE



PROGRAM YOUR GENIE REMOTE

For use with Genie HD DVR (model HR44 or above), Genie Mini (model C41 or above, C41W or above, C61K or above), Genie Lite™ (model H44) and DIRECTV Ready TV.

- Select **SETTINGS & HELP, SETTINGS, REMOTE CONTROL**
- Select **IR/RF SETUP**
- Press the **DOWN ARROW** to highlight RF.
- Press **SELECT**
- Select **CONTINUE**
- Complete by following on-screen prompts

For instructions on how to program your remote to a DIRECTV Ready TV, visit directv.com/dtvready.

If you have a Universal Remote, see page 24 or visit directv.com/remoteguide for an interactive guide and downloadable pdf.