

尺寸: 105x148.5mm 折页方式: 骑马钉 100g铜版纸

专色

#A7E800
R167 G232 B0
C39 M0 Y90 K0
PANTONE 2290C

SEENDA

User Manual

Keyboard Mouse Combo
With Phone/Tablet Holder

Dual-mode
Multi-OS Connectivity

Elegant Round-shaped
Key Design

Integrated
Full-size Slot

CTU-301

EN

Product Warranty

All Seenda products come with a 24-months warranty policy, please do not hesitate to contact us if you have any questions. Our support team will try our best to provide you with a pleasant shopping experience.

Our email: support@seenda.com


Our website: www.seenda.com

Phone: +1 844-988-2543


Mon-Fri: 10AM - 2PM, 3PM - 7PM ET

*Closed during Holidays

Product Features

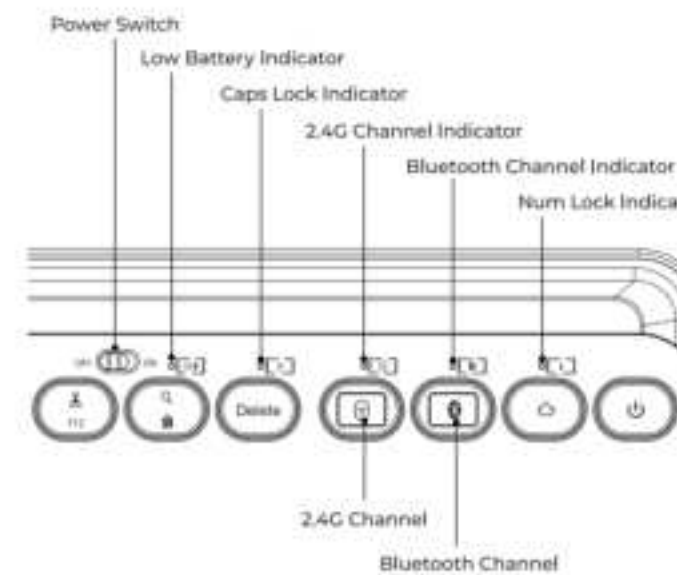


- 1 -

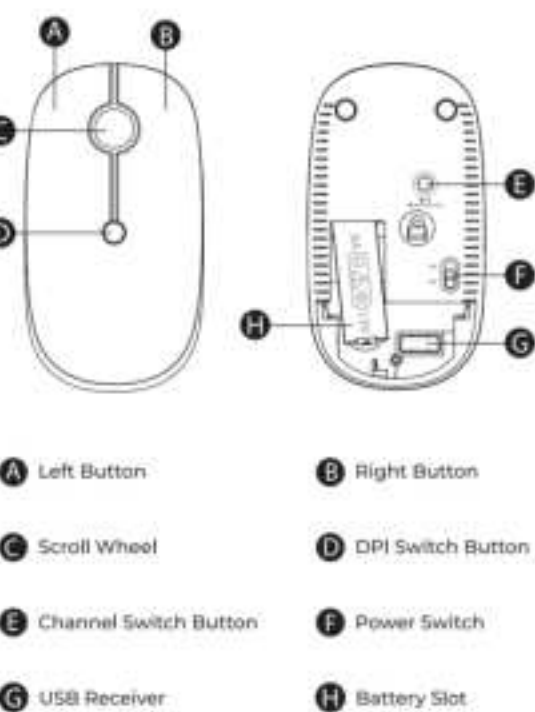


- 2 -

2.4G USB Connection

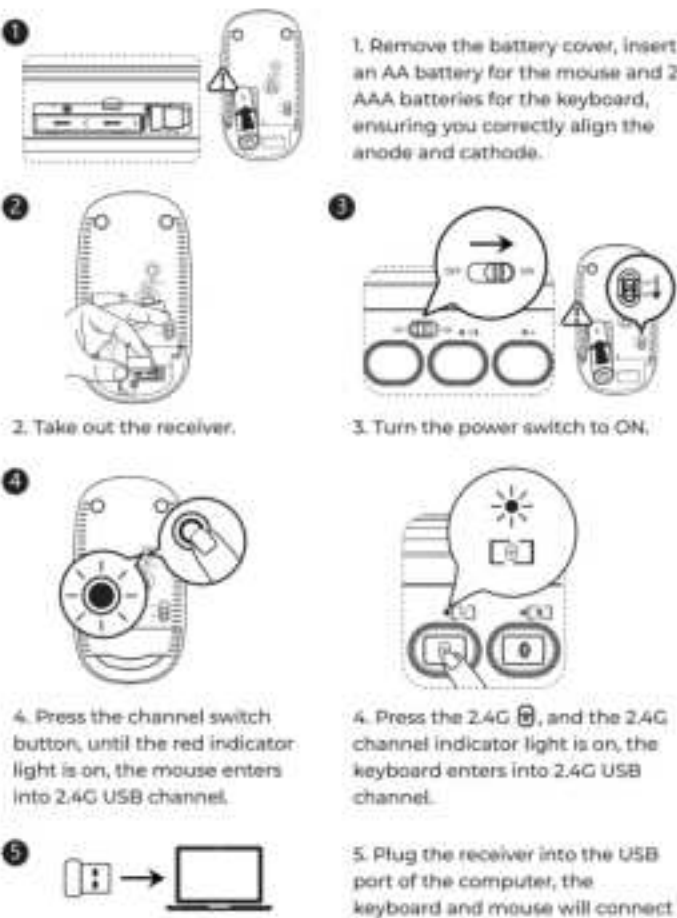


- 3 -

Mouse Bluetooth Connection

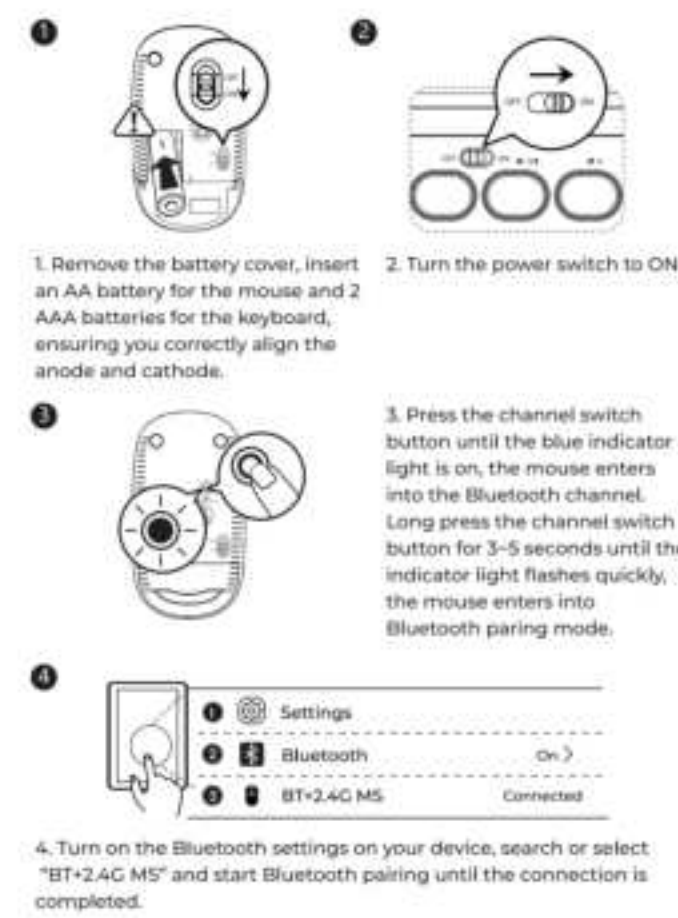


- 4 -

Keyboard Bluetooth Connection

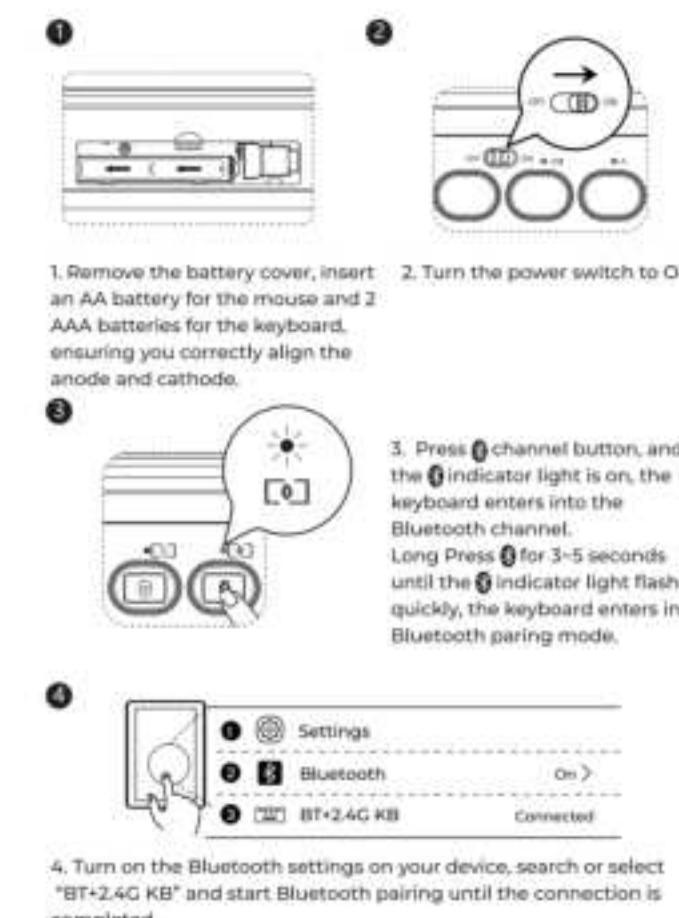


- 5 -

Mouse Channel Switching

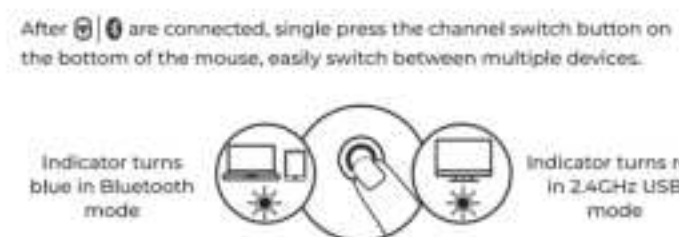


- 6 -

Keyboard Channel Switching

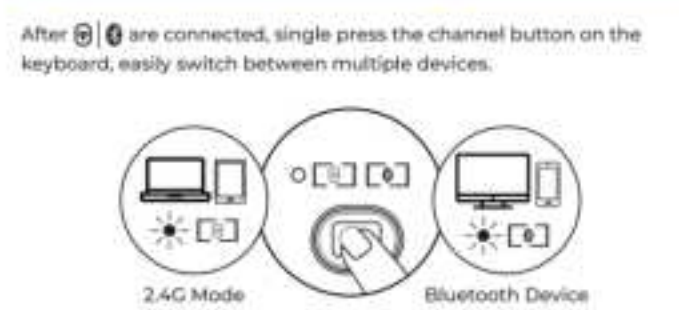


- 7 -

Keyboard Low Battery Instructions

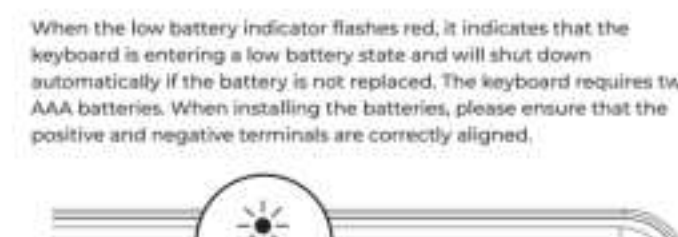

- 8 -

Mouse Low Battery Instructions

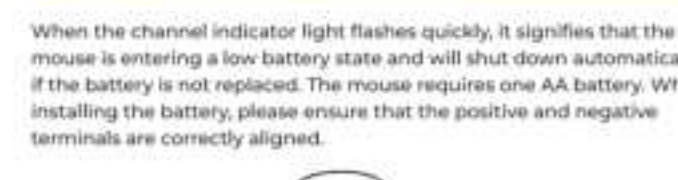

- 9 -

Multimedia Function Button

Button	Windows	Android	iOS	Mac OS
Mute	Mute	Mute	Mute	Mute
Volume down	Volume down	Volume down	Volume down	Volume down
Volume up	Volume up	Volume up	Volume up	Volume up
Previous	Previous	Previous	Previous	Previous
Play/Pause	Play/Pause	Play/Pause	Play/Pause	Play/Pause
Next	Next	Next	Next	Next
Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness
Increase brightness	Increase brightness	Increase brightness	Increase brightness	Increase brightness
Select all	Select all	Select all	Select all	Select all
Copy	Copy	Copy	Copy	Copy
Paste	Paste	Paste	Paste	Paste
Cut	Cut	Cut	Cut	Cut
Search	Search	Search	Search	Search
Open the browser	Home Page	Home Page	/	/
One key sleep	Lock screen	One key sleep	One key sleep	One key sleep
FN+Search (FN lock) key to turn on or off the FN function.				

Note: FN function is in cyclic mode (F1-F12 and multimedia functions are cyclically used)


- 10 -

Product Parameter

Keyboard:	
Wake-up Way	Click any key to wake up
Operating Voltage	3V
Working Current	< 5mA
Product Size	394.3x144.8x23.5mm/15.5"x7"x0.9in
Keyboard Weight	1.55lb/705.5g
2.4G Transmission Parameters:	
Transmission Distance	10m
Response Rate	250Hz
System Requirement	An available USB interface; Windows XP, Windows 7, Windows 8, Windows 10 or higher; Mac OS X 10.12 or higher.
Bluetooth Transmission Parameters:	
Transmission Distance	10m
Response Rate	125Hz
System Requirement	Bluetooth receiver; Windows 8/10 or above; Mac OS X 10.10 or higher; Android 4.3 or higher.

- 11 -

Sleep Mode

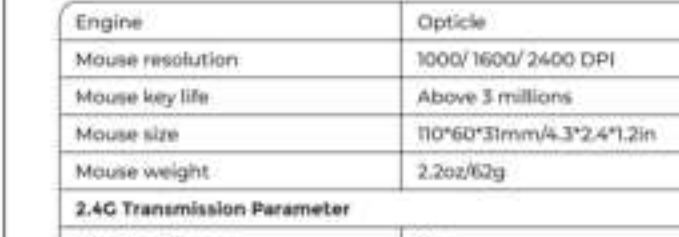

Package Contents

- 1* Wireless Bluetooth Keyboard
- 1* Wireless Bluetooth Mouse
- 1* USB Receiver
- 1* User Manual

- 12 -

Frequently Asked Questions

How to deal with disconnection issues, keys repeating or typing & clicking delay?

- Low Battery: Ensure that the batteries have sufficient power. Low battery levels can impact the performance of the keyboard/mouse.
- Signal Interference: Keep the USB receiver/keyboard/mouse away from routers, microwaves, or metal surfaces to reduce signal interference.
- USB Mode Reconnect: If using a USB dongle to connect the keyboard/mouse to the device, unplug and replug the USB dongle. Try using a different USB port if needed.
- Bluetooth Mode Repair: If connecting the keyboard/mouse to the device via Bluetooth, delete the Bluetooth name from your device's Bluetooth connection list, restart your device, and re-pair the keyboard/mouse by following the steps in the user manual.
- Distance Limit: Maintain a distance of within 10 meters (33 feet) between the receiver/computer for optimal signal strength.
- Try Other Devices: Test the keyboard/mouse with alternative devices to determine if the issues persist.

How to deal with keys/mouse buttons stop working or feel sticky?

- Please note the keyboard/mouse is not waterproof. Avoid water/drinks/coffee and other liquids from entering. If this happens, please turn it upside down and clean the liquid.
- Also, avoid eating near the keyboard/mouse as crumbs are also the primary cause of this issue. If this happens, first try to clean the debris with compressed air duster, then wipe it clean with a cotton swab dipped in ethanol or isopropyl alcohol.

- 13 -

Safety Warning

IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety instructions.

- Heat Exposure: Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire hazard.
- Liquid Exposure: Keep the item away from water and liquids. Do not use if wet until thoroughly dried.
- Damage and Leakage: Cease usage and consult customer service if the item is damaged or the battery leaks.
- Correct Disposal: Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household waste.
- Radio Frequency Interference: This device may cause interference with other electronics. Keep a safe distance from sensitive devices.
- Child Safety: Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.

CAUTION: Non-compliance with the above warnings can lead to serious injury or property damage.

- 14 -