
 


# 使用说明书

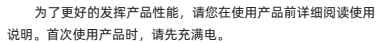

- ⑤ 耳机孔
- ⑥ TF卡槽
- ⑦ DC 5V充电
- ⑧ 蓝灯：蓝灯指示灯  
红灯：充电指示灯

- ① 长按：开/关机  
短按：话筒音量关闭/打开  
双击：播放/暂停
- ② 长按：下一曲  
短按：话筒音量加
- ③ 长按：上一曲  
短按：话筒音量减
- ④ 长按：消原音开/关  
短按：魔音循环切换  
双击：话筒/混响/伴奏调节
- ⑤ 蓝灯：蓝灯指示灯  
红灯：充电指示灯

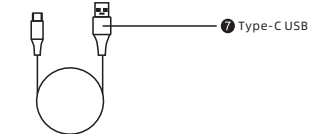

- 1、话筒开机：长按2秒开机键开机
- 2、蓝牙指示灯闪烁，自动配对音响，蓝牙指示灯常亮即配对成功；
- 3、开始K歌，话筒与音响距离在15米内效果更佳；
- 4、如果只听音乐，可短按开机键关闭话筒或长按2秒开机键，避免产生啸叫；
- 5、话筒声音不佳或不开机时，需给话筒充电补充电量。

- 1、当电池电量过低时，产品会自动关机；
- 2、用配件USB充电线，连接标准手机充电器的USB接口充电，充电指示灯红灯亮起，表示正在充电；
- 3、正常充电6小时，充电完毕，红灯自动熄灭；
- 4、正常连续使用时间为：约4小时；

常见故障	常见原因	排除方法
音响播放没声音	手机音量关闭了	A.加大手机音量 B.加大播放器音量
音响不开机	电量不足	A.给音响补充电量
无法连接蓝牙	已连接另一台手机	A.关闭已连接手机蓝牙
蓝牙播放时失真	音量过大 电量过低	A.调小手机音量 B.及时补充电量
插内存卡没声音	不支持特殊格式 不读卡	A.更换歌曲格式 B.重新插入内存卡
音响无法充电	线没插紧接触不良 充电线损坏	A.插紧电源充电线 B.更换充电线 C.红灯亮表示正常充电
话筒没声音	话筒音量减小了 话筒音量关闭状态	A.加大话筒音量 B.短按话筒开机键开启话筒音量
话筒不开机	电量过低	A.给话筒补充电量
话筒卡顿	电量过低	A.给话筒补充电量
话筒不充电	线没插紧接触不良 充电线损坏	A.插紧电源充电线 B.更换充电线 C.红灯亮表示正常充电
啸叫	话筒离音响正面太近 话筒被覆盖包裹	A.调整与音响的距离 B.避开阻碍物干扰

型号: P2

拾音器: ☐ 动圈咪 ☐ 电容咪

喇叭功率: 4欧6瓦

充电电源: DC 5V

蓝牙版本: 5.0

工艺制造: ABS电镀烤漆

频率范围: 100Hz-10KHz

最大声压级: >115dB 1 KHz THD<1%


混响模式: 回音混响声效

供电方式: 内置18650锂电池

- 1.如充电器出现冒烟或其他异常现象，请联系系我售后进行处理。
- 2.如线路内部受到雨淋或受潮，请将机器置于通风处晾干。
- 3.切勿用高温烘烤本包，否则容易烧毁或使机器内部元件失效。
- 4.本产品不得暴露于诸如日照、火烤或炎热过热环境中。
- 5.请勿丢掷，以免造成跌落损坏。
- 6.消费者若使用电源适配器供电，则应购买配套使用获得CCC认证并满足标准要求电源适配器。




# User Manual

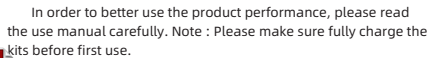

- 5 Headphone jack
- 6 TF card slot
- 7 DC 5V charging port
- 8 Blue indicator light:  
working indicator light  
Red indicator light:  
charging indicator light

 - 1 Long press: power on/off  
Short press: mic volume on/off  
Double click: play/pause
- 2 Long press: next song  
Short press: mic volume +
- 3 Long press: prev song  
Short press: mic volume -
- 4 Long press: original voice remove  
Short press: magical voice switch  
Double click: mic/echo/accompaniment switch
- 5 Blue indicator light: working indicator light  
Red indicator light: charging indicator light

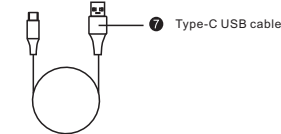

## Mic Operating Instruction

1. When the battery is out of power, the product will shutdown automatically.
2. Use our USB charging cable to connect with standard charging plug to charging the battery for the product.
3. The charging time is about 5-6 hours, the red light is off automatically once the product is fully charged.
4. The working time is about 4-5 hours.

Problem	Reason	Solution
No sound with speaker	The volume on the phone is off	A. Increase the volume on the phone B. Increase the volume on the speaker
The speaker doesn't turn on	The battery is of low power	A. Charging the battery
The Bluetooth cannot be connected	It has connected with other phone	A. Disconnect the Bluetooth with other phone
Distortion of sound	The sound is too loud Battery is too low	A. Decrease the volume B. Charging the battery
No sound in TF card mode	Don't support special format Don't read the card	A. Change the format of musics B. Insert the TF card again
The speaker cannot be charged	The charging cable has poor contact with port The charging cable is broken	A. Inserting the cable in the port tightly B. Change a new charging cable
No sound with mic	The volume of mic is to low The volume of the mic in power off states	A. Increase the volume of MIC B. Turn on the volume of mic
The mic doesn't turned on	The battery is too low	A. Charging the battery
The sound of mic is stuck	The battery is too low	A. Charging the battery
The mic cannot be charged	The charging cable has poor contact with port The charging cable is broken	A. Inserting the cable in the port tightly B. Change a new charging cable
Screaming	The mic toward speaker too closely The mic is covered by other objects	A. Adjust the distance of mic and speaker B. Avoid the interference of obstacles

Model No: P2

Mic: ☐ Dynamic    ☐ Capacitive

Speaker :40 6W

Charging voltage: DC 5V

Bluetooth Version :5.0

Material: ABS

Frequency Response Range : 100Hz~10KHz

Maximum Sound Pressure Level : >115dB 1Khz THD <1%

Sound Mode: Reverb Mode

Rechargeable Battery : 18650 battery

1. If the machine appears smoke or other abnormal phenomena, please contact our after-sales service for help
2. If the inside of the machine is affected by rain or damp, please put the machine in a ventilated place to dry.
3. Do not bake the machine at high temperature, otherwise it may cause the risk to burn the machine or destroy the internal components of the machine.
4. This product should not be exposed to overheating environment, such as sunlight, fire or inflammation.
5. Do not throw the machine, so as to avoid fall damage,
6. If consumers use a power adapter for power supply, please use the qualified power adapter with standard certification.

