 


Unfolding the Tripod
To unfold and adjust the tripod, pull the legs outward where they connect to the selfie stick.

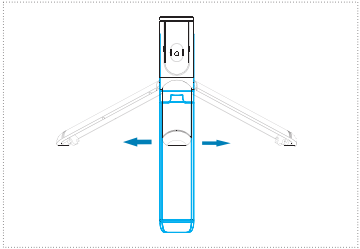

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the requirements for Part 18 of the FCC Rules. Although this product complies with FCC, it may interfere with other devices. If this product is found to interfere with another device, separate the other device and this product.

Radiation Exposure Information
This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

WARNING Li-Ion Battery Inside
The product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions

Direct current source.

This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol represents FCC Declaration of Conformity and compliance.

Compliance Information

Warranty Information

3-Month Limited Warranty

For technical service on this product,
please contact:



Servicio al Cliente
Fono: 02-23410466
Av. Italia 1729, Nuñoa
info@sgservicios.cl
www.sgservicios.cl

Printed in China
v1_08-2021

Polaroid

Have questions? We've got answers.
Visit us at customersupport123.com



Instantly recognizable. Instantly inspiring. The Polaroid Classic Selfie Stick has the features you've purchased a product and want to share the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

©2021 L.A. rights reserved.
Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings, LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Polaroid



PSS0215
LED Selfie Stick Tripod
User Manual

Before You Begin...

READ CAREFULLY AND SAVE THIS MANUAL

Caution

- **THIS IS NOT A TOY, please keep away from children**
- Do NOT leave charging overnight
- Do NOT submerge in water
- Do NOT expose to water, fire, high temperatures, or humidity
- Do not open this product or attempt to repair the unit yourself should it not be working
- Do NOT store in an enclosed vehicle or area
- Do not disassemble or attempt to repair
- Do not short circuit the battery with any metal objects
- **This device contains a battery, and should NOT be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device**

Technical Specs

- Dimensions: 1.3 x 1.4 x 2.9 ~ 3.0 in
- Rechargeable Fill Light Battery: 100 mAh
- Charging Cable: Micro-USB
- Charging Cable Length: 6 in
- Remote Battery: CR1632
- Weight: 0.3 lb

In the Box

- PSS0215 - **LED Selfie Stick Tripod** (x1)
- Remote Control with Battery (x1)
- Fill Light (x1)
- Micro-USB Charging Cable (x1)
- Instruction Manual (x1)

Getting Started

Installing and Removing the Control Panel Box



Powering ON/OFF

- Press + hold the camera button for 2 seconds to power ON.
- Press + hold for 3 seconds to power OFF.
- When powered ON, the LED indicator will begin to flash, and the selfie stick will enter Bluetooth pairing mode. It may automatically reconnect to a previously paired device.

Note: the selfie stick will automatically power OFF after 5 minutes without a Bluetooth connection.



Bluetooth Pairing

1. Power the selfie stick ON. The selfie stick will enter Bluetooth pairing mode, and the LED indicator will flash.
2. Turn your device's Bluetooth on, and search for new Bluetooth devices. Select **PSS0215** when it appears on the list of found devices.
3. After a successful pairing, the LED indicator on the selfie stick will turn OFF.

Taking a Photo

Power the control panel ON and connect to your device.

- Press the camera button to take a photo. The LED indicator on the control panel will flash once.

 


Note: The Bluetooth® remote control is compatible with Android 4.2.2 and iPhone® iOS 5.0 or above.

For Android® devices, you may need to change your volume key function under Camera Options to the default or "Take a Picture" to make the Bluetooth remote control work.

Replacing the Control Panel Battery

1. Remove the control panel box from the selfie light.
2. Using the groove on the corner of the control panel box, open the box.

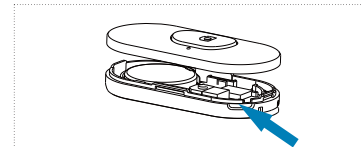 


3. Remove the old battery, and dispose of according to local regulations. **Do not dispose of with regular household waste.**
4. Install a new CR1632 battery. Replace the control panel box cover, and install the control panel box back into the selfie light.

Note: Low battery power can cause selfie photography dysfunction. If you notice issues with the selfie stick, try replacing the battery.

Charging the Fill Light

Plug the micro-USB (smaller) connector of the included micro-USB charging cable into the micro-USB port on the fill light.



Plug the USB (larger) connector into a USB power source, such as the USB port on a computer or a 5V USB wall adapter (not included).

Charge for 3 hours before using.

Using the Fill Light

Charge the fill light before using.

- Press the **[Power]** button on the fill light. The light will power ON in **white light** mode. Press + hold the button to increase light brightness.
- Press the **[Power]** button a 2nd time to switch to **warm light** mode. Press + hold the button to increase light brightness.
- Press the **[Power]** button a 3rd time to switch to **warm white light** mode. Press + hold the button to increase light brightness.
- Press the **[Power]** button a 4th time to power the light OFF.

