

kogan

8" Digital Photo Frame

KADPF08XXB

USER MANUAL



 
 
WARNING:

CHOKING HAZARD - Small parts and batteries. Not for children. Use with adult supervision only

Contents

1. Frame Diagrams	3
2. Remote Control	4
3. Installation	4
4. Main Menu	4
4.1 Memory Select	4
4.2 Computer connecting	4
4.3 Function Select	4
4.3.1 Photo Display	5
4.3.2 Music Display	5
4.3.3 Photo Display	6
4.3.4 Calendar Display	6
4.3.5 Files Display	6
4.3.6 Setting	6
5. FAQ	8

Frame Diagrams

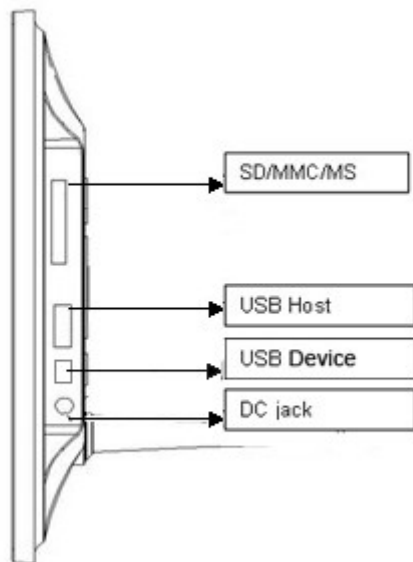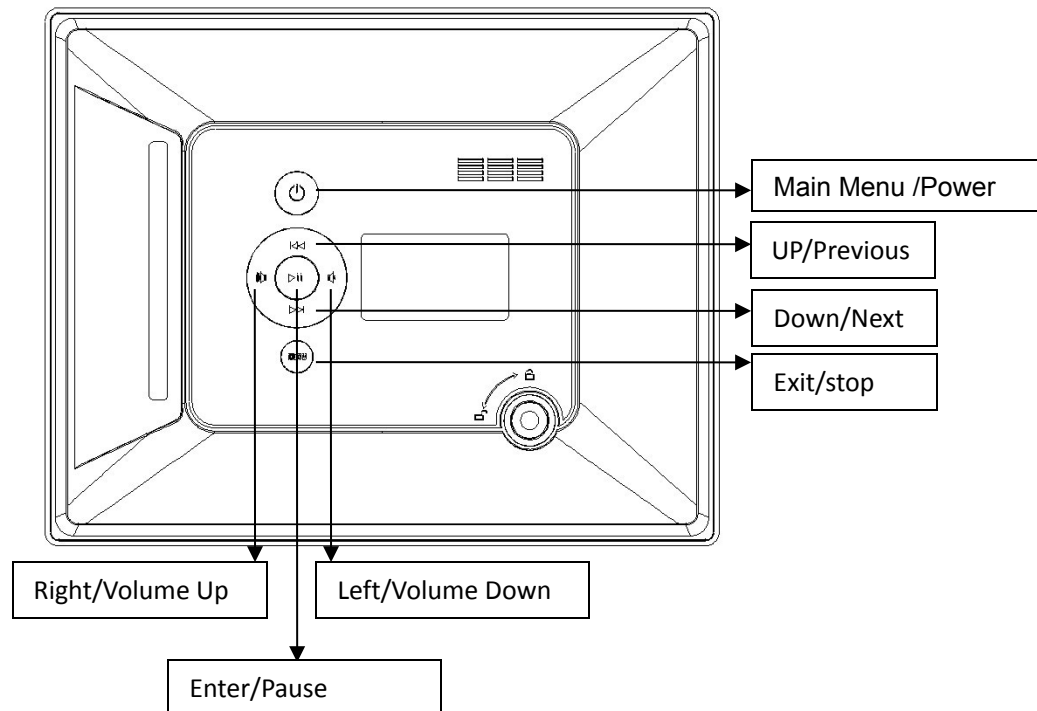

Remark:

Press and hold the Power button for 3 seconds to turn the device into Standby mode.
Press the Power button again to re-activate the digital photo frame.

Remote Control



Installation

Insert the jack of the DC adapter into the digital photo frame, and then plug the DC adapter into a standard power outlet. Your frame will start up automatically.

Main Menu

1. Memory Select (Exhibit 1)

Press **Menu** on remote control or **Menu** on backside button to go to the Memory selection interface. Press Up and Down to choose different between different memory.

- 1) Internal Memory
- 2) Card select: Shows the memory card you insert into frame. The icon will be highlighted if a compatible card is inserted
- 3) USB stick icon.

 
2. Computer connection

- 1) Connect the frame to computer via USB cable
- 2) Edit files via computer

3. Function Select (Exhibit1)


Press [**◀**]/[**▶**] button to choose different function and then press **ENTER** to confirm.

- 1) Photo: Select to play as a photo slideshow.
- 2) Music: Select to play music files.
- 3) Video: Select to play video files.
- 4) Calendar: Select to show the calendar and clock.
- 5) Files: Select to display and edit files.
- 6) Setting: Select to make changes to the settings.

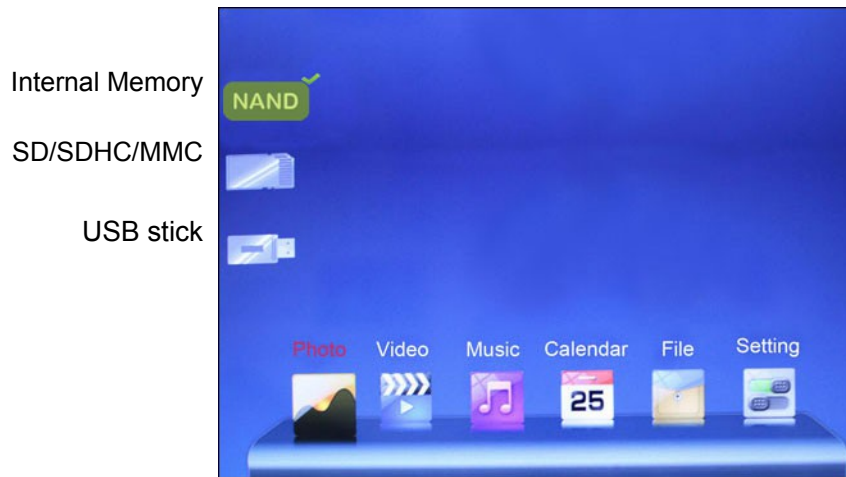


3.1 Photo Display

 - Choose **Photo** icon, press [ENTER] on remote control, it will play picture the slideshow automatically on the screen.
- During photo slideshow, press [ENTER] go to different modes “**Browse Mode**” or “**Slideshow**”. Press [▲][▼] to view the previous or next photos under Browse Mode.
- Press [Exit] on remote control, or instead press the **MENU** button on device to return back to the thumbnail (as shown below).

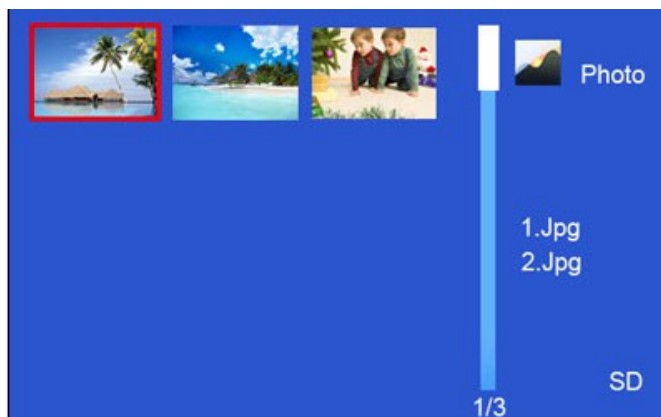

3.2 Music Display

 - Choose **Music** icon, press [▲][▼] to choose music and press **ENTER** to display music (as shown below).
- Press [ENTER] on remote control or **ENTER** on device to activate and stop music during music display.

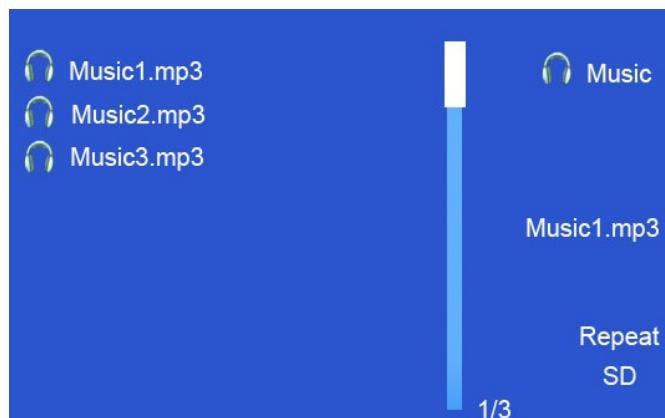

3.3 Video Display

- Choose **Video** icon, press [▲][▼] to choose one video and press **ENTER** to display video. (as shown below).
- Press [**ENTER**] on remote control or **ENTER** on device to activate and stop video during video display.



3.4 Calendar Display


- Choose **Calendar** icon, to show the Calendar / Clock with photo slideshow (as shown below).
- Press [◀]/[▶] to change the slideshow picture, and [▲][▼] to check calendar by month.



Calendar with photo display

3.5 Files Display

 - Choose **File** icon, whereupon all the files in selected memory card will be listed on the screen. (as shown below)
- Under Memory card mode, press [▶] to choose “Copying to internal” to copy chosen files into internal memory” or “Delete files” to delete the chosen files
- Under Internal memory mode, press [▶] to choose “Delete files” to delete the chosen files

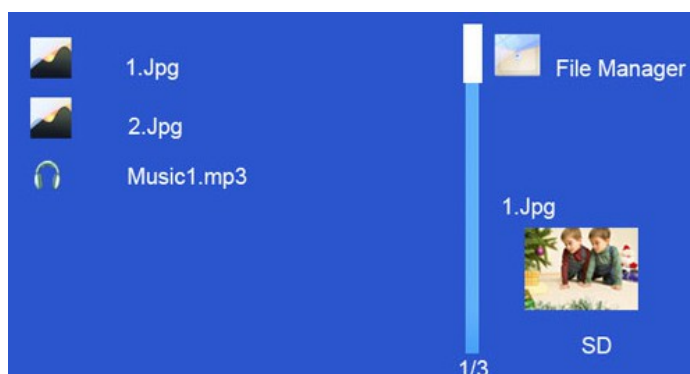

3.6 Setting

- Select the setting icon or instead press the **SETUP** key on the remote control to setup your frame. (as shown below)

Operation method

- [**▲**]/[**▼**] button to shift items or choose parameters
- [**◀**]/[**▶**] button to change the parameters.
- [**ENTER**] button to confirm the setup result.
- [**EXIT**] button to back to main menu.



Setting table

Photo Setup	
Display mode	Slideshow/Thumbnail/Browse Mode
Music	On/ Off (choose to open or close background music during photo slideshow)
Display ratio	Fit to screen/ Crop to fill/Full screen
Slideshow duration	5sec/15sec/30sec/1min/5min/15min
Slideshow repeat	Repeat/Once/Random
Slideshow effect	11 modes (Random / Snake/ Partition/ Erase/ Blinds/Random lines/ Grid/ Cross/ Spiral/ Rect/ Close)
Calendar Setup	
Display Mode	Monthly Calenda/ Digital Clock/ Analog Clock
Date	Set date, Month/day/year
Clock Mode	24hr/12hr
Clock Time	Set clock time, Hour/minute
Alarm Status	On/Off
Alarm Time	Set alarm time, Hour/minute
Alarm Frequency	Once/ Everyday/ Mon. to Fri. /Weekend
Video Setup	
Display Mode	Full Screen/Original Size
Play Mode	Repeat/ Random/ Once
Music Setup	
Play Mode	Repeat/ Random/ Once/ Repeat One
Show Spectrum	On/ Off
System Setup	
Language	Multi languages
Brightness	Brightness adjustable
Contrast	Contrast adjustable
Saturation	Saturation adjustable
Start up Mode	Main menu/ Photo /Music/ Video/ Calendar
Auto Power on	On/Off
Auto Boot Time	Set auto boot time, Hour/minute

Auto Power off	On/Off
Auto Shut Time	Set auto shut time, Hour/minute
Auto-Power Frequency	Once/ Everyday/ Mon. to Fri. /Weekend
Volume	Volume adjustable
Reset default setting	Restore to the factory settings
Version	Show the software version
System Upgrade	Software firmware update (if available)

** The above settings are subject to change in case of any spec modification*

Frequently Asked Questions

Q. Why can't the Digital Photo Frame play all images or movie files?

A: The Digital Photo Frame can support JPEG, MP3 and some video formats depending on the firmware specification. It may not read some files downloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

A: Firstly, make sure that you are using a memory card that is supported by the Digital Photo Frame. Secondly, ensure that the memory card is inserted all the way into the correct slot. Thirdly, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?

A: Higher resolution pictures usually load slower.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. Please contact the local council or waste disposal center for advice on the correct disposal of electronic devices.

NOTE: All rights for modifications reserved

- The above settings are subject to change if the product specifications are modified.