



EN Instruction manual



High Speed Deluxe Blender

01.219500.16.001

SAFETY INSTRUCTIONS

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- CAUTION: Ensure that the blender is switched off before removing it from the stand.
- This appliance is intended to be used in household and similar applications such as:
 - o Staff kitchen areas in shops, offices and other working environments.
 - o By clients in hotels, motels and other residential type environments.
 - o Bed and breakfast type environments.
 - o Farm houses.


PARTS DESCRIPTION

1. Tamper
2. Refill cup
3. Jar lid
4. Jar
5. Blades
6. Main body
7. Display
8. Control panel
9. Speed control knob



Display

10. Mode button "P"
11. Mode button "Crusher"
12. Timer
13. Mode button "1 min. smoothies blending"
14. Mode button "2 min. smoothies blending"

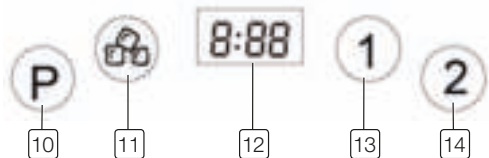

BEFORE THE FIRST USE

Note: Never use the blender without any food or liquid in it!

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Before using the High Power Blender for the first time clean the jar and lid with a damp cloth.

Caution: the jar contains very sharp blades, handle with care at all times.

- Place the main body of the High Power Blender on a heat-resistant, stable surface. Place the jar on the base unit properly.
- The High Power Blender is equipped with a safety switch off on the motor base.
- Make sure the jar is placed properly on the base.
- Put the lid on the jar. Ensure the refill cup is fitted in lid, turn clockwise to lock. When the refill cup is not fitted properly there is a risk of splashing.
- When everything is installed correctly, connect the High Power Blender to the mains power supply, the time display begin to flash. When you don't see the time display flash make sure that the jar is pressed down correctly to the base.
- The High Power Blender is now ready for use.
- Note: The time display only shows the remaining time, the time cannot be adjusted by hand.

Note: The High Power Blender will only work when the speed control knob is started from the "0" position.

USE

General

Note: do not add hot liquids or ingredients into the High Power Blender.

- Chop all your ingredients into approximately 2-3cm cubes and add to the High Power Blender, make sure you keep the ingredients under the 2.0 L mark on the jar.
- Any ingredients to be added during the process can be added through the refill hole in the center of the lid. Do not unlock or remove the lid as this will stop the program.
- Select "P" position with the knob for control panel options or turn knob clockwise to start the blender, the speed of the blender will increase till the max speed by turning the knob from 0 till 5. Position "0" will stop the blender.
- Make sure to only pull the jar of the base when the motor has stopped.

Manual operation setting using the program position

- Turn the speed control knob to the left position. At this time four buttons will become visible.
- Press the "P" button to start the blending process. When pressing it will blend, release and it will stop.
- Press the "Crusher" mode, the High Power Blender will automatically work for a few seconds, stops and repeat the process for several times.
- Use the "1" button to select the 1 minute smoothies blending function, the High Power Blender speed will increase to maximum speed, working 1 minute and will automatically stop.
- Use the "2" button to select the 2 minute smoothies blending function, the High Power Blender speed will increase to maximum speed, working 2 minutes and will automatically stop.

Recipe

Frozen Margarita

What do you need:

- 0.5 dl Tequila
- 0.25 dl Orange liquor
- 0.10 dl sugar syrup
- 0.25 dl fresh lime juice
- salt
- ice cubes

Preparation:

- Rub with half a lime over the edge of the glass.
- Dip the edge of the glass into the salt in order to obtain a salt rim.
- Put all ingredients in the blender.
- Add ice cubes to your own taste.
- Turn on the device, select the ice chopping function and start the program. When necessary, stop the program.
- Pour the cocktail into the glass and garnish with a slice of lime.

Recipe

Frozen Fruit

What do you need:

- 250 g yoghurt
- 250 g frozen fruit (e.g. blueberries)
- 1 tbsp sugar (to your taste)

Preparation:

- Put these ingredients in the blender.
- Turn on the device, select the function "2" and start the program. When necessary, stop the program.
- Use the supplied tamper to mix this extra well.

Recipe

Green smoothie with lettuce, mango and zucchini

What do you need:

- 2 bunches lettuce
- 1 mango
- 1 zucchini
- ½ cm ginger

Preparation:

- Peel the mango, cut the zucchini into chunks and wash the lettuce. Put these 3 ingredients in the blender.
- Turn on the device, select the function "1" and start the program. When necessary, stop the program.
- After 20 seconds add the ginger.
- Tip: Use mango and zucchini out of the fridge for a cold smoothie.

Recipe

Romesco salsa

What do you need:

- 4 small tomatoes, without seeds
- 1 clove garlic
- 1 dl olive oil
- 1 sweet pepper
- 125 gr almond (powder)
- 1 pinch of cayenne pepper
- 1 tsp paprika powder

Preparation:

- Turn on the device and select a speed. When necessary, stop the program.
- Insert the peppers into a plastic bag and tie it shut.
- Now you can easily remove the peel.
- Turn on the device and select a speed. When necessary, stop the program.
- If necessary, season with pepper and salt.

CLEANING AND MAINTENANCE

- Always disconnect the blender from the mains power supply before cleaning.
- Do not clean the main body in a dishwasher. Do not immerse the main body in water or any liquids.
- Clean the surface of the base unit and the outer of the jar with a soft, damp cloth. Rinse the lid in warm, soapy water.
- To clean the inside of the jar, rinse and remove any remaining ingredients.

Caution: the blades inside the jar are not removable and are very sharp; extreme caution should be taken when cleaning the inside of the jar.

- Fill the jar half full with warm water and add a couple drops of liquid dish washing detergent to the jar.
- Install the lid and select the grinding program and let the blender clean itself. If the jar is not completely clean you can repeat this method.
- After cleaning turn off the Blender and rinse and drain the jar.
- Make sure the blender jar and the blades are completely dry before you store it.

TROUBLE SHOOTING

Problems	Cause and solution
The unit is not working, no lights, no function	Put the jar on the body properly, plug in power source. Press down the jar again to put the safe switch in the right position.
The unit stops working after long time processing	This is an overload protection to prevent damage to the motor Unplug the device and let it cool down at least 30 minutes.
Food becomes not well enough processed	Too much or too large pieces of food are processed at the same time. Try a smaller amount or work in batches if necessary. Ingredients should be in pieces not larger than 2cm for best results.
Ice cannot be well crushed	Choose smaller ice size (not larger than 2cm) Use the ice crusher function for better results.



DISPOSAL

■ If you want to dispose of equipment with this symbol on the appliance and/or in the user manual, follow the below procedure: Make sure that the appliance is processed in a responsible manner at the end of its service life to guarantee the maximum reuse of (parts of) the appliance. Do not dispose of the appliance with unsorted waste, but hand it in at the store or take it to a recognized collection point. Contact your municipality for information about the reception and collection systems in your area. Make sure that the appliance is reused if you want to dispose of the appliance while it is still in good working order or needs only a minor repair.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: www.princesshome.eu

Please visit our website for more recipes: www.princesshome.eu



[Service Website](#)

Jules Verneweg 87 | 5015 BH Tilburg | The Netherlands | www.princesshome.eu