



WARNING: To reduce the risk of injury, read the pressure washer instruction manual and the engine instruction manual before operating pressure washer.



IF YOU EXPERIENCE ANY ISSUES WITH YOUR PRESSURE WASHER, WE ARE HERE TO HELP YOU.

Visit our website www.SimpsonCleaning.com or call 1-877-362-4271

SHOULD YOU REQUIRE ASSISTANCE WITH A PART THAT MAY BE BROKEN OR MISSING OR YOU ARE HAVING DIFFICULTY WITH ASSEMBLY OR STARTING PLEASE CONTACT US. YOUR COMPLETE SATISFACTION IS OUR PRIMARY OBJECTIVE.

 
QUICK SETUP GUIDE

(Letters A-C)

A


Install the Handle

Place handle onto frame, depress the snap buttons, and slide the handle assembly onto the frame until snap buttons snap into place.

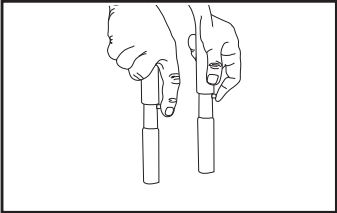

Or

 
Slide the handle assembly onto the frame and secure with saddle bolts and knobs

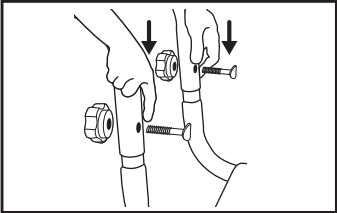

B

Add/Check Oil

 
The engine is shipped without oil. Before starting engine, add the oil provided using the oil spout. Check oil level prior to each use. Refer to Engine Owner's Manual for complete procedure.

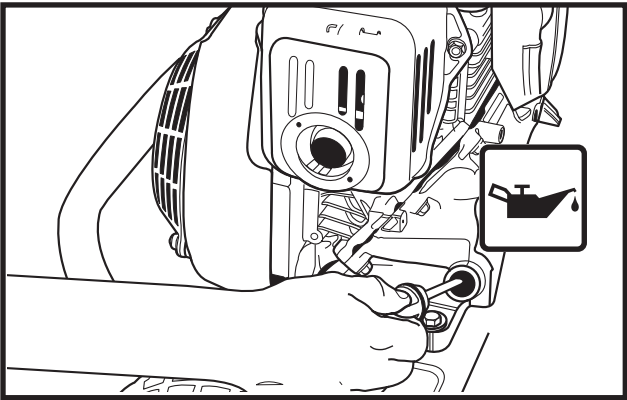

C

Add Gasoline

 In a well ventilated outdoor area add fresh, high quality, unleaded gasoline with a pump octane rating of 86 or higher. Do not overfill. Wipe up spilled fuel before starting the engine. Refer to Engine Owner's Manual for complete procedure.

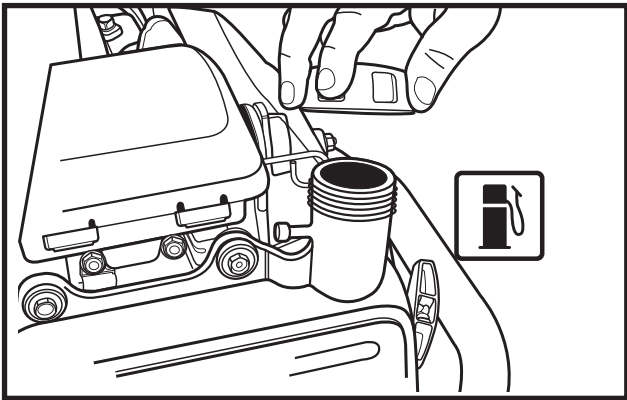

QUICK START GUIDE

(Numbers 1-11)



 
DANGER:

- Never run engine indoors or in enclosed, poorly ventilated areas. Engine exhaust contains carbon monoxide, an odorless and deadly gas.
- Risk of fluid injection and laceration. When using the high-pressure setting, DO NOT allow the high-pressure spray to come in contact with unprotected skin, eyes or with any pets or animals. Serious injury will occur.

1

Connect Garden Hose to Pump


Thread the garden hose to the pump inlet.

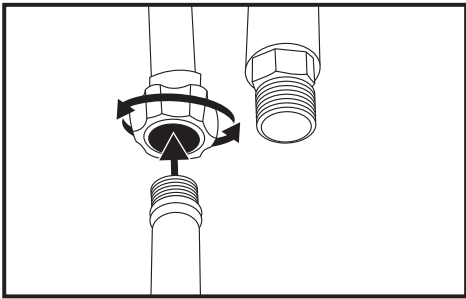

2

Connect High Pressure Hose to Pump

 
Thread the high pressure hose to the pump outlet.

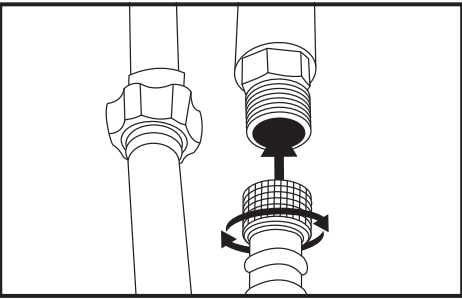

3

Connect High Pressure Hose to Spray Gun

 
Thread the other end of the high pressure hose to the spray gun.

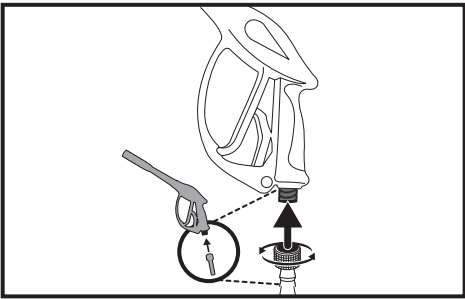

4

Connect Spray Wand to Spray Gun

 
Thread the spray wand into the end of the spray gun.

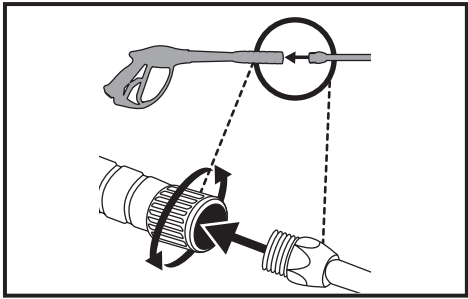

5

Connect QC Nozzles to Spray Wand

 Pull quick connect coupler back and insert nozzle. Release quick connect coupler and twist nozzle to make sure it is secure in coupler.

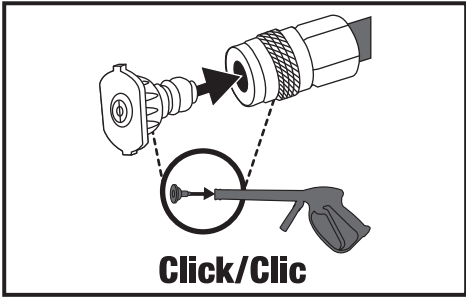


Click/Clic

6

Turn Water Faucet Completely On

 
Do not run the unit without water supply connected and turned on. Use Cold Water Only.

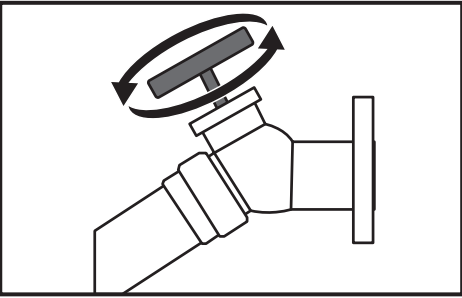

7

Release Air from System

 
Release all air from pump and high pressure hose by depressing trigger until a steady stream of water is present. Approximately 30 seconds.

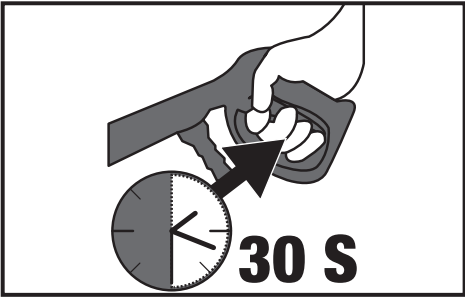

30 S

8

 
Verify the Engine Switch is turned to the ON Position

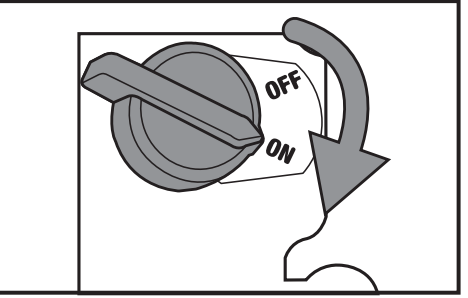

9

Verify the Choke Pin is Pulled Out to the CLOSED Position

 
The Choke Pin has been preset by the factory to be in the CLOSED Position.

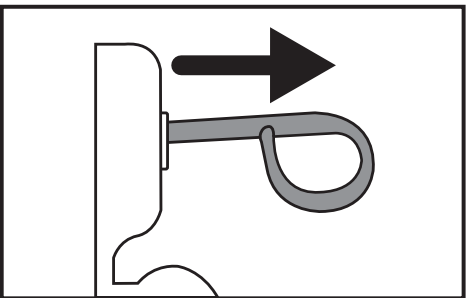

10

Pull the Recoil Starter Grip

 
Pull the recoil starter grip to start the engine.

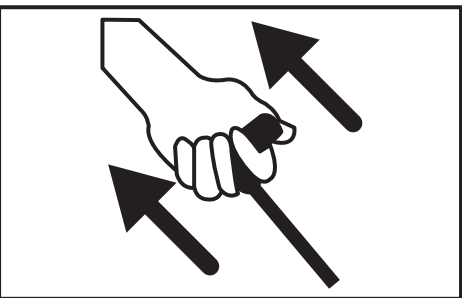

11

Push the Choke Pin to the OPEN Position

 Gradually move the Choke Pin to the OPEN Position after engine starts.

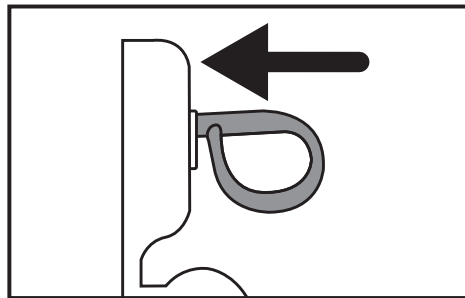

WARNING: This Guide is not a substitute for reading the operator's manual. User must read and understand operator's manual before using this product.



 
GUÍA RÁPIDA

(Letras A-C)

A


Instale la manija

Coloque el ensamble del mango sobre el marco, oprima los botones de acción rápida y deslice el ensamble del mango sobre el marco hasta que los botones queden asegurados en el lugar.

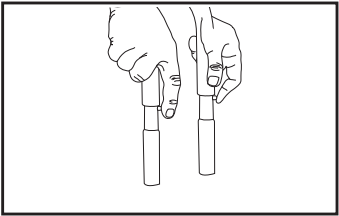

O

 
Coloque el manillar en el marco y segura con los pernos y las manillas.

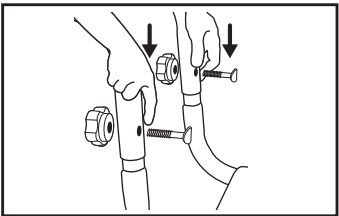

B

Agregue/revise el aceite

 
El motor viene sin aceite. Antes de hacer funcionar el motor, agregue el aceite suministrado usando el pico para el aceite. Revise el aceite antes de cada uso. Consulte el manual del usuario del motor por el procedimiento correcto.

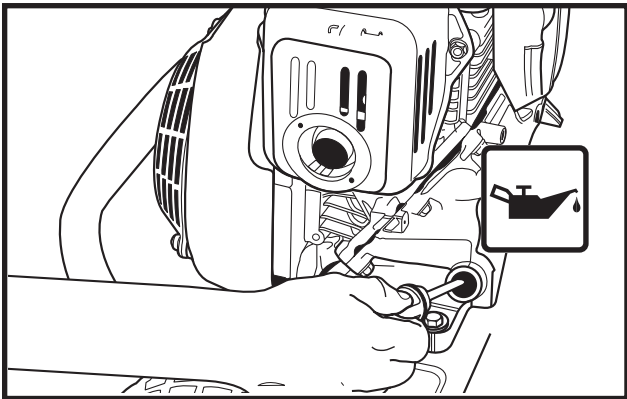

C

Agregue gasolina

 En un área bien ventilada y al exterior, agregue gasolina fresca, de alta calidad y sin plomo con un índice de octanaje de 86 o mayor. No lo llene de más. Limpie todo el combustible derramado antes de encender el motor. Consulte el manual del usuario del motor por el procedimiento completo.

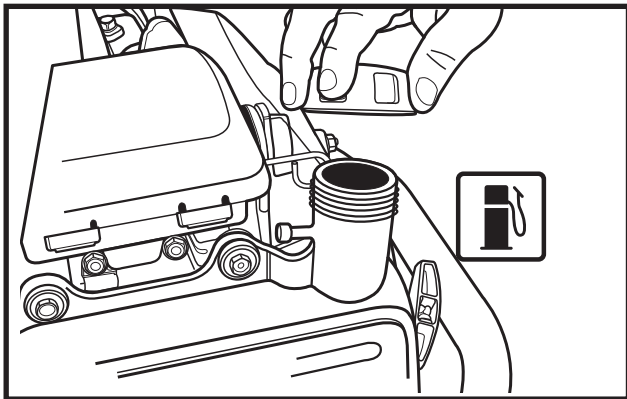


GUÍA RÁPIDA

(Números 1-11)

1

Conecte la manguera de jardín a la bomba

 
Enrosque la manguera de jardín a la entrada de la bomba.

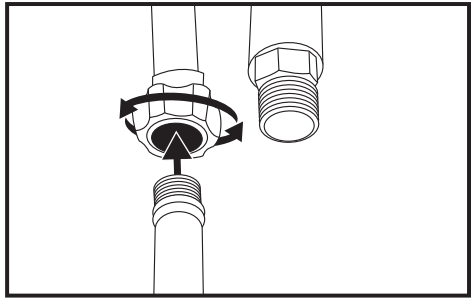

2

Conecte la manguera de alta presión a la bomba

 
Enrosque la manguera de alta presión a la salida de la bomba.

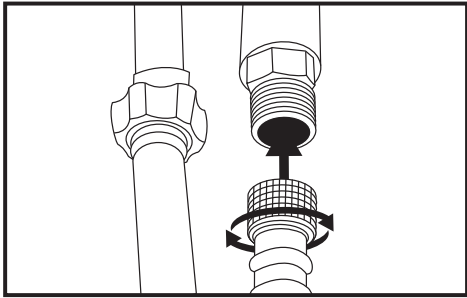

3

Conecte la manguera de alta presión a la pistola rociadora

 
Enrosque el otro extremo de la manguera de alta presión a la pistola rociadora.

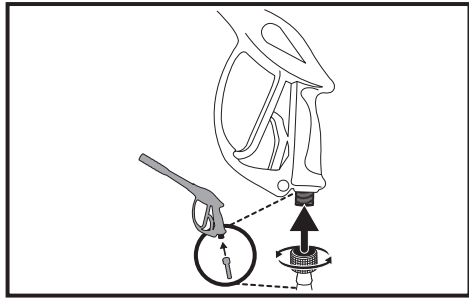

4

Conecte la vara rociadora a la pistola rociadora

 
Enrosque la vara rociadora al extremo de la pistola rociadora.

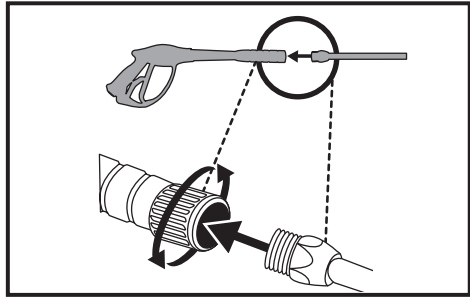

5

Conecte las boquillas QC a la vara rociadora

 Tire el conector rápido hacia atrás e inserte la boquilla. Suelte el conector rápido y gire la boquilla para verificar que esté bien asegurada en el conector.

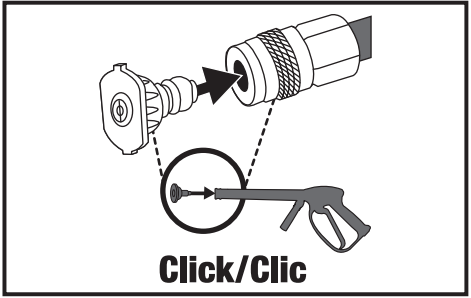


Click/Clic

6

Abra completamente la llave del agua

 
No haga funcionar la unidad sin el suministro de agua conectado y abierto. Use agua fría solamente.

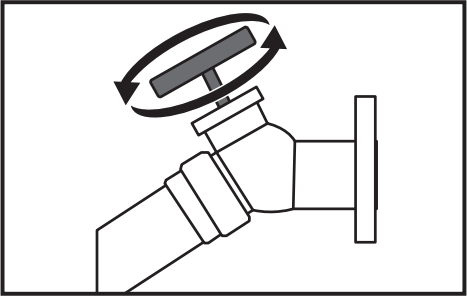

7

Libere el aire del sistema

 
Libere el aire de la bomba y de la manguera de alta presión presionando el gatillo hasta que salga un flujo continuo de agua. Aproximadamente 30 segundos.

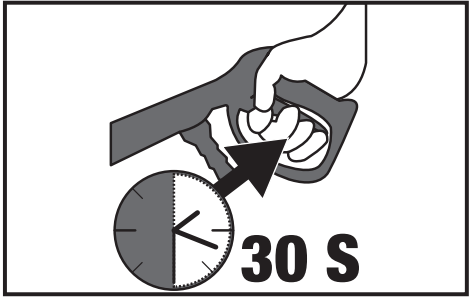

30 S

8

 
Verifique que el interruptor del motor esté en la posición ON

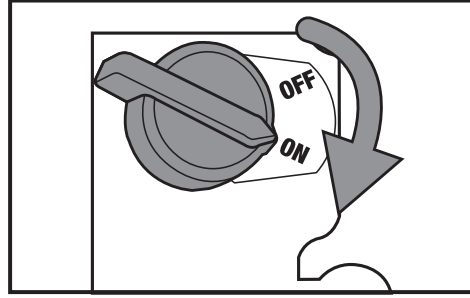

9

Verifique que el cebador esté hacia afuera de la posición CERRADO

 
El cebador viene de fábrica en la posición CERRADO.

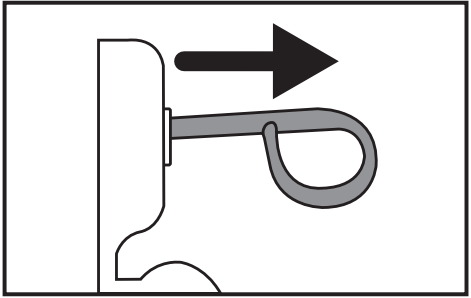

10

Tire del arranque manual

 
Tire del arranque manual para encender el motor.

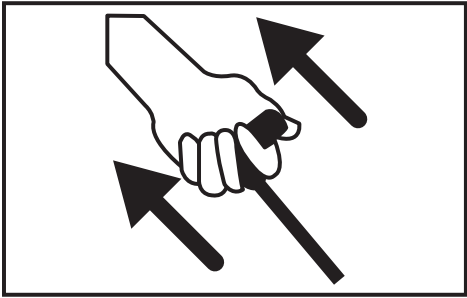

11

Empuje el cebador a la posición ABIERTO.

 Mueva lentamente el cebador hacia la posición ABIERTO después de que el motor haya arrancado.

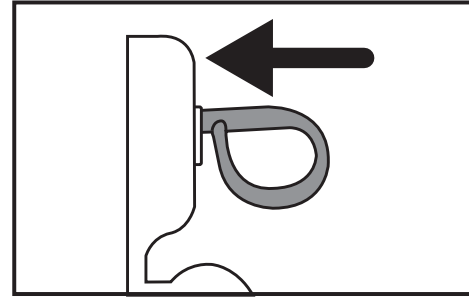

ADVERTENCIA: Comprender la Guía Rápida no equivale a leer el manual del operador. El usuario debe leer y comprender el manual del operador antes de usar este producto.