


1. TOP COVER
2. BOTTOM CHASSIS
3. OPTIONAL POWER SUPPLY
4. 8CM FANS
5. 4BAYS-3.5"/1BAY-2.5"DRIVE CAGE
6. 2BAYS-2.5"DRIVE CAGE
7. FRONT PANEL IO AND INDICATORS
8. RACK HANDLES

## Front panel

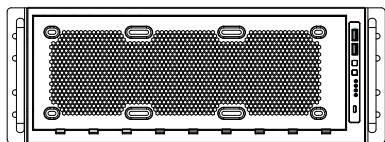


1. USB 3 TYPE-A x2 ports
2. POWER ON LED
3. HDD ACTIVITY LED
4. LAN1 LED
5. LAN2 LED
6. USB3 TYPE-C






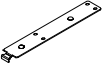
 

## RM45-360




User manual  
www.silverstonetek.com


### Accessories Content

 		
Motherboard Standoff	Motherboard / 5.25" Device Screw	PSU Screw

		
5.25" Guide Rail Screws	5.25" Ventilation Bezel	5.25" Bezel

		
5.25" Guide Rail x9	CRPS Cover	3.5" HDD


		
2.5" SSD	5.25 VENTILATION BEZEL	Fan Extension Cable

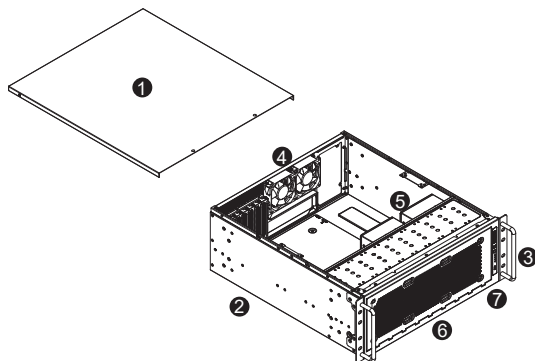

### Installation Guide




#### 1. Removing the top cover

1. Release 2-screws of the top cover on each side
2. Push the top cover backward about 1" and lift it off the chassi

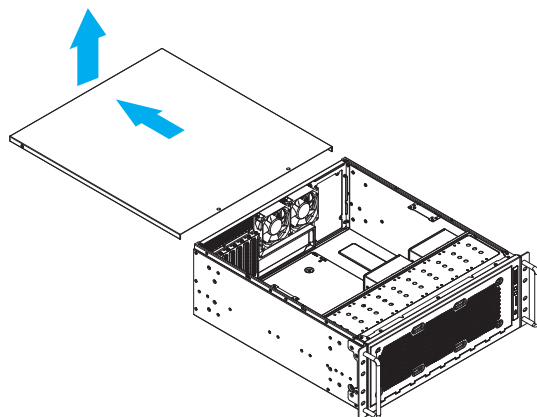


#### 2. 4bays-3.5"/1bays-2.5" HDD cage and cooling fan assembly How to remove the drive cage :

1. Loose 2 screw and lift off the drive cage.
2. Once hard drive assembled, secure the drive cage back with the same 2-screws.

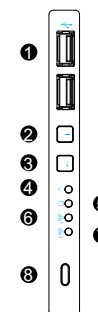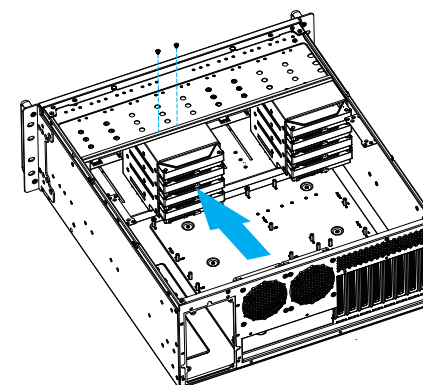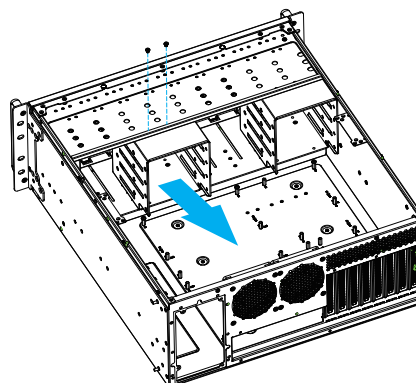


3. Optional cooling fan assembly :  
Fix 92mm fan with 4-screws.

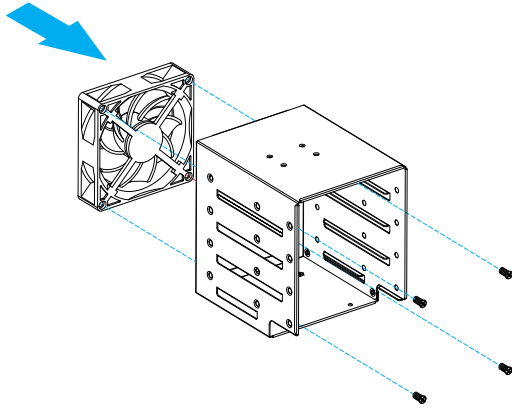


### 3. 2.5"SSD/3.5"HDD devices assembly

1. Place the SSD/HDD in the drive bay
2. Secure SSD/HDD with screws

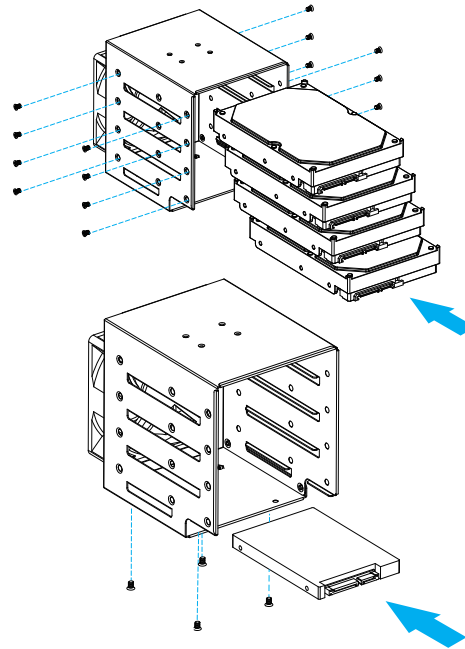


### 2bays-2.5"SSD cage assembly

1. Insert the 2.5"SSD in the drive bay.
2. Secure 2.5"SSD with screws.

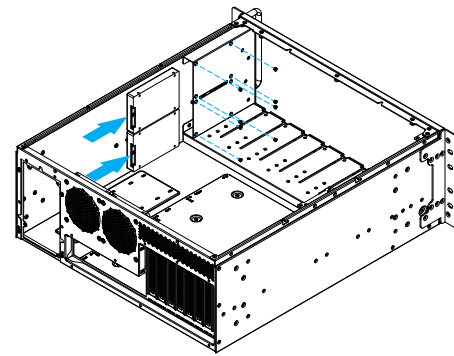

### 4. Install motherboard


1. Put the motherboard into the case.
2. Secure with 8 screws.

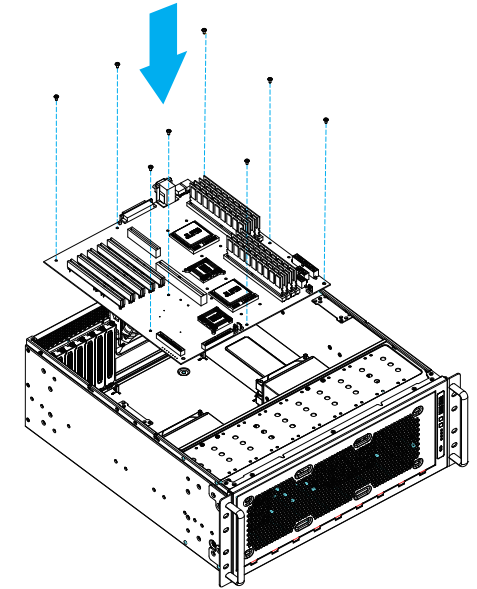

### 5. PSU Assembly


#### ATX PSU Installation

1. Install the PSU to the PSU mount inside the chassis
2. Secure with 4 screws.

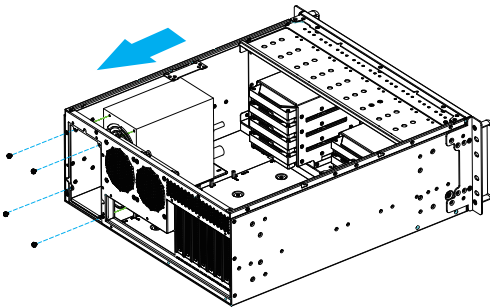


#### Mini Redundant PSU Installation

1. Remove the ATX PSU bracket pre-installed on the PSU mount
2. Install the Mini Redundant PSU and secure with 4 screws at the rear of the chassis

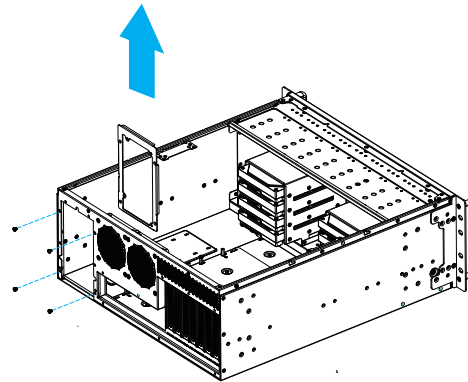


#### 2U Redundant PSU installation:


1. Remove the ATX PSU bracket pre-installed on the PSU mount, then install the 2U Redundant PSU to the PSU mount.
2. Secure with 4 screws.

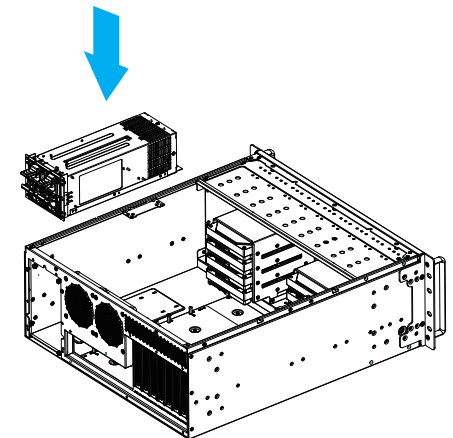

3. Secure the screws at the end of the 2U Redundant PSU.
4. Place and secure the ventilation cover above the power supply.
5. When installing a 2U Redundant PSU, remove the original bracket at the rear and replace with the extended bracket.

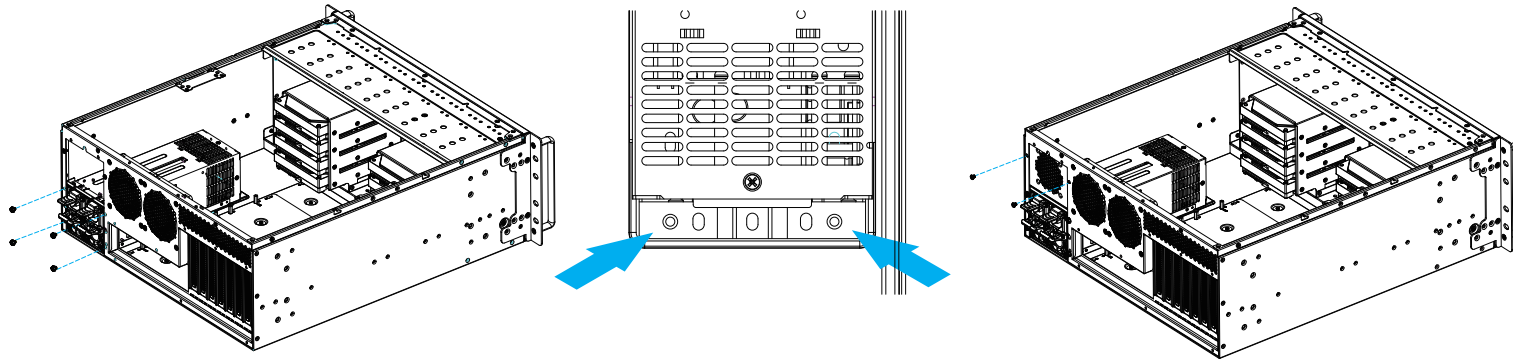

2. Attach the 5.25 guide rail to the 5.25" device, then slide the device in and secure it with guide rail screws.
3. Install the 5.25" bezel, if 5.25" device mounts are unallocated, you can replace the 5.25" bezel with 5.25" ventilation panel to increase intake airflow.

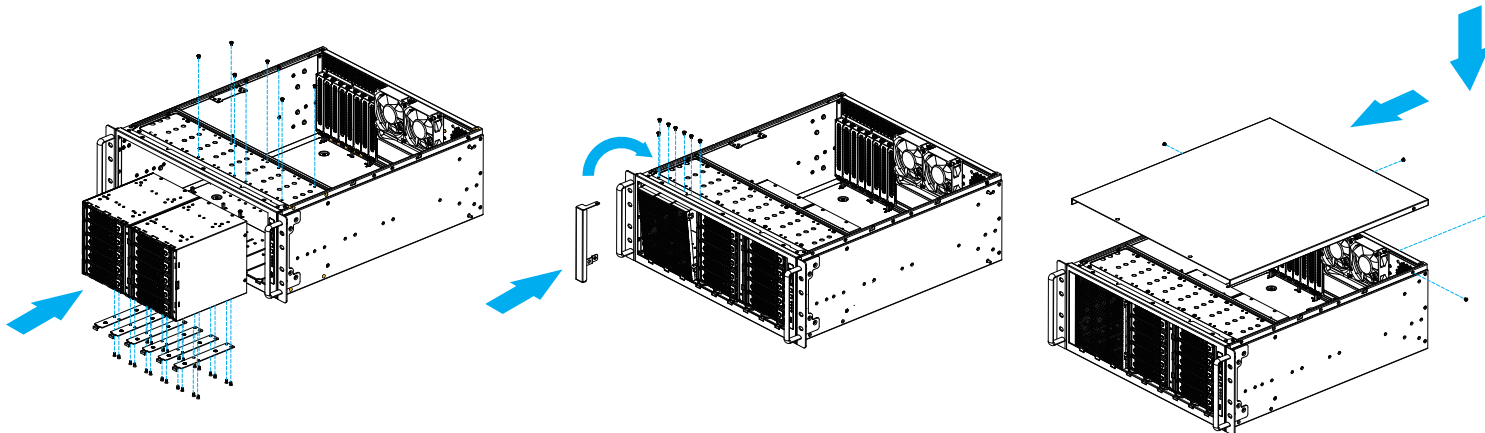


#### 7. Close Top Cover

1. Put the Top Cover on and push it forward.
2. Secure with 4 screws


#### 6. 5.25" ODD installation

1. Remove the front 360mm radiator bracket.

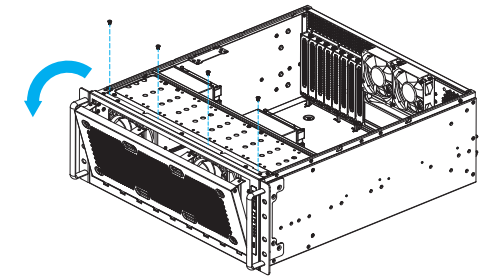

#### Limitation





1. CPU cooler height limitation with expansion card retainer is 130mm, and 148mm without.

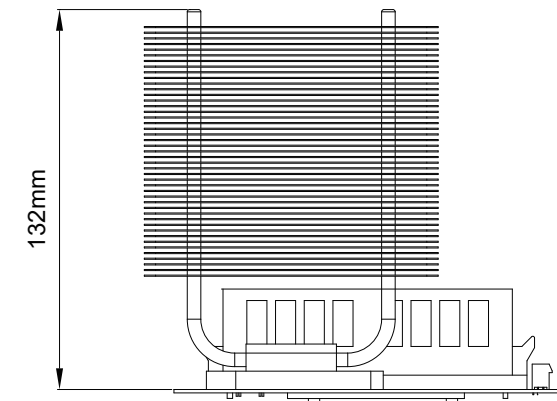

2. The combined length of 5.25" devices and motherboard equals to 481mm, the length of 5.25" devices allowed by various motherboard form factor is as shown.

3. The maximum length allowed for the graphics card is 341mm When combined with the 5.25" device, the total length extends to 483mm. The maximum length allowed for the power supply is 341mm. When combined with the 5.25" device, the total length extends to 483mm.

4. There are 2 positions for 3.5" HDD installation.  
A. The thickness limitation of water cooler with fan is 54mm, and the CEB motherboard is allowed.  
B. The thickness limitation of water cooler with fan is 72mm, and the ATX motherboard is allowed.

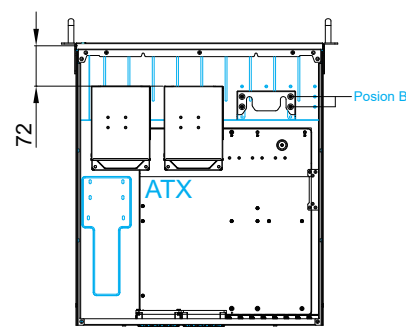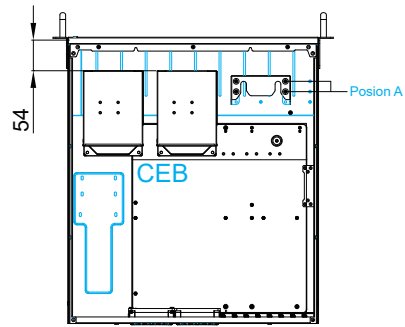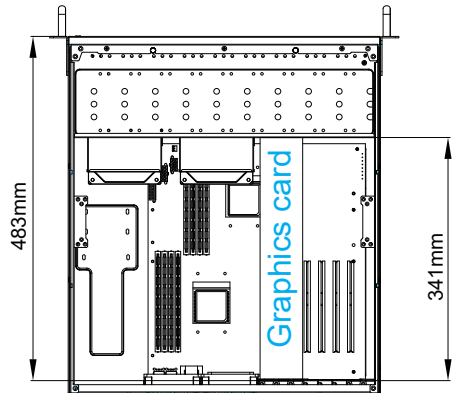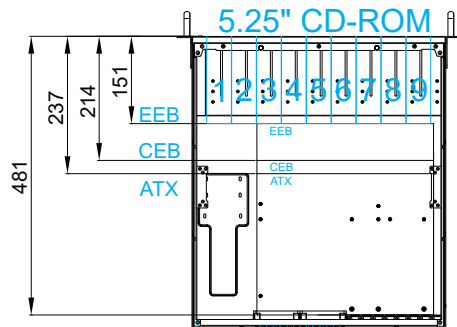

A

B

#### Warranty Information

This product has a limited 1 year warranty in North America and Australia.  
For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.  
本产品有限之担保，于不同地区（不含美国），皆有特定时效限制（部分产品为二年，三年或五年），详细期限与保修条件请至 <http://www.silverstonetek.com.cn/> 公布之产品型号为依据。

#### Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction:
  - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
  - Damages not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc.)
  - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
  - Warranty mark/labels are not removed or broken.Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>. Please note that (i) You must provide proof of original purchase of the product by a dated limited receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

#### Additional info & contacts

For North America ([support@silverstonetek.com](mailto:support@silverstonetek.com))  
SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested.  
Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions. <http://silverstonetek.com/contactus.php>  
For Australia only ([support@silverstonetek.com](mailto:support@silverstonetek.com))  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.  
You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.  
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.  
Please refer to above "Warranty terms & conditions" for further warranty details.  
SilverStone Technology Co., Ltd. 12F No. 168, Jankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. • 886-2-8228-1238 (standard international call charges apply)  
For Europe ([support.eu@silverstonetek.de](mailto:support.eu@silverstonetek.de))  
For China ([support@silverstonetek.com.cn](mailto:support@silverstonetek.com.cn))  
For all other regions ([support@silverstonetek.com](mailto:support@silverstonetek.com))

有害物质检测/元素及其化学含量表						
零件名称	铅 (Pb)	汞 (Hg)	铜 (Cu)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机壳 (金属)	○	○	○	○	○	○
风扇	○	○	○	○	○	○
线材	○	○	○	○	○	○
螺丝	○	○	○	○	○	○
包材	○	○	○	○	○	○

▲有害物质检测/11种有害物质检测  
○：表示没有有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。  
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。



SilverStone Technology Co., Ltd.

[www.silverstonetek.com](http://www.silverstonetek.com)

[support@silverstonetek.com](mailto:support@silverstonetek.com)

G11252470