

Krüger&Matz

IT'S YOUR LIFE,
JUST TAKE IT

Soundbar 2.1 KM0575

OWNER'S MANUAL

 
EN

MORE

For more information on this device visit: www.krugermatz.com.
Read owner's manual carefully before using your device.
Visit www.krugermatz.com website for more products and accessories.
In case of any doubts or questions reach out to our Frequently Asked Questions section.

Lechpol Electronics Leszek Sp. z o.o. Sp.k. hereby declares that soundbar KM0575 is consistent with directive 2014/53/UE. Full text of the EU Declaration of Conformity is available at following Internet address: www.lechpol.eu.

SAFETY INSTRUCTIONS

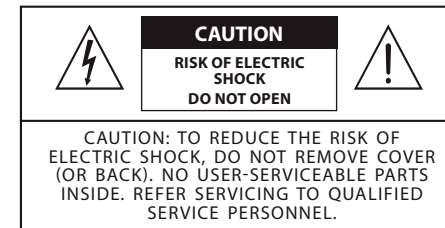


The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to person.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

1. Before using the device, read this manual and follow provided steps. Keep the manual for future reference.
2. Follow all instructions and warnings in this manual.
3. Do not use the device near water and sources of moisture. Protect the device from getting water inside the case.
4. Clean this device with soft, dry cloth, without any abrasive agents.
5. Do not block any ventilation openings.
6. Do not install the device near sources of heat.
7. Protect the power cord from being walked on or pinched.
8. Only use accessories approved by the manufacturer.
9. Unplug the device from power supply during storms.
10. If the device is damaged or does not work in proper way, contact the service center. Do not repair the device yourself.
11. This device has Class II double insulation. This means that the device does not require electrical connection to earth.
12. Minimum distance around the device for sufficient ventilation is 5 cm.
13. Do not place any objects on the device.
14. Replace remotes batteries with new ones, with the same parameters.
15. If the device will not be used for a long time, take out the batteries.

 PRODUCT DESCRIPTION

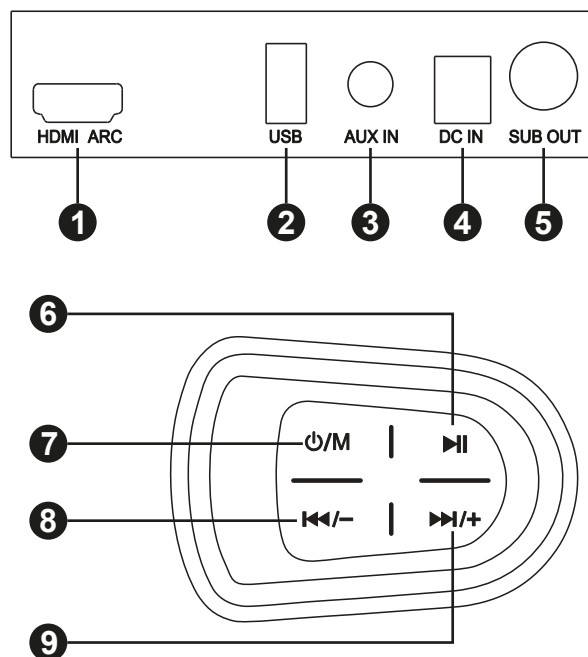


Soundbar

1. HDMI input
2. USB socket
3. AUX socket
4. DC power socket
5. Subwoofer output
6. Play/pause button
7. Power button / mode select button
8. Decrease volume button / previous track
9. Increase volume button / next track

Remote control

 1. Power button
2. PAIR button
3. Increase volume button
4. Previous track button
5. Decrease volume button
6. Treble adjust button
7. Bass adjust button
8. INPUT button
9. Play / pause button
10. Next track button
11. EQ button
12. Mute button

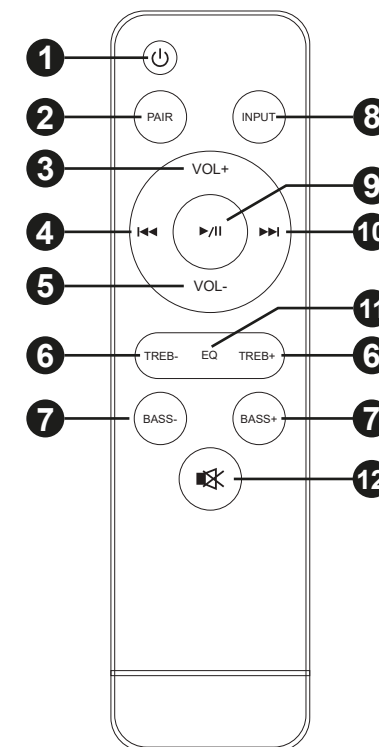

BATTERY INSTALLATION

 
1. Press and slide down the battery compartment cover
2. Insert two AAA batteries (note the polarity).
3. Close the battery compartment cover.

Attention: use the same types of the batteries. Do not mix old and new batteries.

INSTALLATION

Placement:

- A. If the TV is placed on a table, place the device on the table directly in front of the TV.
- B. If the TV is attached to a wall, mount the device on the wall directly below the TV screen.

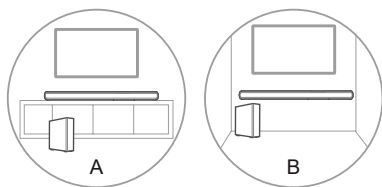

Wall mounting

- While mounting, take extra care or hire a technician to do it.
- Before mounting, make sure, that the wall is suitable for hanging such devices. Producer is not responsible for damaged caused by improper installation on a wall.
- Required tools are not included in set.
- Before drilling, make sure that there are not any wires inside a wall.

1. Drill 2 holes. The distance between the handles is to be 480 mm.
2. Fix a dowel into each hole in the wall. Tighten the wall mount brackets on the wall with screws. Make sure, that they are securely installed.
3. Slide the device into wall mount brackets.

EN

CONNECTING

Connecting to power supply

Connect the AC plug to the power socket. Plug the cord to a mains socket.

HDMI connection

Metoda 1: ARC (Audio Return Channel)

The ARC function allows to send audio from ARC-compliant TV to soundbar with a single HDMI cable. Connect the HDMI cable and switch to HDMI (eARC/ARC). TV remote control can now be used for controlling soundbar volume. TV must support ARC function as well as HDMI-CEC.

Metoda 2: standardowe HDMI

If the TV does not support ARC, soundbar can be connected with standard HDMI cable.

1. Connect the HDMI to HDMI output on the soundbar and to TV's HDMI input.
2. Connect external devices to soundbars HDMI input.

Connecting with AUX socket

After plugging the cable to the AUX input, the speaker will automatically go to AUX mode. To control played music, use external device.

Playing via USB

After plugging the USB drive, the speaker will automatically go to USB mode. To control played music, use buttons on the remote control.

Caution:

- The soundbar supports USB drives with capacity up to 32 GB.
- The soundbar plays MP3 files only.

EN

OPERATION

Turning on

1. To turn the soundbar on or off, press the power button on the remote control or press and hold the power button on the soundbar.

Mode selection

To change the playback mode, use the power / mode select button on the soundbar or press the INPUT button on the remote control. Selected mode will be shown on the display.

Sound adjustment

- To adjust the bass and treble level, use the BASS and TREBLE buttons.
- Use the EQ button to change the effect.
- To change the volume level, use the VOLUME buttons.
- To mute the sound, press the mute button.

BLUETOOTH

Before pairing:

- Bluetooth range is around 8 meters. Do not exceed the range.
- Manufacturer does not guarantee compatibility with all external devices.
- Make sure, that between the soundbar and external device, there are no obstacles.

Pairing

1. Turn on the soundbar and external device.
2. "BT" message will appear on the display.
3. Turn on the Bluetooth function on external device. Search for available devices and choose "KM0575".
4. Begin pairing. If password is required, input 0000.
5. After successful pairing the audio cue will be played.
6. You can now play the music via Bluetooth. If external device supports AVRCP function, it is possible to control the music with the remote control.
7. To disconnect the currently connected external device, press the PAIR button on the remote control.

TROUBLESHOOTING

No power	• Make sure that the power cords are connected correctly. • Make sure that the power socket has power in it. • Press the power button
Remote control does not work	• Select the correct source. • Reduce the distance between the remote control and the soundbar • Make sure that the batteries are installed correctly • Replace the batteries • Aim the remote control into the IR sensor
No sound	• Make sure that the sound is not muted • Unplug both devices and plug them again • Make sure that the source is set correctly • Format is not supported
Can't pair Bluetooth device	• Make sure that the Bluetooth function is enabled • Make sure that the pairing mode is enabled
The subwoofer does not work	• Check connection between subwoofer and soundbar.

SPECIFICATION

GENERAL

- Bluetooth: 5.3 BLE
- Frequency bands: 2402 – 2480 MHz
- Max. power transmitted: -90,5 dBm
- I/O: HDMI input (ARC), USB port, AUX-in (Jack 3,5 mm)
- Supported formats: MP3
- Bluetooth profiles: A2DP, AVRCP
- Mounting: horizontally, on a wall
- Remote power supply: 2x AAA battery
- In set: subwoofer, remote control, AC adapter, Jack 3,5 mm cable

SOUNDBAR

- Type: active
- Speakers
 - Left: 1,57 x 2,75", 8 W, 8 Ohm
 - Right: 1,57 x 2,75", 8 W, 8 Ohm
- Frequency response: 150 Hz – 20 kHz
- THD: $\leq 0,3\%$
- Audio input sensitivity: 800 mV
- S/N: ≥ 62 dB
- Power consumption in standby: 0,48 W
- AC adapter:
 - Input: 100 - 240 V; 50/60 Hz; 0,6 A
 - Output: 18 V, 2 A
- Dimensions: 600 x 85 x 62 mm
- Weight: 1 kg

EN

SUBWOOFER

- Type: passive
- Speaker: 4", 20 W, 4 Ohm
- Frequency response: 40 Hz – 150 Hz
- THD: $\leq 0,3\%$
- Dimensions: 410 x 220 x 120 mm
- Weight: 2,4 kg

MORE

For more information on this device visit: www.krugermatz.com.

Read owner's manual carefully before using your device.

Visit www.krugermatz.com website for more products and accessories.

In case of any doubts or questions reach out to our Frequently Asked Questions section.

Lechpol Electronics Leszek Sp. z o.o. Sp.k. hereby declares that soundbar KM0575 is consistent with directive 2014/53/UE. Full text of the EU Declaration of Conformity is available at following Internet address: www.lechpol.eu.



English
Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)



EN

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Made in China for Lechpol Electronics Leszek Sp.k., ul. Garwolińska 1, 08-400 Miętne.



www.krugermatz.com

Krüger&Matz is a registered trademark