

Scan the QR code for support information

 


CS6324 (US)

VG104 (US)

CS6324 (CA)

VG104 (CA)

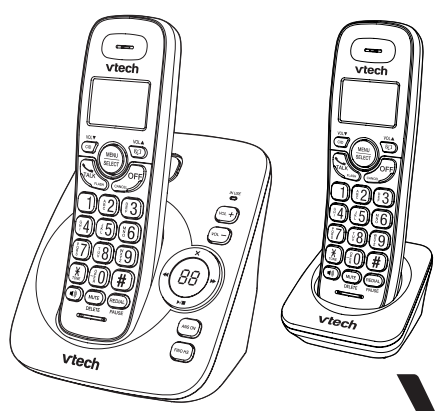

vtech®

Abridged user's manual

IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- Read and understand all instructions.
 - Follow all warnings and instructions marked on the product.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - CAUTION:** Do not install the telephone base at a height above 2 meters.
 - Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
 - Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
 - Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
 - Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
 - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
 - Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
 - Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
 - Do not overload wall outlets and extension cords.
 - Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
 - Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
 - Only put the handset of your telephone next to your ear when it is in normal talk mode.
 - The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
 - For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
 - CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT262342) for the handset. Do not dispose of batteries in a fire. They may explode. Dispose of used batteries according to the instruction.
 - Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
 - Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
 - The applied nameplate is located at the bottom or near of the product.

 
SAVE THESE INSTRUCTIONS

Battery

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released


WHAT'S IN THE BOX

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

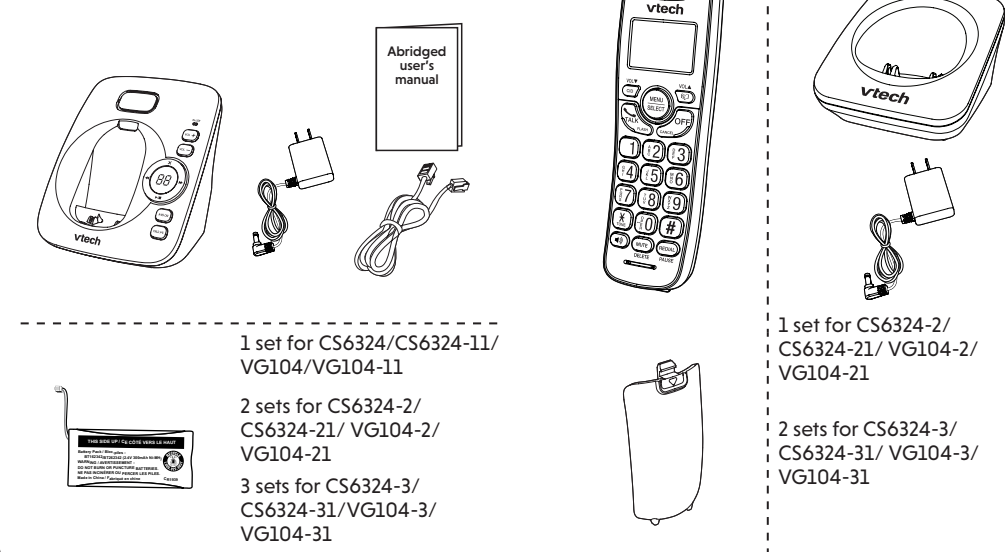

OVERVIEW

 Telephone base

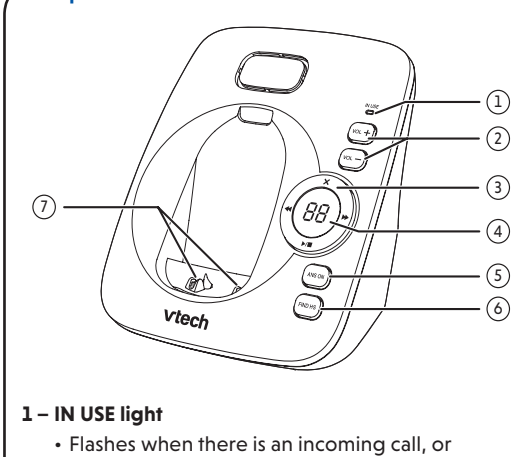

1 – IN USE light

- Flashes when there is an incoming call, or another telephone sharing the same line is in use.
- On when the telephone is in use, or the answering system is answering a call.

2 – VOL+/VOL-

- Adjust the listening volume.
- Adjust the telephone base ringer volume.

3 – X (DELETE)

- Delete the playing message.
- Press twice to delete all old messages.

►► (SKIP)

- Skip to the next message.

►► (PLAY/STOP)

- Play messages.
- Stop playing messages.

◄◄ (REPEAT)

- Repeat a message.
- Press twice to play the previous message.

4 – Message window

- Turn on or off the answering system.

5 – ANS ON

 
- Turn on or off the answering system.

6 – FIND HS

- Page all system handsets.

7 – Charging pole

Handset

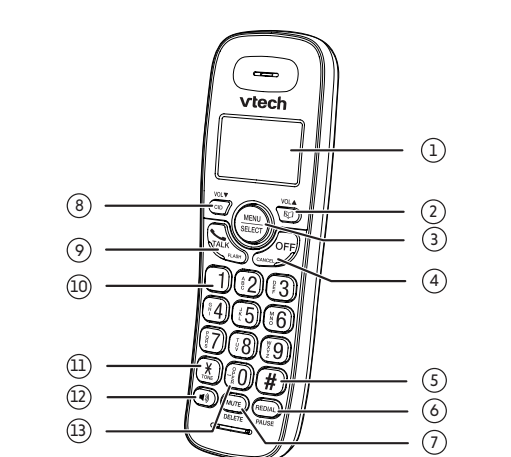

1 – LCD display

- Review the phonebook when the phone is not in use.
- Scroll up while in a menu, or in the phonebook, caller ID log or redial list.
- Move the cursor to the right when entering numbers or names.
- Increase the listening volume during a call.

3 – MENU/SELECT

- Show the menu.
- While in a menu, press to select an item, or save an entry or setting.

4 – OFF/CANCEL

- Hang up a call.
- Return to the previous menu or exit completely without making changes.
- Delete digits while predialing.
- Silence the handset ringer temporarily while the phone is ringing.
- Press and hold to erase the missed call indicator while the handset is not in use.

5 –

- Show other dialing options when reviewing a caller ID log entry.

6 – REDIAL/PAUSE

- Review the redial list.
- Insert a dialing pause while dialing or entering numbers into the phonebook.

7 – MUTE/DELETE

- Mute the microphone during a call.
- Silence the handset ringer temporarily while the phone is ringing.
- Delete the displayed entry while reviewing the phonebook, caller ID log, or redial list.
- Delete digits or characters when entering numbers or names.

8 – CID/VOL▼

- Review the caller ID log when the telephone is not in use.
- Scroll down while in a menu, or in the phonebook, caller ID log or redial list.
- Move the cursor to the left when entering numbers or names.
- Decrease the listening volume during a call.

9 – TALK/FLASH

- Make or answer a call.
- Answer an incoming call when you receive a call waiting alert.

10 – 1

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.

11 – TONE X

- Switch to tone dialing temporarily during a call.

12 – M

 
- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset earpiece.

13 – OPEN 0

- Press to add a space when entering names.

Charger

1 – Charging pole

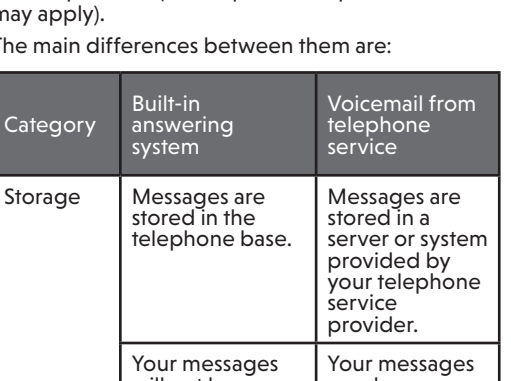

Display icons

Icon	Description
	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The handset ringer is turned off.
	There are new voicemail received from your telephone service provider.
	The entry you are reviewing is new in the caller ID log.
	The answering system is turned on.
	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
	No messages.
	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Charger

1 – Charging pole

Display icons

Icon	Description
<td>The battery icon flashes when the battery is low and needs charging.</td>	The battery icon flashes when the battery is low and needs charging.
<td>The battery icon animates when the battery is charging.</td>	The battery icon animates when the battery is charging.
<td>The battery icon becomes solid when the battery is fully charged.</td>	The battery icon becomes solid when the battery is fully charged.
<td>The handset ringer is turned off.</td>	The handset ringer is turned off.
<td>There are new voicemail received from your telephone service provider.</td>	There are new voicemail received from your telephone service provider.
<td>The entry you are reviewing is new in the caller ID log.</td>	The entry you are reviewing is new in the caller ID log.
<td>The answering system is turned on.</td>	The answering system is turned on.
<td>The message number currently playing and the total number of messages.</td>	The message number currently playing and the total number of messages.

New message indication

When there are new messages in the built-in answering system, the handset displays **XX new messages**, and the message window on the telephone base flashes.

Message window display	Description
<td>No messages.</td>	No messages.
<td>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</td>	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
<td>Total number of old messages and memos recorded. The current message number during old message playback.</td>	Total number of old messages and memos recorded. The current message number during old message playback.

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service provider.
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.

To silence the handset ringer:

- Press **CANCEL** or **MUTE**. The handset displays **Ringer muted** and .

Temporary ringer silencing

When

ANSWERING SYSTEM SETTINGS

Set your built-in answering system

The answering system can record and store up to 99 messages. Each message can be up to 3 minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

If the answering system has less than 3 minutes of recording time left, "*Less than 3 minutes to record*" is announced before the message playback and **Rec mem low** appears on the handset screen. If the memory is full, the answering system announces, "*Memory is full.*" The number of messages and F flash, alternatively, in the message window, and **Rec mem full** appears on the handset screen. You must delete some messages before recording new ones.

Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings before pick up, and to access remotely.

Voice language

NOTE: This feature is available for Canada version only.

The voice prompt language is preset to English. You can select English or French to be used for the voice prompts in your answering system.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Ans sys setup** and then press **SELECT**.
- Press **▼** or **▲** to choose **Voice language** and then press **SELECT**.
- Press **▼** or **▲** to choose **English or Français** and then press **SELECT**.

Announcement

Your outgoing announcement plays when calls are answered by the answering system. The telephone has a default outgoing announcement, "*Hello, please leave a message after the tone.*" You can use this announcement, or record your own.

Record a new outgoing announcement:

The announcement can be up to 90 seconds in length.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Announcement** and then press **SELECT**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7.*" Press **7** to record.
- The handset announces, "*Record after the tone. Press 5 when you are done.*" and it displays **Recording... Stop [5]**.
- After the tone, speak towards the handset microphone.
- Press **5** when finished. The handset plays back the recorded announcement. Press **5** or **OFF** to stop the playback at any time. To listen to the recorded announcement again, wait after playback has completed, then press **2**.

NOTE: Announcements shorter than two seconds will not be recorded.

Play your announcement:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Announcement** and then press **SELECT**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7.*" Press **2** to play the current announcement.

Options during playback:

- Press **VOL ▼** or **VOL ▲** to adjust the listening volume.
- Press **5** or **OFF** to stop at any time.

Delete your announcement:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Announcement** and then press **SELECT**.
- The screen displays **Play [2] Del [3] Rec [7]** and it announces, "*To play, press 2. To record, press 7.*" Press **3** to delete your recorded announcement. The handset displays **Annc deleted** and announces "*Announcement deleted.*"

NOTE: After you deleted your own recorded announcement, the answering system answers calls with the default announcement.

Set number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings; or toll saver.

If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from outside your local area.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Ans sys setup** and then press **SELECT**.
- Press **▼** or **▲** to choose **# of rings** and then press **SELECT**.
- Press **▼** or **▲** to choose from **6, 5, 4, 3, 2, or Toll saver**, then press **SELECT** to save.

Turn on or off the message alert tone

When the message alert tone is set to **On**, and there is at least one new message, the telephone base beeps every 10 seconds. The tone stops when all new messages have been reviewed.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Ans sys setup** and then press **SELECT**.
- Press **▼** or **▲** to choose **Msg alert tone** and then press **SELECT**.
- Press **▼** or **▲** to choose **On or Off**, then press **SELECT** to save.

NOTE: The message alert tone beeps only if the handset is on.

- Answering system is on.
- Message alert tone setting is on.
- There are new messages.

Playback messages

You can listen to messages at the telephone base or on a cordless handset. When playback begins, the total number of messages is announced. Before each message, you hear the day and time of the recording. After the last message, you hear, "*End of messages.*" Make sure you set the date and time correctly. Refer to **Set date and time** for more details.

To listen to messages at the base:

- Press **►** when the phone is not in use. When you have no message in the answering system, the telephone base announces, "*You have no message.*"

Options during playback

- Press **VOL ▼** or **VOL ▲** to adjust the listening volume.
- Press **►** to skip to the next message.
- Press **◄** to repeat the playing message. Press **◄** twice to listen to the previous message.
- Press **X** to delete the playing message. The telephone base advances to the next message.
- Press **►** to stop the playback.

To listen to messages with the handset:

- Press **MENU** when the handset is not in use. The handset displays **Play messages**.
- Press **SELECT**. If you have either new or old messages, the messages play automatically.
 - The system announces the number of messages, and then begins playback. The message sequence is shown on the handset's screen.
- Press **OFF** to stop the playback.

Options during playback

- Press **VOL ▼** or **VOL ▲** to adjust the listening volume.
- Press **6** to skip to the next message.
- Press **4** to repeat the playing message. Press **4** twice to listen to the previous message.
- Press **3** or **MUTE/DELETE** to delete the playing message. The telephone base advances to the next message.
- Press **OFF** to stop the playback.

Delete all messages

Using the base

- Press **X** when the telephone is not in use. The telephone announces - *To delete all old messages, press DELETE again.*
- Press **X** again. All previously reviewed messages are erased and the telephone announces - *All old messages deleted.*

Using the handset

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.

- Press **▼** or **▲** to choose **Delete all old** and then press **SELECT**.
- Press **SELECT** to confirm. The handset displays **Deleting...** and then **No old messages.** It returns to the previous menu, and you hear a confirmation tone.

Answering system remote access

You can reach your answering system remotely by dialing your home telephone number from any touch-tone telephone.

- Dial your telephone number from any touch-tone telephone.
- Once the system plays your announcement, enter the two-digit remote access code (**19** is the default code).
 - The system automatically announces the number of new or old messages (if any), and then begins to play them.

You can also enter the following remote commands.

Command	Description
1	Play all messages.
2	Play only new messages.
3	Delete the current message (during playback).
33	Delete all old messages.
4	Repeat the current message (during playback).
5	Stop.
*5	Hear a list of remote commands.
6	Skip to the next message (during playback).
*7	Record a new announcement.
8	End the call.
0	Turn the answering system on or off.

- Hang up or press **8** to end the call.

NOTES:

- If you do not press any key after you enter the remote access code, all new messages play. If there are no new messages, all old messages play.
- Once the new messages have played, the telephone announces the help menu options. If you do not press any key within 20 seconds, the remote access call automatically disconnects.
- When the answering system is turned off, the telephone answers after 10 rings, and announces, "*Please enter your remote access code.*"
- When the memory is full, the answering system answers incoming calls after 10 rings and announces, "*Memory is full. Enter your remote access code.*"

Change remote access code

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Ans sys setup** and then press **SELECT**.
- Press **▼** or **▲** to choose **Remote code** and then press **SELECT**.
- Use the dialing keys to enter a two-digit number.
 - Press **▼** or **▲** to scroll to a desired two-digit number.
- Press **SELECT** to confirm.

Call intercept while using answering system

When a caller is leaving a message on your answering system, you can stop recording and talk to the caller by pressing **6** on the handset.

Recording memo

Memos are your own recorded messages used as reminders for yourself or others using the same answering system. You can record your own memos using a system handset. Playback and delete them in the same way as incoming messages.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Record memo** and then press **SELECT**. The handset displays **Recording... Stop [5]** and announces, "*Record after the tone. Press 5 when you are done.*"
- Speak towards the handset microphone. Press **5** or **OFF** when you finish recording. The handset announces "*Recorded.*"

NOTES:

- If you record a memo when the answering system memory is full, the system announces, "*Memory is full.*"
- Each memo can be up to three minutes in length. Memos shorter than two second are not recorded.
- When the answering system has less than three minutes of recording time left, the handset announces, "*Less than three minutes to record.*" and displays **Rec mem low**.

Turn on or off the call screening

Use this feature to choose whether incoming messages can be heard over the telephone base when they are being recorded. If you turn call screening on, you hear the incoming message.

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to choose **Answering sys** and then press **SELECT**.
- Press **▼** or **▲** to choose **Ans sys setup** and then press **SELECT** twice to choose **Call screening**.
- Press **▼** or **▲** to choose **On or Off**, then press **SELECT** to save.

Screen a call with answering system

Screen calls at the cordless handset:

- If the answering system is on and a call is being answered by the answering system, the handset shows **To screen call** and **press [SELECT]** alternately.

Press **SELECT** to screen the call on your handset. The handset shows **Screening...**

Option while a message is being recorded

- Press **VOL ▼** or **VOL ▲** on the handset to adjust the call screening volume.

Screen calls at the base:

If the answering system and call screening are on, the announcement and the incoming messages are broadcast at the telephone base when a call is answered by the answering system.

Option while a message is being recorded

- Press **VOL ▼** or **VOL +** on the telephone base to adjust the call screening volume.
- Press **►** to temporarily turn on the screening if the call screening is set to off.

RETRIEVE VOICEMAIL FROM TELEPHONE SERVICE

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

When you received a voicemail, the handset displays **✉** and **New voicemail**. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

NOTE: After you have listened to all new voicemail messages, the indicators on the handset turn off automatically.

Clear the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators.

NOTE: This feature turns off the indicators only, it does not delete your voicemail messages.

- Press **MENU** when the phone is not in use.
- Scroll to **Settings** and then press **SELECT**.
- Scroll to **Clr voicemail** and then press **SELECT** twice.

ECO MODE

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

GENERAL PRODUCT CARE

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care. See the FAQs.

Use your smartphone or mobile device to access our online help.

• Go to https://help.vtechphones.com/cs6324_vcb (US); OR https://phones.vtechcanada.com/en/support/general/manuals?model=cs6324_vcb (Canada)

• Go to https://help.vtechphones.com/vg104_vcb (US); OR https://phones.vtechcanada.com/en/support/general/manuals?model=vg104_vcb (Canada)

• Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

• If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.

NEED HELP?

For operations and guides to help you using your telephone, and for the latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

• Go to https://help.vtechphones.com/cs6324_vcb (US); OR https://phones.vtechcanada.com/en/support/general/manuals?model=cs6324_vcb (Canada)

• Go to https://help.vtechphones.com/vg104_vcb (US); OR https://phones.vtechcanada.com/en/support/general/manuals?model=vg104_vcb (Canada)

• Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

• If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.

FOR C-U-UL COMPLIANCE ONLY

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :

- Lisez et comprenez bien toutes les instructions.
- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèrement humecté.
- ATTENTION:** Ne pas installer le socle téléphonique à une hauteur supérieure à 2 mètres.
- N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- Évitez d'installer le système téléphonique dans les endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les boîtes corrosifs.
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
- Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
- N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient tomber à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de liquides dans l'appareil.
- Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
- Ne surchargez pas les prises de courant et les rallonges.
- Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants :
 - Lorsque le cordon d'alimentation est endommagé ou déchiré.
 - Si du liquide a été échappé dans l'appareil.
 - Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un

dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.

- Si le produit a été échappé et que le socle et/ou le combiné a été endommagé.
- Si le produit affiche une nette diminution de sa performance.
- Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines circonstances, une flamme pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur la table. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné sur la table ou le socle, si le téléphone se trouve à proximité d'un endroit contenant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flamme dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels événements peuvent comprendre: des endroits où l'on utilise de l'équipement médical; des endroits où des produits chimiques industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc.

- Ne placez que le combiné de votre téléphone près de votre oreille lorsque en mode de conversation.
- Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est banché dans une prise au plafond ou sous une table/ armoire.
- Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit être installé à proximité du matériel et doit être assemblé correctement.
- ⚠ MISE EN GARDE:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeables incluses ou les piles de rechange (BT2A242). N'incinérerez pas les piles. Celles-ci risquent d'exploser. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des piles.

- Évite d'utiliser la batterie dans les conditions suivantes:
 - des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant utilisation, le stockage ou le transport.
- remplacement d'une batterie par un type incorrect pouvant supprimer une protection.
- mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion.
- maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
- batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.

- N'utilisez que des adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
- La plaque signalétique appliquée est située au bas ou à proximité du produit.

CONSERVEZ CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise au rebut auprès des autorités locales.
- N'ouvrez pas et ne mouillez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.
- Rechargez la pile incluse avec cet appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.

Stimulateurs cardiaques implantés dans l'organisme

Les stimulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil): L'organisme Wireless Technology Research, LLC (WTR), une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins :

Avs aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de ceinture, lorsque celui-ci est en marche.
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de stimulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

À propos des téléphones sans fil

Confidentialité : Les mêmes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des restrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées par des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones à cordons.

 
Alimentation électrique : Le socle de ce téléphone sans fil doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.

Possibilité d'interférences aux téléviseurs : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.

Piles rechargeables : Manipuler les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.

Les bloc-piles rechargeables à l'hydruve métallique de nickel : Jetez ces bloc-piles de manière écologique et sécuritaire. Ne les incinérerez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégrader une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

THE RBRC SEAL

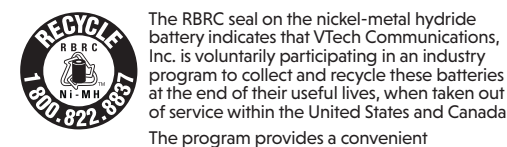

The RBRC seal on the nickel-metal hydride battery properly indicates that Vtech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

Vtech's participation makes it easy for you to drop off the spent battery at local retailers participating in the RBRC program or at authorized Vtech product service centers. Please call **1 (800) 8 BATTERY®** for information on Ni-MH battery recycling and disposal based on your location in your area.