

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this Cook's Companion® product to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with a new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, chips or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations in the plastic or any other part thereof, which are a normal part of the craftsmanship, (d) extreme temperature or resulting damage to the product, (e) improper cleaning methods causing scratches or damage to the unit itself, or (f) accessories, even if sold with the product, (g) any unit that has been tampered with, (h) damages incurred through improper use and care and (i) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective product. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. Course Housewares cannot guarantee a replacement of the same color as your original purchase. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Hydro Bottle: H2 Water Generator only.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY. PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR


Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC
1715 Lake Drive West
Chanhassen, MN 55317
(866) 325-1659

Return shipping and handling charges may apply.

MADE IN CHINA

MODEL: CCH2B/ B413224

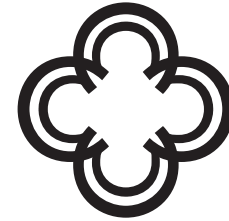

COOK'S COMPANION

Hydro Bottle: H2 Water Generator





Thank you for purchasing Cook's Companion® Hydro Bottle: H2 Water Generator. Cook's Companion® will perform best when used as intended. To ensure the best performance of your product, please consistently follow these instructions.

PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

About Cook's Companion®

Whether you are a culinary novice or frittata flipping, soufflé-rising, flambéing master chef, every great cook needs a fine set of tools at his or her disposal to create a truly stellar dish. Exclusively available through Evine, the Cook's Companion® line sets the professional standard for quality tools offered at economic prices. Whether you're prepping meals for one, two or 20, this essential collection can cater to your any and every gastronomic need.

Cook's Companion® combines innovative and resourceful industry technologies with colorfully stylish designs. In addition, Cook's Companion® products boast features and functions employed for easy care and cleanup. Cleverly designed with non-stick interiors, ceramic coating, Cook's Companion® deliberately constructs each product with ease and convenience in mind. Fill your kitchen with useful products and return the joy to your kitchen with assistance from this dependable brand. Please enjoy this exclusive essential from Cook's Companion®.

Getting Started

- ◆ Before using, remove any labels and wash and dry each item in accordance with the care and use instructions.

Cleaning the Hydro Bottle

- ◆ For best results, fill the Hydro Bottle with warm water, not exceeding 113°F, and place the Lid onto the Glass Body so it is secured. Shake for 1 minute. Then, pour out contents and repeat as necessary.
- ◆ The base of the Hydro Bottle is not dishwasher safe and the electrolytic plate should only be cleaned when attached to the Glass Body with the Lid on, as described above.
- ◆ To remove the base of the Hydro Bottle, hold onto the glass body with one hand and turn the base clockwise to remove the base from the glass body. To reattach, simply turn the base onto the glass body counter clockwise until tightened so that no leaking will occur.
- ◆ While the Glass Body and the Lid are dishwasher safe, hand washing with warm water and vinegar is recommended to avoid any soap residue left on the body or lid.

Compatibility


- ◆ The Cook's Companion® Hydro Bottle requires a voltage of 5V @ 5W maximum, please make sure your outlet is compatible before using your product.
- ◆ Never submerge or soak the base to prevent electrical shock and/or damage to the device. Only the electrolytic plate can be submerged in water, as this is the portion is exposed inside the Hydro Bottle.
- ◆ The included charging cord should not be used with any other device besides your Hydro Bottle.

WARNINGS:

- Do not place any part of your device in the microwave or in/on any other heat source.
- Do not place any part of the Hydro Bottle directly in the refrigerator or freezer at any time.
- Follow all Care & Use instructions before using your device.
- Never submerge the base of the Hydro Bottle in water to avoid electrical shock and damage to the device.
- Always make sure your device is placed on a dry area.
- Never plug the cord into the base when filled with water. Always empty the contents prior to charging the Hydro Bottle.
- Never place any other fluid or substance in the Hydro Bottle. Only use non- flavored household drinking water, pure water, mineral, or carbonated water. Using any other substance may damage the Hydro Bottle and will not be covered by warranty.
- Never place the base of the Hydro Bottle in the dishwasher.
- Please refer to the cleaning section of your booklet for instructions on how to properly clean your device.
- Always store your device in a dry area away from other appliances.
- Keep away from children and pets at all times.
- Do not use the Hydro Bottle if any part is cracked, broken, or malfunctions. Discontinue use and contact Customer Service at (866) 325-1659 immediately for further instruction.
- Never attempt to use the Hydro Bottle on any function without water in the bottle.

Your Hydro Bottle

- ◆ Before using your Hydro Bottle, it is important to understand what is included and how each part works. Please review the parts below and also reference this page for any questions while reading through your instructions.

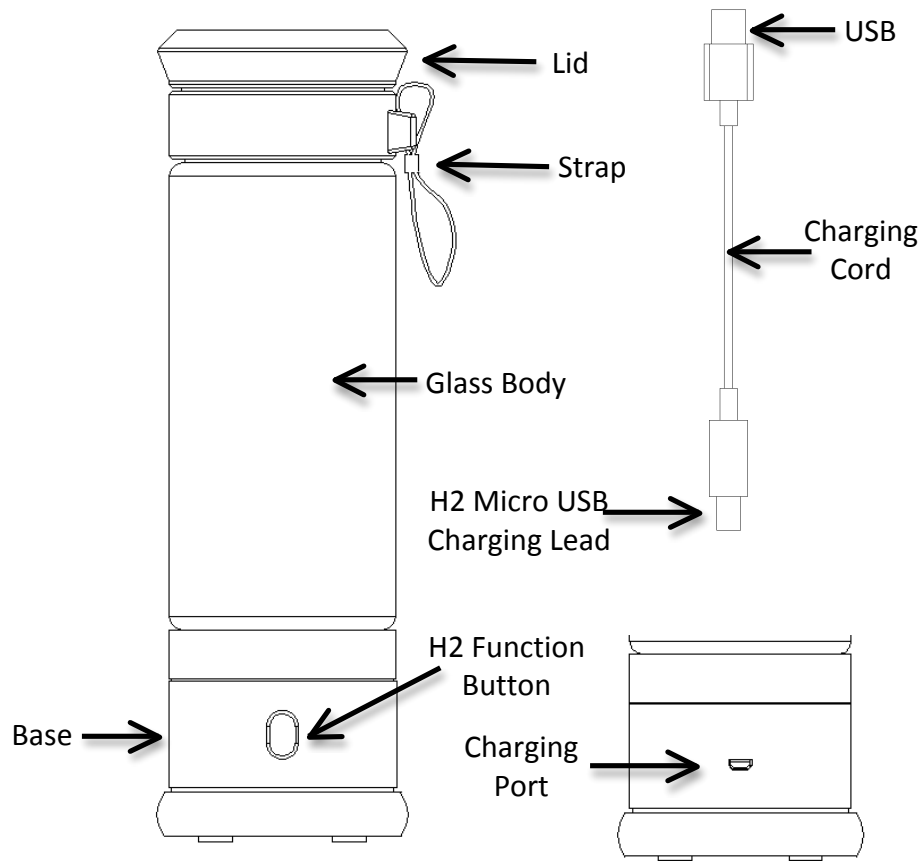

Assembling Your Hydro Bottle

- ◆ To begin using your Hydro Bottle, first rinse out the interior of the glass body by following the cleaning process on the previous page.
- ◆ We recommend charging your Hydro Bottle prior to the first use. To do so, first ensure the Hydro Bottle is completely dry. Then, plug the charging lead into the charging port on the base of the Hydro Bottle.
- ◆ Next, plug the USB into a compatible USB charging port or adaptor.
- ◆ Once the base is plugged in to a compatible outlet, the LED lights will be Red. Once the unit is fully charged, the LED lights will turn off (approximately 2 hours).
- ◆ Once the unit is fully charged, your Hydro Bottle should last approximately 20-25 cycles without needing to be charged again. This will vary depending on what Hydrogen process you most frequently use.

Using Your Hydro Bottle

- ◆ After the unit is fully charged, unplug the Hydro Bottle from the USB charging cord.
- ◆ Next you can fill the bottle up by turning the lid counter clockwise and adding in non-flavored household drinking water, pure water, mineral water or carbonated water. We recommend only pouring water until it reaches about ½ inch from the brim of the top of the bottle.
- ◆ Once the water has been added to the Hydro Bottle, secure the lid to the glass body by turning the lid clockwise.
- ◆ Your Hydro Bottle has 2 different electrolytic processes, which will produce different amounts of Hydrogen into the water.
- ◆ The first process will use electrolysis to increase the Hydrogen in your water to approximately 750ppb (parts per billion) and will take 3 minutes from start to finish. To use this function, press the function button 1 time. After pressing the function button, the LED lights will turn to blue and the bottle will beep 1 time. You will notice the water will look slightly cloudy, this is a normal part of the electrolysis process and your water will return to normal once the function has completed. When the electrolysis process is finished, the unit will beep 1 time and the LED lights will turn off. You are now ready to enjoy your Hydrogen water.
- ◆ The second process will use electrolysis to increase the Hydrogen in your water to approximately 930ppb (parts per billion) and will take 6 minutes from start to finish. To use this function, press the function button 2 times quickly (within 3 seconds of each other). After pressing the function button, the LED lights will turn to blue and the bottle will beep 3 times. You will notice the water will look slightly cloudy, this is a normal part of the electrolysis process and your water will return to normal once the function has completed. When the electrolysis process is finished, the unit will beep 1 time and the LED lights will turn off. You are now ready to enjoy your Hydrogen water.
- ◆ Enjoy the Hydrogen Water immediately, as the hydrogen will begin to slowly dissipate as it sits. In order to consume the most Hydrogen rich water, it is recommended to drink the water within 1 hour of the completion of the either Hydrogen cycle (listed above).
- ◆ If you wish to stop the process during the cycle, simply hold down the function button until you hear 1 beep and the LED lights turn off.

Trouble Shooting Your Hydro Bottle

- ◆ If your Hydro Bottle is in an electrolysis process and beeps three times, stops the process, and the LED light is blinking red; you're hydro bottle is low on battery and needs to be placed on the charger.
- ◆ If the product is fully charged but goes into stand by mode and beeps three times, check to make sure nothing is inside the bottle and ensure you are not using flavored water.