

掌上游戏机

V10

产品使用说明书

使用前请认真阅读本说明书，技术规格如有变更，恕不另行通知


Handheld Game Console

V10

Product instructions

Please read the instructions carefully before using
Specifications are subject to change without notice.

使用手册

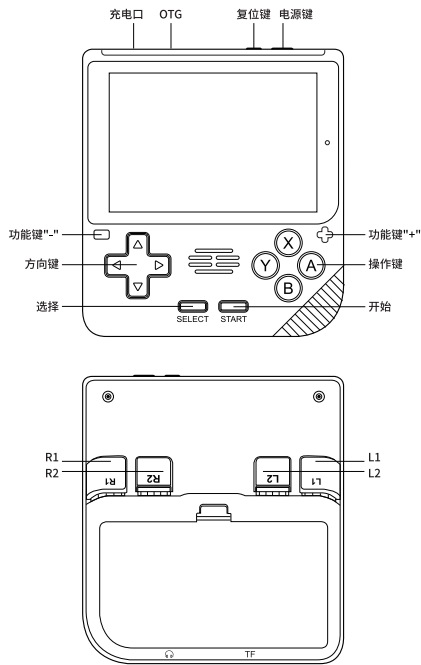

Version 1.0

Page 1

使用手册

一、注意事项

- 1.本书内容是为了使用者正确使用游戏机而设定，请认真阅读并遵守。
 - ▶ 切勿严重撞击主机
 - ▶ 切勿接触酸、碱稀释剂等化学物品
 - ▶ 请不要靠近强磁场、电场
 - ▶ 请避开直射光线或加热器
 - ▶ 切勿自行拆卸、修理、改造
 - ▶ 骑车、驾驶汽车及摩托车时，请勿使用播放器及耳机，以免造成危险
 - ▶ 切勿以较大音量收听，以免对听力造成不良影响
 - ▶ 请勿令主机进水
- 2.关机请在主界面按START,选择退出,再选择关闭系统进行关机,不要直接按电源键强制关机,可能会损坏系统,导致无法开机。
- 3.电源键旁边的R复位重启键，非特殊情况不要使用，容易对系统卡造成损坏。

二、功能介绍

- 1.主界面
 - ▶ A键 进入/确认
 - ▶ B键 跳转指定模拟器/返回
 - ▶ X键 随机跳转模拟器
 - ▶ Y键 搜索
 - ▶ SELECT 随机播放游戏预览视频（无视频则进入待机状态）
 - ▶ START 主界面时进入主菜单
- 2.模拟器界面：
 - ▶ A 进入游戏
 - ▶ B 返回
 - ▶ X 随机切换游戏
 - ▶ Y 收藏游戏
 - ▶ SELECT 设置当前模拟器游戏设置
 - ▶ START 进入主菜单

Version 1.0

Page 2

使用手册

3.进入游戏后快捷键：

- ▶ A B X Y 为游戏操作按键
- ▶ SELECT 选择/投币
- ▶ START 确认/开始
- ▶ 屏幕左下角 "-" 键 +A 暂停
- ▶ 屏幕左下角 "-" 键 +B 重置游戏
- ▶ 屏幕左下角 "-" 键 +X 进入系统菜单
- ▶ 屏幕左下角 "-" 键 +Y 截图
- ▶ 屏幕左下角 "-" 键 +R1 保存游戏
- ▶ 屏幕左下角 "-" 键 +L1 加载游戏
- ▶ 屏幕左下角 "-" 键 +L2 游戏加速
- ▶ 屏幕左下角 "-" 键 +START 同时按两次可快捷退出游戏

4. 屏幕左下角 "-" 键：

- ▶ 模拟器菜单（保存/加载/退出选项）
- ▶ 模拟器菜单Load state 加载游戏记录
- ▶ 模拟器菜单Save state 保存游戏记录
- ▶ 模拟器Exit Drastic 退出游戏
- ▶ L2 单屏/双屏模式上下切换
- ▶ R2 单屏/双屏模式上下切换

三、基本功能

- ▶ 3.5英寸 IPS OCA 全贴合 分辨率：480*320
- ▶ CPU：四核Cortex-A35-1.5GHz
- ▶ 支持TF卡扩展
- ▶ 游戏支持：兼容 ARCADE/MAME/CP51/CP52/CP53/PCE/FC/SFC/GB/GBA/GBC/MD/NEOGEO/PS/等10几种模拟。支持多种开源系统，可升级。
- ▶ 即时存档功能
- ▶ 记录历史游戏
- ▶ 设置喜爱游戏
- ▶ 待机功能
- ▶ 语言设置

因不同批次出厂不同的游戏机以上功能有所区别，请以实物为准

Version 1.0

Page 3

使用手册

四、电池低电

- ▶ 当电池出现低电后，游戏机可能会出现屏幕闪烁，声音卡顿的情况，以及无法启动系统等情况，此时应及时给机器充电。电池低电时请及时存档，并插上充电器充电。
- ▶ 建议充电电压为5V，电流规格选择500mA-2000mA。
- ▶ 请使用出厂配置的充电线进行充电。不要使用高功率充电线进行充电，防止低电压过高，导致无法充电。

五、安装游戏

- ▶ 请按机器所支持的游戏格式下载，再放到TF对应的文件夹中。本机出厂为无任何视频/音乐/游戏/图片等，所有演示的文件，必须在演示后立即删除，本公司对此不承担任何责任。

六、关于模拟器设置

- ▶ 如果出现游戏闪退，卡顿等情况，可在当前游戏按SELECT，找到编辑游戏元素，找到游戏模拟器以及核心，更换其他核心或者模拟器进行调整。
- ▶ 主界面按START是游戏菜单键，主要进行一些游戏设置：比如亮度调节、声音调节、UI主题更换等。
- ▶ 非特殊必要，按键设置，以及一些其他不理解的设置切勿擅自改动。

Version 1.0

Page 4

使用手册

游戏机产品保修卡

产品型号		出厂日期	
用户姓名		机身编号	
电话		购买日期	
邮编			
用户地址			
购买商品			
详 情 故 障			
维 修 记 录	日期	故障现象	处理方法

Version 1.0

Page 5

User Manual

1.PRECAUTIONS

- 1.The contents of this section are set for users to use the game console correctly. Please read and comply with them carefully.
 - ▶ Do not severely impact the host
 - ▶ Do not come into contact with chemicals such as benzene and diluents
 - ▶ Please do not approach strong magnetic or electric fields
 - ▶ Please avoid direct sunlight or heaters
 - ▶ Do not disassemble, repair, or modify on your own
 - ▶ When riding a bike, driving a car, or motorcycle, please do not use the player or headphones to avoid danger
 - ▶ Do not listen at a high volume to avoid adverse effects on hearing
 - ▶ Do not allow the host to enter water
2. To shut down, please press START on the main interface, select exit, and then choose to shut down the system. Do not press the power button directly to force the shutdown, as it may damage the system and prevent it from turning on
3. The R reset and restart button next to the power button should not be used unless in special circumstances, as it may cause damage to the system card.

2.FEATURES

- 1.Main interface:
 - ▶ A key to enter/confirm
 - ▶ B key jumps to the specified simulator/returns
 - ▶ X key random jump simulator
 - ▶ Y key search
 - ▶ SELECT Randomly play game preview videos (If there is no video, it will enter standby mode)
 - ▶ START Enter the main menu on the main interface
- 2.Simulator interface:
 - ▶ A enters the game
 - ▶ B returns
 - ▶ X randomly switches games
 - ▶ Y Collect Games
 - ▶ SELECT Set the current emulator game settings
 - ▶ START Enter the main menu

Version 1.0

Page 2

User Manual

3.Shortcut keys after entering the game:

- ▶ A B X Y To operate buttons for games
- ▶ SELECT Selection/coin placement
- ▶ START Confirmation/start
- ▶ "-" key+A in the bottom left corner of the screen (Pause)
- ▶ "-" key+B in the bottom left corner of the screen (Reset Game)
- ▶ "-" key+X in the bottom left corner of the screen (Enter the system menu)
- ▶ "-" key+Y in the bottom left corner of the screen (Screenshot)
- ▶ "-" key+R1 in the bottom left corner of the screen (Save game)
- ▶ "-" key+L1 in the bottom left corner of the screen (Load game)
- ▶ "-" key+L2 in the bottom left corner of the screen (Game acceleration)
- ▶ "-" key+START in the bottom left corner of the screen (Press twice at the same time to quickly exit the game)

4. The "-" key in the bottom left corner of the screen:

- ▶ Simulator menu (save/load/exit options)
- ▶ Simulator menu Load state (Load game records)
- ▶ Simulator menu Save state (Save game records)
- ▶ Simulator Exit Drastic (Exit the game)
- ▶ L2 Switching up and down in single/dual screen mode
- ▶ R2 Switching up and down in single/dual screen mode

The "-" key in the bottom left corner of the screen

3.BASIC SKILLS

- ▶ 3.5-inch IPS OCA full fit resolution: 480 * 320
- ▶ CPU: quad core Cortex-A35-1.5GHz
- ▶ Support TF card extension
- ▶ Game support: Compatible with ARCADE/ME/CP51/CP52/CP53/PCE/FC/SFC/GB/GBA/GBC/MD/NEOGEO/PS/and other 10 types of simulations. Supports multiple open source systems and can be upgraded.

Version 1.0

Page 3

User Manual

- ▶ Instant archiving function
- ▶ Record historical games
- ▶ Set favorite games
- ▶ Standby function
- ▶ Language settings

Due to differences in the functions of game consoles produced in different batches, please refer to the actual product for accuracy

4.LOW BATTERY

- ▶ When the battery is low, the game console may experience screen flickering, sound jamming, and inability to start the system. At this time, the machine should be charged in a timely manner. When the battery is low, please save it in a timely manner and plug in a charger to charge it.
- ▶ Suggest a charging voltage of 5V and a current specification of 500mA-2000mA.
- ▶ Please use the factory configured charging cable for charging. Do not use high-power charging cables for charging to prevent low voltage and high voltage from causing charging failure.

5.INSTALL GAME

- ▶ Please download the game format supported by the machine and place it in the folder corresponding to TF. This machine is manufactured without any videos, music, games, pictures, etc. All demonstration files are included. It must be deleted immediately after the demonstration, and our company does not assume any responsibility for this.

6.ABOUT SIMULATOR SETTINGS

- ▶ If there are game crashes, lagging, and other situations, you can press SELECT in the current game, find the game elements to edit, find the game emulator and core, and replace it with another core or emulator to make adjustments.
- ▶ Pressing START on the main interface is the game menu key, mainly used for some game settings: For example, brightness adjustment, sound adjustment, UI theme replacement, etc.
- ▶ Unless otherwise necessary, do not make unauthorized changes to key settings or other settings that you do not understand.

Version 1.0

Page 4

User Manual

Game machine product warranty card

Product model		Date of production	
User name		Serial No	
Telephone		Date of purchase	
Zip code			
User address			
Buy goods			
D e t a i l e d b r e a k d o w n			
B R A N D A U T H O R I Z E D	Date	Failure phenomenon	processing method
Signatures of the maintenance staff			

Version 1.0

Page 5