 


READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE
OF PRODUCT. KEEP INSTRUCTIONS FOR FUTURE USE.

LEA TODAS LAS INSTRUCCIONES ANTES DE
ARMAR Y USAR EL PRODUCTO. CONSERVE LAS
INSTRUCCIONES PARA USO FUTURO.

Flat Fold High Chair

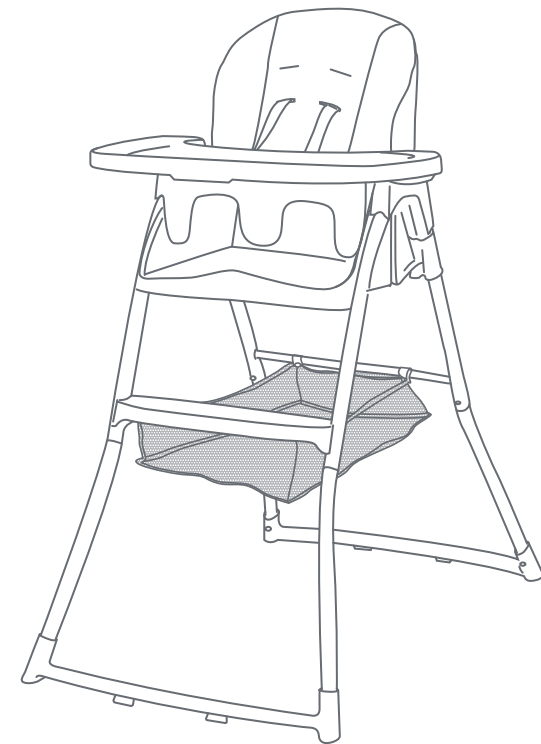

Instruction Manual
Manual de Instrucciones

HC13XXXA



Baby Trend, Inc.
13048 Valley Blvd.
Fontana, CA 92335

1-800-328-7363
(8:00 a.m. ~ 4:30 p.m. PST)
www.babytrend.com





WARRANTY

DO NOT RETURN YOUR PRODUCT TO THE STORE. PLEASE CONTACT BABY TREND® FOR REPLACEMENT PARTS, SERVICE AND REPAIR.

The Baby Trend® warranty covers workmanship defects within 1 year of purchase. Any product which has been subjected to misuse, abuse, abnormal use, excessive wear and tear, improper assembly, negligence, environmental exposure, alteration or accident, or has had its serial number altered or removed invalidates all claims against the manufacturer. Any damage to property during installation is the sole responsibility of the end user.

Customer Service Department can be contacted at 1 (800) 328-7363 Monday through Friday between 8:00 a.m. and 4:30 p.m. (PST). Return Authorizations are required prior to returning product(s) to Baby Trend®. Please visit <http://babytrend.com/pages/limited-warranty> for complete warranty details.

GARANTIA

NO DEVUELVA SU PRODUCTO A LA TIENDA. POR FAVOR CONTACTE A BABY TREND® PARA PIEZAS DE REPUESTO, SERVICIO Y REPARACION.

La garantía de Baby Trend® cubre defectos de fábrica por 1 año después de la compra. Cualquier producto que haya sido sometido a uso inadecuado, abuso, uso anormal, desgaste excesivo, montaje incorrecto, negligencia, exposición ambiental, alteración o accidente, o cuyo número de serie haya sido alterado o removido, anula todos los reclamos contra el fabricante. Cualquier daño a la propiedad durante la instalación es la exclusiva responsabilidad del usuario final.

El Departamento de Servicio al Cliente está disponible llamando al 1 (800) 328-7363, de lunes a viernes de 8:00 a.m. a 4:30 p.m. (PST). Se requiere una Autorización de Devolución antes de poder devolver el o los productos a Baby Trend®. Visite <http://babytrend.com/pages/limited-warranty> para conocer todos los detalles de la garantía.

Baby Trend, Inc. 13048 Valley Blvd. Fontana CA 92335
1-800-328-7363 • (8:00am ~ 4:30pm PST)
www.babytrend.com

 **WARNING:** Failure to follow these warnings and the instructions could result in serious injury or death.

 **WARNING:** Prevent serious injury or death. **DO NOT** use in motor vehicles.

 **WARNING:** The tray is not designed to hold the child in the chair.

FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.

ALWAYS use restraints, and adjust to fit snugly.

Stay near and watch child during use.

NEVER allow child to push away from table.

STRANGULATION HAZARD: Do not place High Chair in any location in where there are cords, such as a window blind cords, drapes, phone cords etc.

 **WARNING:** The child should be secured in the High Chair at all times by the 5-point restraining system, either in the reclining, semi-reclining or upright position.

It is recommended that the product be used in the upright position only by children capable of sitting upright unassisted.

The product should be used only by children at least 6 months of age.

See page 14 for instructions on proper use of restraint system.

Other accessory items may change the balance of the High Chair and cause hazardous unstable conditions.

 
This High Chair is designed to be used by a child with a maximum weight of 45 lb (20.41 kg).

NEVER allow your High Chair to be used as a toy.


NEVER use this product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. Check before assembly and periodically during use. Contact Baby Trend Customer Service at 1-800-328-7363 for replacement parts, repair or instructions.

NEVER substitute parts.


Check that you have all the parts for this model before assembly.

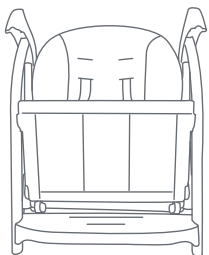

Seat and Foot Rest

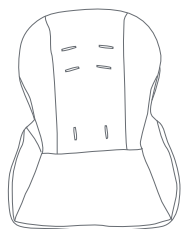 


Seat Pad

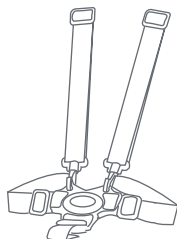 


Harness



 (2) Feet

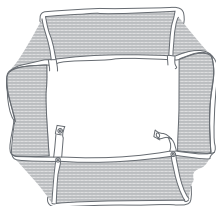


Basket

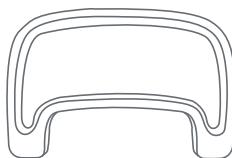 

Tray



 (2) Left Lower Legs



(2) Right Lower Legs

 
 
IMPORTANT! To ensure safe operation of your product, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **NEVER** use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.




TO UNFOLD HIGH CHAIR

- 1) • To unfold the High Chair, Hold the footrest at the front of the High Chair with one hand and the crossbar at the back with the other (Fig. 1a) and pull away until there is a click (Fig. 1b).
- If the lower legs are attached, hold the 2 lower legs on the same side of the High Chair and pull apart until there is a click (Fig. 1c).
- To fold the High Chair, follow **Step 10**.

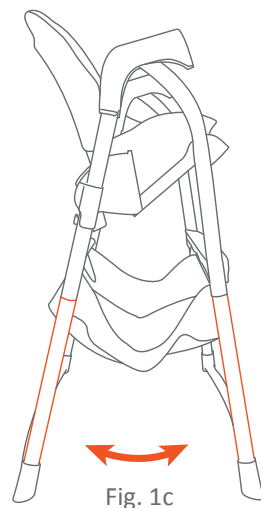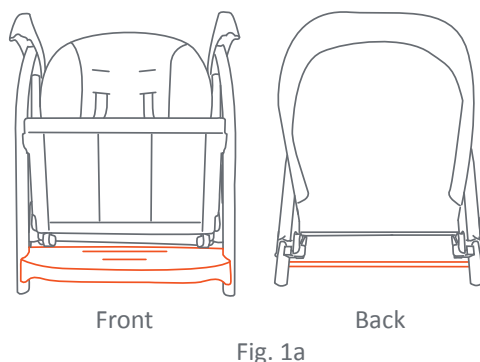

HIGH CHAIR LEGS

   - 2) • Locate the 4 High Chair legs. Identify the leg end with a slit and a pin (Fig. 2a).
- Take one leg and align the slit on the leg with the notch on one of the holes on the foot (Fig. 2b).
- Press the pin down and slide the leg in until there is a click. Ensure the leg is oriented so it curves outward. Repeat this step for all four legs. (Fig. 2c).

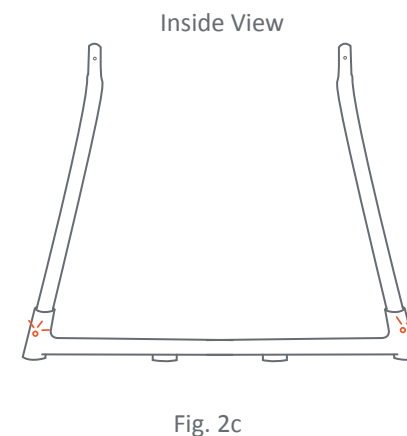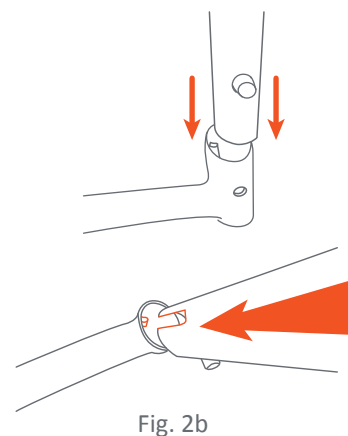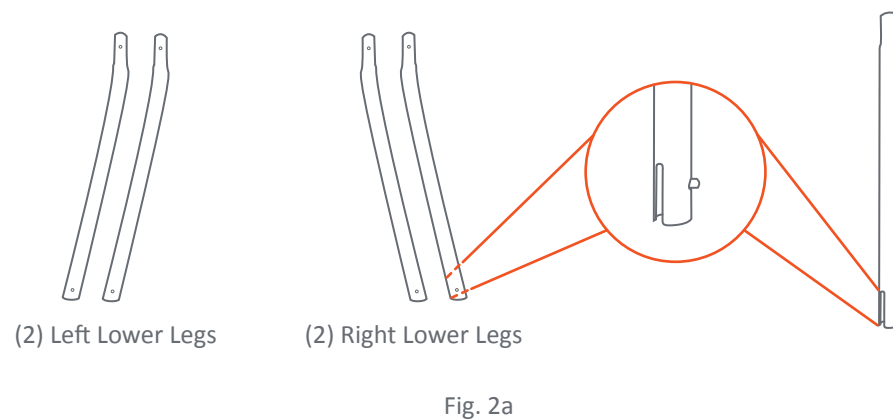

- Position the assembled legs so the pins on each leg are facing inward toward the seat. Align the top of each leg with the corresponding leg hole on the seat (Fig. 2d).
- Press the pins and slide in the legs until there is a click (Fig. 2e). Repeat this step for the remaining leg

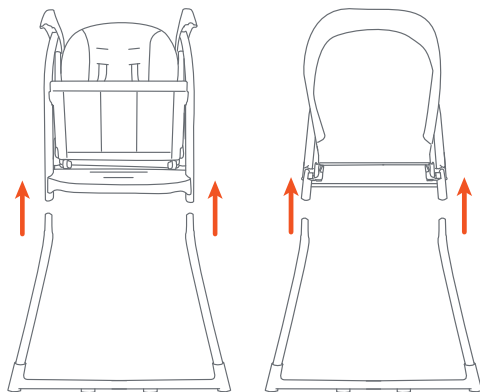 


Fig. 2d

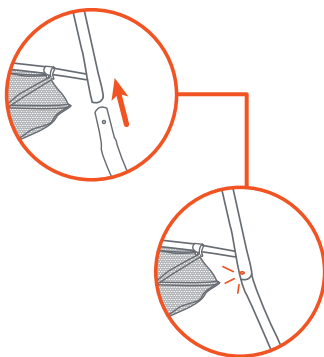 


Fig. 2e

TO ATTACH SEAT FABRIC AND 5-POINT HARNESS

- 3) **NOTE:** Follow the steps in this section in the given order. Refer to the numbered illustrations in (Fig. 3) for each corresponding step.

IMPORTANT! REFER TO **STEP 8** FOR INSTRUCTIONS ON ATTACHING AND DETACHING THE HARNESS FROM THE SEAT FABRIC.

- **Step 1:** Locate the 2 hook and loops at the bottom of the seat fabric (Fig. 3). Fasten both through the corresponding holes on the seat (Fig. 3a).
- **Step 2:** Locate the crotch webbing strap (Fig. 3). Insert the webbing strap through the slit in between the first 2 hook and loops (Fig. 3b).

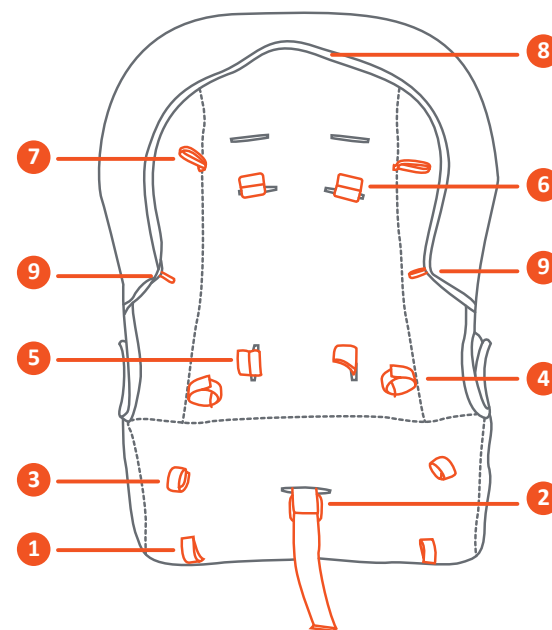 


Fig. 3

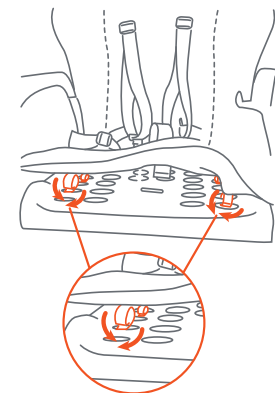 


Fig. 3a



 
 
 
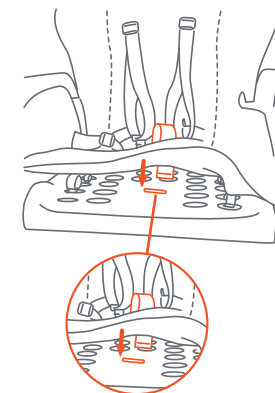 


Fig. 3b

 - **Step 3:** Locate the 2 upper hook and loops above the crotch webbing strap (Fig. 3). Fasten both through the corresponding holes on the seat. The bottom of the seat should look like (Fig. 3c).
- **Step 4:** Locate the hook and loops on the lower back of the seat fabric (Fig. 3). Fasten both through the corresponding holes on the seat (Fig. 3d).
- **Step 5:** Locate the lower back webbing straps (Fig. 3). Insert the webbing straps through the vertical slits on the lower back of the seat fabric (Fig. 3e).
- **Step 6:** Locate the upper back webbing straps (Fig. 3). Insert the webbing straps through the horizontal slits on the upper back of the seat fabric depends on the child's height (Fig. 3e).

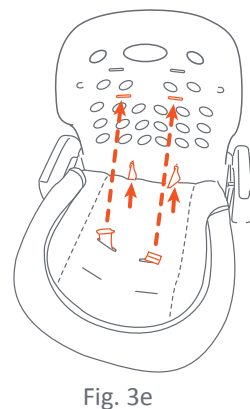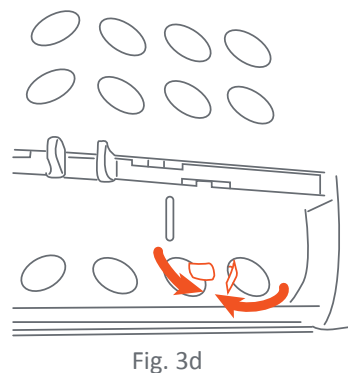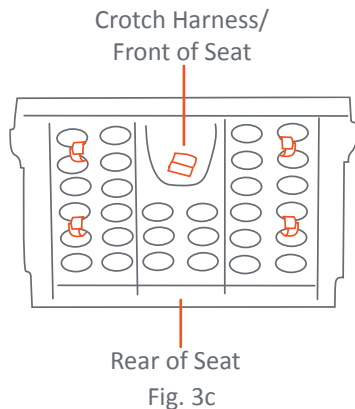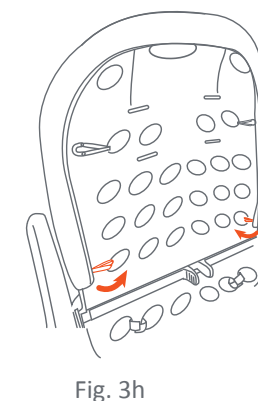

- **Step 7:** Locate the 2 elastic straps on the upper back of the seat fabric (Fig. 3). Thread the elastics through the outer most hole and hook it to the corresponding U-shape tab (Fig. 3f). Repeat for the other side.
- **Step 8:** Pull the top of the fabric over to cover the back rest (Fig. 3h).
- **Step 9:** Locate the remaining 2 elastic straps on the sides of the seat fabric. Hook the elastics to the corresponding tabs (Fig. 3i).

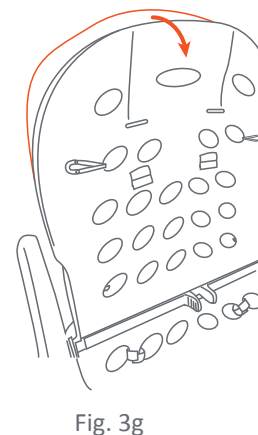 

TO ATTACH TRAY

⚠ WARNING: The Tray is not designed to hold the child in the chair. The child should be secured in the High Chair at all times by the 5-point restraining system, either in the reclining, semi-reclining or upright position. Stay near and watch child during use. **NEVER** leave child unattended.

- 4) • Locate the release handles underneath the tray on both the left and right sides.
- Squeeze the handles simultaneously (Fig. 4a) and place the Tray down onto the High Chair armrests until there is a click (Fig. 4b).
- The Tray has 2 adjustment positions. To adjust the position, squeeze the release handles simultaneously and push to position number 1, or pull to position number 2. Release the Tray's handles. Check that the Tray is securely locked in its new position with a click.

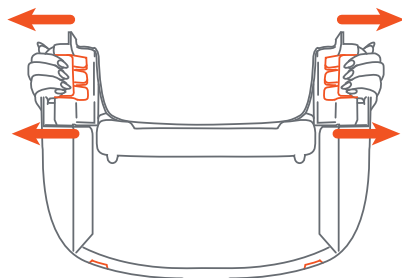 


Fig. 4a

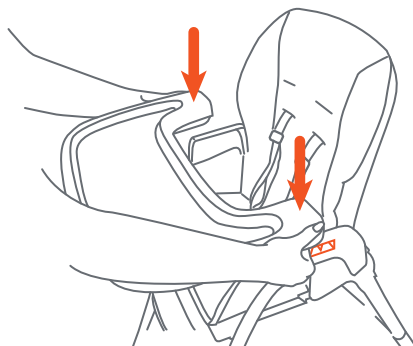 


Fig. 4b

- The Tray may be stored on the back legs of the High Chair. Align the plastic tabs (Fig. 4c) on the rounded side of the rear of the Tray with the corresponding plastic tabs (Fig. 4c) on the base of the high chair (Fig. 4d).
- Lift the tray, to remove.

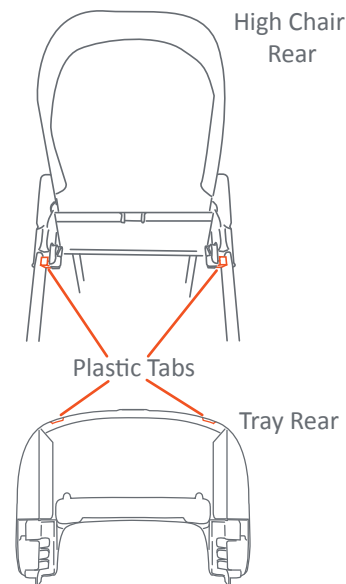 


Fig. 4c

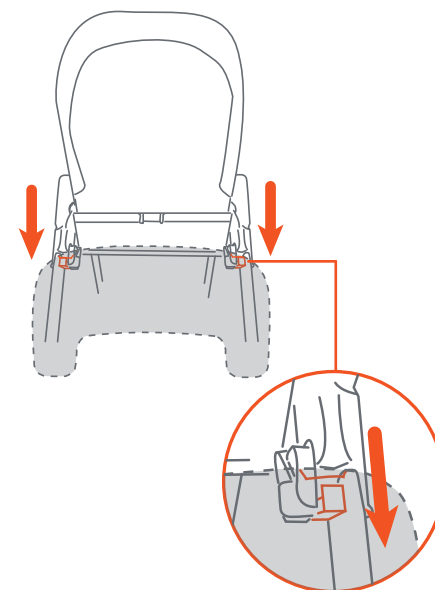 


Fig. 4d

TO ATTACH THE BASKET

- 5) • To attach the Basket to the High Chair, loop one webbing with snap button around High Chair Leg, just above the cross bar. Secure it by snapping the buttons together (Fig. 5).
- Repeat this step for the remaining webbings to attach the Basket.
- To remove the Basket, undo the snap buttons and remove the Basket from the High Chair.

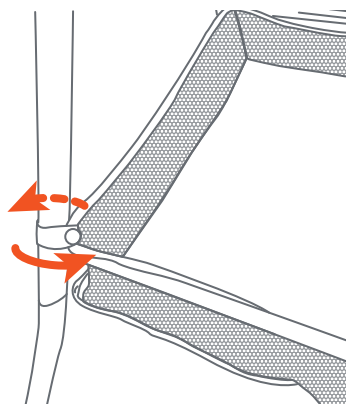 


Fig. 5

TO USE SAFETY BELT

⚠ WARNING: The High Chair should be used only by children capable of sitting upright unassisted and at least 6 months of age.

⚠ WARNING: To prevent serious injury or death from falls or sliding out, **ALWAYS** use the restraint system. The child should be secured in the High Chair at all times by the 5-point restraining system, either in the reclining, semi-reclining or upright position.

- 6) • **5-point harness:** The shoulder straps of the 5-point harness have 2 attachment positions. Select the position that places the shoulder strap level with, or below, the top of the child's shoulders (Fig. 6a).


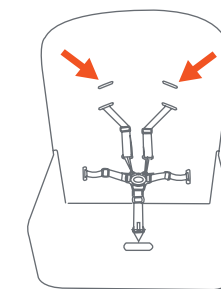 


Fig. 6a

 - Carefully place the child in the seat and position the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders (Fig. 6b).

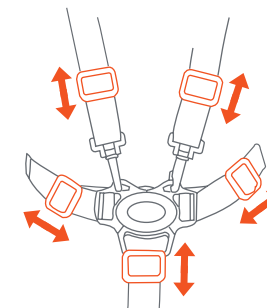

Adjust for a snug fit
Fig. 6b

TO RELEASE SAFETY BELT

- 7) • Push Button on Center Clasp, the two Harness Buckles will pop free (Fig. 7).

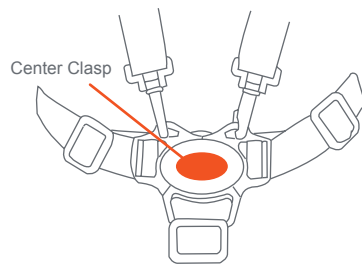 


Fig. 7

TO DETACH/RE-ATTACH 5-POINT HARNESS

- 8) • To detach 5-point harness, fold the anchor flaps and pull out each of the five straps out of their corresponding hole (Fig. 8a).
- To re-attach 5-point harness, fold the anchor flaps and insert each of the 5 anchor flaps into their corresponding holes through the seat pad and back rest (Fig. 8b).

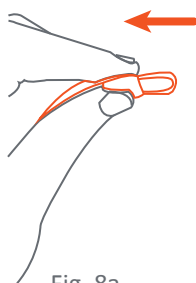 


Fig. 8a

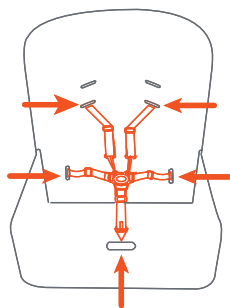 


Fig. 8b

TO RECLINE SEAT

- 9) • Hold the back rest with one hand and squeeze recline lever on back of the seat with the other hand.
- The back rest has 3 adjustment positions. Pull or push the back rest to adjust the seat to the preferred recline or upright position (Fig. 9). Be sure the back rest clicks into place before using.

NOTE: Use caution not to trap arms, hands and fingers when adjusting recline positions.

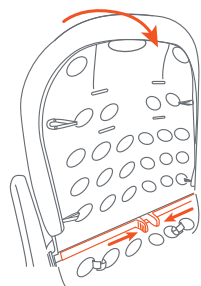 


Fig. 9

TO FOLD THE HIGH CHAIR

- 10) • The High Chair features a two-step lock mechanism.
- To fold the High Chair, press the locking tab forward using your thumbs (Fig. 10a), then simultaneously press the oval tabs inward as shown in (Fig. 10b).
- Tilt the High Chair backward. With both hands, pull the lock housing down to fold (Fig. 10c).
- Refer to **Step 1** to unfold High Chair.

Back of High Chair

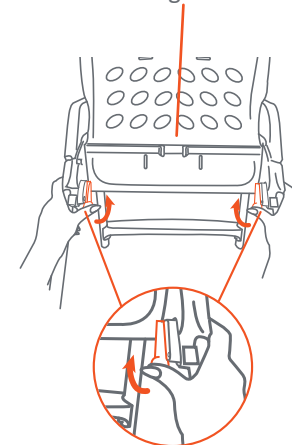 


Fig. 10a

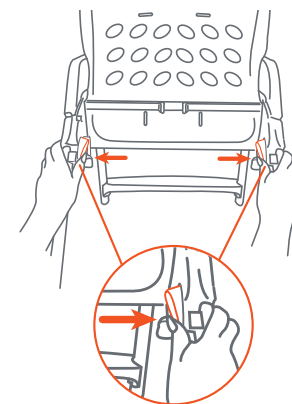 


Fig. 10b

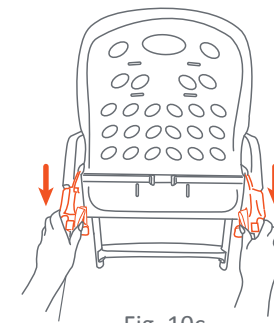 


Fig. 10c

TO REATTACH SEAT PAD AND HARNESS

- 11) • Thread non-buckle end of Harness Straps called Harness Attachment Tabs through the provided slots in the Seat Fabric and Seat Back, and Seat Base (Fig. 10).
- When Harness Attachment Tabs are through the provided slots, rotate the Harness Attachment Tabs 90 degrees. Make sure that the straps are firmly in place.
- Refer to **Step 3** to attach the Seat Pad to the Seat Base.
- To remove the Harness, reverse **Step 8**.

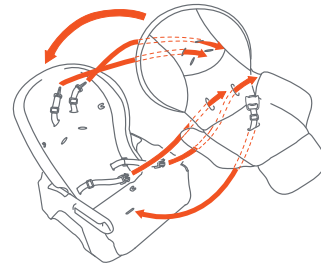 


Fig. 10

CARE AND MAINTENANCE

⚠ WARNING: Harness Straps are NOT washable.

High Chair/Tray:

Use mild soap and wash with damp cloth. Please use only a soft bristle brush, sponge or cloth to clean the surface or remove particles of food.

DO NOT submerge High Chair and Tray in water. Surface clean only.

Seat Pad:

Please refer to the care label on individual soft good pieces for cleaning instructions.

To remove the seat pad:

Remove Harness Straps by pushing Harness Attachment Tabs through the Harness slots on the Seat Back, Seat Base and Seat Pad. Remove Elastic Loops from Attachment Tabs on Seat Base and Seat Back.

To attach the seat pad:

Carefully follow the instructions outlined in **Step 8** on how to correctly re-thread the safety harness.

⚠️ ADVERTENCIA: La inobservancia de las advertencias e instrucciones podría causar lesiones graves o la muerte.

⚠️ ADVERTENCIA: Evite una lesión grave o la muerte. No utilizar en los vehículos de motor.

⚠️ ADVERTENCIA: La bandeja no fue diseñada para sostener al niño en la silla.

RIESGO DE CAÍDAS: Hay niños que han sufrido lesiones de cabeza graves, incluidas fracturas de cráneo por caer de sillitas altas. Las caídas pueden ser repentinas si el niño no está sujetado correctamente.

SIEMPRE use las sujeciones y ajústelas de manera ceñida. La bandeja no está diseñada para contener al niño en la silla. Manténgase cerca y vigile al niño durante su uso.

NUNCA permita que el niño se empuje para apartarse de la mesa.

PELIGRO DE STRANGULAMIENTO: No coloque la sillita alta en ningún lugar donde haya cordones, tales como cordones de cortinas, persianas, cables de teléfono, etc.

⚠️ ADVERTENCIA: Todo el tiempo que esté en la silla alta, el niño debe estar protegido por el sistema de sujeción de 5 puntos, en la posición reclinable, semirreclinable o erguida.

Se recomienda que el producto se utilice en posición vertical solo por niños capaces de sentarse erguidos sin ayuda.

El producto debe ser utilizado únicamente por niños de al menos 6 meses de edad.

Consulte la página 33 para obtener instrucciones sobre el uso correcto del sistema del cinturón de seguridad.

Otros elementos adicionales pueden alterar el equilibrio de la silla alta y crear una condición inestable peligrosa.

 
Esta sillita alta fue creada para ser usada por un niño con un peso máximo de 45 lb (20.41 kg).

NUNCA deje que la silla alta se utilice como un juguete.


NUNCA utilice este producto si hay sujeciones sueltas o ausentes, uniones flojas, piezas rotas o si la tela o la malla están rasgadas. Revise antes de armar y en forma periódica durante el uso. Si necesita repuestos, reparación o instrucciones, llame al servicio de atención al cliente de Baby Trend al 1-800-328-7363.

NUNCA reemplace piezas.


Compruebe que tienes todas las piezas para este modelo antes del montaje.

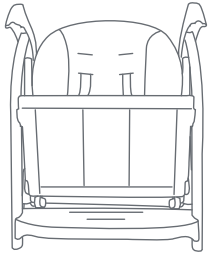


Seat and Foot Rest

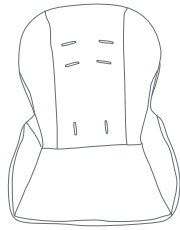 


Seat Pad

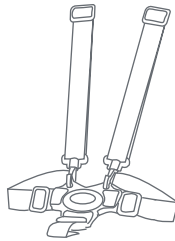 

Harness

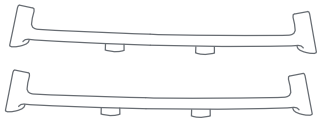 

 
(2) Feet

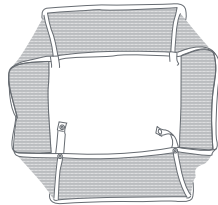

Basket



 (4) Lower Legs

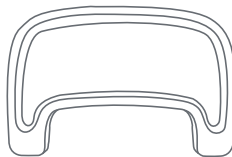

Tray

¡IMPORTANTE! Para garantizar la operación segura del producto, siga estas instrucciones cuidadosamente. Conserve estas instrucciones para consultarlas en el futuro.

 
¡IMPORTANTE! Antes del armado y de cada uso, examine el producto para detectar accesorios dañados, uniones flojas, piezas ausentes o bordes puntiagudos.

NUNCA utilice la silla con piezas ausentes o rotas.

¡IMPORTANTE! Un adulto debe armar el equipo.




TO UNFOLD HIGH CHAIR

- 1) • To unfold the High Chair, Hold the footrest at the front of the High Chair with one hand and the crossbar at the back with the other (Fig. 1a) and pull away until there is a click (Fig. 1b).
- If the lower legs are attached, hold the 2 lower legs on the same side of the High Chair and pull apart until there is a click (Fig. 1c).
- To fold the High Chair, follow **Step 10**.

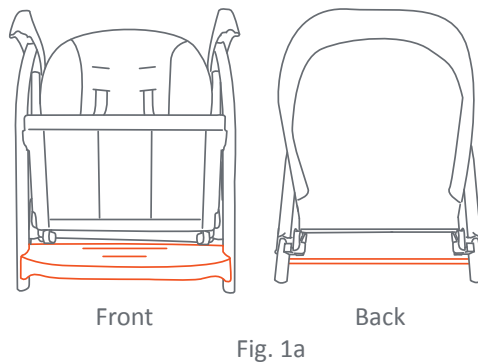

HIGH CHAIR LEGS

   - 2) • Locate the 4 High Chair legs. Identify the leg end with a slit and a pin (Fig. 2a).
- Take one leg and align the slit on the leg with the notch on one of the holes on the foot (Fig. 2b).
- Press the pin down and slide the leg in until there is a click. Ensure the leg is oriented so it curves outward. Repeat this step for all four legs. (Fig. 2c).

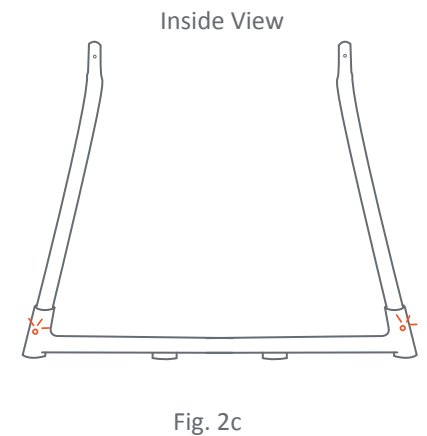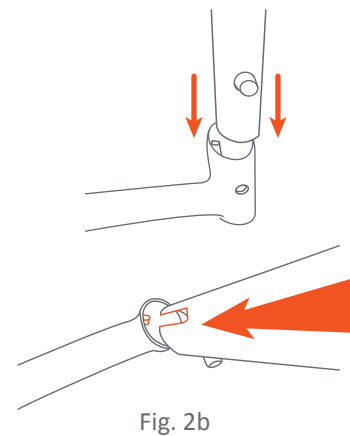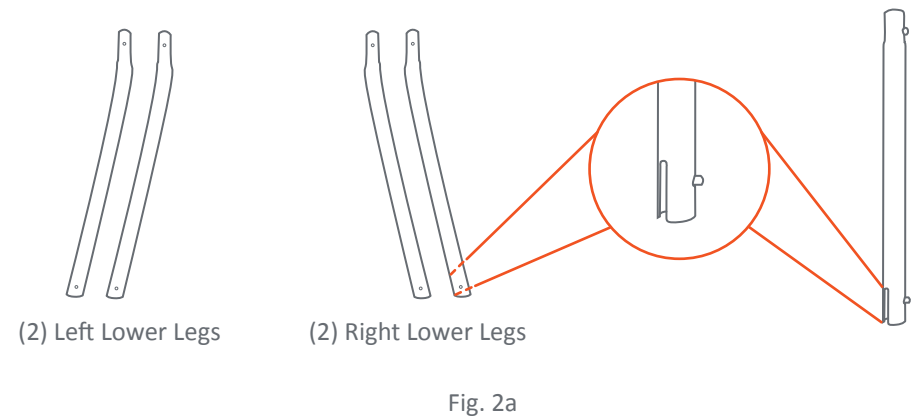

- Position the assembled legs so the pins on each leg are facing inward toward the seat. Align the top of each leg with the corresponding leg hole on the seat (Fig. 2d).
- Press the pins and slide in the legs until there is a click (Fig. 2e). Repeat this step for the remaining leg

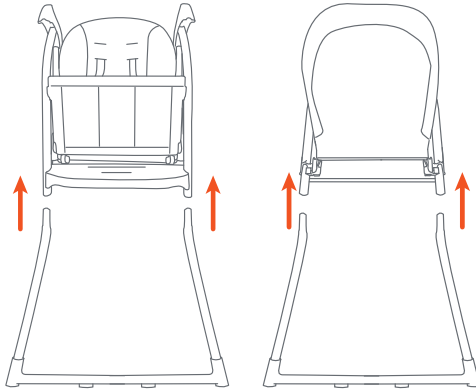 


Fig. 2d

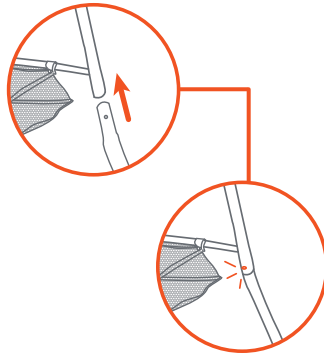 


Fig. 2e

TO ATTACH SEAT FABRIC AND 5-POINT HARNESS

- 3) **NOTE:** Follow the steps in this section in the given order. Refer to the numbered illustrations in (Fig. 3) for each corresponding step.

IMPORTANT! REFER TO **STEP 8** FOR INSTRUCTIONS ON ATTACHING AND DETACHING THE HARNESS FROM THE SEAT FABRIC.

- **Step 1:** Locate the 2 hook and loops at the bottom of the seat fabric (Fig. 3). Fasten both through the corresponding holes on the seat (Fig. 3a).
- **Step 2:** Locate the crotch webbing strap (Fig. 3). Insert the webbing strap through the slit in between the first 2 hook and loops (Fig. 3b).

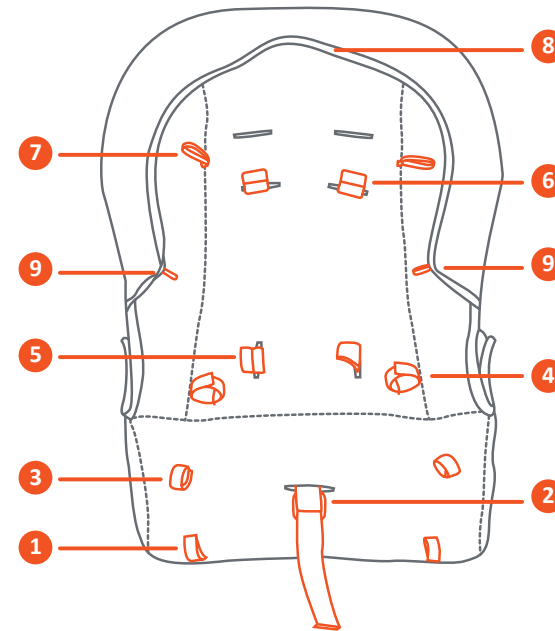 


Fig. 3

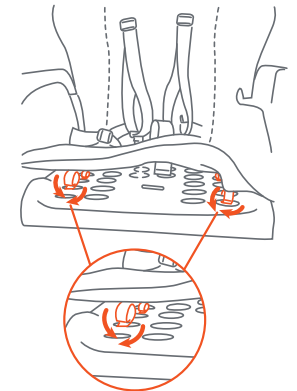 


Fig. 3a



 
 
 
 
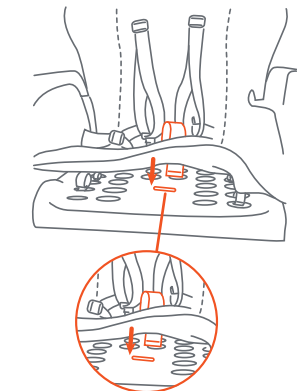 


Fig. 3b

 - **Step 3:** Locate the 2 upper hook and loops above the crotch webbing strap (Fig. 3). Fasten both through the corresponding holes on the seat. The bottom of the seat should look like (Fig. 3c).
- **Step 4:** Locate the hook and loops on the lower back of the seat fabric (Fig. 3). Fasten both through the corresponding holes on the seat (Fig. 3d).
- **Step 5:** Locate the lower back webbing straps (Fig. 3). Insert the webbing straps through the vertical slits on the lower back of the seat fabric (Fig. 3e).
- **Step 6:** Locate the upper back webbing straps (Fig. 3). Insert the webbing straps through the horizontal slits on the upper back of the seat fabric depends on the child's height (Fig. 3e).

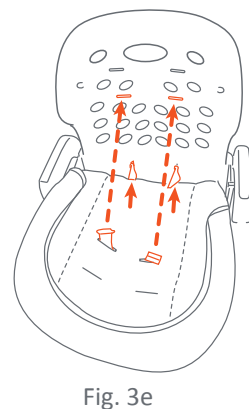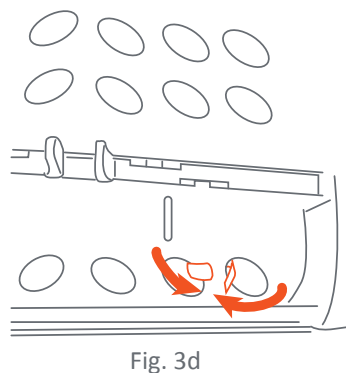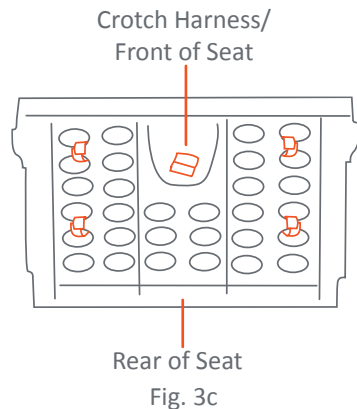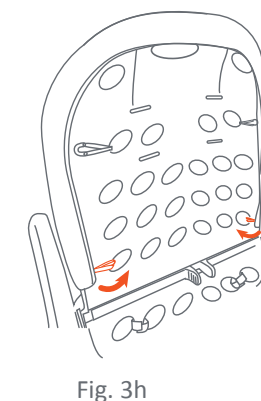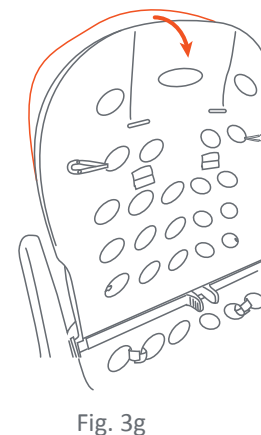

- **Step 7:** Locate the 2 elastic straps on the upper back of the seat fabric (Fig. 3). Thread the elastics through the outer most hole and hook it to the corresponding U-shape tab (Fig. 3f). Repeat for the other side.
- **Step 8:** Pull the top of the fabric over to cover the back rest (Fig. 3h).
- **Step 9:** Locate the remaining 2 elastic straps on the sides of the seat fabric. Hook the elastics to the corresponding tabs (Fig. 3i).

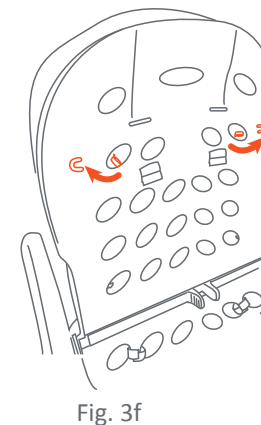 

TO ATTACH TRAY

⚠ WARNING: The Tray is not designed to hold the child in the chair. The child should be secured in the High Chair at all times by the 5-point restraining system, either in the reclining, semi-reclining or upright position. Stay near and watch child during use. **NEVER** leave child unattended.

- 4) • Locate the release handles underneath the tray on both the left and right sides.
- Squeeze the handles simultaneously (Fig. 4a) and place the Tray down onto the High Chair armrests until there is a click (Fig. 4b).
- The Tray has 2 adjustment positions. To adjust the position, squeeze the release handles simultaneously and push to position number 1, or pull to position number 2. Release the Tray's handles. Check that the Tray is securely locked in its new position with a click.

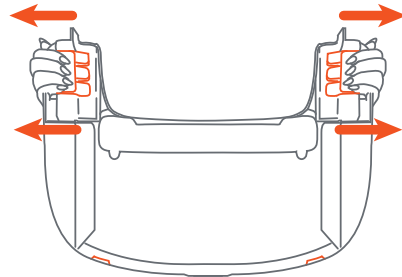 


Fig. 4a

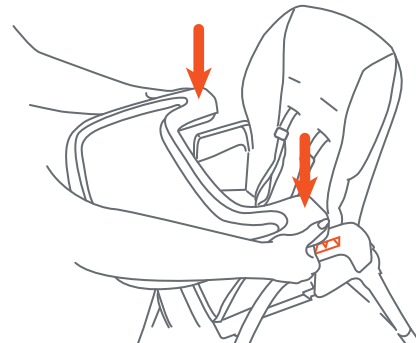 


Fig. 4b

- The Tray may be stored on the back legs of the High Chair. Align the plastic tabs (Fig. 4c) on the rounded side of the rear of the Tray with the corresponding plastic tabs (Fig. 4c) on the base of the high chair (Fig. 4d).
- Lift the tray to remove.

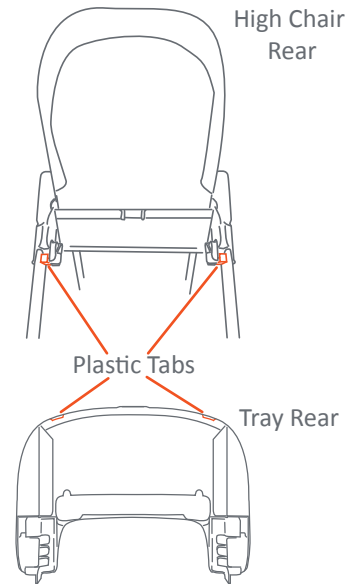 


Fig. 4c

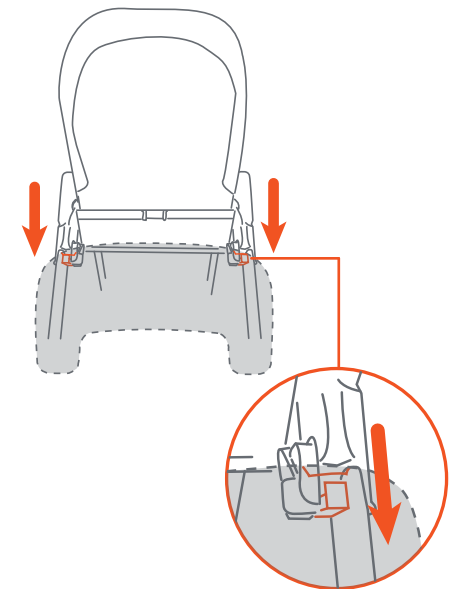 


Fig. 4d

TO ATTACH THE BASKET

- 5) • To attach the Basket to the High Chair, loop one webbing with snap button around High Chair Leg, just above the cross bar. Secure it by snapping the buttons together (Fig. 5).
- Repeat this step for the remaining webbings to attach the Basket.
- To remove the Basket, undo the snap buttons and remove the Basket from the High Chair.

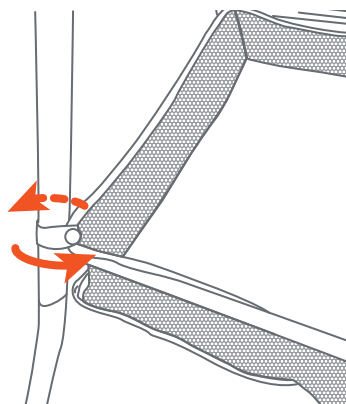 


Fig. 5

TO USE SAFETY BELT

- ⚠ WARNING:** The High Chair should be used only by children capable of sitting upright unassisted and at least 6 months of age.
- ⚠ WARNING:** To prevent serious injury or death from falls or sliding out, **ALWAYS** use the restraint system. The child should be secured in the High Chair at all times by the 5-point restraining system, either in the reclining, semi-reclining or upright position.

- 6) • **5-point harness:** The shoulder straps of the 5-point harness have 2 attachment positions. Select the position that places the shoulder strap level with, or below, the top of the child's shoulders (Fig. 6a).
- Carefully place the child in the seat and position the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders (Fig. 6b).

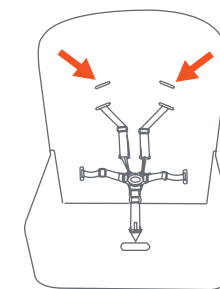 
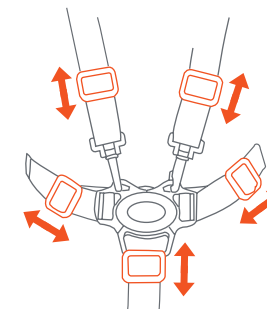 


Fig. 6a

Adjust for a snug fit
Fig. 6b

TO RELEASE SAFETY BELT

- 7) • Push Button on Center Clasp, the two Harness Buckles will pop free (Fig. 7).

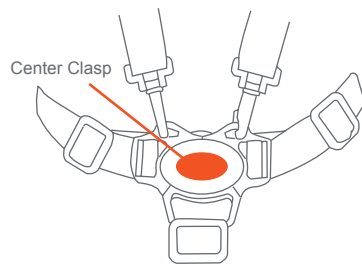 


Fig. 7

TO DETACH/RE-ATTACH 5-POINT HARNESS

- 8) • To detach 5-point harness, fold the anchor flaps and pull out each of the five straps out of their corresponding hole (Fig. 8a).
- To re-attach 5-point harness, fold the anchor flaps and insert each of the 5 anchor flaps into their corresponding holes through the seat pad and back rest (Fig. 8b).

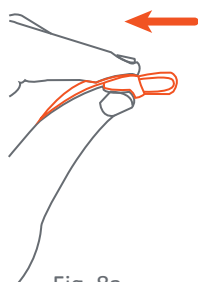 


Fig. 8a

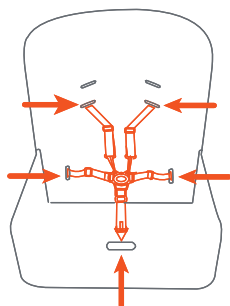 


Fig. 8b

TO RECLINE SEAT

- 9) • Hold the back rest with one hand and squeeze recline lever on back of the seat with the other hand.
- The back rest has 3 adjustment positions. Pull or push the back rest to adjust the seat to the preferred recline or upright position (Fig. 9). Be sure the back rest clicks into place before using.

NOTE: Use caution not to trap arms, hands and fingers when adjusting recline positions.

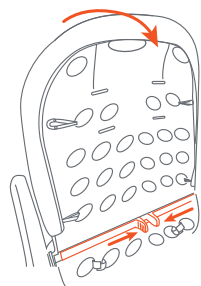 


Fig. 9

TO FOLD THE HIGH CHAIR

- 10) • The High Chair features a two-step lock mechanism.
- To fold the High Chair, press the locking tab forward using your thumbs (Fig. 10a), then simultaneously press the oval tabs inward as shown in (Fig. 10b).
- Tilt the High Chair backward. With both hands, pull the lock housing down to fold (Fig. 10c).
- Refer to **Step 1** to unfold High Chair.

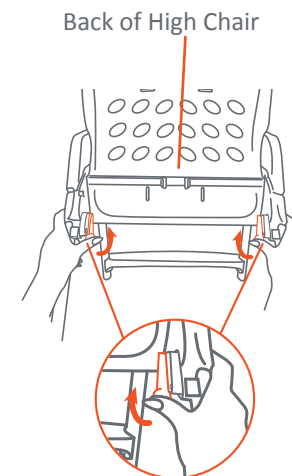 


Fig. 10a

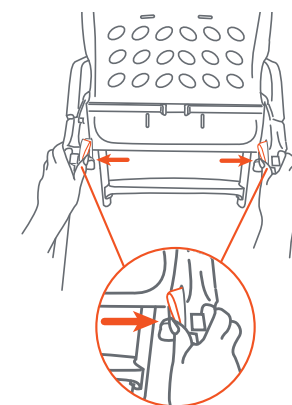 


Fig. 10b

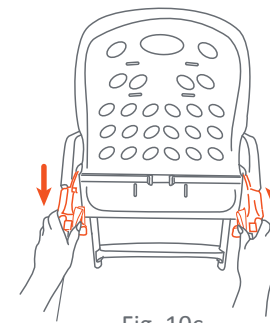 


Fig. 10c

TO REATTACH SEAT PAD AND HARNESS

- 11) • Thread non-buckle end of Harness Straps called Harness Attachment Tabs through the provided slots in the Seat Fabric and Seat Back, and Seat Base (Fig. 10).
- When Harness Attachment Tabs are through the provided slots, rotate the Harness Attachment Tabs 90 degrees. Make sure that the straps are firmly in place.
- Refer to **Step 3** to attach the Seat Pad to the Seat Base.
- To remove the Harness, reverse **Step 8**.

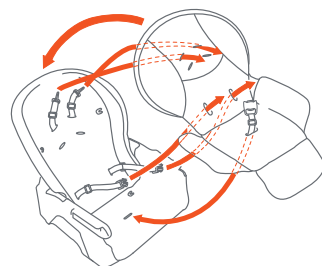 


Fig. 11

CUIDADO Y MANTENIMIENTO

⚠️ ADVERTENCIA: Las Correas del Arnés NO Son Lavables.

Silla Alta/Bandeja:

Utilice jabón suave y lave con un paño húmedo. Utilice únicamente un cepillo de cerdas suaves, una esponja o un paño para limpiar la superficie o eliminar partículas de comida.

NO sumerja el Taburete Alto ni la Bandeja en agua. Limpieza superficial únicamente.

Almohadilla de Asiento:

Consulte la etiqueta de cuidado de las piezas suaves individuales para obtener instrucciones de limpieza.

Para quitar la almohadilla del asiento:

Retire las correas del arnés empujando las Lengüetas de Fijación del Arnés a través de las ranuras del arnés en el respaldo, la base y la almohadilla del asiento. Retire los Bucles Elásticos de las Lengüetas de Fijación en la base y el respaldo del asiento.

Para colocar la almohadilla del asiento:

Siga cuidadosamente las instrucciones descritas en el Paso 8 sobre cómo volver a enhebrar correctamente el arnés de seguridad.



BABY TREND® CUSTOMER SERVICE

The Customer Service Department can be contacted at 1 (800) 328-7363 Monday through Friday between 8:00 a.m. and 4:30 p.m. (PST). Return Authorizations are required prior to returning product(s) to Baby Trend®.

BABY TREND® SERVICIO AL CLIENTE

El Departamento de Servicio al Cliente puede ser contactado a 1 (800) 328-7363 Lunes a viernes entre 8:00 a.m. y 4:30 p.m. (PST). Un numero de autorizacion es requerido antes de la devolución de los producto(s) a Baby Trend®.