## **SHRP-TWS07 - Wing Tone Earbuds**

# User Manual - Black and White Printing

5 in 5 in

Please disconnect the charger and turn your product off before cleaning. Warranty will be voided if you attempt to disassemble the product yourself. Placing the product in direct sunlight can cause premature aging. Avoid operating in dusty places or dirty environments. Avoid extreme heat or cold when using product (-10°C to 40°C). Avoid spilling liquid or inserting foreign objects into the device. The product must not be dropped or subjected to intentional impact. Disassembly, impact, sun exposure, fire, and compression can cause battery failure. If the battery is compromised please do not continue to use.

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service: info@primebrandsgroup.com.

The Bluetooth\* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. This product is compatible with all wireless audio devices, Bluetooth\* and non-Blue-

Changes or modifications not expressly approved by the party responsible for compli-

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



©2025 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufactures listed. Made in

## SHARPER IMAGE®

# **WING TONE**



Thank you for choosing the Wing Tone Earbuds by Sharper Image. Designed for comfort and everyday use, these open-ear, wraparound earbuds deliver clear sound while keeping you connected to your surroundings. With voice assistant support, multifunction touch controls, and a sleek LED display charging case, Wing Tone is built for all-day wear and effortless control.


### Includes: Wing Tone Wireless Earbuds, Digital Display Charging Case, USB-C Charging Cable, & User Manual



- 1. Wraparound Silicone Ear hooks
- 2. Earbud Charging Connectors
- 3. Open-Air Speaker 4. Earbud LED Indicator Light
- 5. Multi-Function Button 6. Digital Display Charging Case
- 7. Case Charging Connectors
- 8. LED Power Display 9. USB-C Power Input (Back)

WING TONE: SHRP-TWS07-BLK

Play Time: 6H, total 24H \*at 50% Volume Charge Time: 1 H Working range: up to 30ft (10m) Battery: 30 mAh, 200mAh Charging Port : USB-C

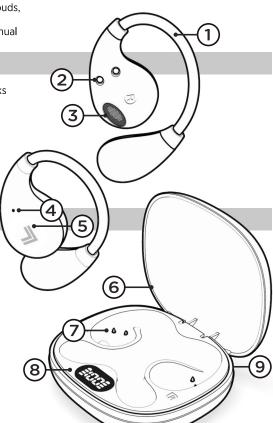

## **Audio Controls**

Play / Pause Music: Touch the left or right earbud Multi-Function Button (5) once Next Track: Touch the left earbud Multi-Function Button (5) three times Previous Track: Touch the right earbud Multi-Function Button (5) three times Increase Volume: Touch the left earbud Multi-Function Button (5) twice Decrease Volume: Touch the right earbud Multi-Function Button (5) twice

## **Call Controls**

Answer a Call: Touch the left or right earbud Multi-Function Button (5) once Hang Up: Touch the left or right earbud Multi-Function Button (5) once Reject a Call: Touch and hold the left or right earbud Multi-Function Button (5) for 2 seconds

## Voice Assistant

istant: Touch and hold either earbud Multi-Function Button (5) for 2 seconds

The earbuds will automatically turn on when removed from the charging case. The earbuds will automatically turn off when placed back into the charging case.

Turn on Bluetooth® on your device. Open the charging case and remove the earbuds. They will automatically turn on and begin searching for a Bluetooth\* connection. In your device's Bluetooth\* settings, select "SHRP-TWS07". When paired successfully, you will hear a voice prompt confirming the connection. Note: Keep the earbuds and device within 30 feet for successful pairing. Once paired, the earbuds will automatically reconnect to your device when powered on.

## **Charging the Earbud Case**

Connect the charging case to a wall adapter using the included USB-C cable. The LED display will show the battery status of the case, from 0% to 100%.

Place the earbuds in the charging case. They will begin charging automatically. The red LED indicator will light up while charging and turn off once fully charged. When the earbud battery is running low, you will hear a warning sound. If not recharged, the earbuds will power

**Troubleshooting Tip:** If charging does not begin, check that the earbuds are seated properly in the case and that the charging contacts are clean.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.