

BaByliss[®] _{LO}men



SUPERCLIPPER XTP

Model 7475RU

BaByliss for ***men***®

SuperClipper XTP

The BaByliss for Men Super Clipper XTP is a professional grade hair clipper with Japanese hardened steel blades for an effortless and precise cut. XTP technology produces an extra powerful lithium-ion charging system and extra long power performance for reliable cordless use and exceptional results.

FEATURES

- Mains or Cordless operational clipper - use corded for continuous power whilst plugged into the mains or use cordless for total flexibility and control.
- Lithium-ion technology with lightweight DC motor for powerful cutting action and sustained power performance.
- Precision engineered high grade hardened steel blades with unique super sharp cutting angle for smooth, effortless cutting.
- Lightweight for easy handling during use.
- Fine cut adjustment taper control for a high quality even finish.
- An extra powerful lithium-ion charging system for a 2 hour charge and an 85 minute run time.
- 30 Minutes quick charge for approximately 30 minutes of use.
- Grades zero to 8 for a variety of different lengths and styles.
- Left and right ear taper comb guides.
- Cleaning brush.
- Lubricating oil.
- Hard storage case.
- 5 year guarantee.

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction book. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

IMPORTANT SAFETY

- Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to

understand the safe use and hazards involved and are adequately supervised.

- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

INSTRUCTIONS FOR USE

Charging the Appliance

IMPORTANT! Only use the adaptor supplied with this appliance. This clipper is so easy to use, but before you do anything you must take your time to charge the unit for 2 hours before its first use. Even if you want to use it plugged in straight from the mains, this initial supercharge ensures optimum power performance to give smooth fast cutting every time. Maximum battery capacity will only be reached after 3 charging/discharging cycles. A 2 hour charge will provide approximately 85 minutes use. A 30 minute quick charge will provide approximately 30 minutes use.

When charging the appliance the blue LED charging light will flash slowly and continuously until the battery has fully charged, then the blue LED charging light will stop flashing but remain on.

NOTE: Do not charge the appliance for longer than the recommended time

Warning: If the charging light suddenly starts to flash rapidly then the appliance is faulty. If this happens then please stop charging and remove the adaptor from the mains and contact our Customer Care Centre for further advise (see the 'After Sales Service' section of the information booklet).

Mains Operation

- Ensure the appliance is switched off.
- Connect the adaptor to the base of the appliance and plug the adaptor into a suitable mains socket.
- The blue LED charging light will flash when the adaptor is correctly inserted into the appliance and connected to the mains.
- The appliance is now ready for use.
- **NOTE:** The appliance should not be used for longer than 20 minutes when operated from the mains.

Cordless Operation

- Insert the adaptor into the base of the appliance, plug into a suitable mains socket and switch on. The blue LED charging light will flash when the adaptor is correctly inserted into the appliance and connected to the mains.
- Once the appliance is fully charged the blue LED charging light will stop flashing but remain on, unplug the adaptor from the mains.

 
Oiling Instructions

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance.


For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

To oil these
2 positions

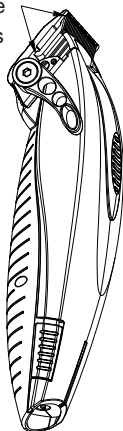

To oil these
2 positions

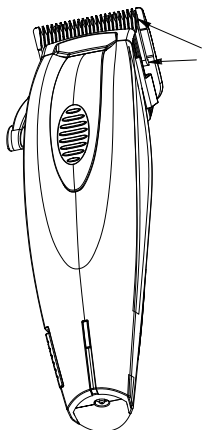 

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged every 6 months approximately. Then recharge the appliance to full capacity, again for 2 hours.

Comb Guides

This appliance is supplied with 8 comb guides and a left and right ear taper guide:

Cutting Length	Grade
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4
16mm	#5
19mm	#6
22mm	#7
25mm	#8

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position (see Fig.1).
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off (see Fig.2).

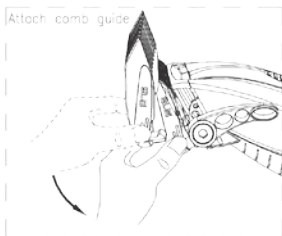 


Fig.1

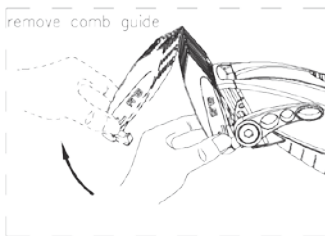 


Fig.2

The appliance is also supplied with 2 taper guides

The taper guides can be used above the ear to get a clean line.

- Attach either the left or right guide depending on which ear you are cutting above.
- Angle the clipper and gently stroke around the ear towards the back of the neck.

Taper Control

The taper control lever enables fine cut adjustment for precision clipping.

- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

Preparation for Use

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into the mains.
NOTE: The appliance should not be used for longer than 20 minutes when operated from the mains.

Clipping

For an all over even cut:

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the

sides of your head to the back.

- You should achieve an even length cut all over your head.

For a shorter back and sides, with length on the top:

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

Outlining:

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

Cleaning & Maintenance

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide - the comb guides can be rinsed under running water. Please make sure they are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades.
- Do not disassemble the blades.



SAFE DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

UK GUARANTEE

This BaByliss For Men appliance is guaranteed for consumer use for 5 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault

Updated 150506