

INSIGNIA™

fire tv

QUICK SETUP GUIDE

50" / 55" / 70"

UHD TV


NS-50F501NA26 / NS-55F501NA26 /
NS-55F501CA26 / NS-70F501NA26

INCLUDED ACCESSORIES


Voice Remote with Alexa
and two AAA batteries



TV stands

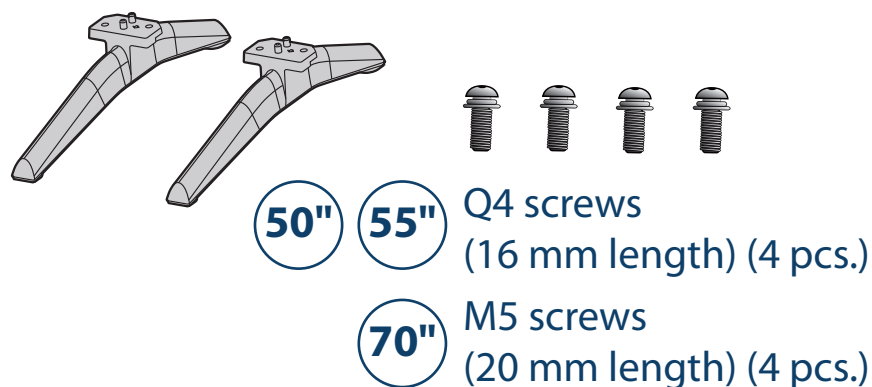

Power cord

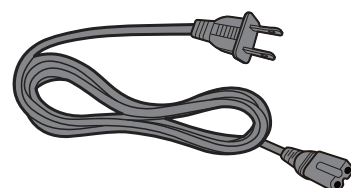



Before using your new TV, read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

1 INSTALLING THE STANDS OR A WALL MOUNT


Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on the bottom of your TV.
- 2 Use a Phillips screwdriver and the four screws for your TV size (included) to secure the stands to your TV.

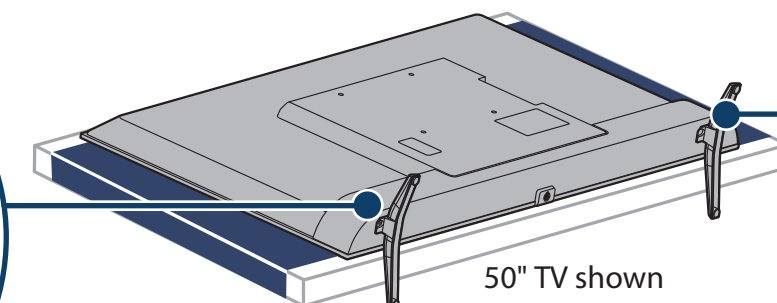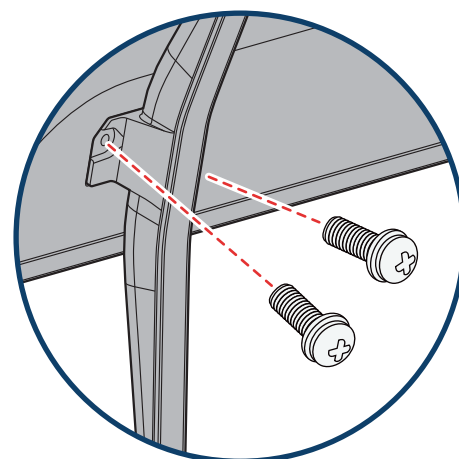

50" TV shown

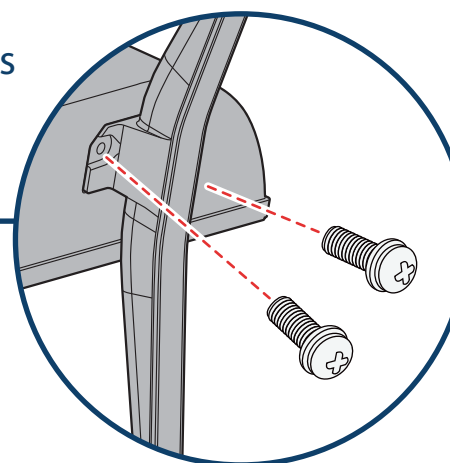

*The base can be shared by the left and right end-side.

50" 55" Q4 × 16 mm screws


70" M5 × 20 mm screws

WALL MOUNT

Before you mount your TV, make sure that:

- Stands are not attached to the TV.
 - The wall-mount bracket supports the weight of your TV.
- See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.
Note: Wall-mount screws are not included.

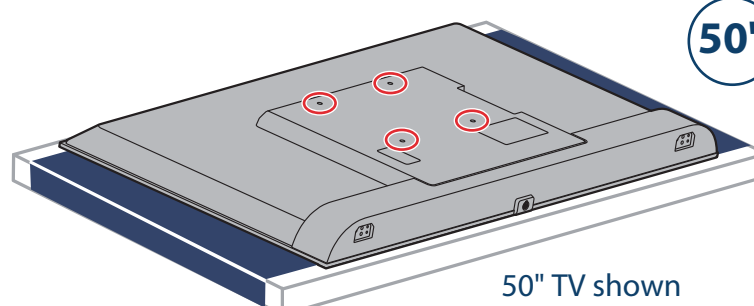

50" TV shown

50" **VESA Mounting Pattern**
200 × 200 mm
Screws: Type M6,
10 mm to 12 mm length
depending on the wall mount


55" **VESA Mounting Pattern**
200 × 200 mm
Screws: Type M6,
10 mm to 12 mm length
depending on the wall mount

70" **VESA Mounting Pattern**
300 × 300 mm
Screws: Type M8,
14 mm to 16 mm length
depending on the wall mount

FEATURES

Power/Input button
Press to turn your TV on or off manually. When your TV is on, a short press brings up the Power Menu and a long press puts your TV into standby mode.


Power indicator
Remote control sensor

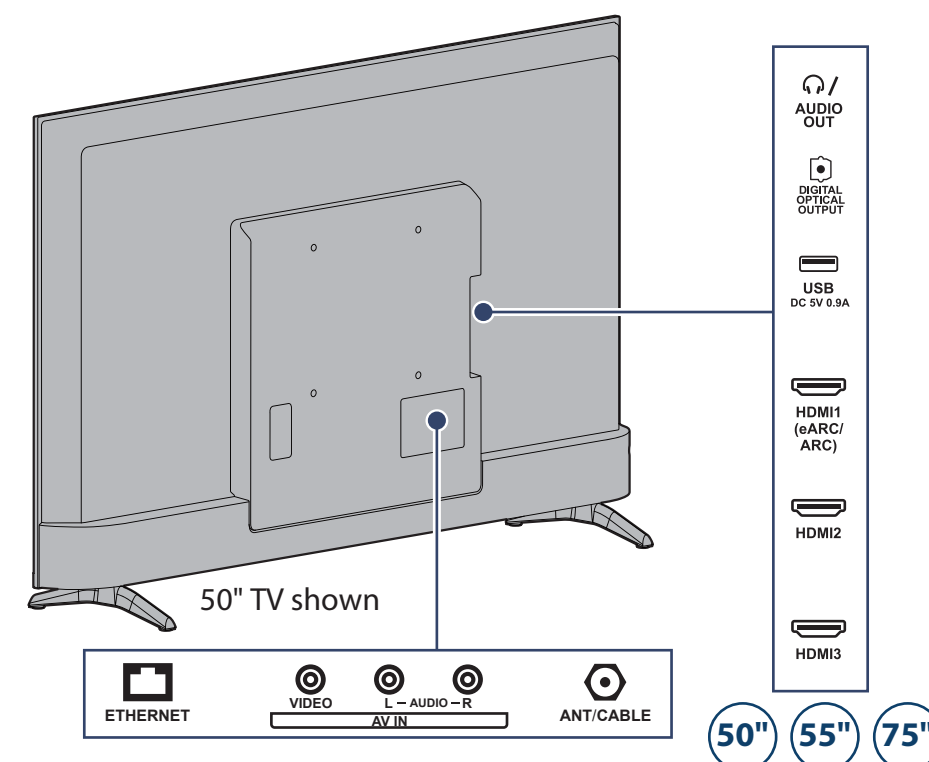

Note: Images do not necessarily represent the exact design of your television.


2 MAKING CONNECTIONS

 HDMI (best video quality)




Note: You can use HDMI to connect to other HDMI devices. To use eARC/ARC functionality the connected device must also have HDMI eARC/ARC.

AV (good video quality)

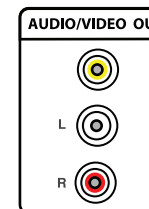

Coaxial (good video quality)

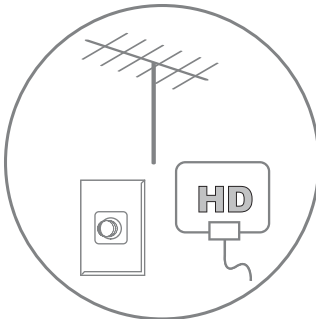

Connect an antenna to access live over-the-air TV.

AUDIO OUT


DIGITAL OPTICAL OUTPUT

HDMI1 (eARC/ARC)

HDMI2

HDMI3

HDMI OPTIONS

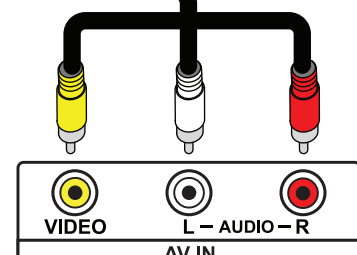


ANT/CABLE

ETHERNET



ANALOG



DIGITAL

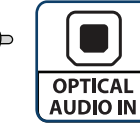

AUDIO OPTIONS

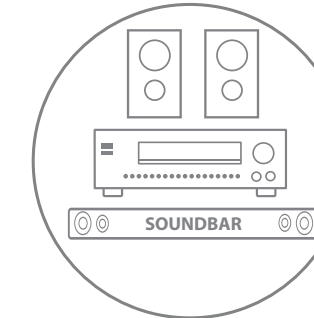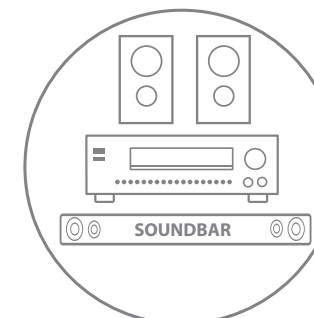

You can use the **DIGITAL OPTICAL OUTPUT** jack or the **HDMI1 (eARC/ARC)** jack. **Note:** If you need to change the digital audio format, go to the **Home** menu, select **Settings**, then select **Display & Sounds**. Select **Audio Output**, then select **Digital Audio Format** and change the setting to **PCM / Dolby Audio / Passthrough / Auto**.


ETHERNET (optional)

ETHERNET


Note: You can use a wired Ethernet connection to access the internet instead of a Wi-Fi connection. Plug an Ethernet cable into the **ETHERNET** jack on your TV and your Ethernet connection.

3 TURNING ON YOUR TV

1 Plug the power cord into the back of your TV and a power outlet.

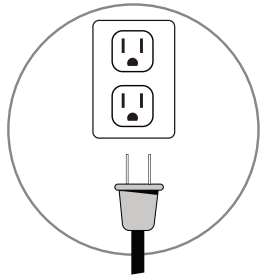

2 Remove the remote control cover and install the batteries.

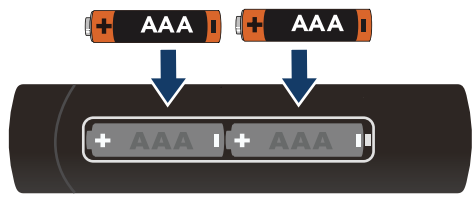

3 Press  on your Voice Remote with Alexa.

4 Follow the on-screen instructions.

4 COMPLETE THE ON-SCREEN SETUP

Your TV should automatically pair to your new Voice Remote with Alexa.

1 If your remote is not paired, long press  for 5 seconds or until paired. If you continue to have issues, re-insert or replace the batteries and try again.

2 Select your Wi-Fi network from the displayed network list.
Note: If your Wi-Fi network is password protected, enter your network password using the on-screen keyboard. If your network is hidden, select the **Join Other Network** tile.

3 Select your experience: **Full** (recommended) or **Basic**.
• Select **Full** to access live TV, over tens of thousands of streaming movies and TV episodes, thousands of apps, and Alexa skills. To get started, sign into or sign up for a free Amazon account.
• Select **Basic** to access live TV and the five preset streaming apps. Alexa and the full Appstore are not included.

4 If you connected your TV to an antenna or cable wall jack:
A Go to **Settings > Live TV > Channel Scan**.
B Follow the on-screen instructions to scan for channels.
Note: To browse and watch live TV, use the **On Now** row or press  on your remote.

USING YOUR VOICE REMOTE WITH ALEXA



FIND YOUR *USER GUIDE* ONLINE

- Go to www.insigniaproducts.com.
- Use the search bar to find **NS-50F501NA26 / NS-55F501NA26 / NS-55F501CA26 / NS-70F501NA26**.
- Select **Support & Downloads**.
- Next to *User Guide*, select the language you want.

INSIGNIA™



A Smarter TV Is Here
4K Picture Quality, Fire TV Experience Built-in,
Voice Remote with Alexa



Access Your Favorite Content – All Through One Home Screen

Fire TV seamlessly integrates live over-the-air TV and streaming channels on a unified home screen.



Endless Entertainment – Netflix, Prime Video, YouTube, Hulu, HBO Max, and more

Watch over 1,000,000 movies and TV episodes with access to thousands of channels, apps, and Alexa skills.



Voice Remote with Alexa

Just press and ask to easily find, launch, and control movies and TV shows.

Full Experience required to access all features described.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://www.insigniaproducts.com> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com
For customer service, call: **1-877-467-4289** (U.S./Canada)

CONTACT AMAZON FIRE TV CUSTOMER SERVICE

www.amazon.com/deviceservices/support



FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://XPERI.COM/DTS-PATENTS/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS:X, THE DTS:X LOGO, VIRTUAL:X, AND THE DTS VIRTUAL:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.

AMAZON TERMS & POLICIES

Before using Fire TV Edition, please read the terms located at www.amazon.com/deviceservices/support. Please also read all terms and policies for services related to Fire TV Edition, including but not limited to Amazon's Privacy Notice located at www.amazon.com/privacy, Amazon's Conditions of Use located at www.amazon.com/conditionsofuse, and any other terms or usage provisions available at www.amazon.com/deviceservices/support. All terms, rules, notices, policies, and provisions are, collectively, the "Agreements." By using Fire TV Edition, you agree to be bound by the terms of the Agreements.

Amazon, Fire, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Certain services are subject to change at any time, may not be available in all areas and languages, or in 4K UHD, and may require separate subscriptions or withdrawal.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2019 Dolby Laboratories. All rights reserved.

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2025 Best Buy. All rights reserved.