



877-405-2397 | www.armorallelectronics.com

 
 
 


PREMIUM

1080P DUAL DASH CAMERA

MANUAL (ENGLISH)

Armor All 1080P Dual Dash Camera Overview

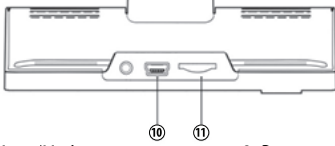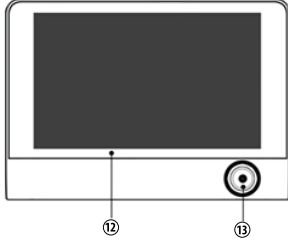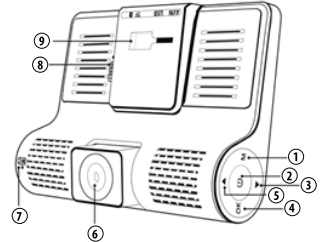

1. Menu/Mode

2. Power Button

3. Back

4. OK

5. Forward

6. Forward Facing Lens

7. Microphone

8. Reset

9. Mount Receptacle

10. Mini USB Slot

11. Memory Card Slot

12. LCD Screen

13. Rear Facing Lens

2

Operating Instructions:

1. Power Device

This device requires a constant power source. To connect the dash cam, use the included mini usb cable, plugging the mini port into the dash cam and the USB-A port into a car charger (not included).

2. Accessing the Menu

To access the menu/settings of this device, long press menu button on the recording screen while the device is NOT recording. Use the Forward (5) and Back (3) buttons to scroll through the options.

3. Turn on/off dash cam

Once the dash cam is connected to the car charger, it will automatically turn on with the car. If the dash cam is not connected to the car charger, please do as follows:
Hold the Power button, dash cam will turn on.
Hold the Power button again, dash cam will turn off.

4. Mode Selection

With the camera on, press the Menu/Mode button to cycle through each mode; Video, Photo, Playback.
* This function is not available while recording

5. Video Recording

When the dash cam is connected to the car charger it will start video recording (with memory card inserted) automatically when the car is started and stop recording once the ignition is turned off. **If the dash cam is not connected to a car charger, turn on the dash cam and press the OK button to start video recording. Then press OK or Power button again to stop video recording. Press the forward button (5) to cycle through front and rear lens display settings. Press the back button (3) to cycle to toggle the microphone on and off.

6. Photos

Hold the Menu/Mode button and switch to photo mode. Then press the OK button to take a photo, and save it to the memory card. Press the forward button (5) to select front or rear lens.

3

7. Changing Camera Front to Rear

Press the forward button (5) to cycle through front and rear lens display settings.

8. Video/Photo Settings

In video mode hold the Menu/Mode button to open video settings, then press the forward and back buttons to cycle through settings. Press the ok button to select. To exit video settings press the Menu/Mode button again.

9. Playback

Press the Menu/Mode button and switch to playback mode, press the forward or back button to cycle through pictures and or videos. Press OK button to playback selected videos. Hold the Menu/Mode button while in playback mode for playback settings such as delete and or lock photos and videos.

*This device is not to be used as a security monitoring device.

**Please note this device will hold a brief charge and a constant power source is recommended while in use. While not connected to a power source some functions are limited.

Specifications:

Video Resolution	Front lens: 1920*1080P;1280*720P; Rear Lens: 640*480P
Photo Size	12M
Format	AVI,JPG
Visual Angle	Front: 140°, Back: 120°
Storage	Memory card up to 32GB
G-Sensor	Support
Parking mode	Support
Motion Detection	Support
Loop Recording	Support
Power	12V Car charger

4

ONE YEAR WARRANTY

Armor All warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

Armor All's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at info@armorallelectronics.com

5