


ZENMUSE L1

User Manual v1.0

2021.05

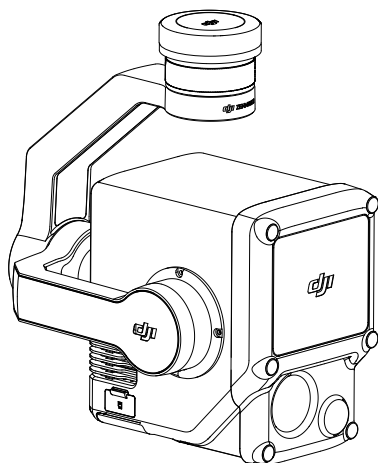

Searching for Keywords

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

Printing this Document

This document supports high resolution printing.

Using This Manual

Legends

 Important

 Hints and Tips

 Reference

Caution

1. The L1 is a precision instrument. DO NOT drop the L1 and handle with care.
2. If highly accurate point cloud data is required, it is not recommended to use the L1 in low visibility conditions such as foggy or rainy weather. Otherwise, the detection range may be reduced resulting in point cloud noise being produced.
3. DO NOT touch the optical window of the L1. Dust and stains on the optical window can negatively affect the performance. Use compressed air or a wet lens cloth to clean the optical window correctly. Refer to the [Storage, Transportation, and Maintenance](#) section for more information on how to clean optical windows.
4. DO NOT touch the surface of the lens with your hand. Be careful to avoid scratching the surface of the lens with sharp objects. Otherwise, the quality of images may be affected. Clean the surface of the camera lens with a soft, dry, clean cloth. DO NOT use substances containing alcohol, benzene, thinners, other flammable substances, or alkaline detergents to clean or maintain the RGB Mapping Camera or Auxiliary Positioning Vision Sensor.
5. When not in use, store the L1 in the storage case and replace the desiccant packet as necessary to prevent fogging the lenses due to excessive ambient humidity. If the lenses fog up, the water vapor will usually dissipate after powering on the device for a while. It is recommended to store the L1 in an environment with a relative humidity of less than 40% and temperature of $20\pm5^{\circ}\text{C}$.
6. DO NOT place the product under direct sunlight, in areas with poor ventilation, or near a heat source such as a heater.
7. DO NOT repeatedly power the product on or off. After powering off, wait at least 30 seconds before powering back on. Otherwise, the product life will be affected.
8. Under stable laboratory conditions, the L1 achieves an IP54 protection rating by IEC 60529 standards. The protection rating is not permanent, however, and may reduce over an extended period.
9. Make sure there is no liquid on the surface or in the port of the gimbal.
10. Make sure the gimbal is securely installed on the aircraft and the microSD card slot cover is closed properly.
11. Make sure the surface of the gimbal is dry before opening the microSD card slot cover.
12. DO NOT remove or insert the microSD card when taking a photo or recording a video.

Contents

Using This Manual	3
Legends	3
Caution	3
Product Profile	5
Introduction	5
Overview	5
Installation	5
Supported Aircraft	5
Installing on Aircraft	5
Remote Controller Controls	7
DJI Pilot App Controls	8
Basic Features	8
Point Cloud Recording View	9
Point Cloud Model Preview	10
Field Data Collection	11
Preparation	11
Setting Camera Parameters	11
Mapping Mission	11
Linear Flight Mission	12
Manual Flight	13
Point Cloud Data File Description	14
Base Station Satellite Data Acquisition	14
Office Data Processing	15
Downloading DJI Terra	15
Reconstruction Procedures	15
LiDAR Point Cloud Description	16
Non-Repetitive Scanning Method	16
Repetitive Scanning Patterns	17
Maintenance	18
Exporting Log	18
Firmware Update	18
Storage, Transportation, and Maintenance	19
Specifications	20


Product Profile

Introduction

The ZENMUSE™ L1 integrates a LIVOX™ LiDAR module, a high-accuracy IMU, and an RGB mapping camera on a 3-axis stabilized gimbal. When used with compatible DJI aircraft and DJI TERRA™, the L1 offers a complete solution that gives real-time 3D data throughout the day, which effectively captures the details of complex structures and delivers highly accurate reconstructed models.

Overview

- 1. Gimbal Connector
- 2. Pan Motor
- 3. LiDAR Sensor
- 4. RGB Mapping Camera
- 5. Auxiliary Positioning Vision Sensor
- 6. microSD Card Slot
- 7. Tilt Motor
- 8. Roll Motor

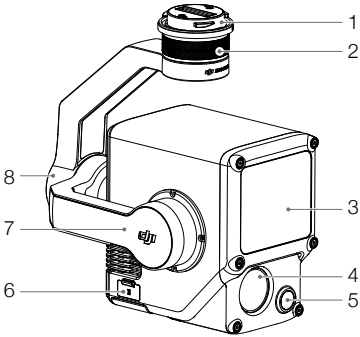


Installation

Supported Aircraft


MATRICE™ 300 RTK

Installing on Aircraft

- 1. Remove the gimbal cap and lens protector.

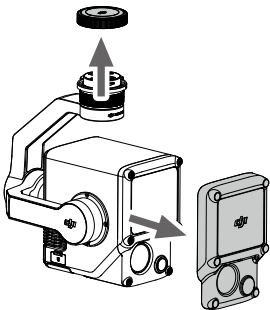

2. Press the button on the aircraft used for detaching the gimbal and camera. Rotate the gimbal cap on the aircraft to remove.
3. Align the white dot on the gimbal with the red dot on the aircraft and insert the gimbal.
4. Rotate the gimbal lock to the locked position by aligning the red dots.

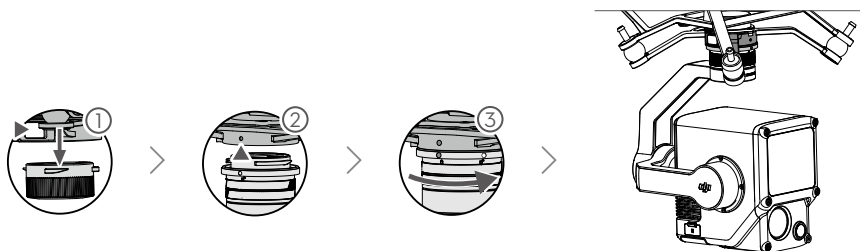

- Make sure the gimbal connector on the aircraft is positioned correctly when mounting. Otherwise, the L1 cannot be mounted.
- Only remove the L1 after powering off the aircraft.
- Remove the L1 by pressing the button on the aircraft to detach the gimbal and camera.
- Make sure the microSD card slot cover is firmly in place to prevent dust or moisture entering while using or during transportation. Failure to close the microSD card slot cover may cause the gimbal motor to overload during usage.
- To avoid burns, DO NOT directly touch the camera case when powering on.
- Detach the gimbal from the aircraft during transportation or storage. Otherwise, the service life of the gimbal dampers may be shortened or they may even be damaged.

Remote Controller Controls

The Matrice 300 RTK remote controller is used as an example below. Adjust the tilt of the gimbal using the left dial and adjust the pan using the right dial. Press the shutter button or record button to take photos or record video. Toggle the 5D button to adjust the EV value. The customizable C1 button can be used to recenter the gimbal and the customizable C2 button can be used to switch between the main and auxiliary screen.

1. Left Dial

Turn to adjust the tilt of the gimbal.

2. Record Button

Press to start or stop recording video.

3. Shutter Button

Press to take a photo. The photo mode can be set to single or interval in DJI Pilot. Single photos can also be taken during video recording.

4. Right Dial

Turn to adjust the pan of the gimbal.

5. 5D Button

The default configuration is listed below. The configuration can be adjusted in DJI Pilot.

Left: Decrease EV value




Right: Increase EV value

6. Customizable C2 Button

The default function is to switch between the main and auxiliary screen. The function for this button can be customized in DJI Pilot.

7. Customizable C1 Button

The default function is to recenter the gimbal. The function for this button can be customized in DJI Pilot.

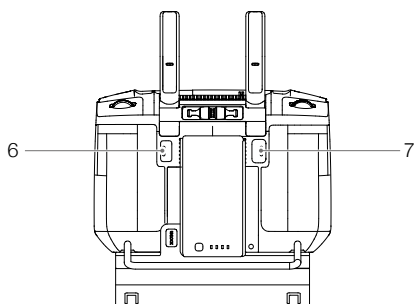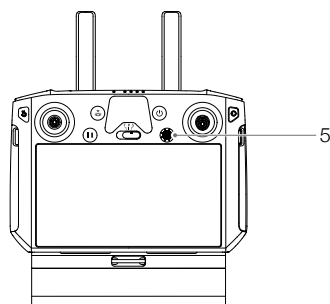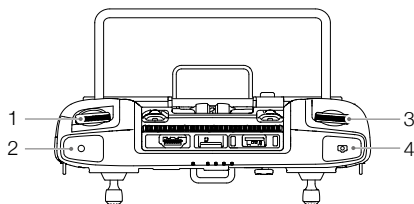


DJI Pilot App Controls

The touch interface can be used for capturing photos, recording videos, and viewing playback. Users can create a flight mission to record point cloud data in DJI Pilot.

Basic Features

The touch interface can display a HD live view and offers professional photography configurations.

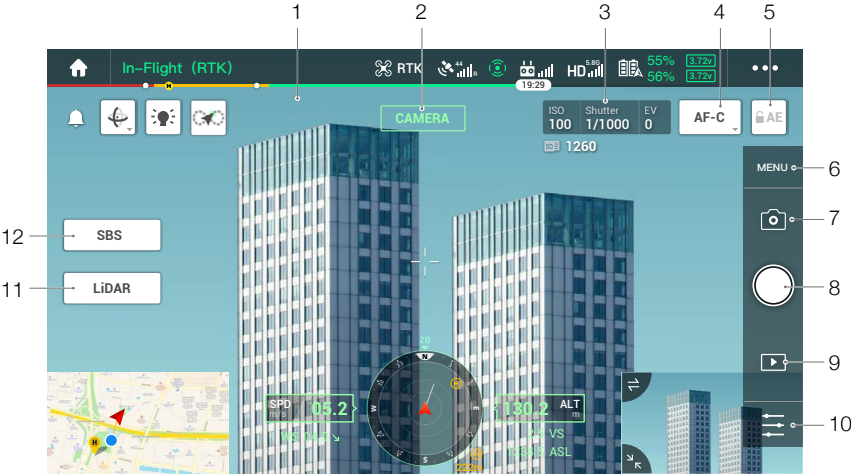


The interface may need to be updated. Make sure to update to the latest firmware.

- 1. Live HD Video**
Displays the current camera view.
- 2. Camera Type**
Displays the current camera type including camera view, point cloud view, and side-by-side view.
- 3. Camera Parameters**
Displays the current camera parameters.
- 4. Focus Mode**
Tap to switch between MF, AF-C, and AF-S focus mode.
- 5. Auto Exposure Lock**
Tap to lock the exposure value.
- 6. Camera Settings**
Tap to enter the photo and video settings. Tap to configure photo settings such as photo mode and image format. Tap to configure video settings such as video size and format. Tap to configure point cloud settings. Tap to configure video subtitles, grid, and smart LED settings. The settings may vary according to different camera models.

7. **Recording Mode (Shutter/Video Record/Point Cloud Record)**
Tap to switch between photo, video, and point cloud recording modes.
8. **Shooting Button (Shutter/Video Record/Point Cloud Record)**
Tap to take photos or start or stop recording video or point cloud data. The shutter and record buttons can also be used to take a photo and record video.
9. **Playback**
Tap to enter and preview photos and videos as soon as they are captured.
10. **Parameter Settings**
Tap to set ISO, shutter, exposure values, and other parameters.
11. **Camera/Point Cloud Toggle**
Tap to switch the main screen to the camera view or point cloud view.
12. **Single/Dual View Toggle**
Tap to switch the main screen to single or dual view.

Point Cloud Recording View

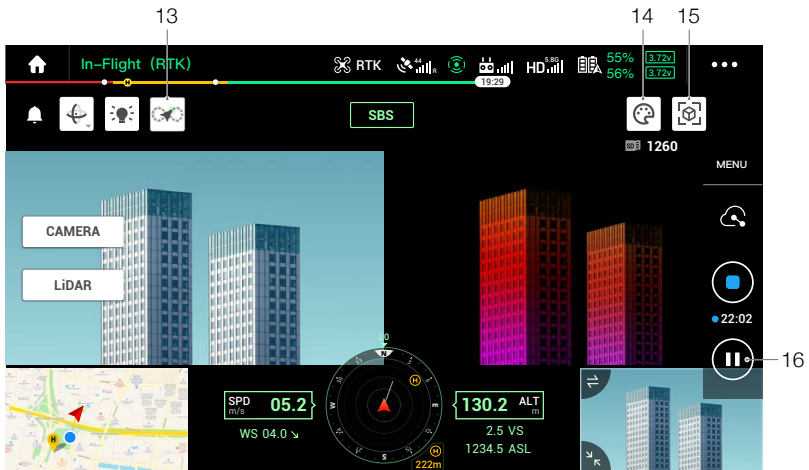

13. Calibration Flight Button

Tap to perform a calibration flight to calibrate the LiDAR's inertial navigation system and increase accuracy of reconstruction. Tap STOP to stop a calibration flight. Calibration flight should be performed at both the start and end of a flight. Make sure there are no obstacles within a 30m radius of the start and end points.

14. Color Palette

Tap to select a rendering mode including reflectivity, height, distance, and RGB.

15. Model Preview Button


Refer to the [Point Cloud Model Preview](#) section for more information.

16. Pause Button

Tap to pause point cloud recording and tap again to resume.

Point Cloud Model Preview

Tap to view the current point cloud model from different perspectives.

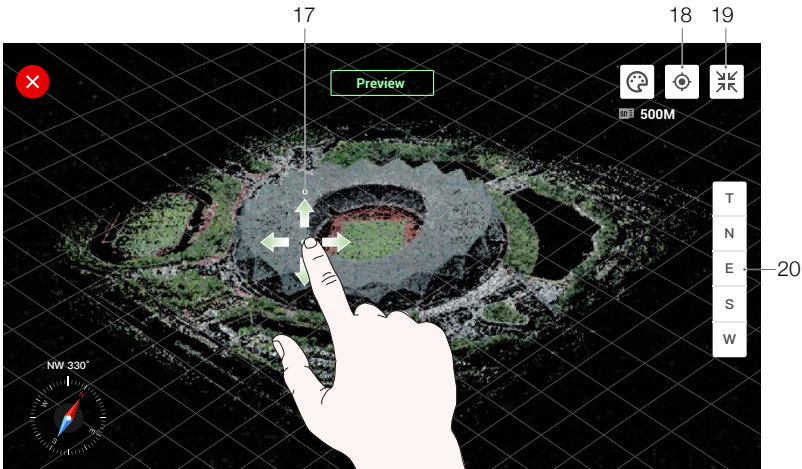

- 17. Use one finger to drag the point cloud model and use two fingers to rotate or zoom in or out on the point cloud model.
- 18. Tap to view the point cloud model beneath the aircraft.
- 19. Tap and the point cloud model will recenter and zoom in or out to display the whole model.
- 20. Tap to view the point cloud model from the top, north, east, south, or west.

Field Data Collection

Users can create a flight mission to record point cloud data in DJI Pilot and import the recorded data into DJI Terra for high-precision model reconstruction.

Preparation

- 1. Make sure the L1 is installed correctly on the aircraft and that the aircraft and remote controller are linked after powering on.
- 2. Go to camera view in DJI Pilot, select ●●●, then RTK, choose the RTK service type, and make sure that the status of RTK positioning and heading both display FIX. Refer to the [Base Station Satellite Data Acquisition](#) section for more information on data processing if the network or remote controller video transmission signal is poor.
- 3. Before recording data, it is recommended to warm up the L1 for 3 to 5 minutes after powering on. Wait until a prompt appears in the app stating that the payload INS IMU is warmed up.


Setting Camera Parameters

- 1. Go to the camera view in DJI Pilot and select CAMERA.
- 2. Select ⚙ to adjust the camera parameters according to the surroundings. Make sure the photo will be well exposed.

Mapping Mission

Enter the mission flight screen in DJI Pilot, select Create a Route, and then ➡ to choose a Mapping mission.

- 1. Tap and drag on the map to adjust the area that will be scanned.

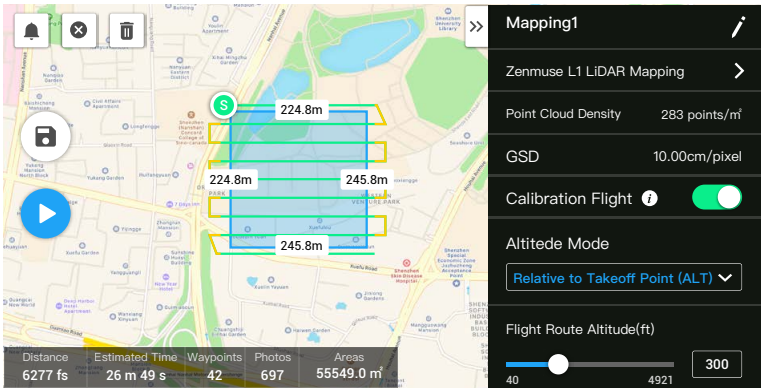

- 2. Edit the parameters for a LiDAR Mapping mission or Photogrammetry mission.
 - A. LiDAR Mapping mission:
 - a. Select Zenmuse L1 and then LiDAR Mapping.
 - b. Set the advanced settings, payload settings, and other parameters. It is recommended to


set the Side Overlap (LiDAR) to 50% or above, the Scanning Mode to Repetitive, the altitude to 50-100 m, the flight speed to 5-10 m/s, and enable Calibration Flight.

B. Photogrammetry mission:

- a. Select Zenmuse L1 and then Photogrammetry.
 - b. Set the advanced settings, payload settings, and other parameters. It is recommended to disable Dewarping and set Forward Overlap (Visible) and Side Overlap (Visible) to default parameters.
3. Select  to save the flight mission and select  to upload and execute the flight mission.
 4. Power off the aircraft after the mission is completed and remove the microSD card from the L1. Connect it to a computer and check the point cloud data, photos, and other files in the DCIM folder.

Linear Flight Mission

1. Enter the mission flight screen in DJI Pilot, select Create a Route, and then  to choose a Linear Flight mission.
2. Tap and drag on the map to adjust the area that will be scanned.


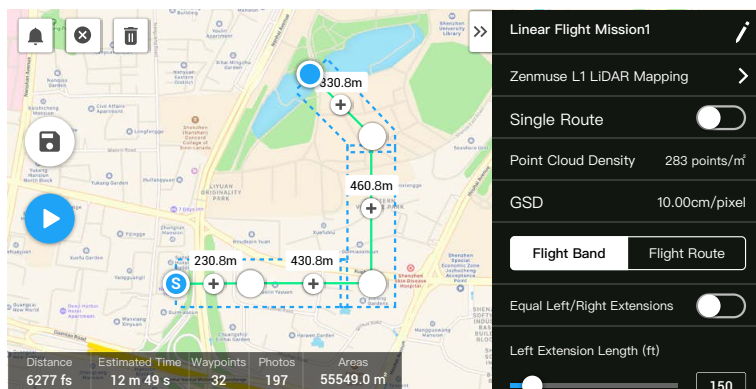


3. Edit the parameters for a LiDAR Mapping mission or Photogrammetry mission.
 - A. LiDAR Mapping mission:
 - a. Select Zenmuse L1 and then LiDAR Mapping.
 - b. Set the advanced settings, payload, flight band, flight route, and other parameters. It is recommended to enable Single Route. Set the altitude to 50-100 m, the flight speed to 5-10 m/s, and adjust the extension length to cover the area to be scanned.
 - B. Photogrammetry mission:
 - a. Select Zenmuse L1 and then Photogrammetry.
 - b. Set the advanced settings, payload settings, and other parameters. It is recommended to disable Dewarping and set Forward Overlap (Visible) and Side Overlap (Visible) to default parameters.
4. Select  to save the flight mission and select  to upload and execute the flight mission.

- Power off the aircraft after the mission is completed and remove the microSD card from the L1. Connect it to a computer and check the point cloud data, photos, and other files in the DCIM folder.

Manual Flight

- Fly the aircraft to an appropriate height. It is recommended that the target be 5 to 100 meters away from the L1 and to perform a calibration flight. Tap **CAMERA**, and , and follow the prompts to finish the calibration. Make sure there are no obstacles within a 30m radius during calibration flight.
- Fly the aircraft to the target you wish to record and use the camera view to adjust the gimbal to a suitable angle for recording point cloud data. Tap **LIDAR** to enter point cloud view. Tap  to start point cloud recording.

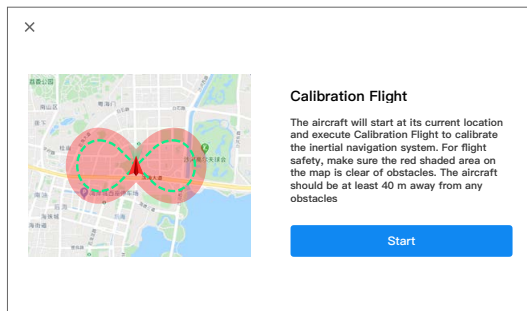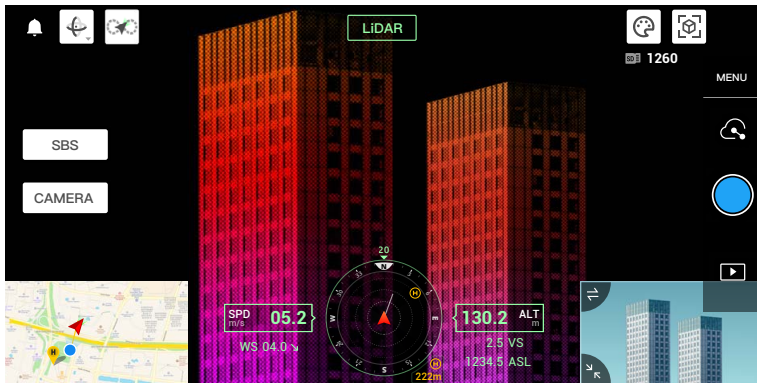

- Perform the flight mission to record point cloud data. Tap  to view the point cloud model recorded in real time during flight.
- Return to the point cloud view and tap  to finish recording.
- It is recommended to perform another calibration flight after recording the point cloud data.
- Power off the aircraft after the mission is completed and remove the microSD card from the L1. Connect it to a computer and check the point cloud data, photos, and other files in the DCIM folder.

Point Cloud Data File Description

SDXC (F:) > DCIM >

名称	修改日期	大小	类型
DJI_202103301053_006	2021/3/30 10:53	1.0 MB	照片
DJI_202103301105_007	2021/3/30 11:06	1.0 MB	照片
DJI_202103301501_008	2021/3/30 15:01	1.0 MB	照片
DJI_202103301501_009	2021/3/30 15:01	1.0 MB	照片
DJI_202103301501_010	2021/3/30 15:01	1.0 MB	照片
DJI_202103301501_011	2021/3/30 15:01	1.0 MB	照片
DJI_202103301502_012	2021/3/30 15:02	1.0 MB	照片
DJI_202103301502_013	2021/3/30 15:02	1.0 MB	照片
DJI_202103301511_014	2021/3/30 15:11	1.0 MB	照片
DJI_202103301512_015	2021/3/30 15:12	1.0 MB	照片
DJI_202103301523_016	2021/3/30 15:23	1.0 MB	照片
DJI_202103301523_017	2021/3/30 15:23	1.0 MB	照片
DJI_202103301523_018	2021/3/30 15:23	1.0 MB	照片
DJI_202103301535_019	2021/3/30 15:35	1.0 MB	照片
DJI_202103301535_020	2021/3/30 15:35	1.0 MB	照片

SDXC (F:) > DCIM > DJI_202103301523_018

名称	修改日期	大小	类型
DJI_20210330152356_0001.CLC	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152356_0001.CLI	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152356_0001.CMI	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152356_0001.IMU	2021/3/30 15:25	1.0 MB	照片
DJI_20210330152356_0001.LDR	2021/3/30 15:26	1.0 MB	照片
DJI_20210330152356_0001.RTB	2021/3/30 18:11	1.0 MB	照片
DJI_20210330152356_0001.RTK	2021/3/30 15:35	1.0 MB	照片
DJI_20210330152356_0001.RTL	2021/3/30 15:35	1.0 MB	照片
DJI_20210330152356_0001.RTS	2021/3/30 15:35	1.0 MB	照片
DJI_20210330152400_0002.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152401_0003.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152406_0004.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152409_0005.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152412_0006.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152415_0007.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152418_0008.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152421_0009.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152424_0010.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152427_0011.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152430_0012.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152431_0013.JPG	2021/3/30 15:24	1.0 MB	照片
DJI_20210330152436_0014.JPG	2021/3/30 15:24	1.0 MB	照片

- A.

The recorded point cloud data is stored in the microSD card. The storage directory is microSD: DCIM/DJI_YYYYMMDDHHMM_NO_._XXX (XXX can be edited by the user).
- B.

The folder contains not only photos taken during the flight but also files with the suffix CLC, CLI, CMI, IMU, LDR, RTB, RTK, RTL, and RTS.
- ⚠

Chinese characters cannot be used to rename any of the files.

Base Station Satellite Data Acquisition

When the mobile network or remote controller video transmission signal is poor, use the RTCM data of the D-RTK 2 Mobile Station or a third-party RTK base station to assist the L1 for data post-processing. Follow the steps below:

1.

Check the local operation time from the point cloud data file directory stored in the microSD card.
2.

Search for .DAT format RTCM files of the same time as the stored files of the D-RTK 2 Mobile Station or third-party RTK base station. Rename the file as the same as the .RTB file in the point cloud data file directory and add a .RTCM suffix.
3.

Copy the .RTCM file to the folder of the point cloud data file directory. DJI Terra will prioritize .RTCM files over .RTB files.

- 🕒

• Note that the RTCM file stored in the D-RTK 2 Mobile Station is in UTC time format.

• Read the D-RTK 2 Mobile Station User Guide for more information.

Office Data Processing

Users can import the recorded point cloud data into DJI Terra for high-precision model reconstruction. Read the DJI Terra User Manual for more information.


Downloading DJI Terra

DJI Terra is required for data processing. Read the DJI Terra User Manual for more information about how to configure DJI Terra and use reconstruction.

Visit <https://www.dji.com/dji-terra/downloads> to download and install DJI Terra.

Reconstruction Procedures

Follow the steps below to reconstruct point cloud data in DJI Terra.

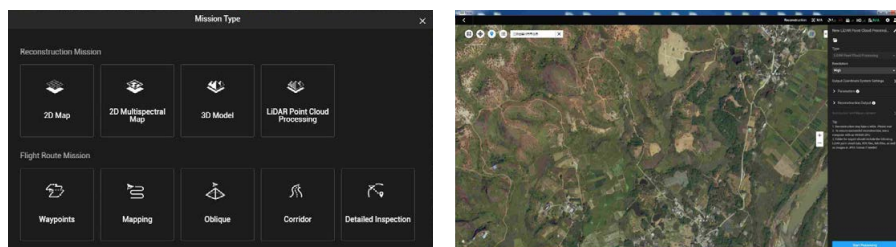


1. Launch DJI Terra, select New Mission, and create and save a point cloud processing mission.
2. Select  on the mission editing page and import the folder from the microSD card. The folder will be named according to the time the point cloud data was recorded. The folder contains files with the suffix CLC, CLI, CMI, IMU, LDR, RTB, RTK, RTL, and RTS.
3. Configure the point cloud density and output coordinate system settings.
4. Click to start reconstruction and wait until it is completed.
5. In the reconstruction page, the current mission folder can be opened by pressing "Ctrl+Alt+F" to find the file and check the result of the reconstruction.
6. Read the DJI Terra User Manual for more information about how to process data such as optimizing point cloud data accuracy.


LiDAR Point Cloud Description

The L1 features two point cloud scanning methods. Users can choose between non-repetitive and repetitive scanning methods.

- A. The non-repetitive scanning method is the L1's unique LiDAR technology. It provides a near-circular FOV with a scanning density that is denser in the center of the FOV compared to the surrounding area, resulting in a more comprehensive point cloud model.

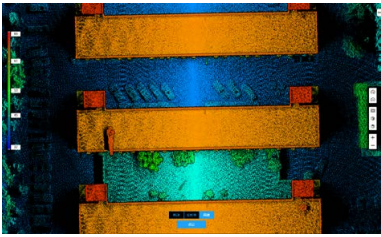

- B. The repetitive scanning method provides a flat FOV, which is similar to traditional mechanical scanning methods. It can obtain more uniform and precise scanning results compared to traditional mechanical scanning methods.




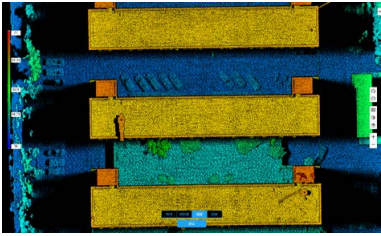


Non-Repetitive Scanning Method

Typical Point Cloud Patterns

For the non-repetitive scanning method, the L1 has a vertical FOV of 77.2° and a horizontal FOV of 70.4°. The figure below displays the typical point cloud patterns of the L1 after 0.1 s, 0.2 s, 0.5 s, and 1 s.


- A. Within a radius of 10° of the center of the FOV, the point cloud density rivals traditional 32-line LiDAR sensors within 0.1 s.
- B. Within a radius of 10° of the center of the FOV, the point cloud density rivals traditional 64-line LiDAR sensors within 0.2 s. The point cloud density in the rest of the FOV rivals traditional 32-line LiDAR sensors within the same time.
- C. Over time, the point cloud density and coverage inside the FOV increase significantly and reveal more detailed information of the surroundings.

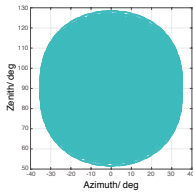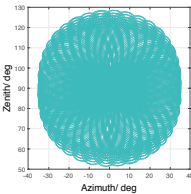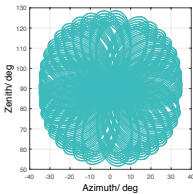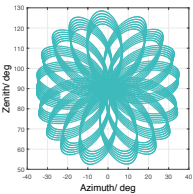

FOV Coverage


The figure below shows the FOV coverage of the L1 compared with non-L1 LiDAR sensors that use traditional mechanical scanning methods.

- A. When the integration time is less than 0.3 s, the 70% FOV coverage of the L1 is slightly better than a 64-line LiDAR sensor.
- B. As the integration time increases, however, the FOV coverage of the L1 increases significantly. After 0.8 s, almost all areas are illuminated by laser beams as the FOV coverage approaches 100%.

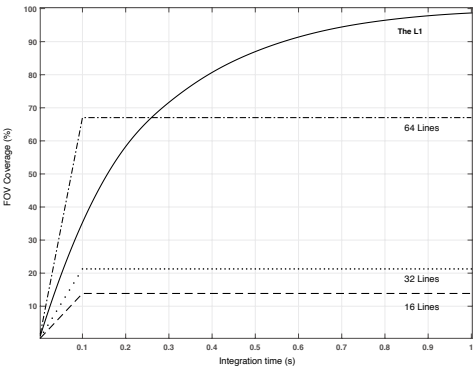

Repetitive Scanning Patterns

For the repetitive scanning method of L1, the scanning repeats approximately every 0.1 s, the horizontal FOV is 70.4°, the vertical FOV is 4.5°, and the vertical angular resolution is slightly better than traditional 32-line LiDAR sensors.

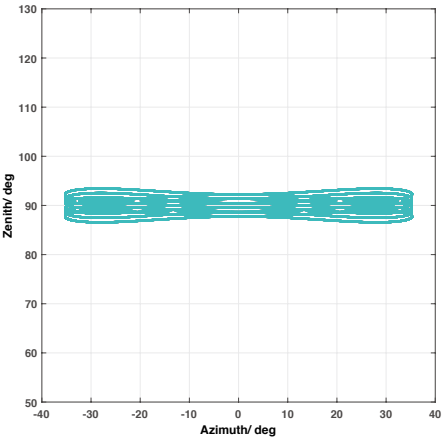

- Close Proximity Blind Zone: the L1 LiDAR sensor cannot precisely detect objects that are less than 1 meter away. The point cloud data may be distorted to a varying extent when the target object is within a range of 1 to 3 meters.
- The range accuracy of L1 LiDAR is 2 cm tested in an environment at a temperature of 25° C (77° F) with a target object that has a reflectivity of 80% and is 20 meters away from the L1. The actual environment may differ from the testing environment. The figure listed is for reference only.

Maintenance

Exporting Log

Go to the camera view in DJI Pilot, select ●●● , and Export Zenmuse L1 Log to export the camera log to the microSD card of the L1.

Firmware Update

Using DJI Pilot

1. Make sure that the L1 is securely mounted onto the aircraft, that there is a strong connection between the aircraft and remote controller and other DJI devices used with the aircraft, and that all devices are powered on.
2. Go to HMS in DJI Pilot, select Firmware Update, then Zenmuse L1, and follow the on-screen instructions to update the firmware. Select Update All to update all available devices simultaneously.

Using microSD Card

1. Make sure that the L1 is securely mounted onto the aircraft and the aircraft is powered off. Check that there is enough free space on the microSD card and the Intelligent Flight Batteries are fully charged.
2. Visit the Zenmuse L1 product page on the DJI official website and go to Downloads.
3. Download the latest firmware.
4. Once downloaded, copy the firmware file to the root directory of the microSD card.
5. Insert the microSD card into the microSD card slot of the L1.
6. Power on the aircraft. The gimbal and camera perform an auto-check and will start to update automatically. The gimbal will beep to indicate the status of the firmware update.
7. Restart the device after the firmware update is complete.

Update Status Alarm

Alarm	Descriptions
1 short beep	Firmware update detected. Preparing to update
4 short beeps	Updating firmware. Do not stop update
1 long beep followed by 2 short beeps	Firmware update successful
Continuous long beep	Firmware update failed. Try again and contact DJI Support if the problem persists

- 
- Make sure that there is only one firmware update file on the microSD card.
 - Do not power off the aircraft or detach the gimbal and camera while updating the firmware. It is recommended to delete the firmware update file on the microSD card once the firmware is updated.

Storage, Transportation, and Maintenance

Storage

The storage temperature range for the L1 LiDAR is from -40° to 85° C (-40° to 185° F). Keep L1 LiDAR sensors in a dry and dust-free environment.

1. Make sure the L1 LiDAR sensors are not exposed to environments containing poisonous or corrosive gases or materials.
2. DO NOT drop the L1 LiDAR sensors and be careful when placing in or taking out of storage.

Transportation

1. Before transportation, place the L1 in a suitable box for transportation and make sure it is secure. Make sure to place foam inside the transportation box and that the box is clean and dry.
2. DO NOT drop the L1 and be careful when carrying it.

Maintenance

1. Under normal circumstances, the only maintenance required for the L1 is to clean the optical window of the LiDAR sensor. Dust and stains on the optical window can negatively affect the performance of the LiDAR sensor. Make sure to regularly clean the optical window to prevent this from happening.
2. First, check the surface of the optical window to see if cleaning is necessary. If it is necessary to clean it, follow the steps below:
 - A. Use compressed or canned air. DO NOT wipe a dusty optical window as it will only cause more damage. Clean the optical window with compressed or canned air before wiping the optical window. It is not necessary to use a wipe if there is no visible stains on the optical window afterward.
 - B. Wipe the stains: DO NOT wipe using a dry lens tissue as it will scratch the surface of the optical window. Use a wet lens tissue. Wipe slowly to remove the dirt instead of redistributing it on the surface of the optical window. If the optical window is still dirty, a mild soap solution can be used to gently wash the window. Repeat Step B to remove any remaining soap residue.

Specifications

General	
Product name	ZENMUSE L1
Dimensions	152×110×169 mm
Weight	930±10 g
Power	Typical: 30 W; Max: 60 W
IP Rating	IP54
Supported Aircraft	Matrice 300 RTK
Operating Temperature Range	-20° to 50° C (-4° to 122° F) when using RGB mapping camera: 0° to 50° C (32° to 122° F)
Storage Temperature Range	-20° to 60° C (-4° to 140° F)
System Performance	
Detection Range	450 m @ 80% reflectivity, 0 klx 190 m @ 10% reflectivity, 100 klx
Point Rate	Single return: max. 240,000 pts/s Multiple return: max. 480,000 pts/s
System Accuracy (RMS 1σ)*	Horizontal: 10 cm @ 50 m Vertical: 5 cm @ 50 m
Real-Time Point Cloud Coloring Coding	Reflectivity, Height, Distance, RGB
LiDAR	
Ranging Accuracy (RMS 1σ)*	3 cm @ 100 m
Maximum Returns Supported	3
Scan Modes	Non-repetitive scanning pattern, Repetitive scanning pattern
FOV	Non-repetitive scanning pattern: 70.4° (horizontal) × 77.2° (vertical) Repetitive scanning pattern: 70.4° (horizontal) × 4.5° (vertical)
Laser Safety	Class 1 (IEC 60825-1:2014) (Eye Safety)
Inertial Navigation System	
IMU Update Frequency	200 Hz
Accelerometer Range	±8 g
Angular Velocity Meter Range	±2000 dps
Yaw Accuracy (RMS 1σ)*	Real-time: 0.3°, Post-processing: 0.15°
Pitch/Roll Accuracy (RMS 1σ)*	Real-time: 0.05°, Post-processing: 0.025°
Auxiliary Positioning Vision Sensor	
Resolution	1280×960
FOV	95°
RGB Mapping Camera	
Sensor Size	1 in
Effective Pixels	20 MP
Photo Size	5472×3078 (16:9), 4864×3648 (4:3), 5472×3648 (3:2)
Focal Length	8.8/24 mm (equivalent)

Shutter Speed	Mechanical shutter speed: 1/2000-8 s Electronic shutter speed: 1/8000-8 s
ISO	Video: 100-3200 (auto), 100-6400 (manual) Photo: 100-3200 (auto), 100-12800 (manual)
Aperture Range	f/2.8 - f/11
Supported File System	FAT (≤32 GB); exFAT (>32 GB)
Photo Format	JPEG
Video Format	MOV, MP4
Video Resolution	H.264, 4K: 3840×2160 30p
Gimbal	
Stabilized System	3-axis (tilt, roll, pan)
Angular Vibration Range	±0.01°
Mount	Detachable DJI SKYPORT
Controllable Range	Tilt: -120° to +30°, Pan: ±320°
Operation Modes	Follow/Free/Re-center
Data Storage	
Raw Data Storage	Photo/IMU/Point cloud/GNSS/Calibration files
Supported microSD Cards	microSD: Sequential writing speed 50 MB/s or above and UHS-I Speed Grade 3 rating or above; Max capacity: 256 GB
Recommended microSD Cards**	SanDisk Extreme 128GB UHS-I Speed Grade 3 SanDisk Extreme 64GB UHS-I Speed Grade 3 SanDisk Extreme 32GB UHS-I Speed Grade 3 SanDisk Extreme 16GB UHS-I Speed Grade 3 Lexar 1066x 128GB U3 Samsung EVO Plus 128GB
Post-Processing Software	
Supported Software	DJI Terra
Data Format	DJI Terra supports exporting standard format point cloud models: Point cloud format: PNTS/LAS/PLY/PCD/S3MB

* The accuracy was measured under the following conditions in a DJI laboratory environment: after a 5-minute warm up, using Mapping Mission with Calibration Flight enabled in DJI Pilot, and with the RTK in FIX status. The relative altitude was set to 50 m, flight speed to 10 m/s, gimbal pitch to -90°, and each straight segment of the flight route was less than 1000 m. DJI Terra was used for post-processing.

** The recommended microSD cards may be updated in future. Visit the DJI official website for the latest information.



WE ARE HERE FOR YOU



Contact **DJI SUPPORT**
via Facebook Messenger

This content is subject to change.



Download the latest version from

<http://www.dji.com/zenmuse-l1>

If you have any questions about this document, please contact DJI by sending a message to **DocSupport@dji.com**.

ZENMUSE is a trademark of DJI.

Copyright © 2021 DJI All Rights Reserved.