# SPLRM100 MANUAL

#### **MONOCRYSTALLINE SOLAR PANEL**


## **ELECTRICAL DATA**

Maximum Power at STC	100W
Operating Voltage (Vmp)	18.81V
Operating Current (Imp)	5.32A
Open Circuit Voltage (Voc)	22.2V
Short Circuit Current (Isc)	5.6A
Max System Voltage	1000VDC
Maximum Series Fuse Rating	15A

### **MATERIALS**

Solar Cell Type	Monocrystalline (7 x 7 in)
Number of Cells	33 (11 x 3) Cells
Dimensions	35.43 x 22.83 x 1.18 in
Weight	12.6 lbs
Solar Connectors	MC4
Application Class	Class A
Fire Rating	Class C

### **SOLAR ARRAY CONNECTION GUIDE**

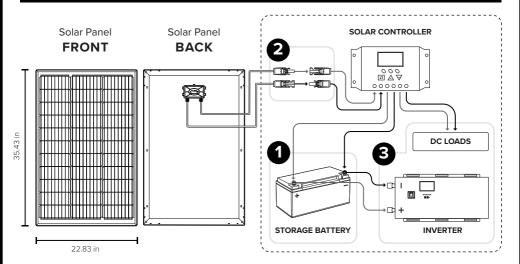

### **WARNING**

#### **RISK OF DEATH AND/OR FATAL INJURY**

Solar Panels generate direct current under sunlight, be careful when handling exposed wires. Ensure installation is in a secure environment, be mindful of weather and those around you. Electric current poses a fire hazard, avoid areas with flammable gases, vapors, or other flammable substances.

#### **CONNECTION ORDER**

Step 1: Battery to Controller

Step 2: Solar Panel to Controller

Step 3: Inverter to Battery / DC Load to

Controller