

SIEMENS

WN54C2070

Washer dryer



EN User manual and installation instructions



Siemens Home Appliances

Register your appliance on My Siemens and
discover exclusive services and offers.



**You can find additional information and explanations online.
Scan the QR code on the title page.**



Table of contents

1 Safety	3	11 Laundry	28
1.1 General information	3	11.1 Preparing the laundry	28
1.2 Intended use	3	11.2 Care symbols on the care labels	28
1.3 Restriction on user group	4	12 Detergents and care products	28
1.4 Safe installation	4	13 Basic operation	29
1.5 Safe use	6	13.1 Switching on the appliance ..	29
1.6 Safe cleaning and maintenance	8	13.2 Setting a programme	29
2 Preventing material damage	9	13.3 Saving the programme settings	29
3 Environmental protection and saving energy	10	13.4 Opening the door	30
3.1 Disposing of packaging	10	13.5 Loading laundry	30
3.2 Save energy and conserve resources	10	13.6 Adding detergent and care product	30
3.3 Energy saving mode	10	13.7 Starting the programme	30
4 Installation and connection	11	13.8 Soaking laundry	30
4.1 Unpacking the appliance	11	13.9 Adding laundry	31
4.2 Contents of package	11	13.10 Cancelling the washing programme	31
4.3 Requirements for the installation location	11	13.11 Cancelling the drying programme	31
4.4 Removing the transit bolts	12	13.12 Unloading the laundry	31
4.5 Connecting the appliance	13	13.13 Put the appliance into standby mode	31
4.6 Aligning the appliance	14	14 Dryness level	31
5 Before using for the first time ..	15	14.1 Changing the dryness level ..	32
5.1 Starting an empty washing cycle	15	15 Childproof lock	32
6 Familiarising yourself with your appliance	16	15.1 Activating the childproof lock	32
6.1 Appliance	16	15.2 Deactivating the childproof lock	32
6.2 Detergent drawer	16	16 Home Connect	32
6.3 Control panel	17	16.1 Setting up Home Connect	32
6.4 Operating logic	17	16.2 Deactivating Wi-Fi on the appliance	33
7 Display	19		
8 Buttons	21		
9 Programmes	24		
10 Accessories	27		

 
16.3 Activating Wi-Fi on the appliance	33	19.1 Emergency release	45
16.4 Installing the software update	33	20 Transportation, storage and disposal	46
16.5 Resetting the appliance network settings	33	20.1 Removing the appliance	46
16.6 Remote start	33	20.2 Inserting the transit bolts	46
16.7 Data protection	34	20.3 Using the appliance again	46
17 Basic settings	34	20.4 Disposing of old appliance ...	46
17.1 Overview of the basic settings	34	21 Customer Service	47
17.2 Changing the basic settings	34	21.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)	47
18 Cleaning and servicing	35	21.2 AQUA-STOP guarantee	47
18.1 Cleaning the drum and cleaning fluff	35	22 Consumption values	48
18.2 Cleaning the detergent drawer	35	23 Technical data	49
18.3 Cleaning the drain pump	36	23.1 Information regarding Free and Open Source Software ..	50
18.4 Cleaning the rubber gasket ..	38	24 Declaration of Conformity	51
19 Troubleshooting	39	24.1 Statement of Compliance for Great Britain	51



1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- with tap water and commercially available detergents and care products suitable for washing machines.

- for drying and freshening up fabrics that are washed with water and suitable for dryers.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

WARNING – Risk of electric shock!

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the  mark.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

⚠ WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

⚠ WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

- ▶ Do not lift the appliance on your own.

⚠ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

⚠ CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
 - ▶ Align the appliance using the appliance feet and a spirit level.
- If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- ▶ Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

- ▶ Do not move the appliance by holding onto protruding parts.

CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.
- ▶ Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ▶ Call customer services. → *Page 47*

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

When spinning larger, waterproof items of laundry, imbalances may arise and lead to injuries.

- ▶ Do not wash and spin larger items of laundry, such as blankets or mattress covers, in the appliance.

WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.

- ▶ Do not let children play with small parts.

⚠ WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

- ▶ Keep the area around the appliance clean during operation.

⚠ WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ▶ Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of explosion!

Highly flammable objects such as lighters or matches may ignite during the drying process.

- ▶ Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when drying is in progress.

- ▶ Do not place laundry in this appliance to be dried if the laundry has not been washed first.
- ▶ Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

Laundry that has been pretreated with flammable cleaning agents that contain solvents may cause an explosion in the appliance.

- ▶ Rinse pretreated laundry thoroughly with water before washing.

⚠ WARNING – Risk of fire!

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ▶ If drying is interrupted early, remove the laundry immediately and spread it out.

⚠ CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

- ▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

- ▶ Wait for the drum to come to a complete stop before reaching inside.

⚠ CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

- ▶ Do not touch the hot detergent solution.

⚠ CAUTION – Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance.

Contact with eyes or skin may cause irritation.

- ▶ Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ▶ If accidentally swallowed, seek medical advice.
- ▶ Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

⚠ WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

- ▶ Only use the manufacturer's original spare parts and original accessories.

WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

- ▶ Do not use cleaning agents that contain solvents.

2 Preventing material damage

ATTENTION

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

- ▶ Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- ▶ Observe the maximum load capacity for each programme and do not exceed it.

→ "Programmes", Page 24

Foam and foam rubber may deform or melt during the drying process.

- ▶ Do not dry laundry that contains foam or foam rubber.

The appliance is secured for transportation using transit bolts.

Transit bolts which have not been removed may result in material damage and damage to the appliance.

- ▶ Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
- ▶ Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

- ▶ Tighten the screw connections on the water inlet until they are hand-tight.
- ▶ Connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions or valves.
- ▶ Make sure that the valve housing for the water inlet hose does not come into contact with its surroundings and is not subjected to any external forces.

- ▶ Ensure that the inner diameter of the water tap is at least 17 mm.
- ▶ Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- ▶ Ensure that the water pressure in the water supply system is at least 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- ▶ If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.
- ▶ Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- ▶ Never kink, crush, modify or cut through water hoses.
- ▶ Only use the water hoses supplied with the appliance or genuine spare hoses.
- ▶ Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may lead to material damage and damage to the appliance.

- ▶ Only operate the appliance with cold mains water.

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.

- ▶ Clean the appliance with nothing but water and a soft, damp cloth.
- ▶ Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

- Choose programs with low temperatures and longer wash times and use maximum load capacity.
- Add detergent based on the laundry's degree of soiling. Detergent dosage
- Reduce the washing temperature for lightly and normally soiled laundry.
- Set the maximum spin speed if you want to dry the laundry in the appliance afterwards.
- Wash the laundry without prewash.

3.3 Energy saving mode

If you do not use the appliance for a brief period, it automatically switches to energy-saving mode. All displays go out and  flashes.

Energy-saving mode ends when you use the appliance again.

If you do not use the appliance for an extended period, it automatically switches to standby mode.

4 Installation and connection

4.1 Unpacking the appliance

ATTENTION

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- ▶ Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- 1. Remove any packaging and protective covers completely from the appliance.
→ *"Disposing of packaging", Page 10*
- 2. Check the appliance for visible damage.
- 3. Open the door. → *Page 30*
- 4. Remove any accessories from the drum.
- 5. Close the door.

4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

ATTENTION

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- ▶ Do not operate the appliance with incomplete or defective accessories.

- ▶ Replace the accessories in question before operating the appliance.
→ *"Accessories", Page 27*

Note: The appliance has undergone a function test at the factory. This may cause water stains in the appliance, which the first wash cycle removes.

The delivery consists of the following:

- Washer dryer
- Accompanying documents
- Transit bolts
- Cover caps
- Elbow for securing the water outlet hose

4.3 Requirements for the installation location

WARNING

Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

- ▶ Do not operate the appliance without a cover cap.

WARNING

Risk of injury!

When using the appliance on a base, the appliance may tip over.

- ▶ Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → *Page 27* before using the appliance for the first time.

ATTENTION

If residual water in the appliance freezes, this may cause damage to the appliance.

- ▶ Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.


If the appliance is tilted at an angle greater than 40°, residual water may

leak out of the appliance and cause material damage.

- ▶ Tilt the appliance carefully.
- ▶ Transport the appliance in an up-right position.


Installation location Requirements

Base

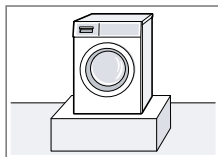


Secure the appliance with fixing brackets
→ Page 27.

Wooden joist floor

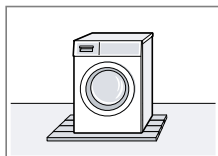


Place the appliance on a water-resistant wooden board (minimum thickness of 30 mm) which is screwed tightly to the floor.

Kitchen unit

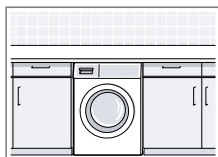

Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets. Required niche width: 60 cm.

Against a wall

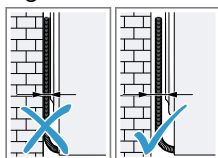


Do not trap the power cord or the hoses between the wall and the appliance.

4.4 Removing the transit bolts


The appliance is secured for transportation using transit bolts on the rear of the appliance.

Note: Keep the transit bolt screws and the sleeves in a safe place for future transport.


1. Pull the hose out of the holders.

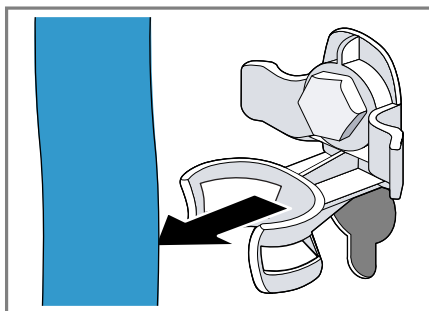


2. Unscrew ① and remove ② all of the screws for the 4 transit bolts using a WAF 13 wrench.

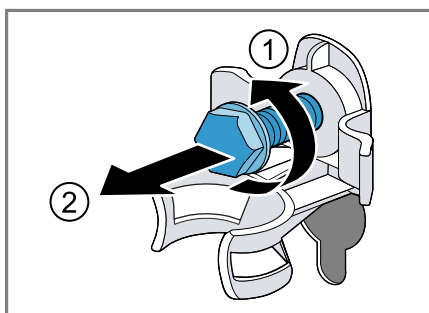


3. Remove the power cable from the holder.

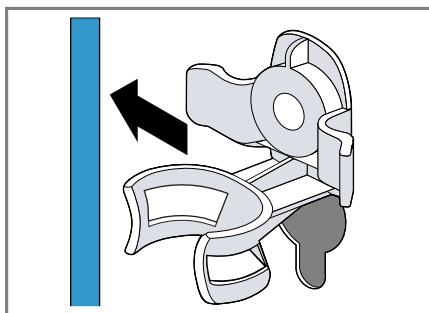

4. Remove the 4 sleeves.

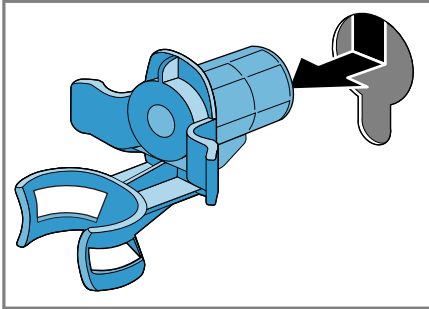

5. Insert the 4 cover caps ① and push them downwards ②.

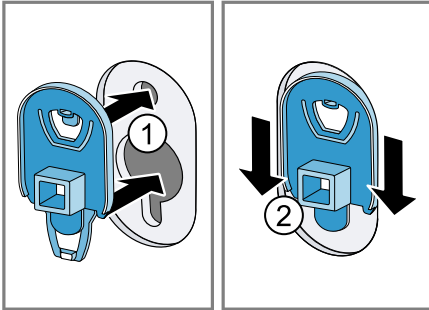

Note: To install the transit bolts to transport the appliance, perform these steps again in the reverse order.

4.5 Connecting the appliance

Connecting the water inlet hose

⚠ WARNING

Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.


- ▶ Do not immerse the electrical AquaStop valve in water.

ATTENTION

Material damage may be caused if the water inlet hose is connected incorrectly.

- ▶ Tighten the screw connections on the water inlet until they are hand-tight.

1. Connect the water inlet hose to a tap (26.4 mm = 3/4").

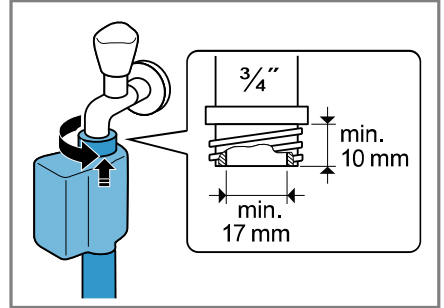

2. Open the water tap carefully and check that the connection points are tight.

Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

ATTENTION


When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

- ▶ Secure the water outlet hose against unintentional loosening. In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.
- ▶ Before operating the appliance, ensure that the wastewater drains away quickly and eliminate any blockages.

Note: Observe the draining heights.


The draining heights are: minimum: 60 cm, maximum: 100 cm

Siphon

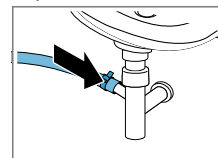


Secure the connection point with a (24–40 mm) hose clamp.

Sink

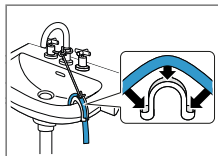

Fix and secure the water outlet hose with an elbow.
→ "Accessories",
Page 27

Plastic pipe with rubber sleeve

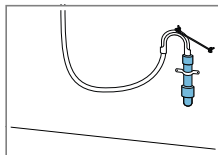

Fix and secure the water outlet hose with an elbow.
→ "Accessories",
Page 27

Connecting the appliance to the electricity supply


Note: Your electrical domestic installation for this appliance must comply with the local legal provisions and safety regulations, and should include a residual current circuit-breaker.

1. Insert the mains plug of the appliance's power cable in a socket nearby.
The connection details of the appliance can be found under Technical data → Page 49.
2. Check the mains plug is inserted properly.


4.6 Aligning the appliance

In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

1. Use a WAF 17 wrench to loosen the lock nuts in a clockwise direction.

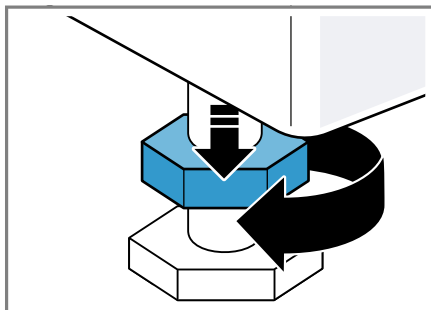


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

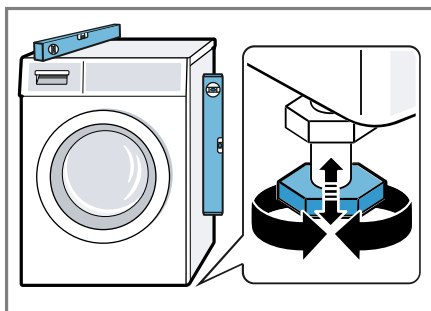

All appliance feet must stand firmly on the ground.

3. Use a WAF 17 wrench to tighten the lock nuts against the housing until they are hand-tight.

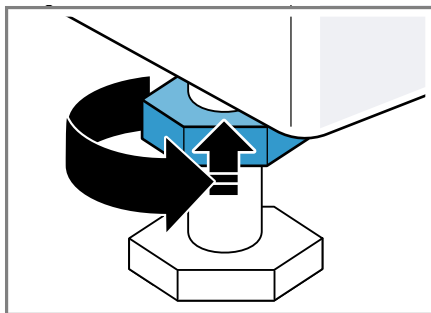

In doing so, hold the foot tight and do not adjust its height.


5 Before using for the first time

Prepare the appliance for use.


5.1 Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.

1. Press .
The switch-on process takes a few seconds.
2. Set the  **Baumwolle 90°C** programme.
3. Close the door.
4. Pull out the detergent drawer.
5. Pour approx. 1 litre of tap water into compartment II.

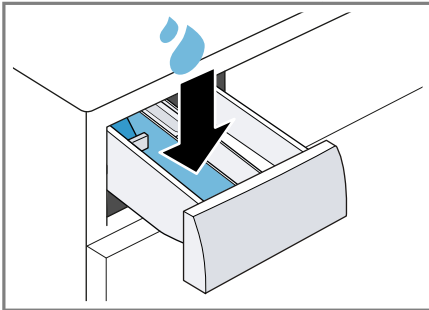

6. Add washing powder containing oxygen bleach to compartment II.

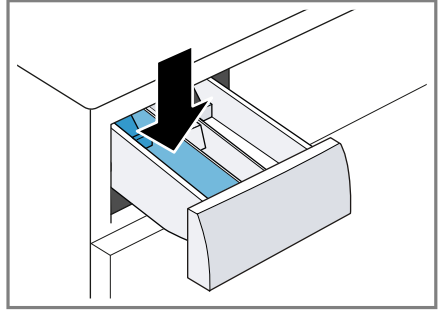


To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

7. Push in the detergent drawer.
8. Start the programme. → *Page 30*
9. Start the first wash cycle or press  to put the appliance in standby mode.
→ *"Basic operation", Page 29*

6 Familiarising yourself with your appliance

6.1 Appliance

You can find an overview of the parts of your appliance here.

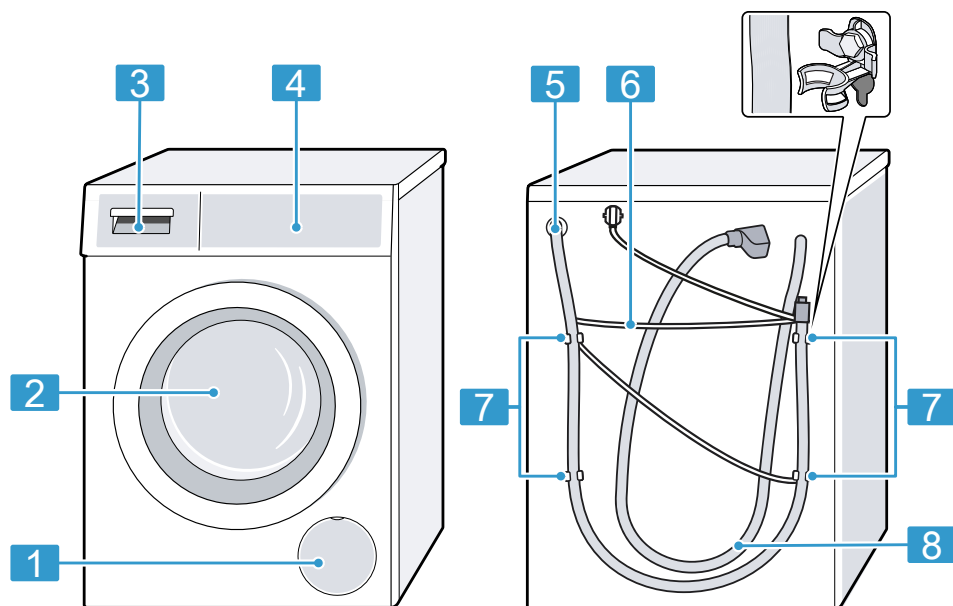

On certain models, specific details such as the colour and shape may differ from those pictured.

1 Maintenance flap for the drain pump → *Page 36*

2 Door → *Page 30*

3 Detergent drawer → *Page 16*

4 Control panel → *Page 17*

5 Water outlet hose → *Page 13*

6 Power cord → *Page 14*


7 Transit bolts

8 Water inlet hose → *Page 13*

6.2 Detergent drawer

Note: Observe the manufacturer's instructions on the use and dosage of the detergent and care product and


the information in the programme descriptions.

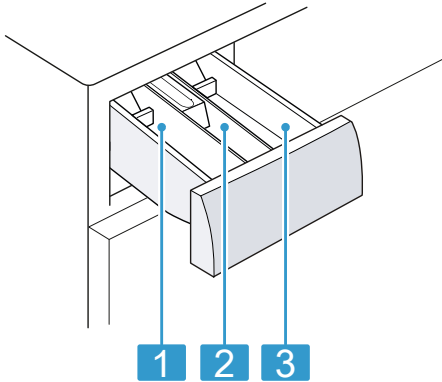

-
- | | |
|----------|---|
| 1 | Compartment II: Detergent for the main wash |
| <hr/> | |
| 2 | Compartment  : Fabric softener |
| <hr/> | |
| 3 | Compartment I: Detergent for prewash and soaking |
-

6.3 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

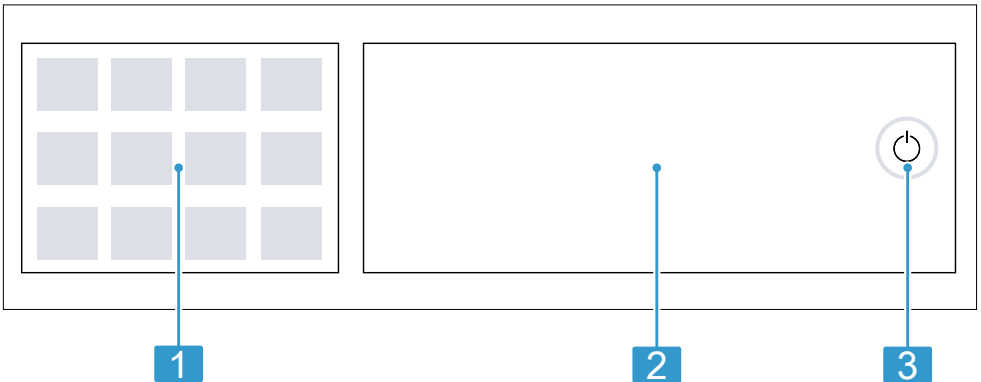


-
- | | |
|----------|---|
| 1 | Programmes → <i>Page 24</i> |
| <hr/> | |
| 2 | Buttons → <i>Page 21</i> and display → <i>Page 19</i> |
| <hr/> | |
| 3 | Buttons → <i>Page 21</i> |
-

activate, deactivate or change settings by pressing the buttons. The ac-

6.4 Operating logic

Some areas of the display are buttons and respond to touch. You can

tivated settings are highlighted in colour on the display.

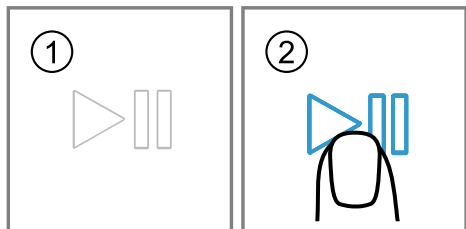

ATTENTION


Pressing on the display with force may cause damage.

- ▶ Do not apply heavy pressure on the display.
- ▶ Do not press on the display using pointed or sharp objects.


Displaying or hiding additional buttons

Some buttons are hidden for a reduced display. If you display these additional buttons on the display, you can activate or deactivate the corresponding settings.

1. To display the additional buttons, briefly press **+ Optionen**.

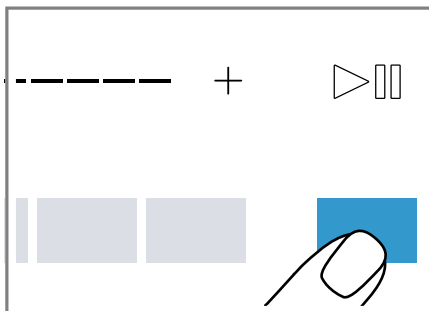

- ✓ The display shows all additional buttons.

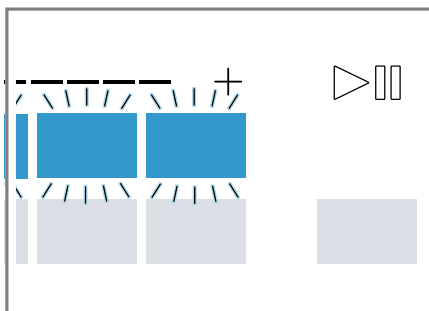


2. To hide the additional buttons, briefly press **+ Optionen** again.

Changing a setting value

If you activate certain settings, the display shows selection buttons and you can change the setting value.


- ▶ Press the selection buttons → *Page 22* ① or swipe over the scale with your finger ②.

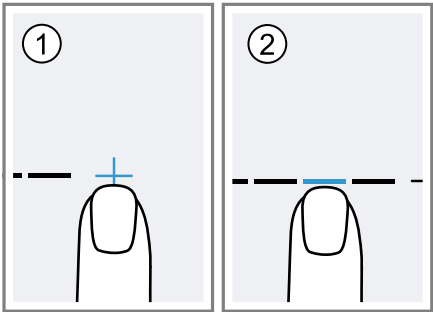

The display shows the setting value.

7 Display

The display shows the current settings, options or relevant information.

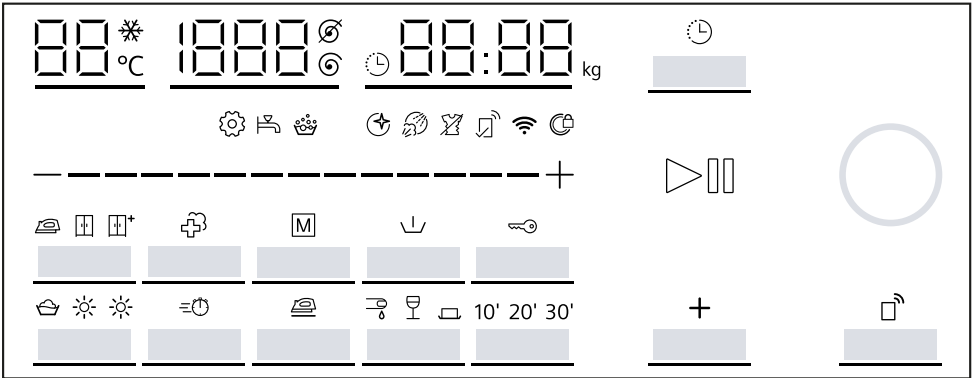

Example: Display

Display	Description
0:40 ¹	Expected programme duration or programme time remaining in hours and minutes.
☀ 8h ¹	Program end time → "Buttons", <i>Page 22</i>
6.0 ¹	Recommendation for the maximum load capacity for the selected program in kg.
Ø - 1400 Ⓞ	Set spin speed in rpm. → <i>Page 22</i>

¹ Example

Display	Description
	Ø: No spin cycle, draining only
❄ - 90	Set temperature in °C. → <i>Page 22</i> ❄ (cold)
End	Programme status: Programme end
	Programme status: Crease and odour reduction
	Programme status: Crease-reduction function
	■ Lights up: The childproof lock is activated. ■ Flashes: The childproof lock is activated and the appliance has been operated. → <i>"Deactivating the childproof lock", Page 32</i>
	The crease-reduction function is activated. → <i>Page 23</i>
	Washing with subsequent drying is activated. → <i>"Buttons", Page 23</i>
	Drying is activated. → <i>Page 23</i>
	Prewash is activated. → <i>Page 22</i>
10' 20' 30'	Soaking is activated for 10, 20 or 30 minutes. → <i>Page 23</i>
	Shortened programme duration is activated. → <i>"Buttons", Page 22</i>
	Save a programme. → <i>"Buttons", Page 23</i>
	The dryness level is activated. → <i>Page 31</i>
	The dryness level is activated. → <i>Page 31</i>
	The dryness level is activated. → <i>Page 31</i>
	The "Blood" stain type is activated.
	The "Red wine" stain type is activated.
	The "Cooking fat/cooking oil" stain type is activated.
	Change the basic settings. → <i>Page 34</i>
	Flashes: Drum cleaning is required. Run the  Baumwolle 90°C programme for cleaning and caring for the drum and the outer tub. → <i>"Cleaning the drum and cleaning fluff", Page 35</i>
	Remote start is activated. → <i>Page 24</i>

Display	Description
	■ Lights up: The appliance is connected to your home network via Wi-Fi. ■ Flashes: The appliance is trying to connect to your home network via Wi-Fi. → "Home Connect", Page 32
	Settings that are not available on the appliance have been set via the Home Connect app. You can find more information in the Home Connect app.
	The gentle pretreatment of dry laundry using hot air for increased hygienic demands is activated. → Page 23
:	Flashes: The voltage control system has paused the programme due to impermissible voltage drops or voltage surges. → ": flashes and the programme is paused.", Page 41
	Note: The programme continues when the voltage is permissible again.
	The appliance has detected too much foam. → "Crown or heavy foam build-up.", Page 41
	■ Lights up: The door is locked. – To add laundry, the door can be unlocked. → "Adding laundry", Page 31 – To open the door, you can cancel the programme. → "Cancelling the washing programme", Page 31 ■ Flashes: The door is not closed.
	■ No water pressure. ■ The water pressure from the tap is too low.
E:35 ¹	Error code, error display, signal. → Page 39

8 Buttons

The selection of programme settings and options to change these depend on the programme that is set as well as the programme status.

Button	Selection	Description
	■ Switch on ■ Standby mode ■ Restart the appliance	Switch on the appliance or put it in standby mode.

¹ Example

Button	Selection	Description
		If the control panel does not respond, press and hold  for approximately 5 seconds to restart the appliance. → "The display and buttons do not respond.", Page 42
+ —	Multiple selection	To change a setting, press the + or — selection button until the display shows the required setting.
40 °C	 - 90	Adjust the temperature. Set temperature in °C.
1400 	 - 1400	Adjust the spin speed or deactivate the spin cycle. Set spin speed in rpm. If  is selected, the water is drained and the spin cycle is deactivated. The laundry stays wet inside the drum.
	- Start - Cancel - Pause	Start, cancel or pause the programme.
Fertig in	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
+ Optionen	Displaying or hiding additional buttons	If you briefly press the button, you can display or hide additional buttons. → "Displaying or hiding additional buttons", Page 18
+ Optionen	Multiple selection	→ "Basic settings", Page 34
varioSpeed	- Activate - Deactivate	Activate or deactivate a shorter programme duration. Note: Energy consumption increases. The washing result is not affected by this.
Vorwäsche	- Activate - Deactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry. Note: Add the detergent for the prewash in compartment I and the detergent for the main wash in compartment II of the detergent drawer. → "Detergent drawer", Page 16

Button	Selection	Description
Knitterschutz	■ Activate ■ Deactivate	Activate or deactivate the reduced creasing programme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. Note: The laundry has a higher residual moisture after washing. To reduce creasing, hang up the laundry immediately after washing.
Einweichen	■ 10' ■ 20' ■ 30'	Activate or deactivate soaking for 10, 20 or 30 minutes. → <i>"Soaking laundry", Page 30</i> Before the main wash cycle starts, the laundry remains in the water for longer. For laundry with particularly stubborn soiling.
 3 Sek.	■ Activate ■ Deactivate	→ <i>"Childproof lock", Page 32</i>
Favorit	■ Store ■ Adjust	Press the button for approx. 3 seconds to save your customised programme settings. → <i>"Saving the programme settings", Page 29</i> If you briefly press the button, you set your saved programme with individual programme settings.
Hygiene Mix	■ Activate ■ Deactivate	Activate or deactivate gentle pretreatment of dry laundry with hot air up to 65 °C for increased hygiene demands. After the fabrics have been pretreated with hot air, they are washed at low temperatures.
Flecken	Multiple selection	Select the type of stain. The temperature, drum movement and soaking time are all adjusted to suit the type of stain.
Wash+Dry	■ ☀ ■  ☀	■ When ☀ is selected, only drying is activated. ■ When  ☀ is selected, washing with subsequent drying is activated.

Button	Selection	Description
		Note: For the adjustable combinations of washing, drying or washing and drying, observe the information for the selected programme. → "Programmes", Page 24
Trockenziel	■  ■  ■  +	The dryness level defines how damp or dry the laundry is after the programme ends.
Fernstart	■ Activate ■ Deactivate ■ Opening the Home Connect settings	Activate or deactivate remote start. → Page 33

9 Programmes

Note: The laundry's care labels provide you with additional information about programme selection.
→ "Care symbols on the care labels", Page 28

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Drying
 Baumwolle	Wash hard-wearing items made from cotton or linen. Also suitable as a short programme for normally soiled laundry when you activate varioSpeed. Programme setting: ■ Max. 90 °C ■ Max. 1400 rpm	9.0 5.0 ¹	6.0
Eco 40-60	Wash items made from cotton or linen.	9.0	6.0

¹ **varioSpeed** activated

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Drying
Note: Fabrics which can be washed from 40 °C  up to 60 °C  as per the care symbol can be washed together. The washing performance corresponds to the best possible washing performance class according to the legal requirements. For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing result. You cannot change the washing temperature. The maximum spin speed is 1400 rpm.			
 Fein/Seide	Wash delicate, washable items made from silk, viscose and synthetic fabrics. Use a detergent that is suitable for delicates or silk. Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag. Programme setting: ■ Max. 40 °C ■ Max. 800 rpm	2.0	– ¹
  Wolle	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool. Programme setting: ■ Max. 40 °C ■ Max. 800 rpm	2.0	1.0
 Spülen	Rinse and then spin the laundry, and drain the water. Programme setting: Max. 1400 rpm	–	–

¹ Drying not possible

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Drying
 /  Schleudern /Abpumpen	Spin the laundry and drain the water. If you only want to drain the water, activate  . The laundry is not spun. Programme setting: Max. 1400 rpm	–	–
→≡ ...weitere	Select additional programmes directly via the Home Connect app. A description of the programmes can be found in the Home Connect app. Note: Your appliance must be connected to your home network and registered in your Home Connect app. → <i>Page 32</i>	–	–
 Hygiene	Wash hard-wearing items made from cotton or linen. Suitable for allergy sufferers and for strict hygiene requirements. Note: Once the set temperature has been reached, it remains constant throughout the entire washing process. Programme setting: ▪ Max. 60 °C ▪ Max. 1400 rpm	6.5	5.0
 smartFinish	Reduce creases and airborne odours in suits, shirts, down-filled fabrics, outdoor clothing and items made of cotton, cashmere or silk. Tip: To prevent creasing, remove the laundry immediately after the programme has ended. Notes ▪ The laundry is not dried or cleaned. ▪ If you use the programme often without washing in between, this may cause odours in the appliance.	– ¹	1.0
  Super 15' Waschen & Trocknen 45'	Wash items made from cotton, linen or synthetic fabrics. Short programme for small items of lightly soiled laundry.	2.0	1.0

¹ Washing not possible

Programme	Description	Max. load (kg) Wash- ing	Max. load (kg) Drying
	Note: If you also want to dry the laundry after washing it, press Wash+Dry. Programme setting: ■ Max. 40 °C ■ Max. 1400 rpm		
 Schnell/Mix	Wash items made from cotton, linen or synthetic fabrics. Suitable for lightly soiled laundry. Tip: Energy- and time-optimised programme using hybrid technology. Programme setting: ■ Max. 60 °C ■ Max. 1400 rpm	4.0	2.5
 Pflegeleicht	Wash items made from synthetic fabrics. Suitable for lightly soiled laundry. Tip: Energy- and time-optimised programme using hybrid technology. Programme setting: ■ Max. 60 °C ■ Max. 1400 rpm	4.0	2.5

10 Accessories

Use original accessories. These have been made especially for your appliance.

	Use	Order number
Water inlet hose extension	Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m).	WZ10131
Water outlet hose extension	Extend the water outlet hose (2.20 m).	11057910
Fixing brackets	Improves the stability of the appliance.	WX975600
Elbow	Secure the water outlet hose in place.	00655300

11 Laundry

11.1 Preparing the laundry

⚠ WARNING

Risk of explosion!

Fillings made of polyamide, polyester, polyethylene, polypropylene or polystyrene can leak out of openings in items of laundry, melt during the drying process and cause an explosion in the appliance.

- ▶ Do not dry items of laundry with fillings made of polyamide, polyester, polyethylene, polypropylene or polystyrene in the appliance.

ATTENTION

Objects remaining in the laundry may damage the laundry and the drum.

- ▶ Remove all items from any pockets in your laundry before using the appliance.

Note

 
The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes
- Tie cloth belts, cloth straps and cords together
- Remove curtain fittings and lead strips
- Wash small or particularly delicate items in a mesh washing bag
- Wash large and small items of laundry together
- Wash laundry with fresh stains immediately
- Pretreat laundry with dried stains and wash several times
- Load the laundry unfolded into the drum

- Spin the laundry before drying
- Before loading the drum, any laundry that has been pre-treated with chlorine bleach should be rinsed several times

11.2 Care symbols on the care labels

Washing care symbols

Symbol	Recommended programme
	Cottons (normal)
	Easy Care (gentle)
	Delicates/Silk for washing by hand (particularly gentle)
	Woollens (hand wash)
	(not suitable for machine-washing)

Drying care symbols

Symbol	Fabrics
	Items made from cotton and linen, e.g. towels, bed linen, underwear
	Items made from synthetic, blended or delicate fabrics, e.g. functional garments, shirts
	Do not tumble dry items made from silk, nylon, air-impermeable and rubber-coated fabrics, synthetic curtains

12 Detergents and care products

You can protect your appliance and your laundry by selecting and using

the correct detergents and care products.
The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

- When using liquid detergents, only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances
- Do not use chlorine bleach
- Do not use dyes regularly as fixing salt can damage stainless steel
- Do not use color-bleaching agents in the appliance

13 Basic operation

13.1 Switching on the appliance

Note: If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute.

Requirement: The appliance has been correctly installed and connected. → *Page 11*


- Press **⏻**.

The switch-on process takes a few seconds.

Note: The lighting for the drum goes out automatically.

13.2 Setting a programme

1. Press the required programme.
→ *"Programmes", Page 24*

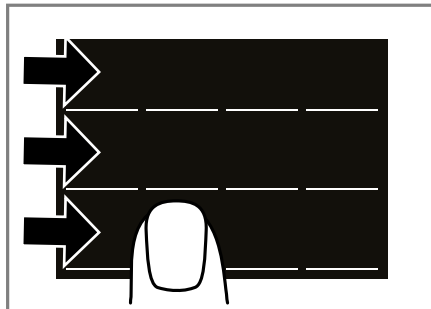

- ✓ The display shows the programme settings.
- 2. Adjust the programme settings.
→ *"Buttons", Page 21*
Observe the information about operating logic → *Page 17*.
The programme settings are not saved permanently for the programme.

13.3 Saving the programme settings

You can save your individual programme settings as favourites.


Requirement: A programme is set.
→ *Page 29*

- Press and hold **Favorit** for approx. 3 seconds.
Press **Favorit** to call up the saved programme.


Note: To overwrite the saved programme, repeat the steps above.

13.4 Opening the door

1. Press on the edge of the door.

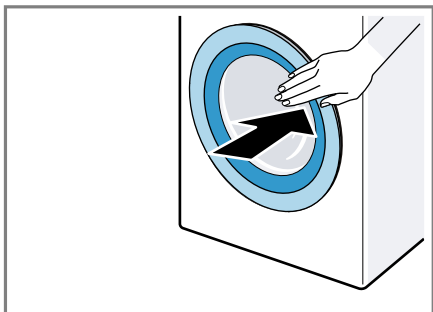

2. Open the door.

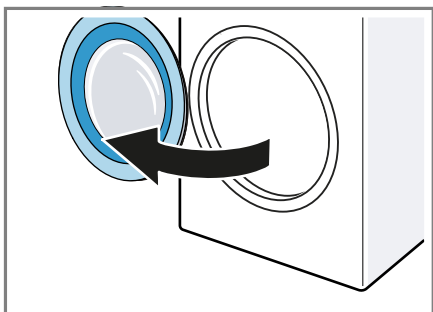

13.5 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes.
→ "Programmes", Page 24

Requirements

- The laundry is prepared and sorted.
→ "Laundry", Page 28
 - The drum is empty.
1. Open the door. → Page 30
 2. Place the laundry in the drum.
 3. Close the door.
Ensure that there is no laundry trapped in the door.

13.6 Adding detergent and care product

Note: Observe the information about detergents and care products
→ Page 28.

1. Pull out the detergent drawer.
2. Pour in the detergent.
→ "Detergent drawer", Page 16
3. If required, add the care product.
4. Push in the detergent drawer.

13.7 Starting the programme

Requirements

- A programme is set. → Page 29
- The door is closed.
- ▶ Press .
- ✓ The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- ✓ The display shows the programme duration or the programme end time.
- ✓ After the programme has ended, the display shows: "End".

Note: If you do not remove the laundry once the programme has ended, the crease-reduction function starts after 15 minutes and takes approx. 30 minutes. The display shows .
Press any button on the display to cancel the crease-reduction programme and to remove the laundry.

13.8 Soaking laundry

To soak the laundry, activate the soaking before the programme start.

Note: Add the detergent for the soaking cycle in compartment I and the detergent for the main wash in compartment II of the detergent drawer.
→ Page 16

Requirements

- The laundry is placed in the appliance. → Page 30
- A programme is set. → Page 29
- The display shows all additional buttons.
→ "Operating logic", Page 17

1. Press **Einweichen** until the display shows the required soaking time.
→ *"Buttons", Page 23*
2. Start the programme. → *Page 30*

13.9 Adding laundry

After the programme starts, you can remove or add laundry depending on the programme status.

1. Press .
During the washing cycle, the appliance pauses. → *Page 19*
During the drying cycle, the appliance checks whether it is possible to add laundry.
Note: If you want to add laundry, follow the instructions on the display.
→ *"Display", Page 21*
2. Open the door. → *Page 30*
3. Add or remove laundry.
4. Close the door.
5. Start the programme. → *Page 30*

13.10 Cancelling the washing programme

1. Press .
2. Open the door. → *Page 30*
The appliance door remains locked for safety reasons if the temperature and water levels are high.
 - If the temperature is high, start the  **Spülen** programme.
 - If the water level is high, start the  **Schleudern** programme or select a suitable programme for draining.
→ *"Programmes", Page 24*
3. Remove the laundry. → *Page 31*

13.11 Cancelling the drying programme

- ▶ Press .
The cooling process starts automatically after approx. 30 seconds and cools down the laundry for a few minutes while the drum is rotating. The door is then unlocked automatically.

13.12 Unloading the laundry

1. Open the door. → *Page 30*
2. Remove the laundry from the drum.

13.13 Put the appliance into standby mode

1. Press .
2. Cleaning the rubber gasket.
→ *Page 38*

Note: Leave the appliance door and the detergent drawer open to dry.

14 Dryness level

In some programmes, a dryness level is predefined. The dryness level defines how dry or damp your laundry is after the programme ends.

Dryness level	Description
 +	For multi-layered, thick laundry that does not dry readily.
	For normal, single-layered laundry.
	For normal, single-layered laundry. The laundry is still slightly damp after the programme ends. To prevent creasing after

Dryness level	Description
	drying, iron the laundry or hang it up.

14.1 Changing the dryness level

For some programmes, you can change the dryness level so that your laundry will be drier or more damp.

1. Set a washing and drying programme or a drying programme.
→ *Page 24*
- ✓ The display shows the specified dryness level.
2. Press **Trockenziel** repeatedly until the display shows your required dryness level.

15 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

15.1 Activating the childproof lock

- ▶ Press and hold  **3 Sek.** for approx. 3 seconds.
- ✓ The display shows .
- ✓ The control elements are locked.
- ✓ The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

15.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

- ▶ Press and hold  **3 Sek.** for approx. 3 seconds.
- ✓  goes out on the display.

16 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information about this at: www.home-connect.com.

The Home Connect app guides you through the entire login process. Follow the instructions, noting the information in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
→ *"Safety", Page 3*
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

16.1 Setting up Home Connect

Requirement: The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

16.2 Deactivating Wi-Fi on the appliance

1. Press and hold **Fernstart** for approx. 3 seconds.
 2. Press **Fernstart** repeatedly until the display shows "on".
 3. Press $\triangleright$ to deactivate the Wi-Fi.
- ✓ The display shows "oFF".

Note: To exit the Home Connect settings, press and hold **Fernstart** for approx. 3 seconds.

16.3 Activating Wi-Fi on the appliance

1. Press and hold **Fernstart** for approx. 3 seconds.
 2. Press **Fernstart** repeatedly until the display shows "oFF".
 3. Press $\triangleright$ to activate the Wi-Fi.
- ✓ The display shows "on".

Notes

- If the Wi-Fi is activated, the display alternately shows "on" and the signal strength of the Wi-Fi connection.
- To exit the Home Connect settings, press and hold **Fernstart** for approx. 3 seconds.

16.4 Installing the software update

Note: If a software update is available, a message appears in the Home Connect app.

- To install the software update, follow the instructions in the Home Connect app.
- ✓ The control panel is partially locked during the installation.
- ✓ In the event of a malfunction, installation may take up to 40 minutes. Do not reset the network settings or the appliance to the factory settings.

16.5 Resetting the appliance network settings

1. Press and hold **Fernstart** for approx. 3 seconds.
 2. Press **Fernstart** repeatedly until the display shows "rES".
 3. Press and hold $\triangleright$ for approx. 3 seconds.
- ✓ The network settings are reset.

16.6 Remote start

Enable the appliance for remote start via the Home Connect app.

Note

Remote start will be deactivated in the following circumstances:

- The appliance door is opened.
- Following a power cut.

Activating remote start

Requirement: The appliance door is closed.

- Press **Fernstart**.
- ✓ $\square$ lights up and the appliance is enabled for remote start via the Home Connect app.

Deactivating remote start

- ▶ Press **Fernstart**.
- ✓  goes out.

16.7 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.


Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

17 Basic settings

You can configure the basic settings for your appliance to meet your needs.

Note: You can also adjust the basic settings in the Home Connect app.

17.1 Overview of the basic settings

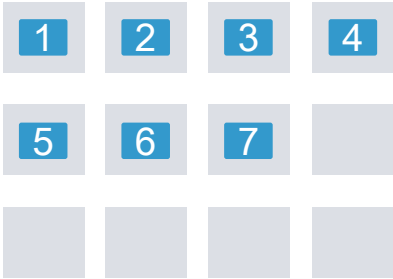

Programme selector with programme positions

1	Set the volume of the signal at the end of the programme: 0 (off) to 4 (very loud)
2	Set the volume of the signal tone emitted when the buttons are pressed: 0 (off) to 4 (very loud)
3	Set the display brightness: 1 (low) to 4 (very high)
4	No basic setting.
5	Activate (on) or deactivate (off) the reminder to clean the drum.
6	Display the number of finished programmes (PC).
7	Restore the appliance to the factory settings (rES).

17.2 Changing the basic settings

1. To call up the basic settings, press and hold **+ Optionen** for approx. 3 seconds.
 - ✓ The display shows .
2. Use the programme selector to select the required basic setting.
→ *Page 34*

3. Adjust the basic setting:
 - ▶ To change the value, press **—** or **+**.
 - ▶ To reset the appliance to the factory settings, press and hold **▷|||** for approx. 3 seconds.
4. To save the changes, switch off the appliance.

18 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

18.1 Cleaning the drum and cleaning fluff

Clean the drum if you have carried out 20 washing cycles at a temperature of 40 °C or lower, if  flashes, or if you have not used the appliance for a prolonged period, but at least once a year. Also clean the drum if you find fluff on the laundry after drying.

CAUTION

Risk of injury!

Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

- ▶ Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- ▶ Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.

Tip: You can get our tested and approved machine care and machine cleaner products online at <https://www.siemens-home.bsh-group.com/store> or from customer service.

- ▶ Run the  **Baumwolle 90°C** programme without laundry but with washing powder that contains oxygen bleach or a cleaning agent for caring for the inside of the appliance.


Note: If you only want to clean fluff, you can do this without washing powder or cleaning agent.

18.2 Cleaning the detergent drawer


Note: Scan the QR code to see an animation of the process.




1. Pull out the detergent drawer.
2. Press down on the insert and remove the detergent drawer.

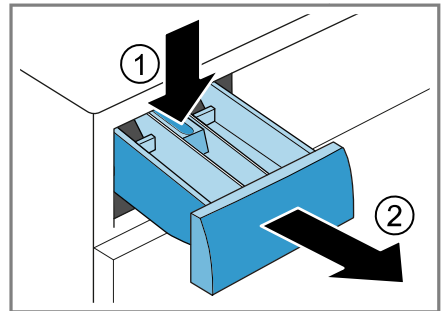


3. Pull out the insert upwards.

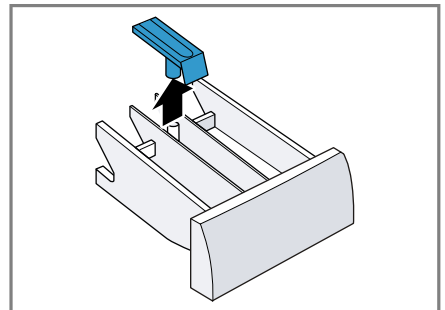


4. Clean the detergent drawer and insert with water and a brush, and then dry them.

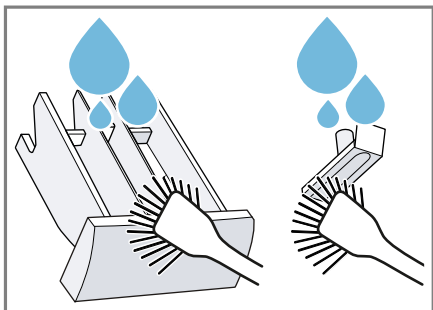

5. Fit the insert and click it into place.

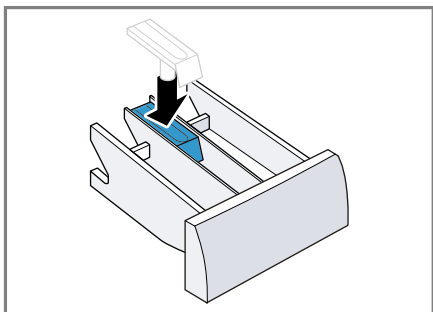

6. Clean the opening for the detergent drawer.

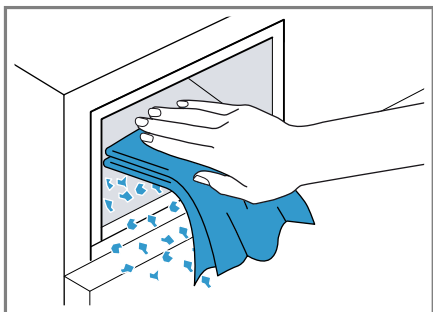

7. Push in the detergent drawer.

18.3 Cleaning the drain pump


Clean the drain pump regularly, at least once a year, as well as in the event of faults, e.g. blockages or rattling noises.

Note: Scan the QR code to see an animation of the process. Observe the following safety instructions before you start the animation.




Emptying the drain pump


1. Turn off the tap.
2. Put the appliance into standby mode. → *Page 31*
3. Disconnect the appliance's mains plug from the power supply.
4. Open and remove the maintenance flap.

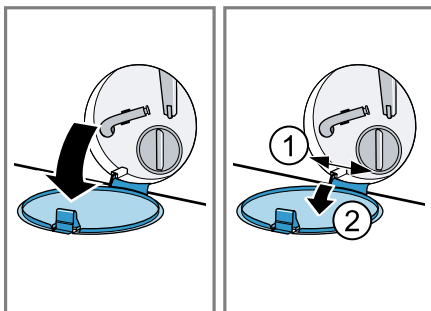

5. Slide a suitable receptacle under the opening for draining the detergent solution.

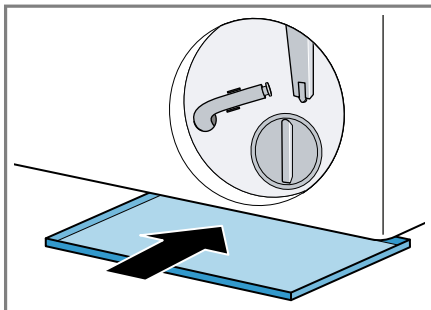

6. Take the drain hose out of the holder.

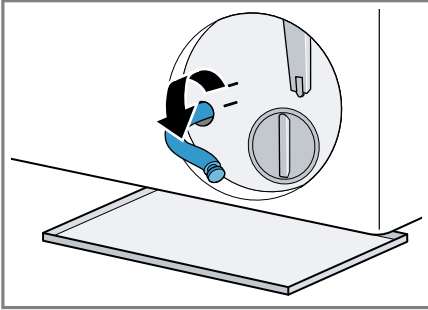


7. **⚠ CAUTION – Risk of scalding!**


When you wash at high temperatures, the detergent solution gets hot.

- ▶ Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

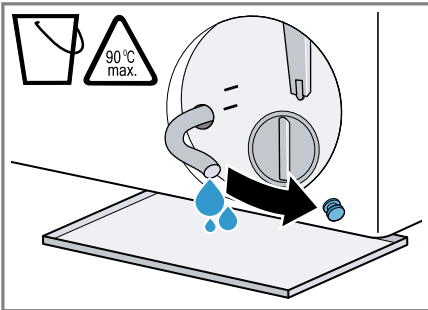

8. Once emptied, press firmly on the locking cap.

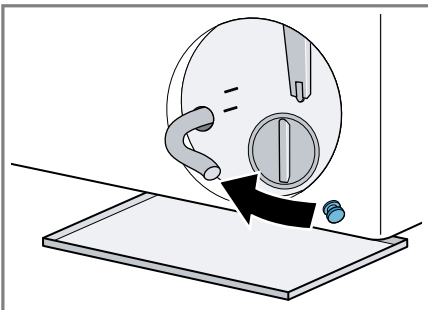


9. Insert the drain hose into the holder.

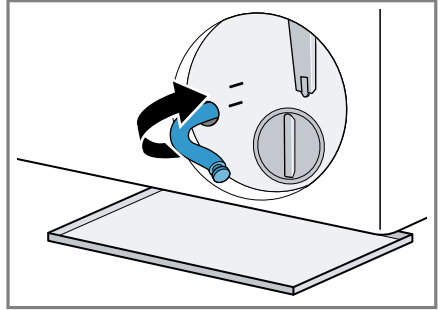

Cleaning the drain pump


Requirement: The drain pump is empty. → *Page 36*

1. Since water may remain in the drain pump, unscrew the pump cap carefully.
 - ▶ The filter insert in the pump housing may become stuck due to coarse particles of dirt. Loosen the dirt and remove the filter insert.

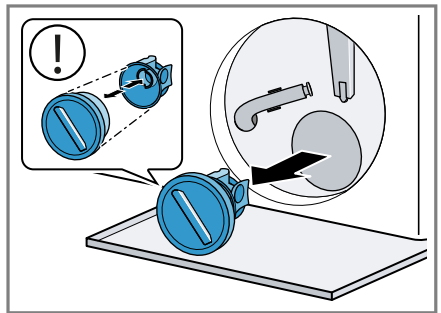


The pump cap is comprised of two parts which can be taken apart for cleaning.


2. Clean the interior, the thread on the pump cap and the pump housing.

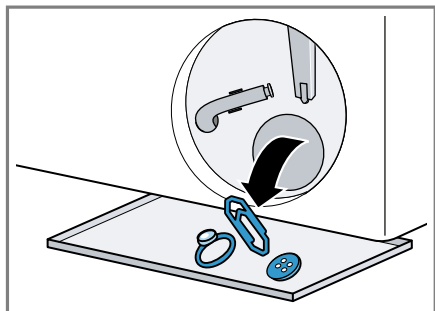


3. Ensure that both impellers can turn.

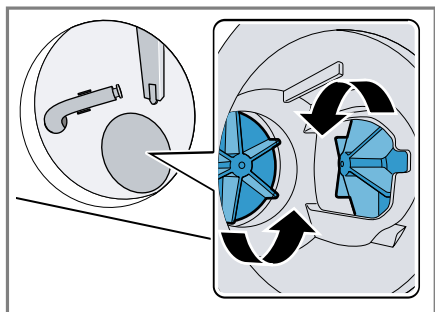

4. Insert the pump cap.
 - Ensure that the parts of the pump cap are correctly assembled.

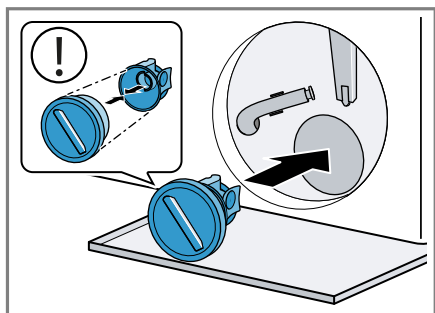


5. Screw the pump cap as far as it will go.

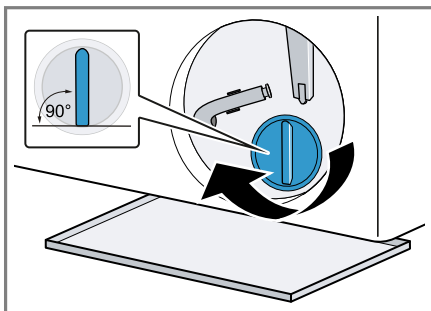

The handle on the pump cap must be in a vertical position.


6. Insert and close the maintenance flap.

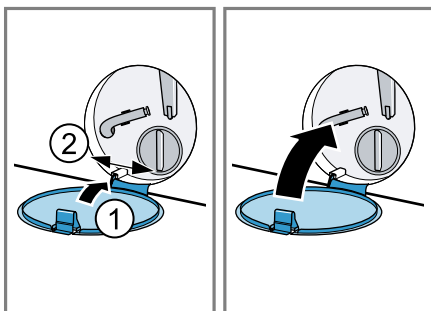


18.4 Cleaning the rubber gasket

Clean the rubber gasket regularly.

1. Open the door. → *Page 30*
2. Remove any foreign objects and fluff from the rubber gasket.

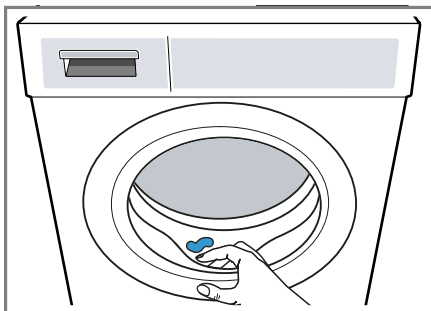

3. Remove any blockages from the intake opening.

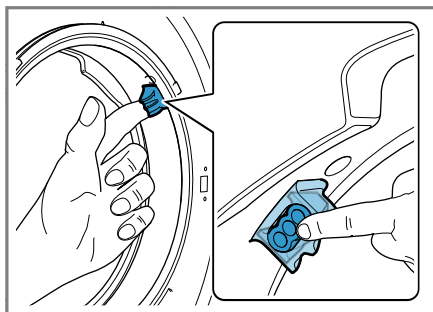

4. Clean the outside and the inside of the rubber gasket with a damp cloth and wipe dry.

19 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

WARNING

Risk of electric shock!

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting
The display goes out and  flashes.	Energy-saving mode is active ▶ Press  .
E:36 -10 / E:30 -80 The detergent solution is not being pumped out.	The water outlet hose is connected too high, is kinked or trapped, or has been extended impermissibly. ▶ Check the installation of the water outlet hose. → <i>Page 13</i>
	Drain pipe or water outlet hose is blocked. ▶ Clean the drain pipe and the water outlet hose.
	The drain pump is blocked or the pump cover is not installed correctly. ▶ Check that the pump cover is installed correctly. → <i>Page 36</i> ▶ Clean the drain pump. → <i>Page 36</i>

Fault	Cause and troubleshooting
E:36 -10 / E:30 -80 The detergent solution is not being pumped out.	Detergent dosage is too high. ▶ Reduce the amount of detergent for the next washing cycle with the same load.
E:36 -25 -26	Drain pump is blocked. ▶ Clean the drain pump. → <i>Page 36</i>
H:32	The appliance has interrupted the spin cycle because the laundry is unevenly distributed. ▶ Redistribute the laundry in the drum.
E:30 -10 / H:95 / 𐀀	The tap is turned off. ▶ Turn on the tap.
	The water inlet hose is kinked or jammed. ▶ Check the installation of the water inlet hose. → <i>Page 13</i>
	The filter in the water inflow is blocked. ▶ Clean the filter in the water inflow. Scan the QR code to see an animation of the process. 
	The water pressure is low. ▶ Check whether the tap has sufficient water pressure.
E:35 -10	The appliance is leaking. 1. Turn off the water tap. 2. Call customer service. → <i>Page 47</i>
E:30 -20	Critical malfunction. ▶ Turn off the water tap. With this error message, the appliance starts a draining process. 1. Wait approx. 5 minutes until the draining process ends. 2. Restart the appliance. If required, start the draining process again. 3. If the fault persists, call customer service. → <i>Page 47</i>
	Detergent dosage is too high. ▶ Reduce the amount of detergent for the next washing cycle with the same load.

Fault	Cause and troubleshooting
E:30 -20	Additional water has been added. ▶ Do not add any extra water to the appliance while it is operating.
All other error codes.	Malfunction 1. To restart the appliance, press and hold  for approximately 5 seconds. 2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. 3. If the fault persists, call customer service. → <i>Page 47</i> Please specify the exact error message when calling. If possible, document the fault with photos and videos.
: flashes and the programme is paused.	The appliance has detected fluctuations in the power supply. No action required. If the power supply is stable, the programme continues to run as normal.
 or heavy foam build-up.	Detergent dosage is too high. ▶ Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into compartment II (not for outdoor clothing, sportswear or items stuffed with down). ▶ Reduce the amount of detergent for the next washing cycle with the same load.
 flashes.	The door is not completely closed. 1. Ensure that there is no laundry trapped in the door. 2. Close the door.
	Drum cleaning is required. ▶ Clean the drum. → <i>Page 35</i>
The programme is paused or has ended, but the drum is rotating.	Not a fault. The cooling process is active. No action required. Note: Do not change the programme during the cooling process. The cooling process takes up to 10 minutes.

Fault	Cause and troubleshooting
The display and buttons do not respond.	Software fault. 1. To restart the appliance, press and hold  for approximately 5 seconds. 2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
Home Connect is not working properly.	Different causes are possible. 1. Reset the appliance network settings. → <i>Page 33</i> 2. Set up Home Connect again. → <i>Page 32</i> ► Go to www.home-connect.com.
▶ cannot be operated.	Not a fault. The drying phase is active. No remedial action possible.
The programme does not start.	Childproof lock is activated. ► Deactivate the childproof lock. → <i>Page 32</i>
The programme is paused or has been interrupted, but the door will not open.	Fertig in is activated. ► Check whether Fertig in is activated. → <i>Page 22</i>
	The temperature is too high. ► Start the  Spülen programme or wait until the temperature has dropped. Water level is too high. ► Start the  Schleudern programme or a suitable draining programme. → <i>Page 24</i>
The door cannot be opened due to a power cut.	The door is locked. ► Open the door using the emergency release. → <i>Page 45</i>
Drum jerks after the programme starts.	Not a fault. An internal motor test is started. No action required.
Drum rotates, water does not flow in.	Not a fault. Load detection is active for up to 2 minutes. No action required.
No water is visible in the drum.	Not a fault. Water is below the visible area. No action required.
The spin cycle runs several times.	Not a fault. The appliance eliminates an imbalance by repeatedly redistributing the laundry. No action required.
The appliance is vibrating, 'wandering' and making loud noises during the spin cycle.	Appliance is not correctly aligned. ► Align the appliance. → <i>Page 14</i>
	The appliance feet are not fixed. ► Secure the appliance's feet. → <i>Page 14</i>

Fault	Cause and troubleshooting
The appliance is vibrating, 'wandering' and making loud noises during the spin cycle.	Transit bolts have not been removed. ► Remove the transit bolts.
High spin speed not reached.	Knitterschutz is activated. ► Select a programme that is suitable for the type of fabric. → <i>Page 24</i> The appliance is using a reduced spin speed to eliminate an imbalance. No action required.
The programme duration changes during the wash cycle.	Not a fault. The programme sequence is optimised electronically, another rinse cycle is switched on due to heavy foam build-up, or an imbalance is eliminated. No action required.
The drying time is too long.	The ambient temperature is higher than 30 °C. ► Ensure that the ambient temperature is below 30 °C. The air circulation at the appliance's installation location is insufficient. ► Ventilate the appliance's installation location. Fluff has accumulated in the drum. ► Start the programme without any laundry or detergent.
Water intake during the drying phase.	Not a fault. The drying phase requires water. No action required.
Spinning during the drying phase.	Not a fault. Thermal spinning is active. No action required.
Whooshing, hissing, whirring or sucking noises.	Not a fault. Water is pumped in, the process fan is active, or detergent solution is pumped out. No action required.
Banging noises, rattling in the drain pump.	A foreign object is in the drain pump. ► Clean the drain pump. → <i>Page 36</i>
There are detergent residues on the laundry.	Detergents may contain water-insoluble substances that deposit on the laundry. ► Start the  Spülen programme or brush out the laundry after drying.
Fluff on the laundry.	Fluff has accumulated in the drum. ► Start the programme without any laundry or detergent.

Fault	Cause and troubleshooting
The laundry is too wet after the spinning cycle.	A low spin speed is selected. ▶ Start the  Schleudern programme. ▶ The next time you run a wash cycle, set a higher spin speed. The appliance is using a reduced spin speed to eliminate an imbalance. 1. Redistribute the laundry in the drum. 2. Start the  Schleudern programme.
	Knitterschutz is activated. ▶ Set a suitable programme. → <i>Page 24</i>
	The selected programme is unsuitable for the type of fabric. ▶ Set a suitable programme for subsequent drying. → <i>Page 24</i>
The laundry is too damp.	The load is too large. ▶ Observe the programme's maximum load capacity. → <i>Page 24</i>
	After the end of the programme, warm laundry feels damper than it actually is. 1. Remove the laundry from the drum as soon as the drying programme has finished. 2. Spread the items of laundry for cooling.
	The selected dryness level is unsuitable. ▶ Change the dryness level. → <i>Page 32</i>
	The load is too small. ▶ Set a suitable programme for subsequent drying. → <i>Page 24</i>
	The laundry has not been spun sufficiently. ▶ Always select the highest possible spin speed for the washing programme in question.
	The selected programme is unsuitable for the type of fabric. ▶ Set a suitable programme. → <i>Page 24</i>
Creasing.	A high spin speed is selected. ▶ The next time you run a wash cycle, set a lower spin speed.
	The load is unsuitable. ▶ Observe the programme's maximum load capacity. → <i>Page 24</i> ▶ Prepare the laundry. → <i>Page 28</i>

Fault	Cause and troubleshooting
Creasing.	The laundry lies in the drum for too long after drying. 1. Remove the laundry from the drum as soon as the drying programme has finished. 2. Spread the items of laundry for cooling. Easy Care fabrics have been dried for too long. ► Change the dryness level. → <i>Page 32</i>
Water is leaking out at the water inlet hose.	The water inlet hose is not correctly connected or is damaged. ► Check the installation of the water inlet hose. → <i>Page 11</i> In the event of damage, call customer service. → <i>Page 47</i>
Water is leaking out at the water outlet hose.	The water outlet hose is not connected correctly or is damaged. ► Check the installation of the water outlet hose. → <i>Page 11</i> Replace the water outlet hose if it is damaged.
Water is leaking from below the door.	Dirt on the door or seal causes leaks. ► Clean the door and the seal.
Detergent or fabric softener drips off the seal and collects on the door or in the seal fold.	There is too much detergent or fabric softener in the detergent drawer. ► When dosing, observe the marking in the detergent drawer. → <i>Page 30</i>
Residual water is present in the compartment ☼.	Insert in compartment ☼ is blocked. ► Clean the detergent drawer. → <i>Page 35</i>
Fabric softener remains in the detergent drawer.	The use of fabric softener is not supported for the selected programme. ► Check whether the use of fabric softener is supported for the selected programme. → <i>Page 24</i>
Odours have formed in the appliance.	Humidity and detergent residue may promote the formation of bacteria. ► Clean the drum. → <i>Page 35</i> ► If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate.


19.1 Emergency release

Releasing the door

Requirement: The drain pump is empty. → *Page 36*

1. **ATTENTION** – Escaping water may cause material damage.
 - Do not open the door if you can see water through the glass.

Pull the emergency unlock downwards with a tool and release.

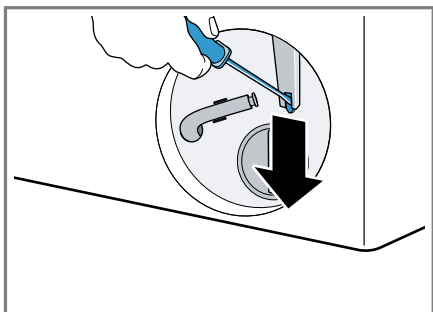

- ✓ The door lock is released.
- 2. Insert the maintenance flap and lock it into place.
- 3. Close the service flap.

20 Transportation, storage and disposal


20.1 Removing the appliance

1. Turn off the tap.
2. Empty the water inlet hose.
3. Put the appliance into standby mode. → *Page 31*
4. Unplug the appliance's mains plug.
5. Drain the water.
→ *"Cleaning the drain pump", Page 36*
6. Detach the hoses.

20.2 Inserting the transit bolts

Secure the appliance before transportation using transit bolts in order to prevent transport damage.

1. Use a screwdriver to remove the 4 cover caps.

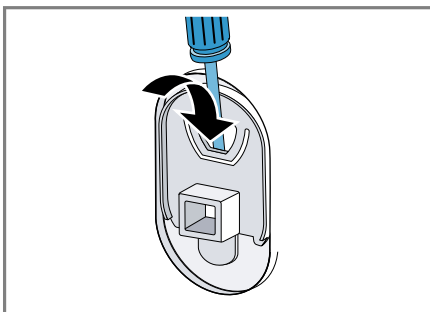

Keep the cover caps.

2. Insert the 4 transit bolts.

20.3 Using the appliance again

- For further information, see Installation and connection → *Page 11* and Starting an empty washing cycle → *Page 15*.

20.4 Disposing of old appliance

Valuable raw materials can be re-used by recycling.

WARNING

Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

1. Unplug the appliance from the mains.

2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

21 Customer Service

Function-relevant genuine spare parts according to the corresponding Eco-design Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and

the consecutive numbering (Z-Nr.) of your appliance.

You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

21.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

21.2 AQUA-STOP guarantee

In addition to warranty claims against the seller under the purchase agreement and in addition to our manufacturer's warranty, we offer compensation under the following conditions.

- If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure protection from water damage, the appliance must be connected to the power supply.
- The liability guarantee is valid for the service life of the appliance.
- A claim can only be made under the guarantee if the appliance has been correctly installed and con-

- nected with Aqua-Stop according to our instructions; this also includes correctly fitting the Aqua-Stop extension (genuine accessory). Our guarantee does not cover defective supply lines or fittings up to the Aqua-Stop connection on the tap.
- If your appliance is fitted with Aqua-Stop, you can in principle leave your appliance unattended during operation and the tap turned on afterwards. The tap only needs to be turned off if you are away from home for a long period, e.g. on holiday for several weeks.

22 Consumption values

The following information is provided in accordance with the EU Ecodesign Regulation. The values specified for programmes other than **Eco 40-60** are only given as a guide and were determined in accordance with the applicable standards EN60456 and EN62512.

Programme	Load (kg)	Pro-gramm e dura-tion (h:min) ¹	Energy con-sump-tion (kWh/cycle) ¹	Water con-sump-tion (l/cycle) ¹	Max-imum temper-ature (°C) 5 mins ¹	Spin speed (rpm) ¹	Resid-ual mois-ture (%) ¹
Eco 40-60 ²	9.0	3:47	0.950	65.0	39	1400	53.00
Eco 40-60 ²	4.5	2:50	0.635	50.0	40	1400	53.00
Eco 40-60 ²	2.5	2:20	0.190	35	24	1400	53.00
Eco 40-60 + Wash+Dry +  ²	6.0	8:05	3.750	90.0	25	-	-0.1
Eco 40-60 + Wash+Dry +  ²	3.0	4:10	2.000	52.0	24	-	-0.1
 Baumwolle 20 °C	9.0	3:36	0.480	98.0	25	1400	50.00
 Baumwolle 40 °C	9.0	3:26	1.250	98.0	44	1400	50.00
 Baumwolle 60 °C	9.0	3:18	1.950	98.0	61	1400	50.00

¹ Due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions, the actual values may deviate from the stated values.

² Test programme in accordance with the EU Ecodesign Directive and the EU Energy Labelling Regulation with cold water (15 °C).

Programme	Load (kg)	Programme duration (h:min) ¹	Energy consumption (kWh/cycle) ¹	Water consumption (l/cycle) ¹	Maximum temperature (°C) 5 mins ¹	Spin speed (rpm) ¹	Residual moisture (%) ¹
 Baumwolle 40 °C + Vorwäsche	9.0	3:56	1.215	110.0	43	1400	50.00
 Pflegeleicht 40 °C	4.0	2:35	0.860	58.0	44	1400	29.00
 Schnell/Mix 40 °C	4.0	1:07	0.700	49.0	41	1400	45.00
 Wolle 30 °C	2.0	0:41	0.180	45.0	22	800	30.00

23 Technical data

Appliance height	84.8 cm
Appliance width	59.8 cm
Appliance depth	62.2 cm
Appliance depth with door closed	64.5 cm
Appliance depth with door open	114.2 cm
Weight	84.8 kg
Maximum load	9.0 kg
Mains voltage	220-240 V, 50 Hz
 Minimum installation protection	10 A
Nominal power	1900-2300 W

Power consumption

- Standby mode: 0.50 W
- Left-on mode: 0.50 W
- Time until the networked standby mode is set (Wi-Fi): 5 mins
- Networked standby mode (Wi-Fi): 2.00 W

Water pressure

- Minimum: 100 kPa (1 bar)
- Maximum: 1000 kPa (10 bar)

Length of the water inlet hose

150 cm

¹ Due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions, the actual values may deviate from the stated values.

Length of the wa- ter outlet hose	150 cm
--------------------------------------	--------

Length of the power cord	210 cm
-----------------------------	--------

This product contains light sources from energy efficiency class F. These light sources are available as a spare part and must only be replaced by trained specialist staff.

More information about your model can be found online at <https://eprel.ec.europa.eu/qr/1450872>¹.

This web address is linked to the official EU EPREL product database.

23.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your

Home Connect app: "Profile -> Legal information -> Licence Information".²

You can download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from oss-

request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The source code will be made available to you on request.

Please send your request to oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

¹ Only applies to countries in the European Economic Area

² Depending on the appliance specifications

24 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at *siemens-home.bsh-group.com* among the additional documents on the product page for your appliance.



Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.¹

A detailed Declaration of Conformity can be found online at *siemens-home.bsh-group.com/uk/* among the additional documents on the product page for your appliance.¹



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW
5-GHz band (5150–5350 MHz + 5470–5725 MHz): max. 180 mW

	BE	BG	CZ	DK	DE	EE	IE	EL	ES
	FR	HR	IT	CY	LI	LV	LT	LU	HU
	MT	NL	AT	PL	PT	RO	SI	SK	FI
	SE	NO	CH	TR	IS	UK (NI)			

5 GHz WLAN (Wi-Fi): For indoor use only.

AL	BA	MD	ME	MK	RS	UK	UA
----	----	----	----	----	----	----	----

5 GHz WLAN (Wi-Fi): For indoor use only.

24.1 Statement of Compliance for Great Britain

The full Statement of Compliance according to the Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023 can be found online at *www.siemens-home.bsh-group.com/uk/home* among the additional documents on the product page for your appliance.

Product type

This statement of compliance covers the products described in this information for use whose model identifier group is seen on the title page. The full model identifier is made up of the characters before the slash in the product number (E no.) which can be found on the rating plate. Alternatively, you can also find the model identifier in the first line of the UK Energy Label.

¹ Only applies to Great Britain

Name and address of manufacturer

BSH Hausgeräte GmbH, Carl-Wery-Strasse 34, 81739 München, Germany

This statement of compliance is prepared by the manufacturer.

The manufacturer, BSH Hausgeräte GmbH deems that it has complied with

- provision 5.1-1 of ETSI EN 303 645 v2.1.1 and, where relevant, provision 5.1-2 of ETSI EN 303 645 v2.1.1;
- provision 5.2-1 of ETSI EN 303 645 v2.1.1;
- provision 5.3-13 of ETSI EN 303 645 v2.1.1.

Support period

BSH Hausgeräte GmbH will provide security updates that are necessary to maintain the main functions free of charge until at least 28/02/2034.



A series of horizontal lines for writing, starting with a solid line and followed by alternating solid and dashed lines.



A series of horizontal lines for writing, starting with a solid line and followed by alternating solid and dashed lines.



A series of horizontal lines for writing, starting with a solid line and followed by alternating solid and dashed lines.

EN Manufactured by BSH Hausgeräte GmbH under the trademark licence of Siemens AG

Valid within Great Britain:
Imported to Great Britain by
BSH Home Appliances Ltd.
Grand Union House
Old Wolverton Road
Wolverton, Milton Keynes
MK12 5PT
United Kingdom

BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY
siemens-home.bsh-group.com



9001771556 (050618)
en