

 
T-fun

Quick Start Guide (NC50)





 :  3-5s

1



T-fun NC50

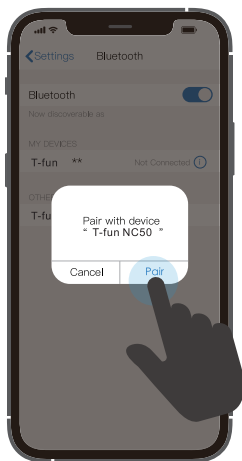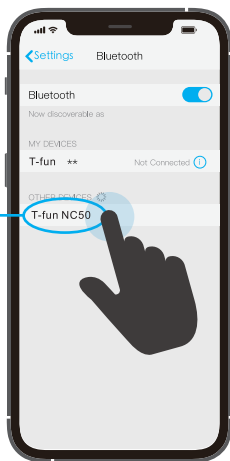

2



⏻ ×1: ▶/⏸/↶/↷

⏻ ×2: 🗣️/Siri 🍏

⏻ ×3: 🔄



ANC ×1: 🧑/🧑/🧑
ANC ADT



+ ×1: 🔊)+

+ 2-3s: ▶▶



⏮ × 1: 🔊 -

⏮ 2-3s: ⏮



⏻ ⏮ 5s: ~~⏮~~



macOS



Bluetooth



USB Dongle



USB



System Preferences



Sound




Output

Select " T-fun NC50 "

Input

Select " T-fun NC50 "

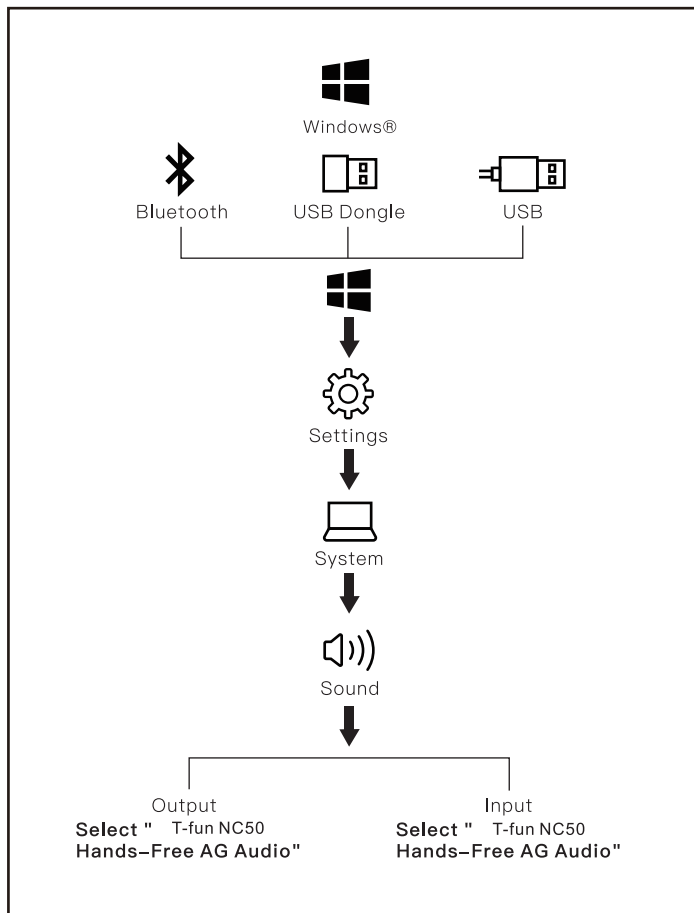



32°F(0°C) - 113°F(45°C)





If any part of your product is damaged, do not use it. Contact your authorized T-fun dealer or T-fun customer services.

Wenn ein Teil Ihres Produkts beschädigt ist, verwenden Sie es nicht. Wenden Sie sich an Ihren autorisierten T-fun –Händler oder den T-fun –Kundendienst.

In caso una qualsiasi delle componenti del prodotto fosse danneggiata, non utilizzarla. Contattare il rivenditore autorizzato T-fun o il servizio clienti T-fun .

Si une partie de votre produit est endommagée, ne l'utilisez pas. Contactez votre revendeur T-fun agréé ou le service client T-fun .

製品の一部分が損傷している場合は、使用しないでください。T-fun の正規販売店または T-fun カスタマーサービスに連絡してください。

제품의 일부분이 훼손된 것을 확인한 경우, 사용하지 마십시오. 정식 T-fun 고객 서비스, 혹은 정식 T-fun 딜러에게 연락하십시오.

Se alguma das partes do seu produto estiver danificada não o utilize. Entre em contato com seu revendedor autorizado da T-fun ou com o atendimento ao cliente da T-fun .

אם חלק כלשהו במוצר שלכם פגום, אל תשתמשו בו. פנו למשווק המורשה או לשירות הלקוחות של T-fun .

service@t-fun.fun