


F8n Pro Firmware Update Guide

Copyright(C) 2022 ZOOM CORPORATION. All Rights Reserved.


Proper display is not possible on grayscale devices.

Introduction


■ Items to prepare

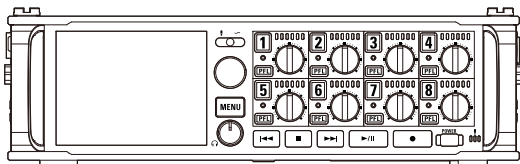


F8n Pro

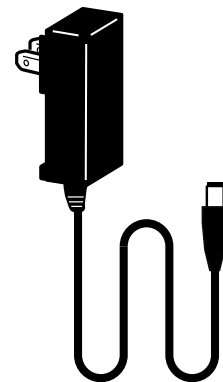

Dedicated AC adapter
ZOOM AD-19

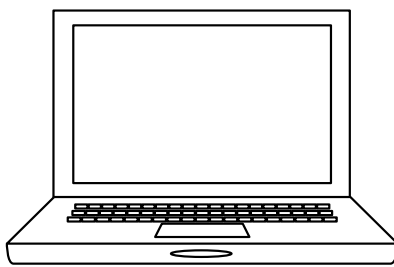

Windows or macOS computer
with Internet access

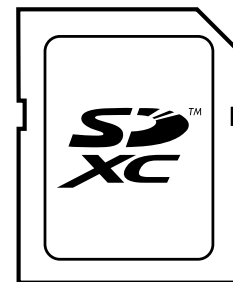

SD card

■ Firmware update process

1. Download the firmware update file.
2. Extract the ZIP file.
3. Copy the firmware update file to an SD card.
4. Update the firmware.
5. Confirm that the firmware has been updated correctly.

Updating the Firmware

This guide explains firmware update to version 1.10 as an example.

1. Download the firmware update file.




Download the ZIP file that contains the firmware update file from the F8n download page.




On Windows

2. Extract the ZIP file.

Select the folder that contains the downloaded ZIP file. Click ① “Compressed Folder Tools” followed by ② “Extract all”. This extracts the ZIP file.

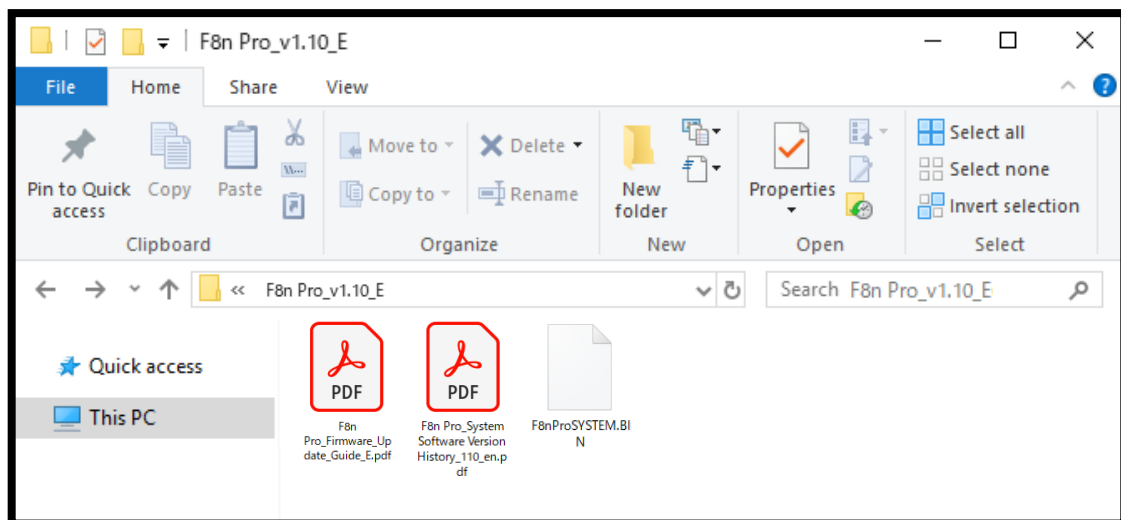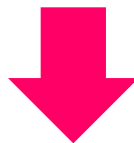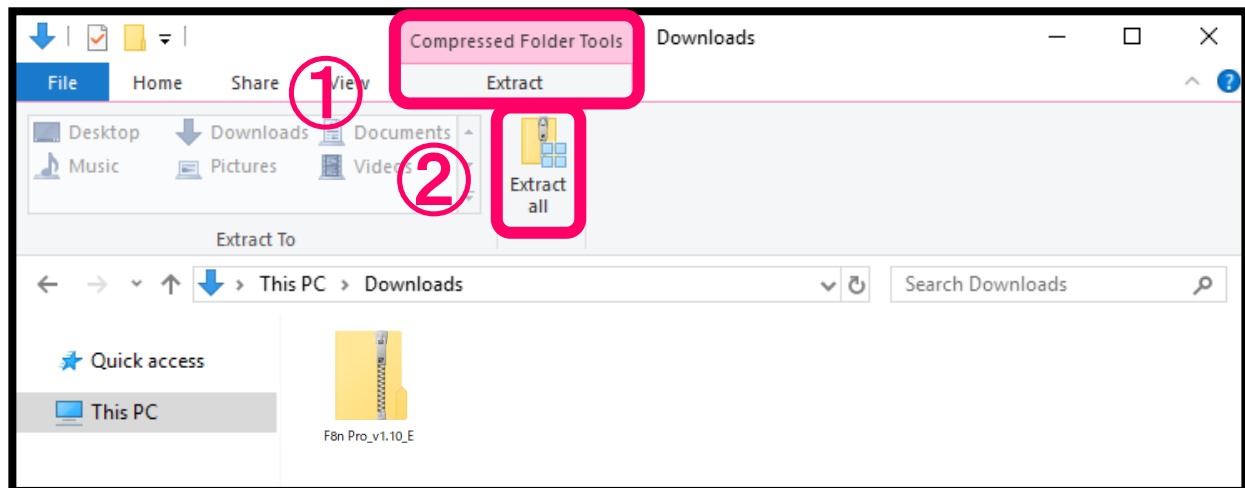

- 3.** Copy the firmware update file to an SD card.
Copy the “F8nProSYSTEM.BIN” file to an SD card.

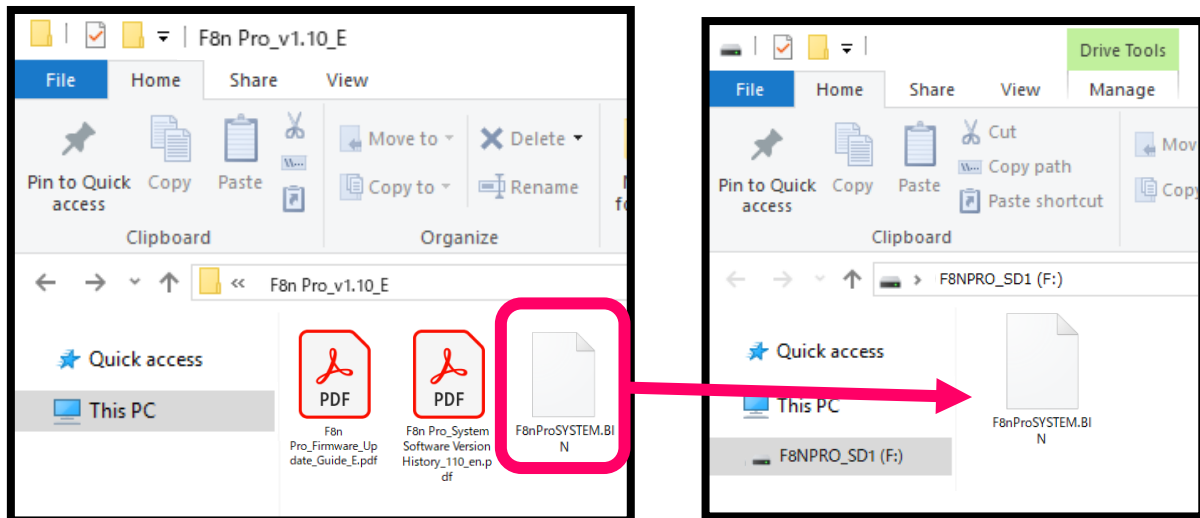


Firmware update file

Copy the firmware update file to an SD card.

On macOS


2. Extract the ZIP file.

After downloading, open the ① “Downloads” folder, which appears at the right end of the Dock by default. Then, click ②. Downloaded files will be shown.

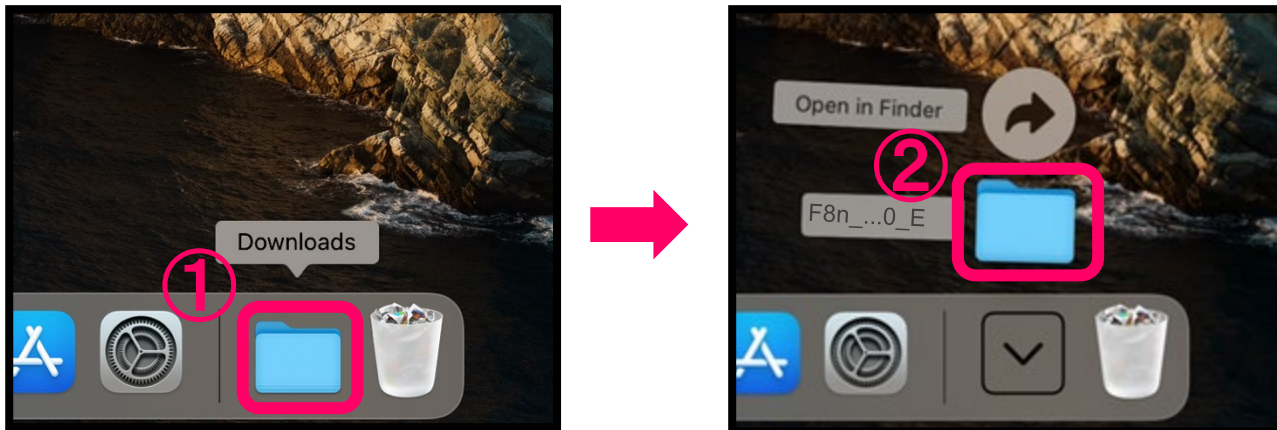

3. Copy the firmware update file to an SD card.

Copy the “F8nProSYSTEM.BIN” file to an SD card.

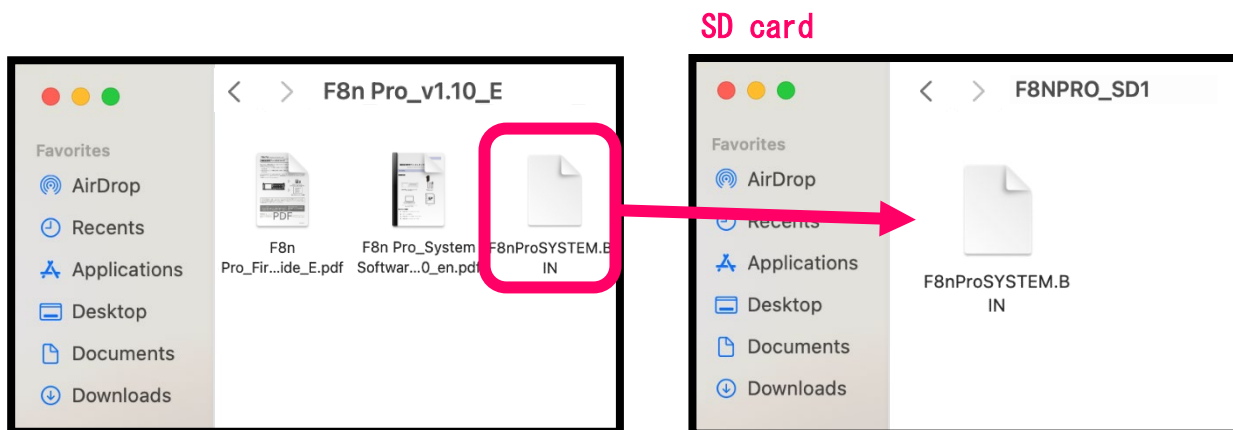

Firmware update file

Copy the firmware update file to an SD card.


The following procedures are the same on both Windows and macOS.

4. Install new batteries in the F8n Pro or connect an AC adapter.


NOTE

The firmware update is not possible if the remaining battery power is low.


5. Insert the SD card into the SD CARD 1 slot.

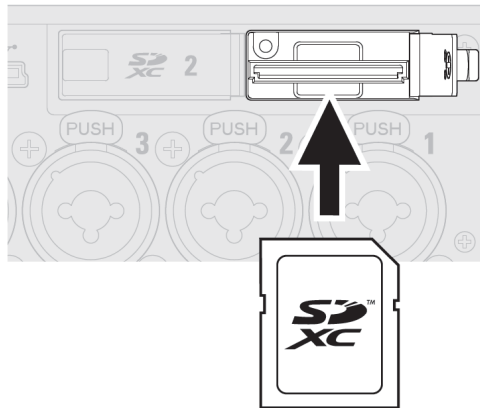

6. Turn the power on while pressing .

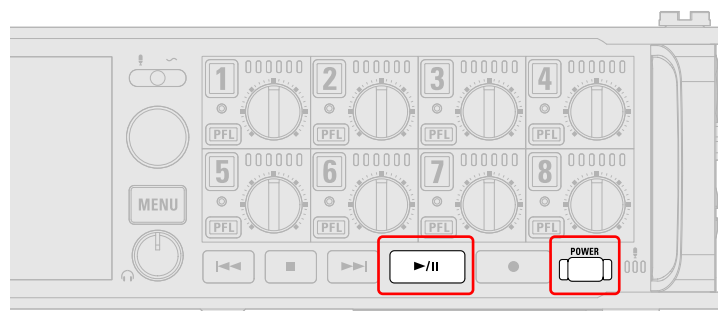

7. Use  to select "Yes", and press .

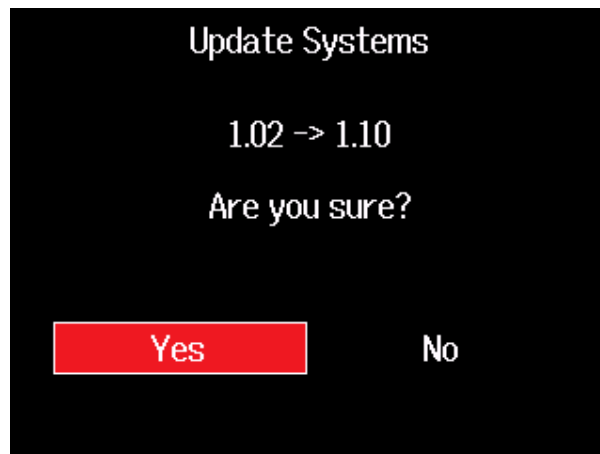


The firmware update starts.

NOTE

During the firmware update, do not turn the power off or remove the SD card. Doing so could cause the F8n to become unstartable.

8. After the firmware update completes, turn the power off.

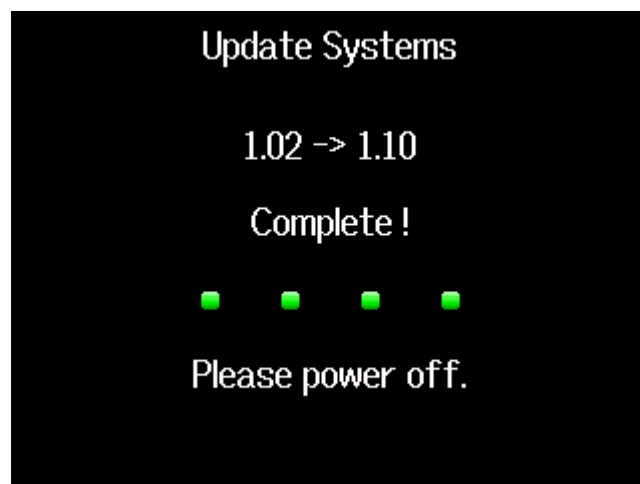

NOTE

In the unlikely event that firmware update should fail, conduct the procedures to install it again to update the firmware.


Confirming that the firmware has been updated correctly

Check the firmware versions used by the F8n Pro.


1. Press .

This opens the Menu Screen.


2. Use  to select "SYSTEM", and press .

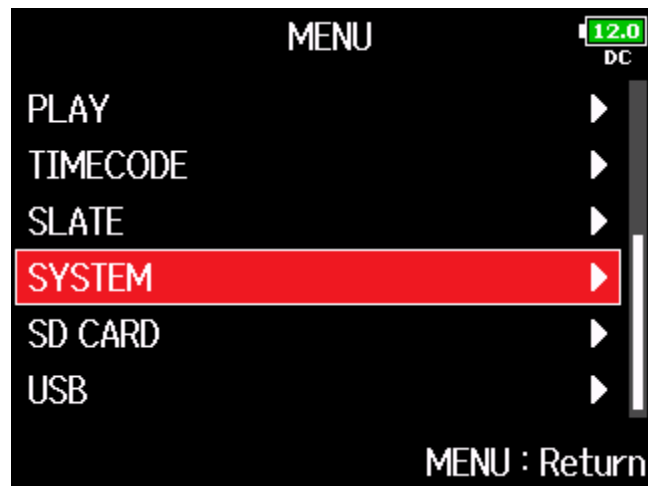

3. Use  to select " Firmware Version ", and press .

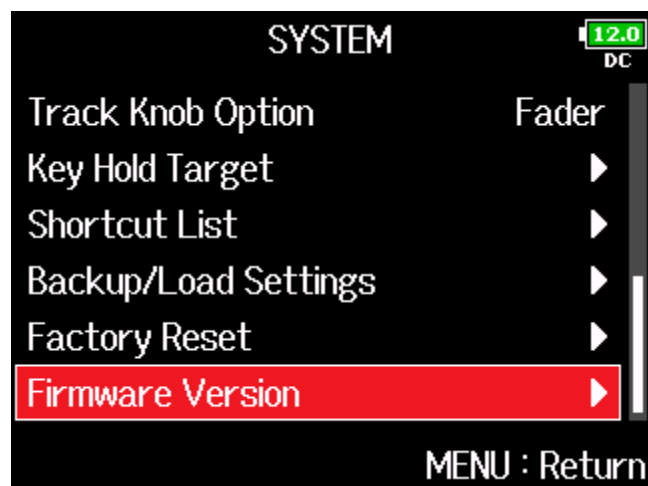

4. Check the firmware version.

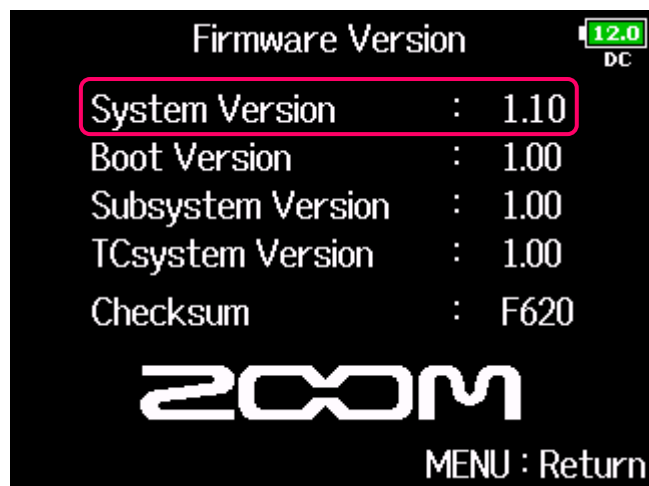

● ZOOM CORPORATION will bear no responsibility for any losses or third-party claims resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Windows® is a trademark or registered trademark of Microsoft® Corporation.
- macOS® is a trademark or registered trademark of Apple Inc.
- The SD, SDHC and SDXC logos are trademarks.
- The Bluetooth® word mark and logo are registered trademarks of Bluetooth SIG, Inc., and these marks are used under license by ZOOM CORPORATION.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations in these instructions might differ from actual screens.