

SALTER®

SINCE 1760

Metallics

Hand Blender

Practical, stylish design
for everyday use

**TITANIUM
EDITION
METALLIC
FINISH**



SALTER®

Hand Blender

Practical, stylish design
for everyday use

CONTENTS	PAGE
Safety Instructions	3–5
Care and Maintenance	5
Getting Started	5
In the Box	5
Features	6
Description of Parts	6
Instructions for Use	7
Before First Use	7
Using the Hand Blender	7–8
Troubleshooting	8
Storage	8
Specifications	8
Wiring Page	9
Guarantee	10–11

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not place the appliance in boiling hot water or very hot liquid.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

Care and Maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender motor unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender motor unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

The blender is not suitable for use in a dishwasher.

Note: The blender should be cleaned after each use.

Warning: Handle the attachments with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachment.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Hand Blender motor unit

Blender attachment

Instruction manual

Features


400 W power

2 speed settings

Stainless steel rod and blade

Detachable design for easy cleaning

Description of Parts

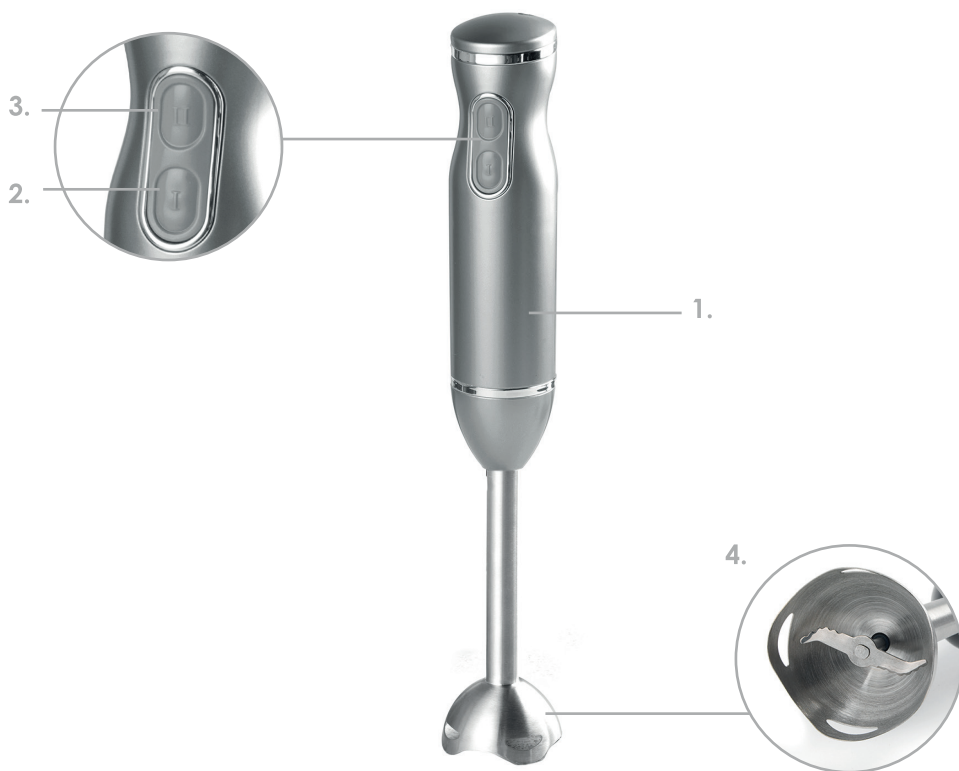

- 1. Hand Blender motor unit
- 2. Power button

- 3. Turbo button
- 4. Blender attachment

Instructions for Use

Before First Use

Wash the blender attachment in warm, soapy water, then rinse and dry thoroughly. Wipe the blender motor unit with a soft, damp cloth and allow to dry thoroughly. Never touch the blades; the attachment should be washed using a brush and dried carefully.

Do not immerse the blender motor unit in water or any other liquid.

Note: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

Using the Hand Blender

The blender attachment must be securely fitted before use; do not attempt to remove it until the attachment has stopped moving.

STEP 1: Before connecting the blender to the mains power supply, carefully fit the blender attachment to the blender motor unit by aligning the tabs and then twisting the blender attachment into place.

STEP 2: Place the food to be blended into a suitable bowl.

STEP 3: Plug in and switch on the blender at the mains power supply.

STEP 4: Holding the bowl steady, put the blade attachment into the food, then press and hold the desired speed button on the blender motor unit.

STEP 5: Once the food has been blended to the required consistency, release the speed button and wait for the blade to stop rotating before removing the blender from the food blender motor unit.

Caution: Switch off and unplug the blender from the mains power supply before adding or removing food from the bowl.

Warning: Do not operate the blender without food as this can cause damage.

Switch off and unplug the blender from the mains power supply before attempting to remove the blender attachment and before cleaning.

Max. constant operation time is 20 seconds. Allow to cool for 2 minutes before using the blender again.

Do not use the blender attachment to blend very hot or boiling liquid, as this may cause injury.

Troubleshooting

Problem	Possible Cause	Solution
The blender will not operate.	The blender is not connected to the mains power supply.	Plug in and switch on the blender at the mains power supply.
The blades will not move when in contact with ingredients.	The ingredients are hard vegetables such as potato, carrot and turnip, making it difficult for the blender to blend.	Only blend ingredients such as cooked vegetables or soft fruit.
The blender is getting hot.	The blender is under too much strain as the ingredients are too hard.	Only blend ingredients such as cooked vegetables or soft fruit. Use the blender in 20 second bursts, allowing the blender time to cool in-between uses.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK3102TITANIUM

Input: 220–240 V~ 50/60 Hz

Output: 400 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

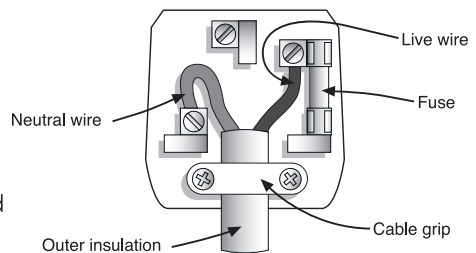

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR

GUARANTEE*

*To be eligible for the extended guarantee, go to www.saltercookshop.com and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD181218/MD000000/V1



GLOBAL SOURCING
THE ULTIMATE WAY

Manchester
OL9 0DD
United Kingdom
www.upgs.com


t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Ellie Drinkwater
Date:	28/01/2019
Project Name:	EEK186942 UPG EK3102TITANIUM IM
Type of Artwork:	Instruction Manual
Size:	A5 12 PP
Software Used:	Indesign CC
Typefaces:	Century Gothic, PR8 Charade

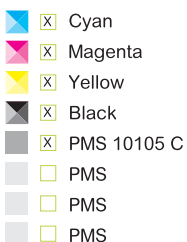

Artwork Version **1**

Artwork Scale 1:1

©2018 UP Global Sourcing UK Ltd.

All designs, images and artwork are the copyright of Ultimate Products Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY