




TURN ON

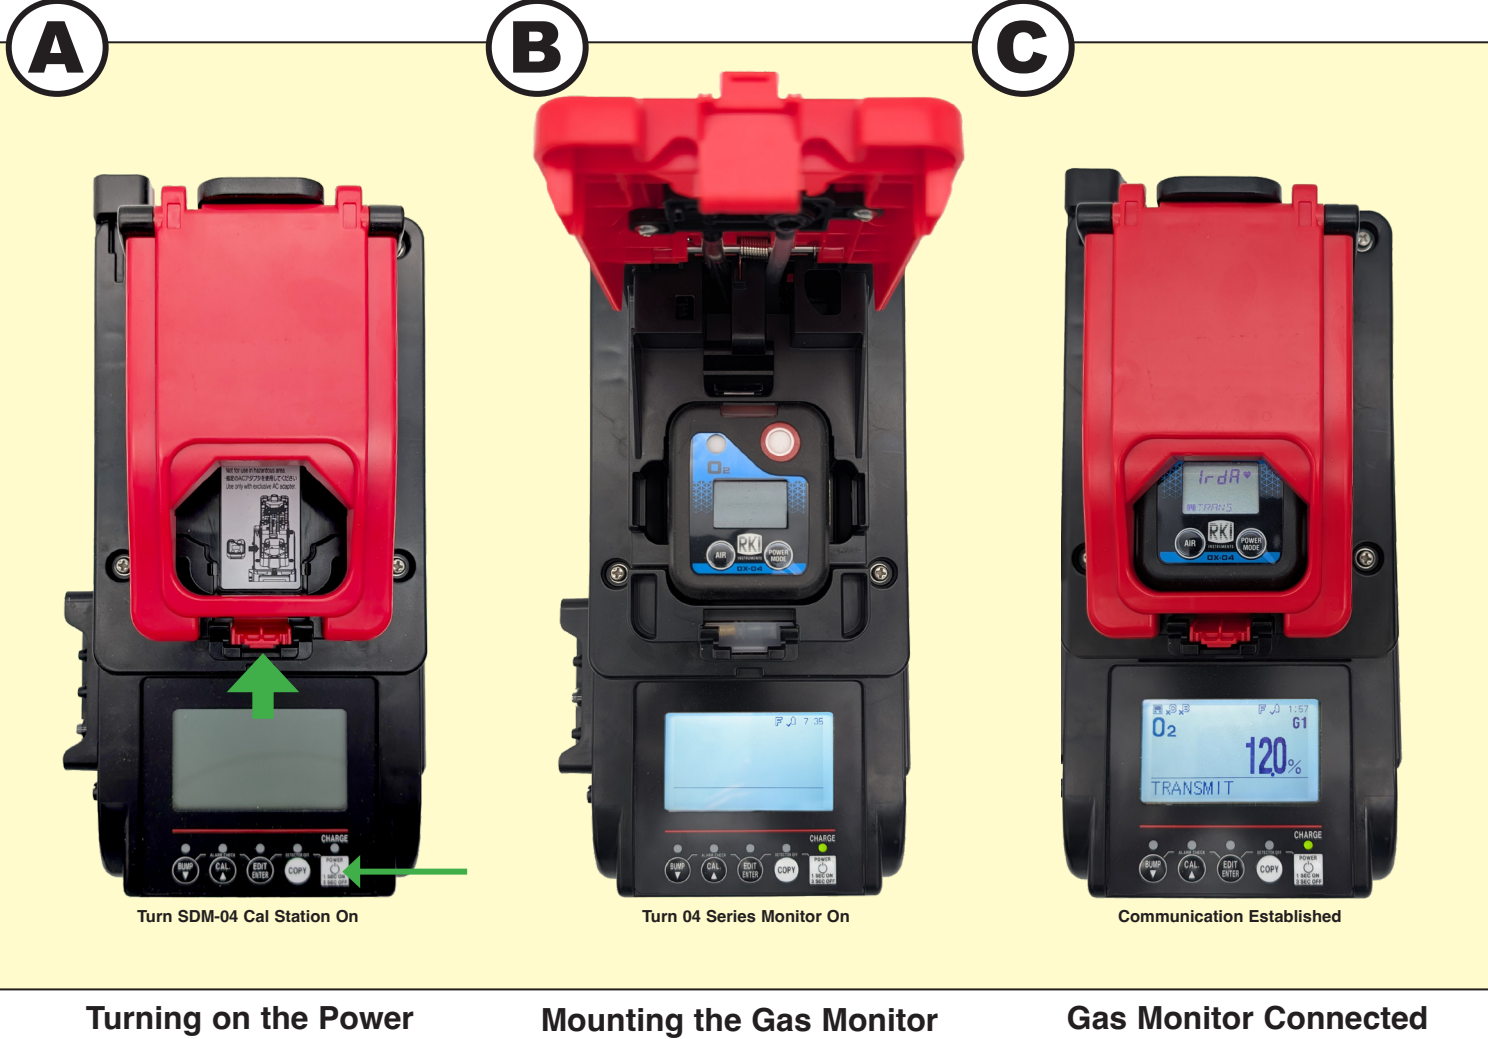


BUMP TEST

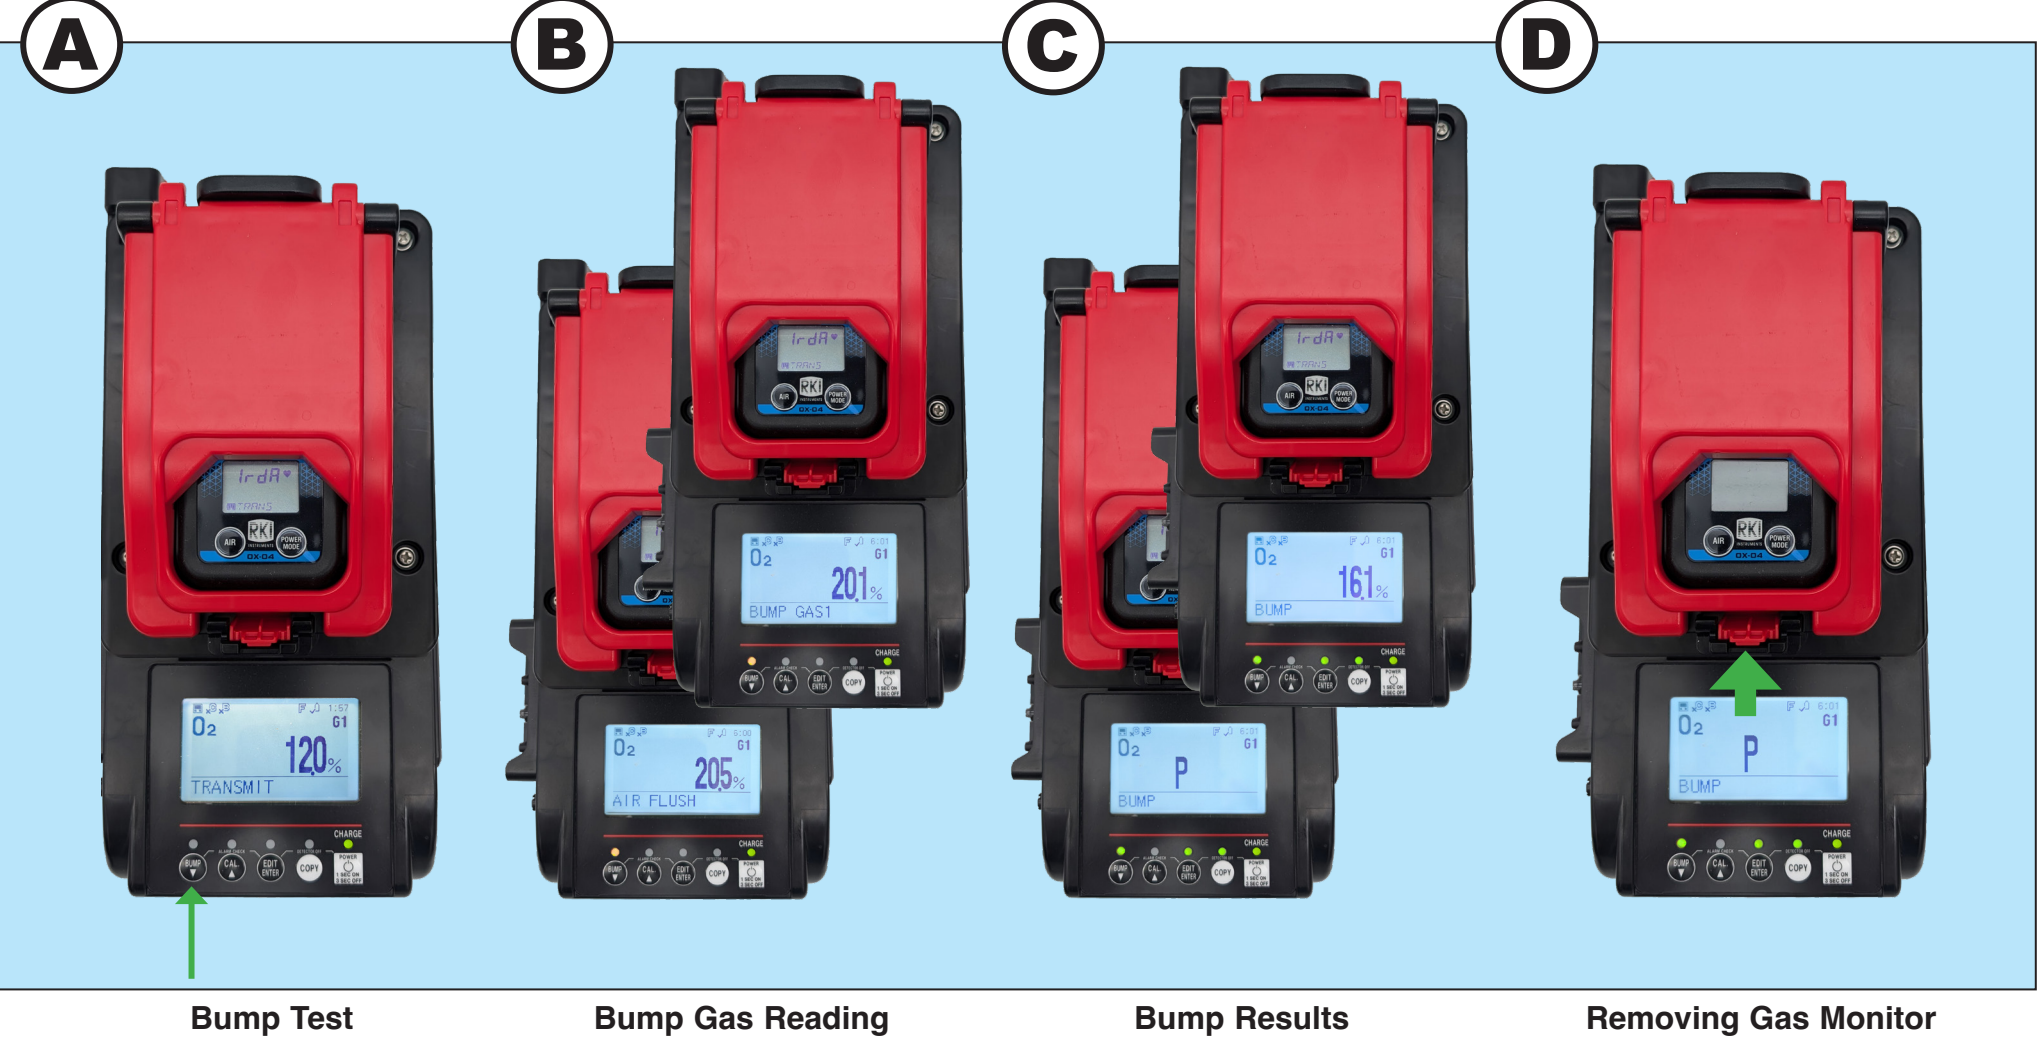

CALIBRATION

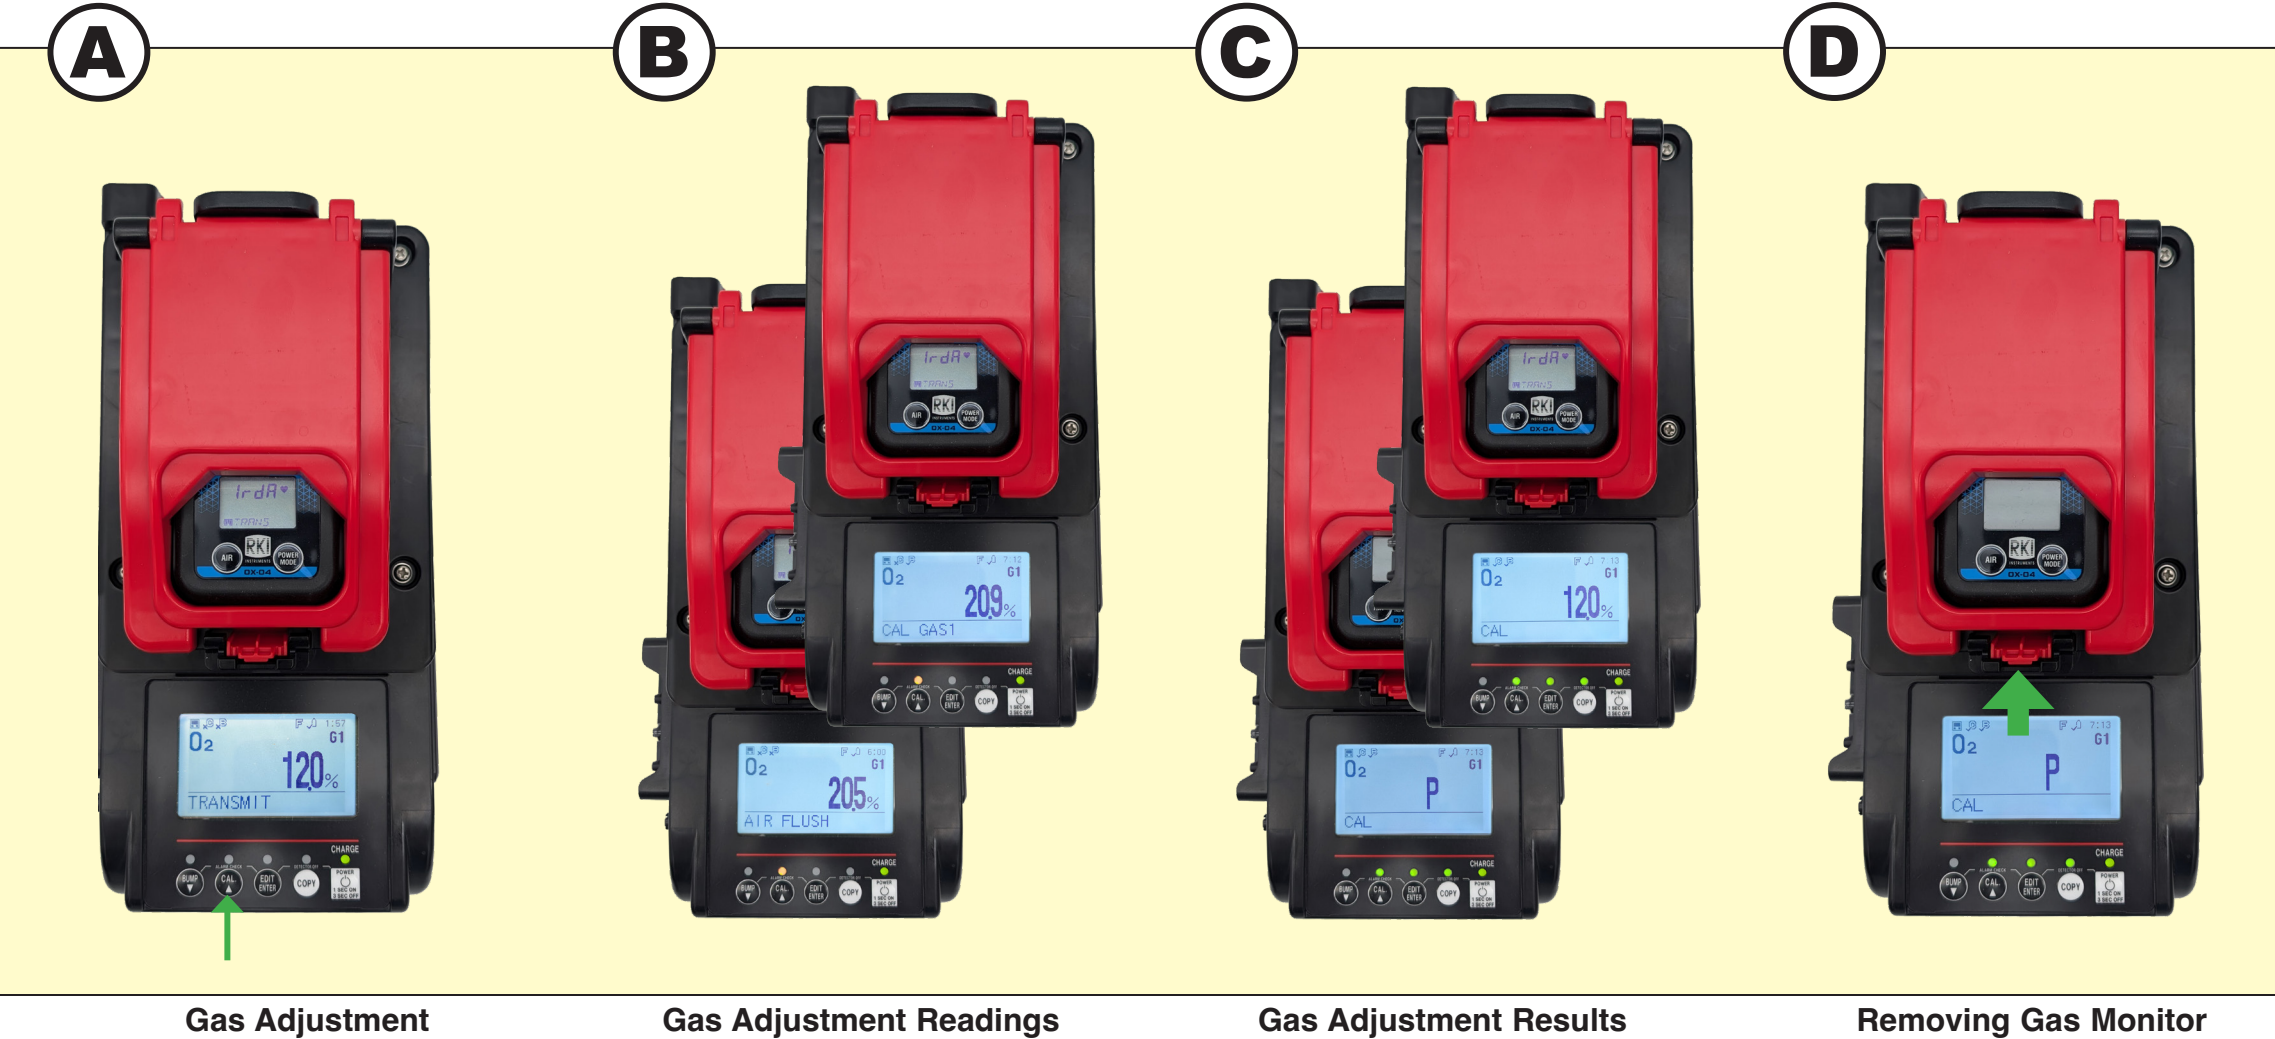

DATA TRANSFER

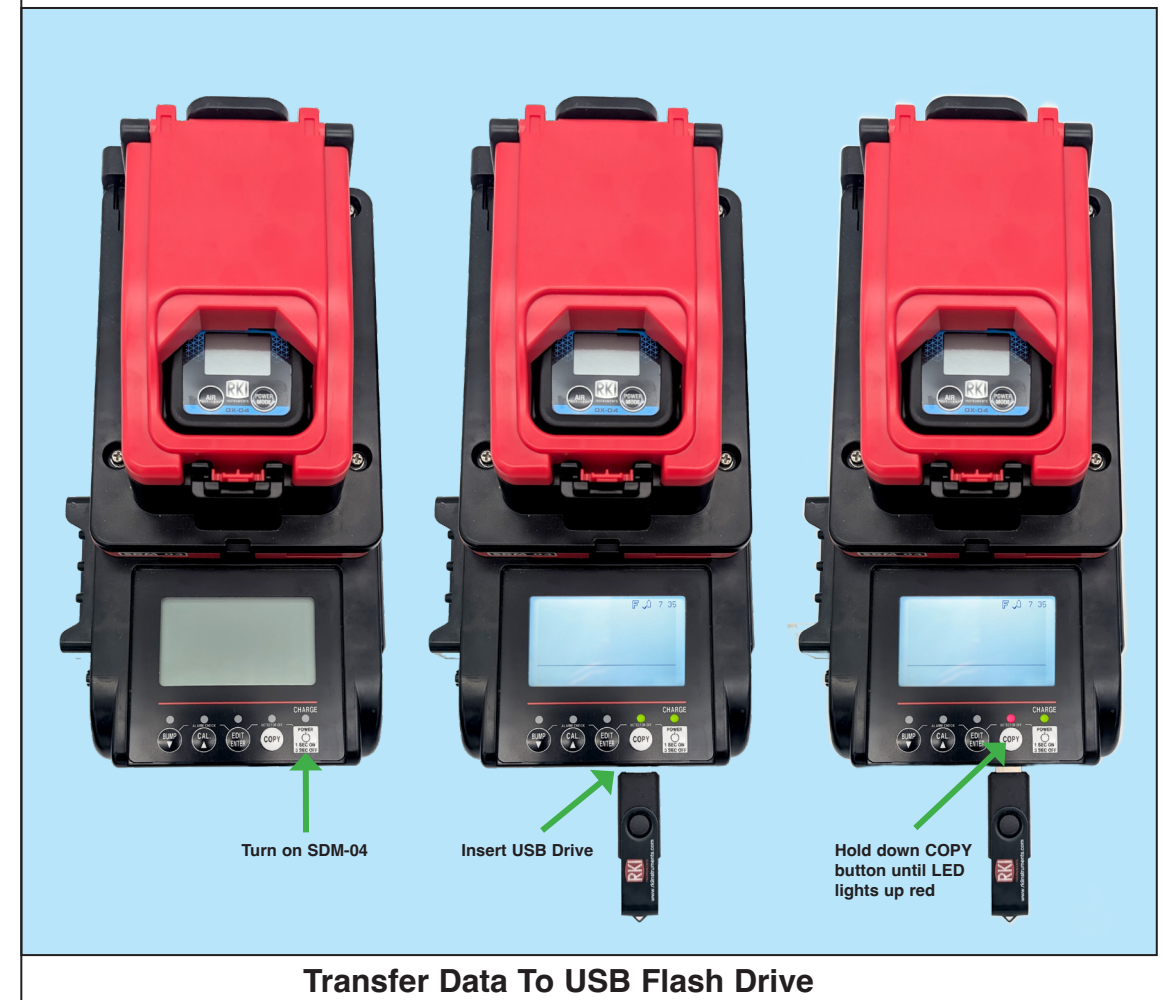



04 Series Calibration Station User Guide



Model SDM-04