

SHARPER IMAGE®

4-IN-1 NOSE AND EAR HAIR TRIMMER

Item No. 204420

Owner's Manual

Thank you for purchasing the 4-in-1 Nose and Ear Hair Trimmer. This product is designed to help you groom facial hair and remove unwanted nose and ear hair to achieve a stylish and professional appearance. Please read and follow these instructions, and store them for future reference.

FEATURES

- Cordless operation
- Ear/Nose Hair Attachment
- Fine Grooming Attachment
- Shaver Head Attachment
- Pop-Up Beard/Mustache Trimmer
- Non-slip rubberized grip
- Operates on 2 AAA alkaline batteries (not included)

INSERTING THE BATTERIES

1. Open battery compartment by squeezing both sides and gently pulling cap outward. [Do not use excessive force.]
2. Insert 2 AAA alkaline batteries, following the “+” and “-” polarity markings on the body.
3. Replace the battery compartment cap.

TRIMMING NOSE HAIR AND EAR HAIR WITH THE EAR/NOSE HAIR ATTACHMENT



1. Attach the Ear/Nose Hair attachment.
2. Slide the ON/OFF switch upward to the ON position.
3. Using extreme care and caution, slowly and gently insert the tip of the trimmer into the nostril/ear area. Do not insert the trimmer's rotary blade into the nose or ear any further than the rotary blade's length.

4. Carefully move the rotary head in a circular motion around the edges of the nostril/ear opening to remove unwanted hair. For optimum results, take your time and repeat the circular motion if necessary until all hair is trimmed.

NOTE: For hygienic reasons, it is recommended that this device be used by only one person.

TRIMMING NECKLINE AND SIDEBURNS WITH FINE GROOMING ATTACHMENT



1. Attach the Fine Grooming attachment.
2. Slide the ON/OFF switch upward to the ON position.
3. Trim away unwanted hairs with a slow, steady motion.
Make sure the Fine Grooming blade is in complete contact with skin at all times. Do not use the edges.

SHAVING THE FACE WITH THE SHAVER HEAD



1. Attach the Shaver Head attachment.
2. Slide the ON/OFF switch upward to the ON position.
3. Using extreme care and caution, slowly and gently begin shaving the face. IMPORTANT: Make sure the shaver head is in complete contact with skin at all times, and that the blade is flush on the skin. Pull skin taut with opposite hand if needed.

USING THE BEARD/MUSTACHE TRIMMER



1. Slide the Beard/Mustache Trimmer blade forward with your thumb.
2. Slide the ON/OFF switch upward to the ON position.

NOTE: You can use the Beard/Mustache Trimmer for small areas, such as hairline, sideburns, neck, etc. Hairs should be free of lotion when using this trimmer.

CLEANING MAINTENANCE

1. After each use, brush or blow any remaining hairs from the attachment head and main body.
2. For more intensive cleaning, rinse the attachment head unit under a faucet with cool or warm water only.
3. For even more intensive cleaning, remove the attachment head by gently turning the head unit counter clockwise from the main body.
4. Once removed, rinse both the attachment under a faucet with cool or warm water only.
5. Shake and blow away excess water once completed.
6. Replace the cutting head unit back on main body by aligning the two together and gently pressing and turning head unit clockwise until it locks back into place.

SAFETY WARNINGS

WARNING - To reduce the risk of burns, fire, electric shock or injury to people:

1. Only use this device for its intended household use as described in this manual.
2. Before using this device, inspect the trimmer and shaver blades to determine if there is any damage. If there is any damage, do not use this device. Damaged blades could cause injury and harm to your skin or other areas. Contact Sharper Image Customer Service for a replacement.
3. Do not attempt to repair or disassemble this device. There are no user-serviceable parts.
4. Do not use attachments or parts not included in this carton.
5. Do not immerse device in water.
6. Dispose of batteries in accordance with local laws.

CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you require any assistance with your **4-in-1 Nose and Ear Hair Trimmer**, please call 1 (877) 210-3449.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks. ©Sharper Image. All Rights Reserved.